

HONDA

GENERAL PURPOSE ENGINE

**GX270
GX270
[PROPANE ENGINE]**

PARTS CATALOGUE

10

FOREWORD INDEX

1

ENGINE GROUP

2

PART NUMBER INDEX

3

PART NAME INDEX

4

Instruction for use of parts catalogue

- **This parts catalogue was prepared based on the latest information available as of March 20, 2021.**
 - See the parts catalogue news for any revision that is made after March 20, 2021.
- **Always specify the part number when ordering a part.**
 - Check the model, type, serial numbers, color, maker, and the size as needed before ordering a part.
 - Note that the illustrations (part drawings) can differ from the actual parts in shape.
They are given just to help you to refer to the parts.
- **When modifications or additions to this parts catalogue are made, a revised edition will be issued at an appropriate time, with successively progressing revision numbers on the cover. We recommend obtaining such revisions in order to keep your parts catalogue up-to-date at all times. To check whether a parts catalogue revision has been issued, please contact your Honda distributor.**

Initial version issue date November 20, 1990
Honda Motor Co., Ltd.

CONTENTS

	Page
•Instruction for use of parts catalogue	1 1
•How to refer to the part information	2
•Part catalogue structure.....	3
•When the parts were revised.....	4
•Abbreviations used in the parts catalogue.....	4
•How to check the part block and serial numbers.....	5
•Models, parts catalogue codes and applicable serial numbers	6
•Features of each type.....	19
•Fuel hose, general purpose hoses and vinyl hose.....	36
•FLAT RATE SERVICE TIME	37
•Illustrated index	42
•ENGINE GROUP	49 2
•PART NO. INDEX.....	315 3
•PART NAME INDEX.....	321 4

1

ENGINE GROUP			
E-14 CARBURETOR	E-14-20 SILENCER COVER	E-16 EXHAUST CHAMBER COVER	
E-18 FUEL PUMP	E-19 FLYWHEEL	E-20 IGNITION COIL	

E-2

CYLINDER HEAD

Block No.

2W83-ED800

Service item	F.R.
O-RING, 26X2.7	0
PLUG, SPARK	0
O-RING, 9.5X1.5	0
SENSOR ASSY., WATER	
COVER COMP., HEAD	TEMPERATURE
PACKING, HEAD COVER	
GASKET, CYLINDER HEAD	1
OIL SEAL, 20X32X6	2
HEAD COMP., CYLINDER	3

Ref. No.	Part No.	Description	Reqd. QTY						Serial No.	Parts catalogue code
			BF 9901	BF 9901	BF 1001	BF 1001	BF 1001	BF 1001		
1	12166-1W9-000	STOPPER, ENGINE SIDE	2	2	2	2	2	2		
2	12210-1W9-000	HEAD COMP., CYLINDER								
3	12251-1W9-003	GASKET, CYLINDER HEAD	1	1	1	1	1	1		
4	12310-1W9-000	COVER COMP., HEAD	1	1	1	1	1	1		
5	12312-1W9-000	PACKING, HEAD COVER	1	1	1	1	1	1		
6	15611-921-000	CAP, OIL	1	1	1	1	1	1		
7	16617-1W9-000	HOLDER, CABLE	1	1	1	1	1	1	----- SC,SG	
	16617-1W9-010		1	1	1	1	1	1	1001800 LHC,LHB	
			1	1	1	1	1	1	1001801 LHC,LHB	
8	35673-1W5-003	SENSOR ASSY., WATER								
9	90003-1W9-000	BOLT, FLANGE, 6X22	4	4	4	4	4	4		
10	90007-1W9-003	BOLT, FLANGE, 8X83	6	6	6	6	6	6		
11	90011-1W9-000	BOLT, FLANGE, 6X14(C120D) ...	1	1	1	1	1	1		
12	90020-1W9-000	BOLT, FLANGE, 8X40	2	2	2	2	2	2		
13	91202-KJ9-003	OIL SEAL, 20X32X6	1	1	1	1	1	1		
14	91301-805-000	O-RING, 26X2.7	1	1	1	1	1	1		
15	91307-PK2-005	O-RING, 9.5X1.5(HONDA KIKAKI)	1	1	1	1	1	1		
16	98059-55916	PLUG, SPARK (CR5EH-9)	2	2	2	2	2	2		
	98059-55926	PLUG, SPARK (U16FER9)	2	2	2	2	2	2		

Part name	Page	Ref.	
[A]			BOLT,
ABSORBER, FUEL	80	5	
ARMATURE COMP.	62	7	BOLT,
ARM COMP., LINK JOINT	102	18	BOLT,
ARM COMP., SHIFT LINK	102	14	BOLT,
ARM COMP., TILT	97	20	
ARM, FUEL PUMP ROCKER	51	4	
ARM, REVERSE LOCK	97	18	
ARM, SHIFT LINK	92	7	
ARM, STOPPER	92	12	BOLT,
ARM, THROTTLE REMOTE	92	6	
ARM, VALVE ROCKER	51	3	
[B]			
BAG, TOOL, 160MM	101	10	
BAND	103	37	
BAND B1, WIRE	87	1	
BAND, CORD	85	18	BOLT,
BAND, TUBE CLIP, 11MM	20	81	
BAND, TUBE CLIP, 12.5MM	81	19	BOLT,

Part catalogue structure

1 CYLINDER HEAD

2

3

4 **5** **6** **7** **8** **9** **10** **11** **12** **13**

Ref. No.	Part No.	Description	Reqd. QTY	Serial No.	Parts catalogue code
			BF BFP BF BFP BF BFP		
			9.9D1 9.9D1 10D1 10D1 10B1 10B1		
1	12166-ZW9-000	STOPPER, ENGINE SIDE	2	2	2
2	12210-ZW9-000ZA	HEAD COMP., CYLINDER	2	2	2
		NH8	1	1	1
3	12251-ZW9-003	GASKET, CYLINDER HEAD	1	1	1
4	12310-ZW9-000	COVER COMP., HEAD	1	1	1
5	12312-ZW9-000	PACKING, HEAD COVER	1	1	1
6	15611-921-000	CAP, OIL	1	1	1
		(NO GAUGE)			
7	16617-ZW9-000	HOLDER, CABLE	1	1	1
	16617-ZW9-010		1	1	1

15 **14** **16**

E-14-10 THROTTLE ROD

14

15

16

① Block title ② Block number

③ Service item/Flat rate time

④ Reference number

- Title number marked with the parenthesis or parentheses indicates that it continues from the previous page.

⑤ Part number ⑥ Honda color code

⑦ Description

⑧ Assemblies

- Sections framed with broken lines in the exploded view drawings are available as complete assemblies. (Their individual parts can also be obtained.)

⑨ Color description

⑩ Note

- Notes are shown with the parentheses in the part name column.

⑪ Required quantity

- Required QTY shown in the parenthesis or parentheses indicates the optional part.
- Required QTY marked with "N" Indicates the optional part that should be selected as needed.
- Required QTY indicates the number of the part used in the block.

⑫ Serial number

⑬ Type

- When the type column is blank, it indicates that the part is applicable to all types.
- As the type of the actual unit may differ from the "parts catalogue, type" please refer to "Models, types and applicable serial numbers" for confirmation.

⑭

- Parts enclosed within a dotted line are covered in a different block.

⑮

- A hollow arrow indicates the block No. for the parts enclosed within a dotted line.

⑯

- A solid arrow indicates the block No. the part in question is connected to.

When the parts were revised



Be sure to check the serial number!!



Ref. No.	Part No.	Description	Reqd. QTY						Serial No.
			BF	BFP	BF	BFP	BF	BFP	
1	12166-ZW9-000	STOPPER, ENGINE SIDE	2	2	2	2	2	2	
2	12210-ZW9-000ZA	HEAD COMP., CYLINDER *NH8*.....DARK GRAY	1	1	1	1	1	1	
3	12251-ZW9-003	GASKET, CYLINDER HEAD	1	1	1	1	1	1	
4	12310-ZW9-000	COVER COMP., HEAD	1	1	1	1	1	1	
5	12312-ZW9-000	PACKING, HEAD COVER	1	1	1	1	1	1	
6	15611-921-000	CAP, OIL (NO GAUGE)	1	1	1	1	1	1	
7	16617-ZW9-000	HOLDER, CABLE (###).....	1	1	1	1	1	1	
	16617-ZW9-010		1	1	1	1	1	1	

The number has been used from the initial model without revision.

When shown at the left side, it is applicable to the models of No.1001801 and the subsequent numbers.

When shown at the right side, it is applicable to the models up to No.1001800.




• The parts listed with "###" at the end of the parts name have limited supply period (parts not for sale).

Abbreviations used in the parts catalogue

• The following abbreviations are used in the parts name column.


A Ampere	FR. Front
A.C. Alternating current	IN. Inlet
ASSY. Assembly	L (100L) ... Link (100 Links)
AT. Automatic transmission	L. Left
C.D.I. Capacitive discharge ignition	MM Millimeter
COMP. Complete	MT. Manual Transmission
D.C. Direct current	P.T.O. Power take off
EX. Exhaust	R. Right
G.F.C.I. Ground fault circuit interruptor	RR. Rear
HEX. Hexagonal	STD. Standard
H.S.T. Hydrostatic transmission	T (22T) Tooth (22 Teeth)
	V Volt
	W Watt

How to check the part block and serial numbers

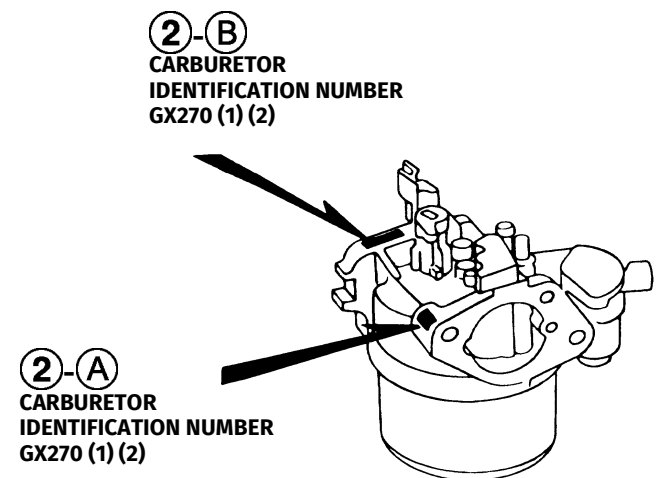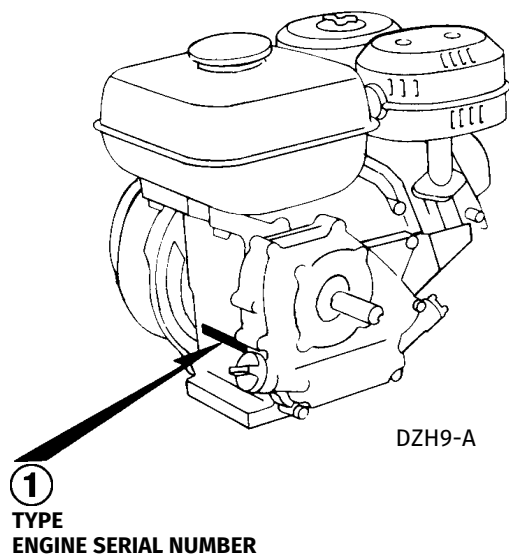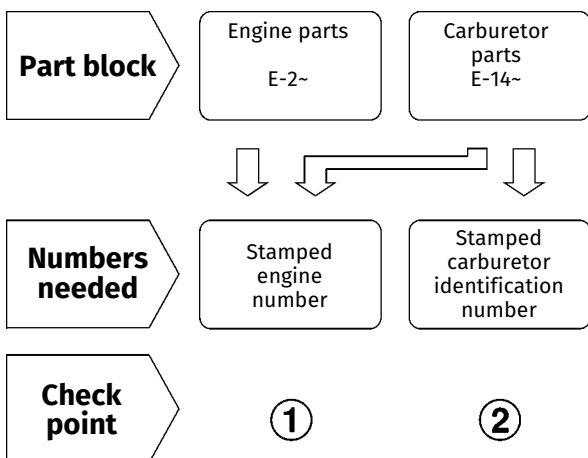

DZH9-E

②
CARBURETOR
IDENTIFICATION NUMBER
GX270 (3)

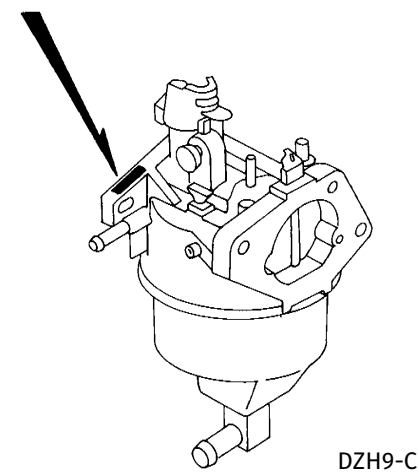

Models, parts catalogue codes and applicable serial numbers

- Models, parts catalogue codes and applicable serial Nos. given in this parts catalogue can be identified as follows.

Model	Type	Parts catalogue type	Applicable engine serial No.	Applicable carburetor identification No.
GX270 (1)	ES1	ES1	GCAB-1000001~1999999	BE21A C
		ES1/A	GCAB-2000001~9999999	BE21A C BE21A D/E
	ES3	ES3	GCAB-1000001~1999999	BE77M A
		ES3/A	GCAB-2000001~9999999	
	ES4	ES4		
	ESS	ESS	GCAB-1000001~1999999	BE21E A/B
		ESS/A	GCAB-2000001~9999999	BE21E B/C
	HA	HA	GCAB-1000001~1999999	BE21A B/C
	HA2	HA2		BE75B A BE75B B/C
		HA2/A	GCAB-2000001~9999999	BE75B B/C
	HAQ	HAQ	GCAB-1000001~1999999	BE75A A BE75A B/C
	HEA	HEA		BE21A B/C
	HEA2	HEA2		BE75B A BE75B B/C
		HEA2/A	GCAB-2000001~9999999	BE75B B/C
	HEA8	HEA8	GCAB-1000001~1999999	
		HEA8/A	GCAB-2000001~9999999	

Model	Type	Parts catalogue type	Applicable engine serial No.	Applicable carburetor identification No.
GX270 (1)	HH	HH	GCAB-1000001~1999999	BE21A B/C
	HX	HX		BE21A B/C BE75B B/C
		HX/A	GCAB-2000001~9999999	BE75B B/C
	HX26	HX26	GCAB-1000001~1999999	BE75B A BE75B B/C
		HX26/A	GCAB-2000001~9999999	BE75B B/C
	HX8	HX8	GCAB-1000001~1999999	BE21A C BE75B B/C
		HX8/A	GCAB-2000001~9999999	BE75B B/C
	HXQ4	HXQ4	GCAB-1000001~1999999	BE21A B/C BE75B B/C
		HXQ4/A	GCAB-2000001~9999999	BE75B B/C
	LH	LH	GCAB-1000001~1999999	BE21A B/C BE75B B/C
		LH/A	GCAB-2000001~9999999	BE75B B/C
	LHB1	LHB1	GCAB-1000001~1999999	BE21A C
	LHB3	LHB3		
	LHB5	LHB5	GCAB-2000001~9999999	BE75B B/C
	LHE	LHE	GCAB-1000001~1999999	BE21A B/C BE75B B/C
		LHE/A	GCAB-2000001~9999999	BE75B B/C

Model	Type	Parts catalogue type	Applicable engine serial No.	Applicable carburetor identification No.
GX270 (1)	LHQ4	LHQ4	GCAB-1000001~1999999	BE21A B/C
	LJ	LJ		
		LJ/A	GCAB-2000001~9999999	BE21A C BE21A D/E
	LJC	LJC	GCAB-1000001~1999999	BE21A C
		LJC/A	GCAB-2000001~9999999	BE21A C BE21A D/E
	LJG	LJG	GCAB-1000001~1999999	BE21A B/C
		LJG/A	GCAB-2000001~9999999	BE21A C BE21A D/E
	LSS	LSS	GCAB-1000001~9999999	BE21A B/C
	LT	LT	GCAB-1000001~1999999	BE21A C
		LT/A	GCAB-2000001~9999999	BE21A C BE21A D/E
	LTJ	LTJ	GCAB-1000001~9999999	BE21A B/C
	LW	LW	GCAB-1000001~1999999	
		LW/A	GCAB-2000001~9999999	BE21A C BE21A D/E
	LWD	LWD	GCAB-1000001~1999999	BE17B A/B/C
	LWD1	LWD1		BE21A C
		LWD1/A	GCAB-2000001~9999999	BE21A C BE21A D/E

Model	Type	Parts catalogue type	Applicable engine serial No.	Applicable carburetor identification No.
GX270 (1)	LX	LX	GCAB-1000001~1999999	BE21A B/C BE75B B/C
		LX/A	GCAB-2000001~9999999	BE75B B/C
	LX16	LX16	GCAB-1000001~1999999	BE21A B/C BE75B B/C
	LXE	LXE		
		LXE/A	GCAB-2000001~9999999	BE75B B/C
	LXE8	LXE8	GCAB-1000001~1999999	BE21A C BE75B B/C
		LXE8/A	GCAB-2000001~9999999	BE75B B/C
	LXQ4	LXQ4	GCAB-1000001~1999999	BE21A B/C BE75B B/C
		LXQ4/A	GCAB-2000001~9999999	BE75B B/C
	LXU	LXU	GCAB-1000001~1999999	BE21A C BE75B B/C
		LXU/A	GCAB-2000001~9999999	BE75B B/C
	LXZ	LXZ	GCAB-1000001~1999999	BE21A B/C
	PA	PA		
	PA2	PA2		BE75B A BE75B B/C
		PA2/A	GCAB-2000001~9999999	BE75B B/C
	PAE2	PAE2	GCAB-1000001~1999999	

Model	Type	Parts catalogue type	Applicable engine serial No.	Applicable carburetor identification No.
GX270 (1)	PAE2	PAE2/A	GCAB-2000001~9999999	BE75B B/C
	PX	PX	GCAB-1000001~1999999	BE21A B/C BE75B B/C
		PX/A	GCAB-2000001~9999999	BE75B B/C
	PX26	PX26	GCAB-1000001~1999999	BE75B A BE75B B/C
		PX26/A	GCAB-2000001~9999999	BE75B B/C
	PXE8	PXE8	GCAB-1000001~1999999	
		PXE8/A	GCAB-2000001~9999999	
	PXU	PXU	GCAB-1000001~1999999	BE21A C BE75B B/C
		PXU/A	GCAB-2000001~9999999	BE75B B/C
	QA	QA	GCAB-1000001~1999999	BE21A B/C
	QA2	QA2	GCAB-1000001~1999999	BE75B A BE75B B/C
		QA2/A	GCAB-2000001~9999999	BE75B B/C
	QAB1	QAB1	GCAB-1000001~1999999	BE21A C
	QAB3	QAB3	GCAB-1000001~1999999	BE21A C BE75B B/C
		QAB3/A	GCAB-2000001~9999999	BE75B B/C
	QAE	QAE	GCAB-1000001~1999999	BE21A B/C

Model	Type	Parts catalogue type	Applicable engine serial No.	Applicable carburetor identification No.
GX270 (1)	QAE2	QAE2	GCAB-1000001~1999999	BE75B A BE75B B/C
		QAE2/A	GCAB-2000001~9999999	BE75B B/C
	QAE6	QAE6	GCAB-1000001~1999999	BE75B A BE75B B/C
		QAE6/A	GCAB-2000001~9999999	BE75B B/C
	QAG	QAG	GCAB-1000001~1999999	
		QAG/A	GCAB-2000001~9999999	
	QAG2	QAG2	GCAB-1000001~1999999	
		QAG2/A	GCAB-2000001~9999999	
	QAQ	QAQ	GCAB-1000001~1999999	BE75A A BE75A B/C BE21A B/C BE75B B/C
	QAQ4	QAQ4	GCAB-2000001~9999999	BE75B B/C
		QAQ4/A	GCAB-2000001~9999999	BE75B B/C
	QAR2	QAR2	GCAB-1000001~1999999	BE75B A BE75B B/C
		QAR2/A	GCAB-2000001~9999999	BE75B B/C
	QAW	QAW	GCAB-1000001~1999999	
		QAW/A	GCAB-2000001~9999999	
	QD	QD	GCAB-1000001~1999999	BE21B A/B

Model	Type	Parts catalogue type	Applicable engine serial No.	Applicable carburetor identification No.
GX270 (1)	QD	QD/A	GCAB-2000001~9999999	BE21B B/C
	QE	QE	GCAB-1000001~1999999	BE21A B/C
		QE/A	GCAB-2000001~9999999	BE21A C BE21A D/E
	QH	QH	GCAB-1000001~1999999	BE21A B/C BE75B B/C
		QH/A	GCAB-2000001~9999999	BE75B B/C
	QH26	QH26	GCAB-1000001~1999999	BE75B A BE75B B/C
		QH26/A	GCAB-2000001~9999999	BE75B B/C
	QHB5	QHB5		
	QHC	QHC		BE24B B/C
	QHE	QHE	GCAB-1000001~1999999	BE21A B/C
		QHE4		BE21A B/C BE75B B/C
	QHE4	QHE4/A	GCAB-2000001~9999999	BE75B B/C
	QHP1	QHP1	GCAB-1000001~1999999	BE21A C BE75B B/C
		QHP1/A	GCAB-2000001~9999999	BE75B B/C
	QHQ4	QHQ4	GCAB-1000001~1999999	BE21A B/C BE75B B/C
		QHQ4/A	GCAB-2000001~9999999	BE75B B/C

Model	Type	Parts catalogue type	Applicable engine serial No.	Applicable carburetor identification No.
GX270 (1)	QHR	QHR	GCAB-1000001~1999999	BE75B B/C
		QHR/A	GCAB-2000001~9999999	
	QHR4	QHR4	GCAB-1000001~1999999	
		QHR4/A	GCAB-2000001~9999999	
	QHZ	QHZ	GCAB-1000001~1999999	BE21A C BE75B B/C
		QHZ/A	GCAB-2000001~9999999	BE75B B/C
	QKE3	QKE3	GCAB-1000001~1999999	BE21A C
		QKE3/A	GCAB-2000001~9999999	BE21A C BE21A D/E
	QKE4	QKE4		BE75B B/C
	QL2	QL2	GCAB-1000001~1999999	BE21A B/C BE75B B/C
	QME2	QME2	GCAB-2000001~9999999	BE21A C BE75B B/C
		QME2/A	GCAB-2000001~9999999	BE75B B/C
	QMH	QMH	GCAB-1000001~1999999	BE21A C BE75B B/C
		QMH/A	GCAB-2000001~9999999	BE75B B/C
	QP	QP	GCAB-1000001~1999999	BE21A B/C
		QP/A	GCAB-2000001~9999999	BE21A C BE21A D/E

Model	Type	Parts catalogue type	Applicable engine serial No.	Applicable carburetor identification No.
GX270 (1)	QSC	QSC	GCAB-1000001~1999999	BE24B B/C
	QSC9	QSC9	GCAB-1000001~1999999	BE75A A BE75A B/C
		QSC9/A	GCAB-2000001~9999999	BE75A B/C
	QSE	QSE	GCAB-1000001~1999999	BE21A C BE75B B/C
		QSE/A	GCAB-2000001~9999999	BE75B B/C
	QSE2	QSE2	GCAB-2000001~9999999	BE75B B/C
	QSE8	QSE8	GCAB-1000001~1999999	BE21A C BE75B B/C
		QSE8/A	GCAB-2000001~9999999	BE75B B/C
	QT	QT	GCAB-1000001~1999999	BE21A B/C
		QT/A	GCAB-2000001~9999999	BE21A C BE21A D/E
	QWA2	QWA2	GCAB-1000001~1999999	BE75A B/C
	QWA4	QWA4	GCAB-1000001~1999999	
		QWA4/A	GCAB-2000001~9999999	
	QWH2	QWH2	GCAB-1000001~1999999	
		QWH2/A	GCAB-2000001~9999999	
	QX	QX	GCAB-1000001~1999999	BE21A B/C BE75B B/C

Model	Type	Parts catalogue type	Applicable engine serial No.	Applicable carburetor identification No.
GX270 (1)	QX	QX/A	GCAB-2000001~9999999	BE75B B/C
	QX26	QX26	GCAB-1000001~1999999	BE75B A BE75B B/C
		QX26/A	GCAB-2000001~9999999	BE75B B/C
	QXB	QXB	GCAB-1000001~1999999	BE21A B/C BE75B B/C
		QXB/A	GCAB-2000001~9999999	BE75B B/C
	QXB6	QXB6	GCAB-1000001~1999999	
		QXB6/A	GCAB-2000001~9999999	
	QXB7	QXB7	GCAB-1000001~1999999	
		QXB7/A	GCAB-2000001~9999999	
	QXC	QXC	GCAB-1000001~1999999	BE24B B/C
	QXC4	QXC4	GCAB-1000001~1999999	BE24B C/D
		QXC4/A	GCAB-2000001~9999999	
	QXC6	QXC6	GCAB-1000001~1999999	BE75A A BE75A B/C
		QXC6/A	GCAB-2000001~9999999	BE75A B/C
	QXC9	QXC9	GCAB-1000001~1999999	BE75A A BE75A B/C
		QXC9/A	GCAB-2000001~9999999	BE75A B/C

Model	Type	Parts catalogue type	Applicable engine serial No.	Applicable carburetor identification No.
GX270 (1)	QXE	QXE	GCAB-1000001~1999999	BE21A B/C BE75B B/C
		QXE/A	GCAB-2000001~9999999	BE75B B/C
	QXE4	QXE4	GCAB-1000001~1999999	BE21A B/C BE75B B/C
		QXE4/A	GCAB-2000001~9999999	BE75B B/C
	QXE6	QXE6	GCAB-1000001~1999999	BE75B A BE75B B/C
		QXE6/A	GCAB-2000001~9999999	BE75B B/C
	QXE8	QXE8	GCAB-1000001~1999999	BE21A C BE75B B/C
		QXE8/A	GCAB-2000001~9999999	BE75B B/C
	QXE9	QXE9		
	QXEB	QXEB	GCAB-1000001~1999999	BE21A B/C
	QXK	QXK	GCAB-2000001~9999999	BE75A B/C
	QXQ4	QXQ4	GCAB-1000001~1999999	BE21A B/C BE75B B/C
		QXQ4/A	GCAB-2000001~9999999	BE75B B/C
	QXU	QXU	GCAB-1000001~1999999	BE21A C BE75B B/C
		QXU/A	GCAB-2000001~9999999	BE75B B/C
	RA	RA	GCAB-1000001~1999999	BE21A B/C

Model	Type	Parts catalogue type	Applicable engine serial No.	Applicable carburetor identification No.
GX270 (1)	RA2	RA2	GCAB-1000001~1999999	BE75B A BE75B B/C
		RA2/A	GCAB-2000001~9999999	BE75B B/C
	RA3	RA3		
	RD	RD	GCAB-1000001~1999999	BE21B A/B
		RD/A	GCAB-2000001~9999999	BE21B B/C
	RH	RH	GCAB-1000001~9999999	BE21A B/C BE75B B/C
	RH26	RH26	GCAB-1000001~1999999	BE75B A BE75B B/C
		RH26/A	GCAB-2000001~9999999	BE75B B/C
	RHE	RHE	GCAB-1000001~1999999	BE21A B/C
	RHE4	RHE4		BE21A B/C BE75B B/C
		RHE4/A	GCAB-2000001~9999999	BE75B B/C
	RHQ4	RHQ4	GCAB-1000001~1999999	BE21A B/C BE75B B/C
		RHQ4/A	GCAB-2000001~9999999	BE75B B/C
	RSC2	RSC2	GCAB-1000001~1999999	BE75B A BE75B B/C
		RSC2/A	GCAB-2000001~9999999	BE75B B/C
	RSS	RSS	GCAB-1000001~1999999	

Model	Type	Parts catalogue type	Applicable engine serial No.	Applicable carburetor identification No.
GX270 (1)	RSS	RSS/A	GCAB-2000001~9999999	BE75B B/C
	RX	RX	GCAB-1000001~1999999	BE21A B/C BE75B B/C
		RX/A	GCAB-2000001~9999999	BE75B B/C
	RXQ4	RXQ4	GCAB-1000001~1999999	BE21A B/C BE75B B/C
		RXQ4/A	GCAB-2000001~9999999	BE75B B/C
	RXU	RXU	GCAB-1000001~1999999	BE21A C BE75B B/C
		RXU/A	GCAB-2000001~9999999	BE75B B/C
	SD	SD	GCAB-1000001~1999999	BE21B A/B
		SD/A	GCAB-2000001~9999999	BE21B B/C
	SE	SE	GCAB-1000001~1999999	BE21A B/C
		SE/A	GCAB-2000001~9999999	BE21A C BE21A D/E
	SH	SH	GCAB-1000001~1999999	BE21A B/C BE75B B/C
		SH/A	GCAB-2000001~9999999	BE75B B/C
	SHE	SHE	GCAB-1000001~1999999	BE21A B/C
	SHEZ	SHEZ		BE21A B/C BE75B B/C
	SHQ4	SHQ4		BE21A B/C BE75B B/C

Model	Type	Parts catalogue type	Applicable engine serial No.	Applicable carburetor identification No.
GX270 (1)	SHQ4	SHQ4/A	GCAB-2000001~9999999	BE75B B/C
	SJ	SJ	GCAB-1000001~1999999	BE21A B/C
		SJ/A	GCAB-2000001~9999999	BE21A C BE21A D/E
	SJG	SJG	GCAB-1000001~1999999	BE21A B/C
		SJG/A	GCAB-2000001~9999999	BE21A C BE21A D/E
	SJP	SJP	GCAB-1000001~1999999	BE21A B/C
	SK	SK		BE21A C
	SKE1	SKE1		BE21B A/B
	SMC4	SMC4	GCAB-2000001~9999999	BE21B B/C
		SMC4/A		BE21A C BE21B B BE75B B/C
	SMD	SMD	GCAB-1000001~9999999	BE21A B/C BE75B B/C
	SME1	SME1	GCAB-1000001~1999999	BE21A B/C BE75B B/C
		SME1/A	GCAB-2000001~9999999	BE75B B/C
	SME6	SME6	GCAB-1000001~1999999	BE21A B/C
		SME6/A	GCAB-2000001~9999999	BE21A C BE21A D/E
	SMX2	SMX2	GCAB-2000001~9999999	BE75B B/C

Model	Type	Parts catalogue type	Applicable engine serial No.	Applicable carburetor identification No.
GX270 (1)	SN	SN	GCAB-1000001~1999999	BE21B A/B
		SN/A	GCAB-2000001~9999999	BE21B B/C
	SW	SW	GCAB-1000001~9999999	BE21A B/C
	SWA4	SWA4	GCAB-2000001~9999999	BE75B B/C
	SWC4	SWC4	GCAB-1000001~1999999	BE21A C BE75B B/C
		SWC4/A	GCAB-2000001~9999999	BE75B B/C
	SWE	SWE	GCAB-1000001~1999999	BE21A B/C
	SX	SX	GCAB-1000001~1999999	BE21A B/C BE75B B/C
		SX/A	GCAB-2000001~9999999	BE75B B/C
	SX2	SX2	GCAB-1000001~1999999	BE75B A BE75B B/C
	SXB	SXB	GCAB-1000001~1999999	BE21A B/C BE75B B/C
		SXB/A	GCAB-2000001~9999999	BE75B B/C
	SXB7	SXB7	GCAB-1000001~1999999	
		SXB7/A	GCAB-2000001~9999999	
	SXE	SXE	GCAB-1000001~1999999	BE21A B/C BE75B B/C
		SXE/A	GCAB-2000001~9999999	BE75B B/C

Model	Type	Parts catalogue type	Applicable engine serial No.	Applicable carburetor identification No.
GX270 (1)	SXE4	SXE4	GCAB-1000001~1999999	BE21A B/C BE75B B/C
		SXE4/A	GCAB-2000001~9999999	BE75B B/C
	SXE8	SXE8	GCAB-1000001~1999999	BE21A C BE75B B/C
		SXE8/A	GCAB-2000001~9999999	BE75B B/C
	SXEB	SXEB	GCAB-1000001~1999999	BE21A B/C BE75B B/C
		SXEB/A	GCAB-2000001~9999999	BE75B B/C
	SXQ4	SXQ4	GCAB-1000001~1999999	BE21A B/C BE75B B/C
		SXQ4/A	GCAB-2000001~9999999	BE75B B/C
	SXU	SXU	GCAB-1000001~1999999	BE21A C BE75B B/C
		SXU/A	GCAB-2000001~9999999	BE75B B/C
	VA	VA	GCAB-1000001~1999999	BE21A B/C
	VA2	VA2	GCAB-1000001~1999999	BE75B A BE75B B/C
		VA2/A	GCAB-2000001~9999999	BE75B B/C
	VAG2	VAG2	GCAB-1000001~1999999	
		VAG2/A	GCAB-2000001~9999999	
	VAW	VAW	GCAB-1000001~1999999	BE21A B/C

Model	Type	Parts catalogue type	Applicable engine serial No.	Applicable carburetor identification No.
GX270 (1)	VAW1	VAW1	GCAB-1000001~1999999	BE21A B/C
	VD16	VD16		BE21A B/C BE75B B/C
	VDE	VDE	GCAB-1000001~9999999	
	VDE2	VDE2	GCAB-1000001~1999999	BE75B A BE75B B/C
		VDE2/A	GCAB-2000001~9999999	BE75B B/C
	VEB6	VEB6	GCAB-1000001~1999999	BE21A B/C BE75B B/C
	VH	VH	GCAB-1000001~9999999	
	VKB2	VKB2	GCAB-1000001~1999999	BE75B B/C
		VKB2/A		
	VKE4	VKE4	GCAB-2000001~9999999	BE21E B/C
	VKK	VKK		BE21G B/C BE21G C
	VKX4	VKX4		BE21D B/C
	VM2	VM2	GCAB-1000001~1999999	BE75B B/C
		VM2/A	GCAB-2000001~9999999	
	VMA4	VMA4		BE75A B/C
	VME2	VME2	GCAB-1000001~1999999	BE75B B/C

Model	Type	Parts catalogue type	Applicable engine serial No.	Applicable carburetor identification No.
GX270 (1)	VME2	VME2/A	GCAB-2000001~9999999	BE75B B/C
	VME4	VME4		BE75A B/C
	VMS2	VMS2		BE77Q A
	VMT	VMT	GCAB-1000001~1999999	BE77M A
		VMT/A	GCAB-2000001~9999999	
	VMX2	VMX2		BE77Q A
	VN17	VN17	GCAB-1000001~1999999	BE75B B/C
		VN17/A	GCAB-2000001~9999999	
	VNG1	VNG1	GCAB-1000001~1999999	BE21A B/C BE75B B/C
		VNG1/A	GCAB-2000001~9999999	BE75B B/C
	VNT2	VNT2	GCAB-1000001~1999999	
		VNT2/A	GCAB-2000001~9999999	
	VPE4	VPE4	GCAB-1000001~1999999	BE21D B
		VPE4/A	GCAB-2000001~9999999	BE21D B/C
	VPE5	VPE5		BE77R A
	VPE7	VPE7	GCAB-1000001~1999999	BE21D B

Model	Type	Parts catalogue type	Applicable engine serial No.	Applicable carburetor identification No.
GX270 (1)	VPE7	VPE7/A	GCAB-2000001~9999999	BE21D B/C
	VPK	VPK		BE21F B/C
	VPX4	VPX4	GCAB-1000001~1999999	BE21D B
		VPX4/A	GCAB-2000001~9999999	BE21D B/C
	VPX5	VPX5		BE77R A
	VPX7	VPX7	GCAB-1000001~1999999	BE21D B
		VPX7/A	GCAB-2000001~9999999	BE21D B/C
	VS3	VS3		BE77M A
	VS37	VS37	GCAB-1000001~1999999	BE21D B
		VS37/A	GCAB-2000001~9999999	BE21D B/C
	VS4	VS4		BE77M A
	VS5	VS5		
	VSD	VSD	GCAB-1000001~1999999	BE21A B/C BE75B B/C
		VSD/A	GCAB-2000001~9999999	BE75B B/C
	VSD3	VSD3	GCAB-1000001~1999999	BE21D A/B
		VSD3/A	GCAB-2000001~9999999	BE21D B/C

Model	Type	Parts catalogue type	Applicable engine serial No.	Applicable carburetor identification No.
GX270 (1)	VSD7	VSD7	GCAB-1000001~1999999	BE75B B/C
		VSD7/A	GCAB-2000001~9999999	
	VSH7	VSH7		
	VW12	VW12	GCAB-1000001~1999999	BE75B A BE75B B/C
		VW12/A	GCAB-2000001~9999999	BE75B B/C
	VW22	VW22	GCAB-1000001~9999999	BE75B A BE75B B/C
	VWA	VWA	GCAB-1000001~1999999	BE21A B/C
	VWA2	VWA2		BE75B A BE75B B/C
		VWA2/A	GCAB-2000001~9999999	BE75B B/C
	VWN2	VWN2	GCAB-1000001~1999999	BE75B A BE75B B/C
		VWN2/A	GCAB-2000001~9999999	BE75B B/C
	VWT4	VWT4	GCAB-1000001~1999999	BE21A C
		VWT4/A	GCAB-2000001~9999999	BE21A C BE21A D/E
	VX	VX	GCAB-1000001~1999999	BE21A B/C BE75B B/C
		VX/A	GCAB-2000001~9999999	BE75B B/C
	VX26	VX26	GCAB-1000001~1999999	BE75B A BE75B B/C

Model	Type	Parts catalogue type	Applicable engine serial No.	Applicable carburetor identification No.
GX270 (1)	VXB	VXB	GCAB-1000001~1999999	BE21A B/C BE75B B/C
		VXB/A	GCAB-2000001~9999999	BE75B B/C
	VXB2	VXB2	GCAB-1000001~9999999	BE75B A BE75B B/C
	VXB6	VXB6	GCAB-1000001~1999999	
	VXB7	VXB7		BE75B B/C
		VXB7/A	GCAB-2000001~9999999	
	VXE	VXE	GCAB-1000001~9999999	BE21A B/C BE75B B/C
	VXE4	VXE4	GCAB-1000001~1999999	
		VXE4/A	GCAB-2000001~9999999	BE75B B/C
	VXE6	VXE6	GCAB-1000001~1999999	
		VXE6/A	GCAB-2000001~9999999	
	VXE7	VXE7	GCAB-1000001~1999999	
		VXE7/A	GCAB-2000001~9999999	
	VXE8	VXE8		
	VXEB	VXEB	GCAB-1000001~1999999	BE21A B/C BE75B B/C
		VXEB/A	GCAB-2000001~9999999	BE75B B/C

Model	Type	Parts catalogue type	Applicable engine serial No.	Applicable carburetor identification No.
GX270 (1)	VXG	VXG	GCAB-1000001~9999999	BE21A B/C BE75B B/C
	VXK	VXK	GCAB-2000001~9999999	BE75B B/C
	VXQ4	VXQ4	GCAB-1000001~1999999	BE21A B/C BE75B B/C
		VXQ4/A	GCAB-2000001~9999999	BE75B B/C
	VXT1	VXT1	GCAB-1000001~1999999	BE21A C
		VXT1/A	GCAB-2000001~9999999	BE21A C BE21A D/E
	VXTB	VXTB	GCAB-1000001~1999999	BE21A C BE75B B/C
	VXU	VXU		BE21A B/C BE75B B/C
		VXU/A	GCAB-2000001~9999999	BE75B B/C
	VXU1	VXU1	GCAB-1000001~1999999	BE21A C BE75B B/C
		VXU1/A	GCAB-2000001~9999999	BE75B B/C
	WMA4	WMA4		BE76C A
	WMT8	WMT8	GCAB-1000001~1999999	BE21B B BE76C A
		WMT8/A	GCAB-2000001~9999999	BE76C A
	WXE8	WXE8	GCAB-1000001~1999999	
		WXE8/A	GCAB-2000001~9999999	

Model	Type	Parts catalogue type	Applicable engine serial No.	Applicable carburetor identification No.
GX270 (2)	L1	L1	GCAB-1000001~1999999	BE21A B/C BE21B A/B BE24B B/C
		L1/A	GCAB-2000001~9999999	BE21A C BE21A D/E BE21B B/C BE24B C/D
	Q1	Q1	GCAB-1000001~1999999	BE21A B/C BE21B A/B BE24B B/C
		Q1/A	GCAB-2000001~9999999	BE21A C BE21A D/E BE21B B/C BE24B C/D
	Q2	Q2	GCAB-1000001~1999999	BE21A B BE21B A BE24B B/C
	R1	R1		BE21A B/C BE21B A/B BE24B B/C
		R1/A	GCAB-2000001~9999999	BE21A C BE21A D/E BE21B B/C BE24B C/D

Model	Type	Parts catalogue type	Applicable engine serial No.	Applicable carburetor identification No.
GX270 (2)	S1	S1	GCAB-1000001~1999999	BE21A B/C BE21B A/B BE24B B/C
		S1/A	GCAB-2000001~9999999	BE21A C BE21A D/E BE21B B/C BE24B C/D
	V1	V1	GCAB-1000001~1999999	BE21B A/B
	W1	W1		BE21A B/C BE21B A/B BE24B B/C
		W1/A	GCAB-2000001~9999999	BE21A C BE21A D/E BE21B B/C BE24B C/D

Model	Type	Parts catalogue type	Applicable engine serial No.	Applicable carburetor identification No.
GX270 (3) (Propane)	HAP	HAP	GDAD-1000001~1099999	BEL3A A
		HAP/A	GDAD-1100001~9999999	
	RXP	RXP	GDAD-1000001~1099999	
		RXP/A	GDAD-1100001~9999999	
	VXP	VXP	GDAD-1000001~1099999	
		VXP/A	GDAD-1100001~9999999	
	VXQP	VXQP	GDAD-1000001~1099999	

* Of carburetor identification numbers, only the portions underlined in the example below are used for registration.

GX270 (1) (2) BE 21A C KC ナ

Ⓐ Ⓑ

GX270 (3) BEL3A A KC ナ

Features of each type

- See the following table for the features of each type. (Items in brackets are optional)

Specification		Model	GX270													
		Type	Standard equipment (1)													
			ES1	ES3	ES4	ESS	HA	HA2	HAQ	HEA	HEA2	HEA8	HH	HX	HX26	HX8
Crankshaft	25mm Ø Straight															
	25.4mm Ø Straight															
	20mm Ø Spline					●	●	●	●	●	●	●	●	●	●	
	M20 Stepped thread															
	1" Thread															
	M10 Tapered	●	●	●	●											
	5/16" Tapered															
Reduction	1/2 Reduction															
	1/2 Reduction (With clutch)															
	1/6 Reduction					●	●	●	●	●	●	●	●	●	●	
Coil	Lamp coil															
	Charge coil								●	●	●					
Fuel tank		●			●	●	●	●	●	●	●	●	●	●	●	
Control box									●	●	●					
Starter motor									●	●	●					
Oil alert		●	●	●	●	●	●			●	●		●	●	●	

Specification		Model	GX270												
		Type	Standard equipment (1)												
			HXQ4	LH	LHB1	LHB3	LHB5	LHE	LHQ4	LJ	LJC	LJG	LSS	LT	LTJ
Crankshaft	25mm Ø Straight														
	25.4mm Ø Straight														
	20mm Ø Spline	●	●	●	●	●	●	●	●	●	●	●	●	●	●
	M20 Stepped thread														
	1" Thread														
	M10 Tapered														
	5/16" Tapered														
Reduction	1/2 Reduction		●	●	●	●	●	●	●	●	●	●	●	●	●
	1/2 Reduction (With clutch)														
	1/6 Reduction	●													
Coil	Lamp coil												●	●	●
	Charge coil						●							●	
Fuel tank		●	●	●	●	●	●	●	●	●	●	●	●	●	●
Control box							●							●	
Starter motor							●							●	
Oil alert		●								●					

Specification		Model	GX270												
		Type	Standard equipment (1)												
			LWD	LWD1	LX	LX16	LXE	LXE8	LXQ4	LXU	LXZ	PA	PA2	PAE2	PX
Crankshaft	25mm Ø Straight														
	25.4mm Ø Straight														
	20mm Ø Spline	●	●	●	●	●	●	●	●	●					
	M20 Stepped thread														
	1" Thread										●	●	●	●	●
	M10 Tapered														
	5/16" Tapered														
Reduction	1/2 Reduction	●	●	●	●	●	●	●	●	●					
	1/2 Reduction (With clutch)														
	1/6 Reduction														
Coil	Lamp coil														
	Charge coil	●	●			●	●						●		
Fuel tank		●	●	●	●	●	●	●	●	●	●	●	●	●	●
Control box						●	●						●		
Starter motor		●	●			●	●						●		
Oil alert				●	●	●	●	●	●	●	●	●	●	●	●

Specification		Model	GX270													
		Type	Standard equipment (1)													
			PXE8	PXU	QA	QA2	QAB1	QAB3	QAE	QAE2	QAE6	QAG	QAG2	QAQ	QAQ4	QAR2
Crankshaft	25mm Ø Straight															
	25.4mm Ø Straight			●	●	●	●	●	●	●	●	●	●	●	●	
	20mm Ø Spline															
	M20 Stepped thread															
	1" Thread	●	●													
	M10 Tapered															
	5/16" Tapered															
Reduction	1/2 Reduction															
	1/2 Reduction (With clutch)															
	1/6 Reduction															
Coil	Lamp coil															
	Charge coil	●						●	●	●	●				●	
Fuel tank		●	●	●	●	●	●	●	●	●	●	●	●	●	●	
Control box		●						●	●	●						
Starter motor		●						●	●	●						
Oil alert		●	●	●	●		●	●	●	●	●	●		●	●	

Specification		Model	GX270													
		Type	Standard equipment (1)													
			QAW	QD	QE	QH	QH26	QHB5	QHC	QHE	QHE4	QHP1	QHQ4	QHR	QHR4	QHZ
Crankshaft	25mm Ø Straight															
	25.4mm Ø Straight	●	●	●	●	●	●	●	●	●	●	●	●	●	●	
	20mm Ø Spline															
	M20 Stepped thread															
	1" Thread															
	M10 Tapered															
	5/16" Tapered															
Reduction	1/2 Reduction															
	1/2 Reduction (With clutch)															
	1/6 Reduction															
Coil	Lamp coil												●			
	Charge coil								●	●				●		
Fuel tank		●	●	●	●	●	●	●	●	●	●	●	●	●	●	
Control box									●	●						
Starter motor									●	●				●		
Oil alert		●														

Specification		Model	GX270													
		Type	Standard equipment (1)													
			QKE3	QKE4	QL2	QME2	QMH	QP	QSC	QSC9	QSE	QSE2	QSE8	QT	QWA2	QWA4
Crankshaft	25mm Ø Straight															
	25.4mm Ø Straight	●	●	●	●	●	●	●	●	●	●	●	●	●	●	
	20mm Ø Spline															
	M20 Stepped thread															
	1" Thread															
	M10 Tapered															
	5/16" Tapered															
Reduction	1/2 Reduction															
	1/2 Reduction (With clutch)															
	1/6 Reduction															
Coil	Lamp coil						●									
	Charge coil	●	●	●	●			●	●	●	●	●				
Fuel tank		●	●	●	●	●	●	●	●	●	●	●	●	●	●	
Control box					●			●	●	●	●	●				
Starter motor		●	●		●			●	●	●	●	●				
Oil alert		●		●	●				●	●	●	●		●	●	

Specification		Model	GX270													
		Type	Standard equipment (1)													
			QWH2	QX	QX26	QXB	QXB6	QXB7	QXC	QXC4	QXC6	QXC9	QXE	QXE4	QXE6	QXE8
Crankshaft	25mm Ø Straight															
	25.4mm Ø Straight	●	●	●	●	●	●	●	●	●	●	●	●	●	●	
	20mm Ø Spline															
	M20 Stepped thread															
	1" Thread															
	M10 Tapered															
	5/16" Tapered															
Reduction	1/2 Reduction															
	1/2 Reduction (With clutch)															
	1/6 Reduction															
Coil	Lamp coil															
	Charge coil					●						●	●	●	●	
Fuel tank		●	●	●	●	●	●	●	●	●	●	●	●	●	●	
Control box						●						●	●	●	●	
Starter motor						●						●	●	●	●	
Oil alert		●	●	●	●	●	●	●	●	●	●	●	●	●	●	

Specification		Model	GX270													
		Type	Standard equipment (1)													
			QXE9	QXEB	QXK	QXQ4	QXU	RA	RA2	RA3	RD	RH	RH26	RHE	RHE4	RHQ4
Crankshaft	25mm Ø Straight						●	●	●	●	●	●	●	●	●	
	25.4mm Ø Straight	●	●	●	●	●										
	20mm Ø Spline															
	M20 Stepped thread															
	1" Thread															
	M10 Tapered															
	5/16" Tapered															
Reduction	1/2 Reduction															
	1/2 Reduction (With clutch)						●	●	●	●	●	●	●	●	●	
	1/6 Reduction															
Coil	Lamp coil															
	Charge coil	●	●										●	●		
Fuel tank		●	●	●	●	●	●	●	●	●	●	●	●	●	●	
Control box		●	●					●					●	●		
Starter motor		●	●										●	●		
Oil alert		●	●	●	●	●	●	●	●							

Specification		Model	GX270												
		Type	Standard equipment (1)												
			RSC2	RSS	RX	RXQ4	RXU	SD	SE	SH	SHE	SHEZ	SHQ4	SJ	SJG
Crankshaft	25mm Ø Straight	●	●	●	●	●	●	●	●	●	●	●	●	●	●
	25.4mm Ø Straight														
	20mm Ø Spline														
	M20 Stepped thread														
	1" Thread														
	M10 Tapered														
	5/16" Tapered														
Reduction	1/2 Reduction														
	1/2 Reduction (With clutch)	●	●	●	●	●									
	1/6 Reduction														
Coil	Lamp coil	●	●												
	Charge coil									●	●				
Fuel tank			●	●	●	●	●	●	●	●	●	●	●	●	●
Control box										●	●				
Starter motor										●	●				
Oil alert		●		●	●	●									●

Specification		Model	GX270													
		Type	Standard equipment (1)													
			SK	SKE1	SMC4	SMD	SME1	SME6	SMX2	SN	SW	SWA4	SWC4	SWE	SX	SX2
Crankshaft	25mm Ø Straight	●	●	●	●	●	●	●	●	●	●	●	●	●	●	
	25.4mm Ø Straight															
	20mm Ø Spline															
	M20 Stepped thread															
	1" Thread															
	M10 Tapered															
	5/16" Tapered															
Reduction	1/2 Reduction															
	1/2 Reduction (With clutch)															
	1/6 Reduction															
Coil	Lamp coil			●						●						
	Charge coil		●			●	●						●			
Fuel tank		●		●	●	●	●	●	●	●	●	●	●	●	●	
Control box						●							●			
Starter motor			●			●							●			
Oil alert				●	●	●	●	●			●	●		●		

Specification		Model	GX270												
		Type	Standard equipment (1)												
			SXB	SXB7	SXE	SXE4	SXE8	SXEB	SXQ4	SXU	VA	VA2	VAG2	VAW	VAW1
Crankshaft	25mm Ø Straight	●	●	●	●	●	●	●	●						
	25.4mm Ø Straight														
	20mm Ø Spline														
	M20 Stepped thread														
	1" Thread														
	M10 Tapered														
	5/16" Tapered									●	●	●	●	●	●
Reduction	1/2 Reduction														
	1/2 Reduction (With clutch)														
	1/6 Reduction														
Coil	Lamp coil														
	Charge coil			●	●	●	●								
Fuel tank		●	●	●	●	●	●	●	●	●	●				●
Control box				●	●	●	●								
Starter motor				●	●	●	●								
Oil alert		●	●	●	●	●	●	●	●	●	●	●			●

Specification		Model	GX270												
		Type	Standard equipment (1)												
			VDE	VDE2	VEB6	VH	VKB2	VKE4	VKK	VKX4	VM2	VMA4	VME2	VME4	VMS2
Crankshaft	25mm Ø Straight														
	25.4mm Ø Straight														
	20mm Ø Spline														
	M20 Stepped thread														
	1" Thread														
	M10 Tapered										●		●		●
	5/16" Tapered	●	●	●	●	●	●	●	●	●		●		●	
Reduction	1/2 Reduction														
	1/2 Reduction (With clutch)														
	1/6 Reduction														
Coil	Lamp coil													●	
	Charge coil	●	●	●		●	●	●				●	●	●	
Fuel tank				●	●					●	●	●	●		●
Control box		●	●	●		●						●		●	
Starter motor		●	●	●		●	●	●				●	●	●	
Oil alert		●	●	●		●	●	●	●	●	●	●	●	●	●

Specification		Model	GX270													
		Type	Standard equipment (1)													
			VMX2	VN17	VNG1	VNT2	VPE4	VPE5	VPE7	VPK	VPX4	VPX5	VPX7	VS3	VS37	VS4
Crankshaft	25mm Ø Straight															
	25.4mm Ø Straight															
	20mm Ø Spline															
	M20 Stepped thread															
	1" Thread															
	M10 Tapered															
	5/16" Tapered	●	●	●	●	●	●	●	●	●	●	●	●	●	●	
Reduction	1/2 Reduction															
	1/2 Reduction (With clutch)															
	1/6 Reduction															
Coil	Lamp coil	●														
	Charge coil					●	●	●	●							
Fuel tank																
Control box																
Starter motor						●	●	●	●							
Oil alert		●	●	●	●	●	●	●	●	●	●	●	●	●	●	

Specification		Model	GX270												
		Type	Standard equipment (1)												
			VS5	VSD	VSD3	VSD7	VSH7	VW12	VW22	VWA	VWA2	VWN2	VWT4	VX	VX26
Crankshaft	25mm Ø Straight														
	25.4mm Ø Straight														
	20mm Ø Spline														
	M20 Stepped thread														
	1" Thread														
	M10 Tapered														
	5/16" Tapered	●	●	●	●	●	●	●	●	●	●	●	●	●	●
Reduction	1/2 Reduction														
	1/2 Reduction (With clutch)														
	1/6 Reduction														
Coil	Lamp coil														
	Charge coil														
Fuel tank			●		●			●					●	●	●
Control box															
Starter motor												●			
Oil alert		●	●	●	●	●	●	●		●	●	●	●	●	●

Specification		Model	GX270												
		Type	Standard equipment (1)												
			VXB2	VXB6	VXB7	VXE	VXE4	VXE6	VXE7	VXE8	VXEB	VXG	VXK	VXQ4	VXT1
Crankshaft	25mm Ø Straight														
	25.4mm Ø Straight														
	20mm Ø Spline														
	M20 Stepped thread														
	1" Thread														
	M10 Tapered														
	5/16" Tapered	●	●	●	●	●	●	●	●	●	●	●	●	●	●
Reduction	1/2 Reduction														
	1/2 Reduction (With clutch)														
	1/6 Reduction														
Coil	Lamp coil														
	Charge coil				●	●	●	●	●	●					
Fuel tank		●	●	●	●	●	●	●	●	●	●	●	●		●
Control box					●	●	●	●	●	●					
Starter motor					●	●	●	●	●	●					
Oil alert		●		●	●	●	●	●	●	●	●	●	●	●	●

Specification		Model	GX270				
		Type	Standard equipment (1)				
			VXU	VXU1	WMA4	WMT8	WXE8
Crankshaft	25mm Ø Straight						
	25.4mm Ø Straight						
	20mm Ø Spline						
	M20 Stepped thread				●	●	●
	1" Thread						
	M10 Tapered						
	5/16" Tapered		●	●			
Reduction	1/2 Reduction						
	1/2 Reduction (With clutch)						
	1/6 Reduction						
Coil	Lamp coil						
	Charge coil				●		●
Fuel tank			●	●	●	●	●
Control box					●		●
Starter motor					●		●
Oil alert			●	●	●	●	●

Specification		Model	GX270										
		Type	Selective equipment (2)							Propane (3)			
			L1	Q1	Q2	R1	S1	V1	W1	HAP	RXP	VXP	VXQP
Crankshaft	25mm Ø Straight					●	●				●		
	25.4mm Ø Straight			●	●								
	20mm Ø Spline		●							●			
	M20 Stepped thread								●				
	1" Thread												
	M10 Tapered												
	5/16" Tapered							●				●	●
Reduction	1/2 Reduction		●										
	1/2 Reduction (With clutch)					●					●		
	1/6 Reduction									●			
Coil	Lamp coil		(●)	(●)	(●)	(●)	(●)	(●)	(●)				
	Charge coil		(●)	(●)	(●)	(●)	(●)	(●)	(●)				
Fuel tank			(●)	(●)	(●)	(●)	(●)	(●)	(●)				
Control box			●	●	●	●	●	●	●				
Starter motor			(●)	(●)	(●)	(●)	(●)	(●)	(●)				
Oil alert			(●)	(●)	(●)	(●)	(●)	(●)	(●)	●	●	●	●

Fuel hose, general purpose hoses and vinyl hose

- The standard part fuel hose, general purpose hose and vinyl hose may be substituted by the coiled bulk part.
- When ordering the standard part fuel hose, general purpose hose and vinyl hose use the bulk part number written in the parts catalog in brackets () underneath the part name.
- When exchanging the hose, cut and use at the specified length as mentioned in the part name.
(For the method of cutting the bulk part, and method of filling out orders etc., please refer to the instructions issued with the bulk part.)

Bulk part number of fuel hose, general purpose hose and vinyl hose.

Example: 9 5 0 0 1 - 7 5 0 0 1 - 5 0 M

Bulk part number:

Refers to the bulk part.

Marking code (fuel hose and general purpose hose)

Change code (Vinyl hose)

Indicates number mark or change sequence, however, the code for the bulk part must be strictly 0 (zero).

Types of code:

- Fuel hose
 - 2: Red outside braid (3 mm inside dia. only)
 - 5: Black inside braid
 - 3: Red (3 mm inside dia. only)
 - 4: Ash gray with red stripe (3 mm inside dia. only)
 - 6: Black

- General hose
 - 1: Ash gray
 - 2: Ash gray
 - 3: Black
 - 5: Black

- Vinyl hose
 - 1: Clear
 - 2: Black
 - 3: Light red
 - 6: Light red
 - 7: Pale black

Lengths:

001: 1 m (standard)
003: 3 m
008: 8 m

} Application or specification of some parts is not settled.

I.D code: (fuel hose and general purpose hose)

30: 3.0 mm
35: 3.5 mm
45: 4.5 mm

50: 5.0 mm
55: 5.3 mm, 5.5 mm
65: 6.5 mm

70: 7.0 mm
75: 7.3 mm, 7.5 mm
80: 8.0 mm

11: 11 mm
91: 12 (outside dia. 15) mm
92: 12 (outside dia. 16) mm

12: 12 (outside dia. 17) mm
14: 14 mm
17: 17 mm

ID./OD. code: (vinyl hose)

01: ID. 2.9, OD. 6.8 mm
03: ID. 3.0, OD. 6.0 mm
05: ID. 3.5, OD. 6.5 mm
07: ID. 4.0, OD. 7.0 mm
08: ID. 4.5, OD. 6.5 mm
09: ID. 4.5, OD. 8.0 mm

12: ID. 5.0, OD. 7.0 mm
10: ID. 5.0, OD. 8.0 mm
11: ID. 5.0, OD. 9.0 mm
14: ID. 6.0, OD. 9.0 mm
17: ID. 7.0, OD. 9.0 mm
19: ID. 7.0, OD. 11.0 mm

21: ID. 8.0, OD. 9.0 mm
23: ID. 8.0, OD. 12.0 mm
25: ID. 9.0, OD. 11.0 mm
27: ID. 9.0, OD. 13.0 mm
33: ID. 10.0, OD. 14.0 mm
36: ID. 11.0, OD. 13.0 mm

37: ID. 11.0, OD. 15.0 mm
38: ID. 12.0, OD. 13.0 mm
39: ID. 12.0, OD. 14.0 mm
40: ID. 12.0, OD. 16.0 mm
43: ID. 13.0, OD. 15.0 mm
45: ID. 14.0, OD. 18.0 mm

50: ID. 16.0, OD. 19.0 mm
55: ID. 17.5, OD. 20.5 mm
60: ID. 22.0, OD. 27.0 mm

Hose type:

- 1: Fuel hose
- 3: Vinyl hose
- 5: General hose


⊙ CAUTION: It is DANGEROUS to confuse the fuel hose with the general purpose hose or vinyl hose.

Never use a general purpose hose or vinyl hose in place of a fuel hose or vice versa. Always use the correct bulk part in the parts catalogue, according to the service manual or the instructions issued with the bulk part.

FLAT RATE SERVICE TIME

Flat rate service time (FRT) means the standard time required to service a product, which is listed in this manual to help the dealers control the actual working process and calculate the service charge by using it as a guide.

FRT setting system

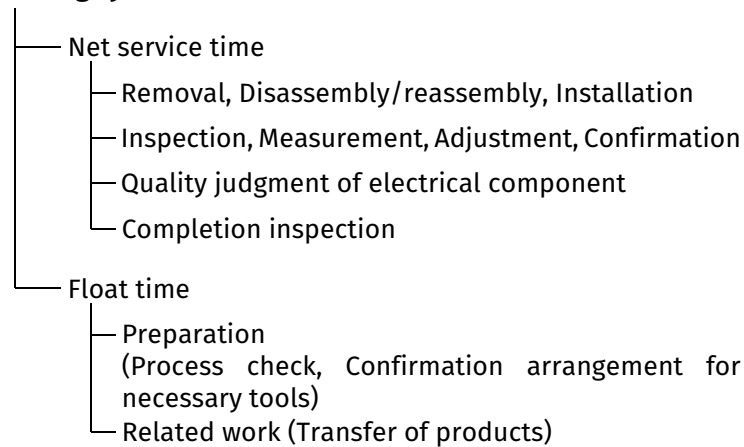

* Float time is set by multiplying the net service time by a given coefficient.

Editorial style

The service items shown in the text are listed with the exchange work time for the repair sales parts as the subject. Other representative service items not using repair parts (removal/installation, adjustment, inspection/measuring, and other work) are listed collectively in the list in the preface, classified according to the work.

FRT setting standard

- Decimal system (in unit of 0.1) is adopted to set FRT as it is convenient to calculate the wage.
Example: (0.1)→6 minutes, (0.2)→12 minutes
 $[\text{Labor cost per hour}] \times [\text{FRT}] = [\text{Wage}]$
- FRT is set with a hand tool.
- Service items and FRT can be subject to change depending on development of tools and service equipment and improvement in service procedure.

Work procedure

- As the work procedure is set with the work time according to the method in the separate Service Manual, refer to this Manual as required.
- Work methods permitting servicing in the shortest time still permitting assurance of safe work and product warranty are used for the setting of service items not listed in the Service Manual.
- Work basically is to be performed by one person, and when two or more people are required, setting is done as the total time for the number of people.
- The set value for the technological level of the workers uses a person with three years of experience in the repair of Honda products as the standard.
- Special tools and service equipment used to set FRT are those specified or recommended in Service Manual.

Service item whose FRT is not presented

- Accessories and service parts that are not listed to use in this manual.
 - Locations with little aging deterioration or breakage during normal use.
 - Service work that can be finished by one touch.
 - Service work that is seldom done (i.e. extremely small causes of trouble and service frequency).
 - Products and parts whose location for installation differs according to its status of use and application.
- * When FRT is not presented, please calculate wages based on appropriate actual work time.

Operation not included of FRT

- Oil and coolant water draining, Waiting time for warming up operation and etc..
- Additional operation that involves removal/installation of standard exterior equipment.
- Indirect time spent for service by visiting the customer, trade-in, and delivery.
- Indirect time required for ordering and delivery of parts.
- Cost for grease, adhesive agent, etc. used for service work.

Explanation of FRT by using an example
(The example may differ from the actual presented items)

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
① ②	1111L1	(1, 3, 4, 7) VALVE, INTAKE 4.1	②
③	1111L1A	• NOTE: OHV type • Includes: Engine removal and installation One head (intake all) add 1.4	⑦ ⑤

- ①Reference No. of the illustration of part that shows location of the replacement work.
- ②FRT is an abbreviation of Flat Rate Time indicating the standard service time required for the replacement.
- ③LON is an abbreviation of Labor Operation Number, and it is a classification of the service items by the work unit code.

The same operation code is used regardless of the models.

Standard operation is indicated with 6 digits code, and additional operation is indicated with 7 digits code.


- ④Indicating the intake valve replacement and FRT4.1.
- ⑤Indicating FRT1.4 that will be added when additional operation (whole intake side of one cylinder head) is done in association with intake valve replacement.

- ⑥Indicating work condition or application condition of the service item.
- ⑦Indicating work contents that are included in the service item.
- ⑧Indicating a reference No. whose operation and time are the same as FRT4.1 for the intake valve.

(The application range is limited to the service items without an LON setting within a same block.)

How to refer to the service item by using the sample
 (intake valve replacement)

Open to the page of the block where the intake valve's spare part illustration is shown.



Look for the intake valve illustration, and refer to the service item and FRT that agree with the reference No.

Indication mark for the listing of service items that continues to the following page

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
2	1111L1	VALVE, INTAKE	4.1
	.	.	.
	.	.	.

+

Mark indicated at the last line.

Indication of the block with no setting of FRT

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
NO INFORMATION			

• LON code system

1	11	1	L1	A
a	b	c	d	e

- a) Category code..... Engine
- b) Location/function code..... Engine upper
- c) Operation code..... Replace
- d) Operation sequence number (Unit code can be shown with alphabet)
..... Intake valve
(No regular rule of code)
- e) Additional code..... One head (intake all)
(No regular rule of code)

1	11	1	L1	A
a		c		

a) Category codes and classification

Code	Category
1	Engine
2	Power drive
3	Fuel & Exhaust
4	Frame & Body
5	Steering
6	Electrical
7	Axle & Brake
8	Control system
9	-
0	Attachments

c) Operation codes and classification

Code	Operation category
1	Replace, Removal/Installation, Change
2	Overhaul
3	Adjust, Rotation
4	(Paint-related work: Top-coat)
5	Test, Inspect/diagnose, Measurement
6	(Overhaul-related work: Rebore)
7	(Overhaul-related work: Reseal)
8	(Resurface)
9	(Paint-related work: Refinish)
0	Repair, Cleaning, Air bleeding

Major service items without using spare parts

Removal/Installation, Adjustment, Inspection/Measurement, Overhaul, Other work

E: Engine, T: Transmission, D: Drive system, B: Body and related parts

• Adjustment

	LON	DESCRIPTION	FRT
E	1113A1	VALVE CLEARANCE-ADJUSTMENT NOTE: For 1 product	0.3
	1163A0	CONTROL, THROTTLE/GOVERNOR-ADJUSTMENT	0.2
	3113A2	CARBURETOR IDLE-ADJUSTMENT	0.2

• Inspection/Measurement

	LON	DESCRIPTION	FRT
E	1105A0	ENGINE OIL-INSPECTION	0.1

• Overhaul

Work conditions: The required measurements, inspections, adjustments, and cleaning/washing for each part are performed, including the main body removal/installation work and the replacement of defective parts.

	LON	DESCRIPTION	FRT
E	3112A0	CARBURETOR-OVERHAUL INCLUDES: All necessary adjustment	0.6


• Other work

	LON	DESCRIPTION	FRT
E	1101E1	ENGINE OIL-CHANGE INCLUDES: Engine oil-inspection	0.1
	3120A0	AIR CLEANER-CLEANING INCLUDES: Air cleaner-inspection	0.1
	3130A0	SPARK ARRESTER-CLEANING INCLUDES: Spark arrester-inspection	0.2
	6140A0	SPARK PLUG-ADJUSTMENT/CLEANING INCLUDES: Spark plug check NOTE: For 1 product	0.2

ENGINE GROUP


E-2

CYLINDER HEAD

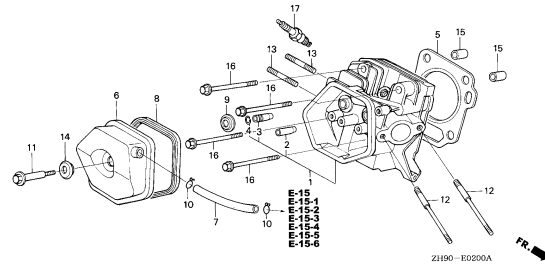


E-3

CYLINDER BARREL

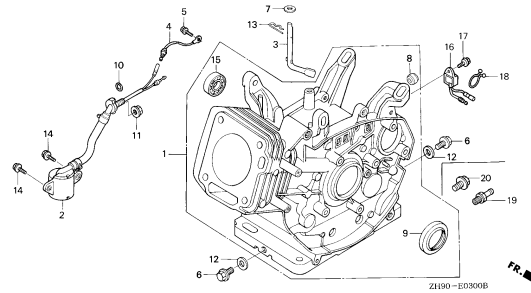


E-6

CRANKCASE COVER(1)

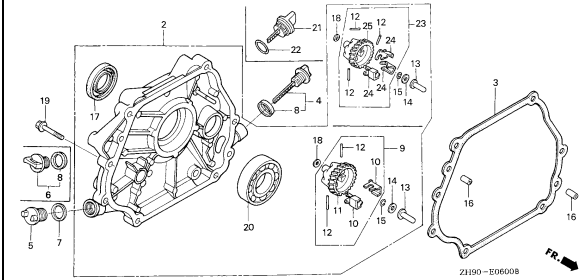


E-6-1

CRANKCASE COVER(2)

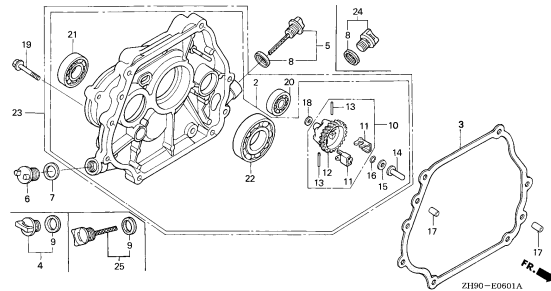


E-6-2

CRANKCASE COVER(3)

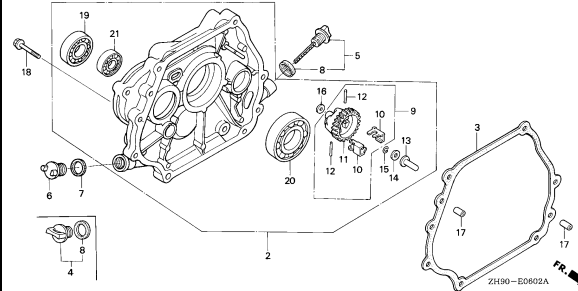


E-6-3

CRANKCASE COVER(4)

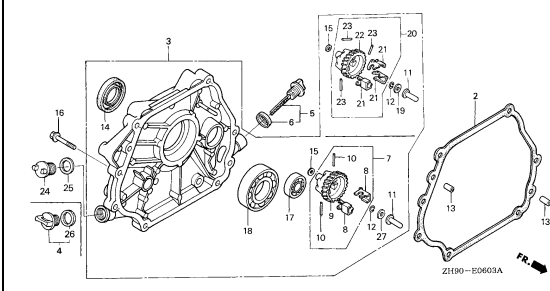


E-6-4

CRANKCASE COVER(5)

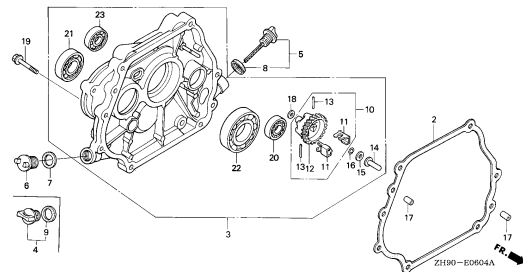


E-6-5

CRANKCASE COVER(6)

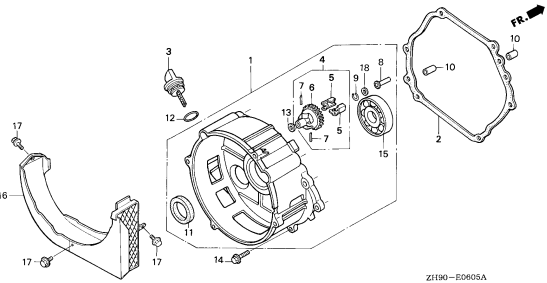

E-7


CRANKSHAFT

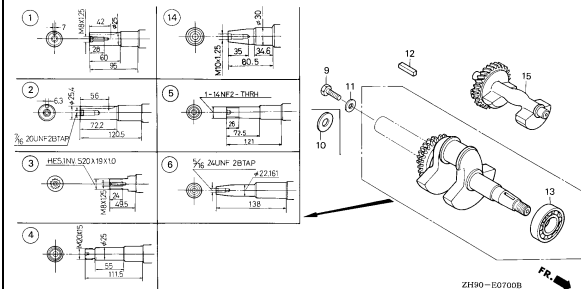

ENGINE GROUP

E-8

PISTON

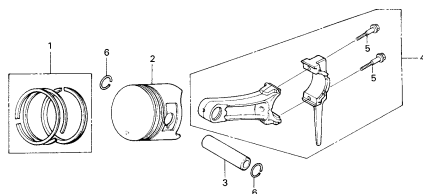


ZH190-E0800A



E-9

CAMSHAFT

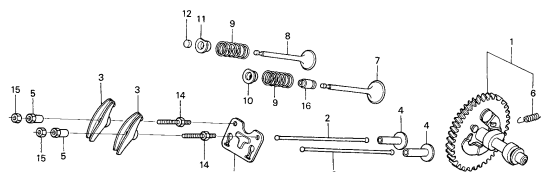


ZH190-E0900A



E-11

RECOIL STARTER

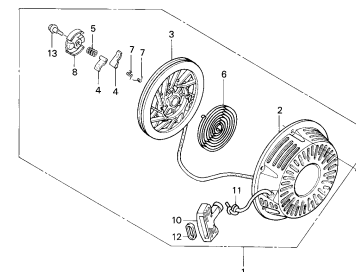


ZH190-E1100B



E-12

FAN COVER

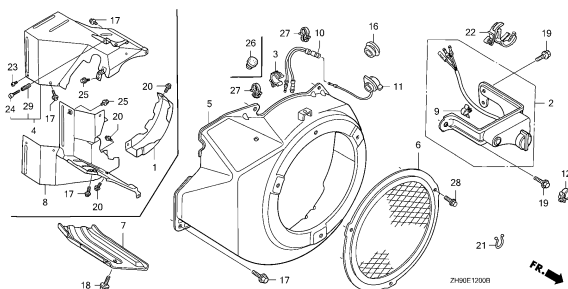


ZH190E1200B



E-14

CARBURETOR(1)

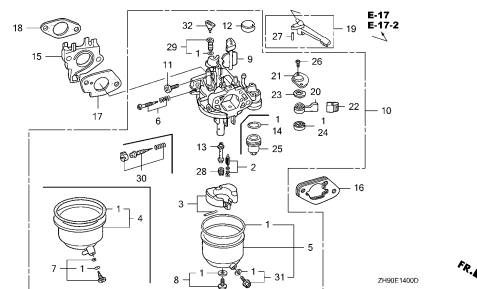


ZH190E1400D



E-14-1

CARBURETOR(2)

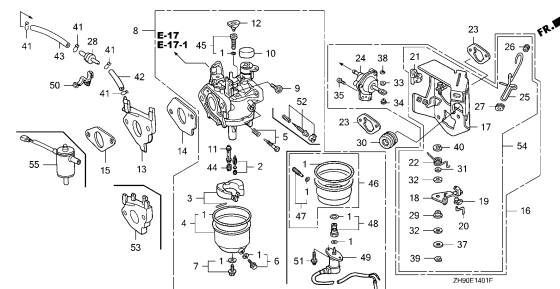


ZH190E1401F



E-14-2

CARBURETOR(3)

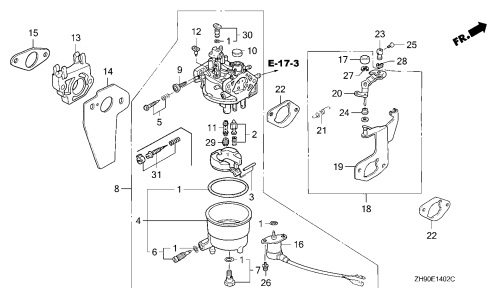


ZH190E1403C



E-14-3

CARBURETOR(4)

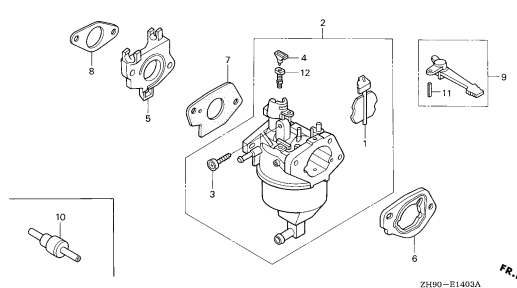


ZH190-E1403A



E-15

AIR CLEANER(1)

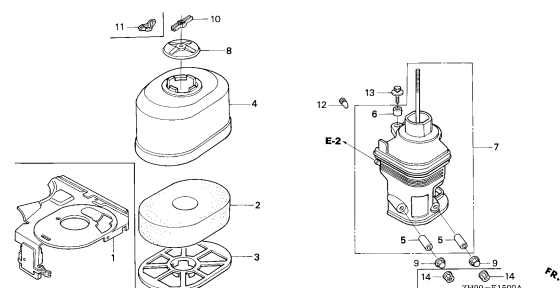

ZH190-E1500A




2

ENGINE GROUP


E-15-1

AIR CLEANER(2)

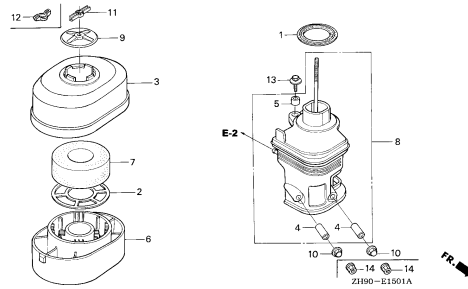


E-15-2

AIR CLEANER(3)

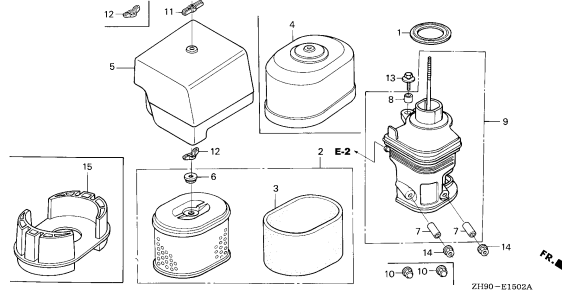


E-15-3

AIR CLEANER(4)

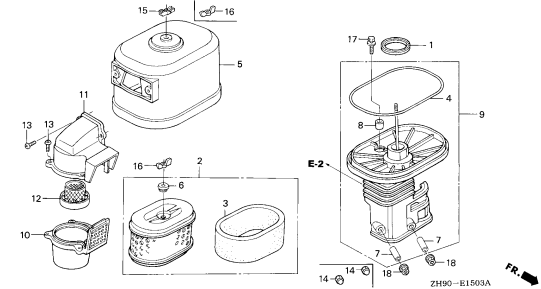


E-15-4

AIR CLEANER(5)

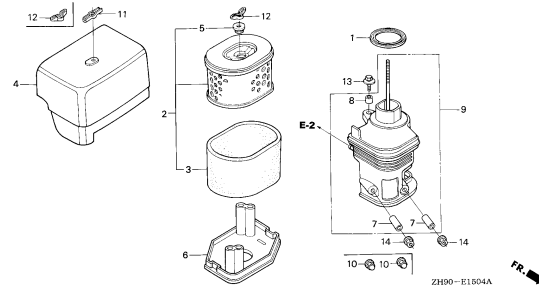


E-15-5

AIR CLEANER(6)

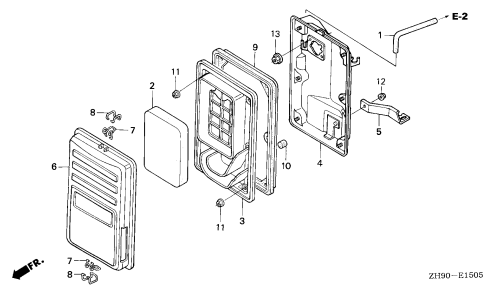


E-15-6

AIR CLEANER(7)

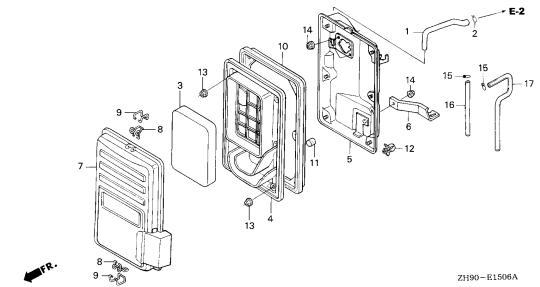


E-16

MUFFLER(1)

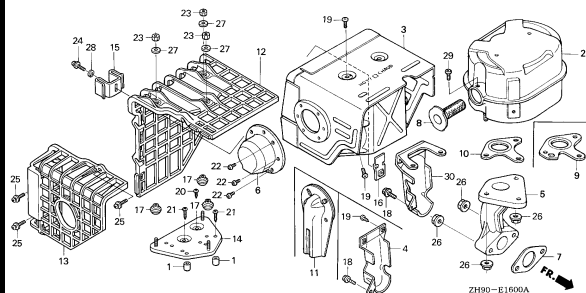


E-16-1

MUFFLER(2)

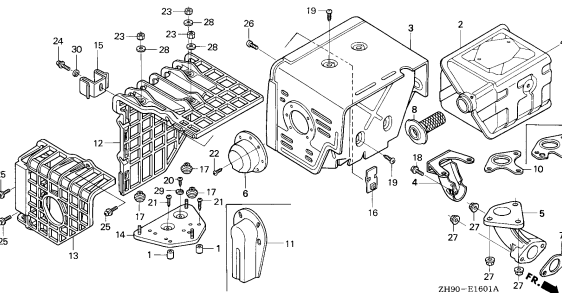

E-16-2


MUFFLER(3)

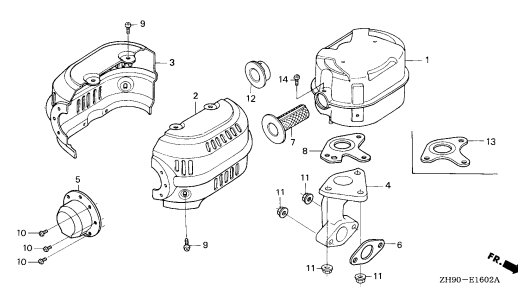

ENGINE GROUP


E-16-3

MUFFLER(4)

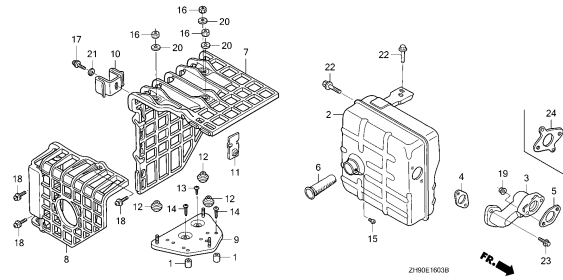


E-16-4

MUFFLER(5)

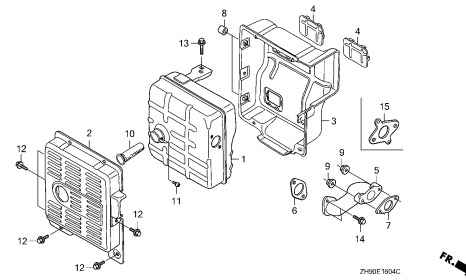


E-16-5

MUFFLER(6)

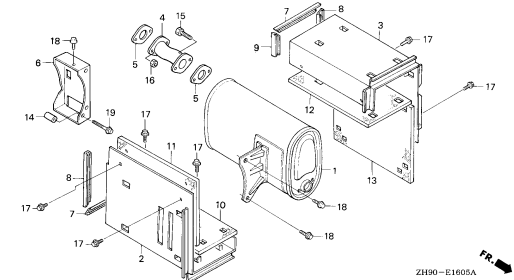


E-17

FUEL TANK(1)

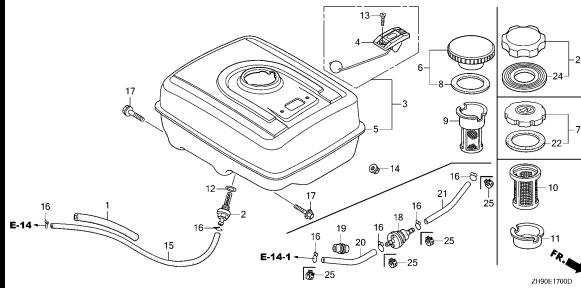


E-17-1

FUEL TANK(2)

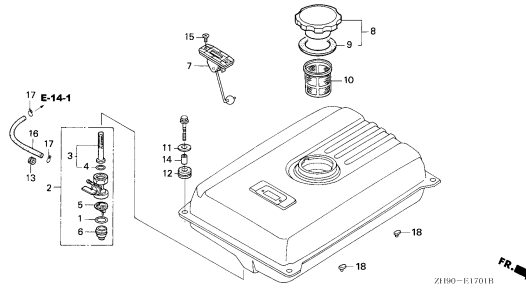


E-17-2

FUEL TANK(3)

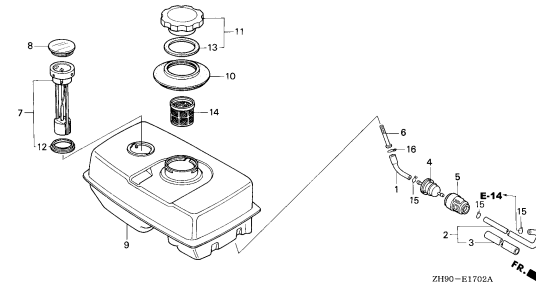


E-17-3

FUEL TANK(4)

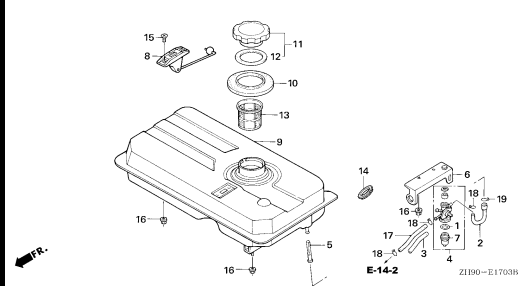


E-19

FLYWHEEL

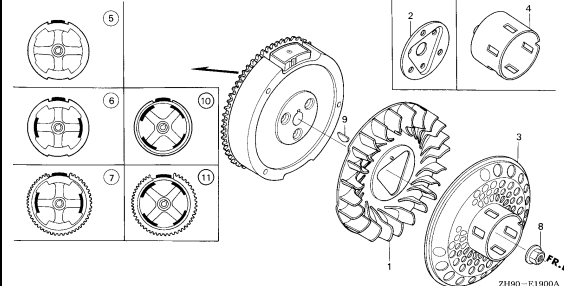

E-20

IGNITION COIL

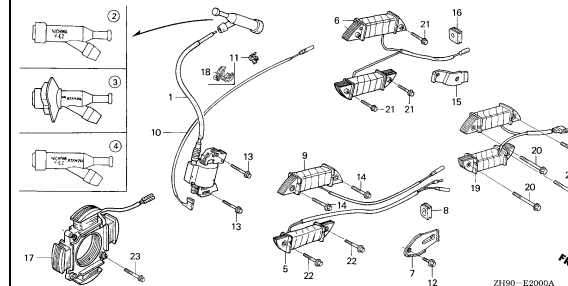


2

ENGINE GROUP

E-21


STARTER MOTOR

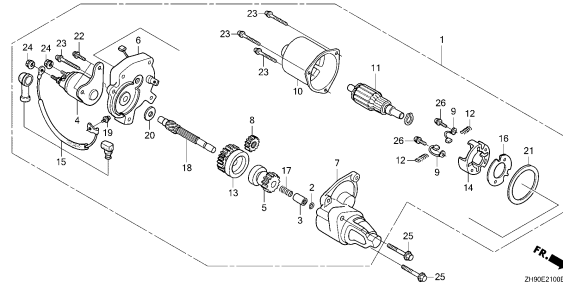

ZH00E21000

E-22


CONTROL(1)

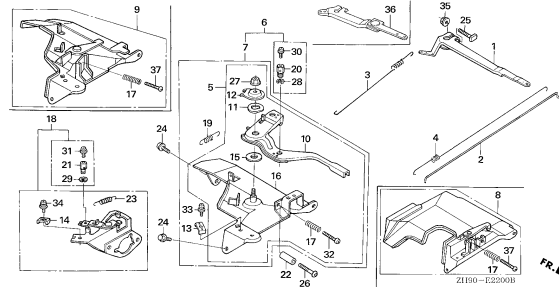

ZH100-E22000

E-22-1


CONTROL(2)

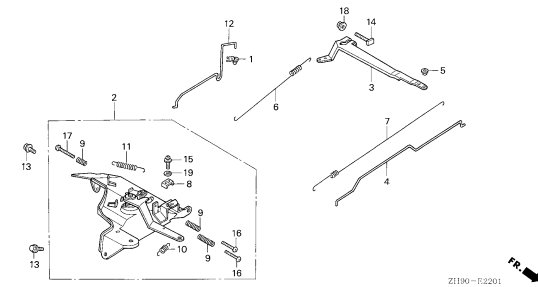

ZH100-E2201

E-22-10


AUTO THROTTLE

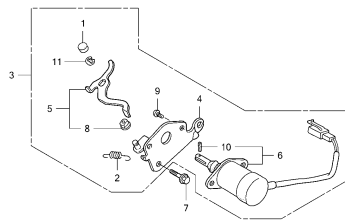

ZH00E22100

E-23


CONTROL BOX(1)

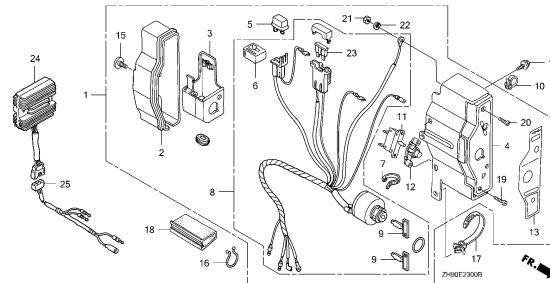

ZH00E23000

E-23-1


CONTROL BOX(2)

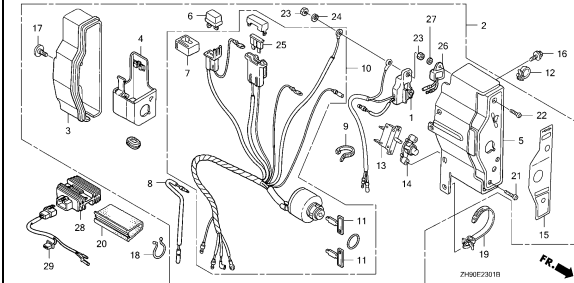

ZH00E23010

E-23-2


CONTROL BOX(3)

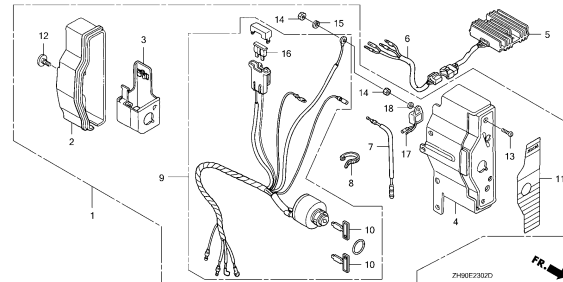

ZH00E23020

E-26


REDUCTION(1/2)(CLUTCH)

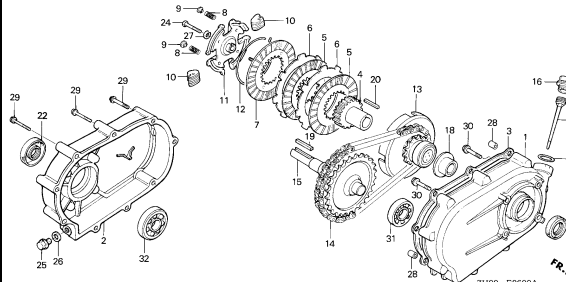

ZH100-E2600A

E-26-1

REDUCTION(1/2)

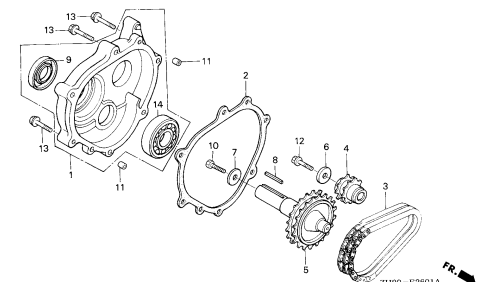


ZH100-E2601A

ENGINE GROUP

E-26-2


REDUCTION(1/6)

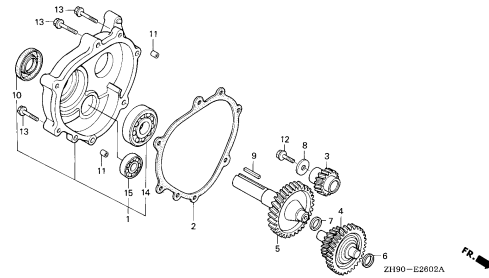

ZH190-E2602A

E-28


LABEL(1)

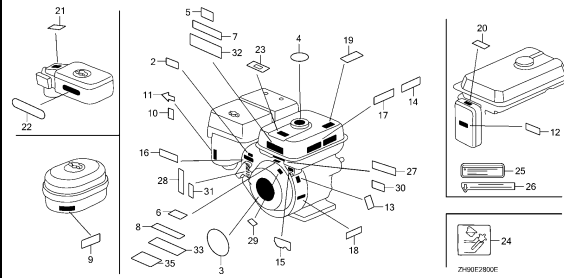

ZH400E2800E

E-28-1


LABEL(2)

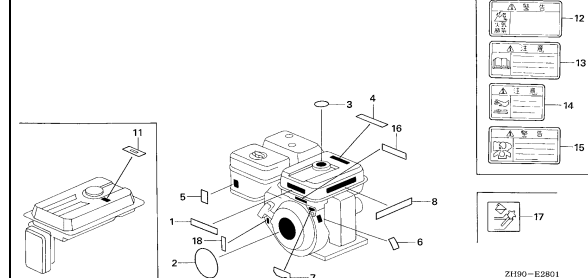

ZH190-E2801

E-29


TOOL(1)

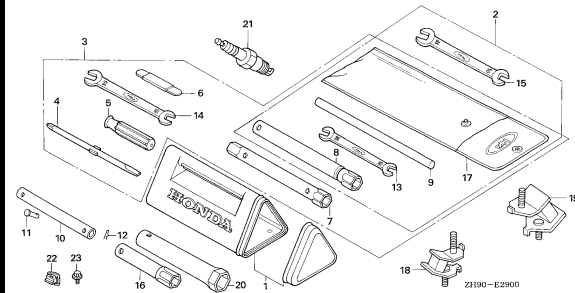

ZH190-E2900

E-29-1


TOOL(2)

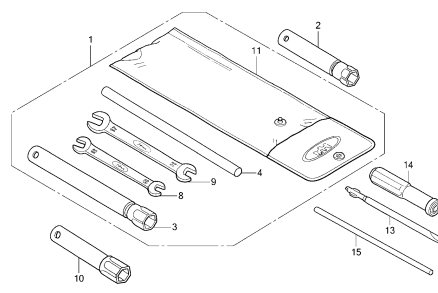

ZH190E2901A

E-40


OTHER PARTS(FUEL TANK)

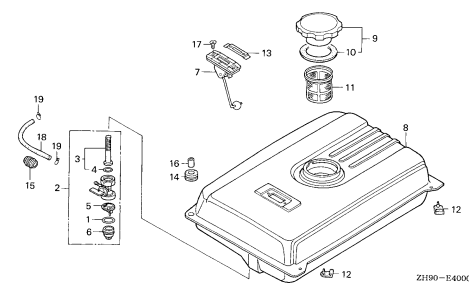

ZH190-E4000A

E-40-10


OTHER PARTS(EMERGENCY STOP SWITCH)

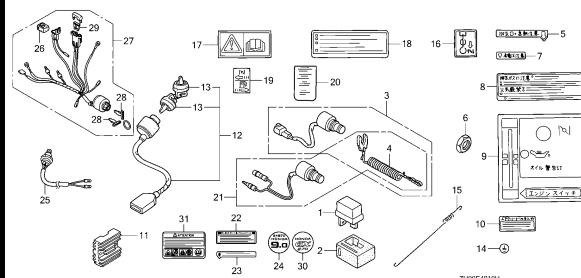

ZH400E4010H

E-40-20


OTHER PARTS(KILL SWITCH/SUB HARNESS)

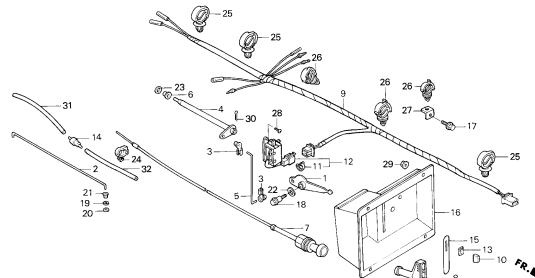

ZH190-E4020A

E-40-30

OTHER PARTS(UNDER FRAME)

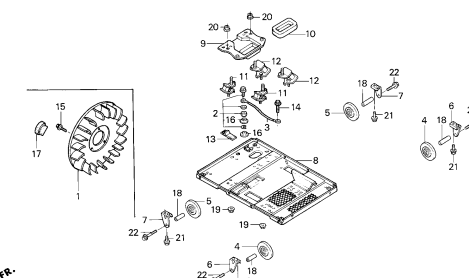


ZH190-E4030B

2

ENGINE GROUP


EOP-1

GASKET KIT

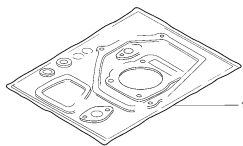

111111-111111

CYLINDER HEAD




Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	1111N3	HEAD, CYLINDER	0.9
2	1111E9	GUIDE, INTAKE VALVE	0.8
		.INCLUDES:	
		Valve clearance adjustment	
	1111E9E	.Replace intake and exhaust	
		all add	0.2
3	1111E8	GUIDE, EXHAUST VALVE	0.8
		.INCLUDES:	
		Valve clearance adjustment	
	1111E8E	.Replace intake and exhaust	
		all add	0.2
5	1111N4	GASKET, CYLINDER HEAD	0.5
7	1111K5	TUBE, BREATHER	0.2
8		(6)	
	1111D5	CYLINDER HEAD COVER AND/OR	
		PACKING	0.1
17	6141C1	PLUG, SPARK	0.1
		.INCLUDES: Spark plug check	

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
1	12200-ZH9-000	HEAD COMP., CYLINDER.....	1	1	-	-----	ES1, ES3, ESS, HA, HA2, HAQ, HEA, HEA2, HEA8, HH, HX, HX26, HX8, HXQ4, L1, LH LHB1, LHB3, LHE, LHQ4, LJ, LJC, LJG, LSS, LT, LTJ, LW, LWD, LWD1, LX, LX16, LXE LXE8, LXQ4, LXU, LXZ, PA, PA2, PAE2, PX, PX26, PXE8, PXU, Q1, Q2, QA, QA2, QAB1 QAB3, QAE, QAE2, QAE6, QAG, QAG2, QAQ, QAQ4, QAR2, QAW, QD, QE, QH, QH26, QHC QHE, QHE4, QHP1, QHQ4, QHR, QHR4, QHZ, QKE3, QL2, QME2, QM, QP, QSC, QSC9, QSE QSE8, QT, QWA2, QWA4, QWH2, QX, QX26, QXB, QXB6, QXB7, QXC, QXC4, QXC6, QXC9 QXE, QXE4, QXE6, QXE8, QXEB, QXQ4, QXU, R1, RA, RA2, RD, RH, RH26, RHE, RHE4 RHQ4, RSC2, RSS, RX, RXQ4, RXU, S1, SD, SE, SH, SHE, SHEZ, SHQ4, SJ, SJJ, SJP, SK SKE1, SMC4, SMD, SME1, SME6, SMX2, SN, SW, SWC4, SWE, SX, SX2, SXB, SXB7, SXE SXE4, SXE8, SXEB, SXQ4, SXU, V1, VA, VA2, VAG2, VAW, VAW1, VD16, VDE, VDE2 VEB6, VH, VKB2, VKE4, VKX4, VM2, VME2, VMS2, VMT, VMX2, VN17, VNG1, VNT2, VPE4 VPE5, VPE7, VPX4, VPX5, VPX7, VS37, VSD, VSD3, VSD7, VSH7, VW12, VW22, VWA VWA2, VWN2, VWT4, VX, VX26, VXB, VXB2, VXB6, VXB7, VXE, VXE4, VXE6, VXE7, VXEB VVG, VXQ4, VXT1, VXTB, VXU, VXU1, W1, WMT8, WXE8

E-2

CYLINDER HEAD

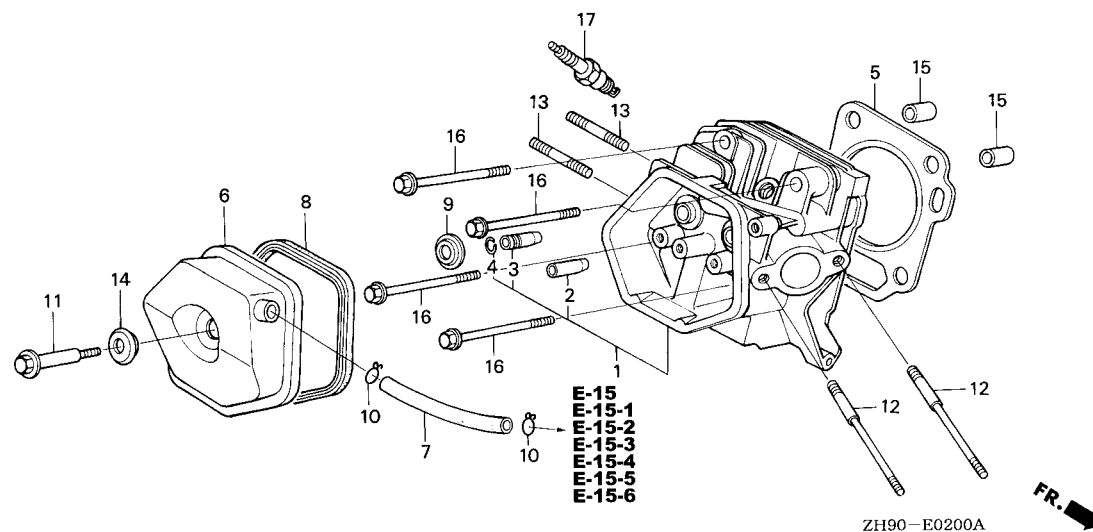

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
(1)	12200-ZH9-405	HEAD COMP., CYLINDER.....	1	1	-	-----	ES1/A, ES3/A, ES4, ESS/A, HA2/A, HEA2/A, HEA8/A, HX/A, HX26/A, HX8/A, HXQ4/A, L1/A, LH/A, LHB5, LHE/A, LJ/A, LJC/A, LJG/A, LT/A, LW/A, LWD1/A, LX/A, LXE/A, LXE8/A, LXQ4/A, LXU/A, PA2/A, PAE2/A, PX/A, PX26/A, PXE8/A, PXU/A, Q1/A, QA2/A, QAB3/A, QAE2/A, QAE6/A, QAG/A, QAG2/A, QAQ4/A, QAR2/A, QAW/A, QD/A, QE/A, QH/A, QH26/A, QHB5, QHE4/A, QHP1/A, QHQ4/A, QHR/A, QHR4/A, QHZ/A, QKE3/A, QKE4, QME2/A, QMH/A, QP/A, QSC9/A, QSE/A, QSE2, QSE8/A, QT/A, QWA4/A, QWH2/A, QX/A, QX26/A, QXB/A, QXB6/A, QXB7/A, QXC4/A, QXC6/A, QXC9/A, QXE/A, QXE4/A, QXE6/A, QXE8/A, QXE9, QXK, QXQ4/A, QXU/A, R1/A, RA2/A, RA3, RD/A, RH26/A, RHE4/A, RHQ4/A, RSC2/A, RSS/A, RX/A, RXQ4/A, RXU/A, S1/A, SD/A, SE/A, SH/A, SHQ4/A, SJ/A, SJG/A, SMC4/A, SME1/A, SME6/A, SN/A, SWA4, SWC4/A, SX/A, SXB/A, SXB7/A, SXE/A, SXE4/A, SXE8/A, SXEB/A, SXQ4/A, SXU/A, VA2/A, VAG2/A, VDE2/A, VKB2/A, VKK, VM2/A, VMA4, VME2/A, VME4, VMT/A, VN17/A, VNG1/A, VNT2/A, VPE4/A, VPE7/A, VPK, VPX4/A, VPX7/A, VS3, VS37/A, VS4, VS5, VSD/A, VSD3/A, VSD7/A, VW12/A, VWA2/A, VWN2/A, VWT4/A, VX/A, VXB/A, VXB7/A, VXE4/A, VXE6/A, VXE7/A, VXE8, VXE8/A, VXK, VXQ4/A, VXT1/A, VXU/A, VXU1/A, W1/A, WMA4, WMT8/A, WXE8/A, HAP, RXP, VXP, VXQP, HAP/A, RXP/A, VXP/A
	12200-ZH9-800		-	-	1	-----	
	12200-ZH9-406		-	-	1	-----	
2	12204-ZE2-306	GUIDE, IN. VALVE(O.S.).....	(1)	(1)	(1)		
3	12205-ZE2-305	GUIDE, EX. VALVE(O.S.).....	(1)	(1)	(1)		
4	12216-ZE2-300	CLIP, VALVE GUIDE.....	1	1	1		
5	12251-ZH9-000	GASKET, CYLINDER HEAD.....	1	1	1		


E-2

CYLINDER HEAD

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	GX270 (2)	(3)		
6	12310-ZE2-020	COVER COMP., HEAD	1	-	1	-----	ES1, ES1/A, ES3, ES3/A, ES4, HA2, HA2/A, HAP, HAP/A, HEA, HEA2, HEA2/A, HEA8, HEA8/A, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A, LH/A, LHB1, LHB3, LHB5, LHE/A, LHQ4, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LT, LT/A, LTJ, LW/A, LWD1, LWD1/A, LX/A, LX16, LXE, LXE/A, LXE8, LXE8/A, LXQ4, LXQ4/A, LXU, LXU/A, PA2, PA2/A, PAE2, PAE2/A, PX/A, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, QA2, QA2/A, QAB1, QAB3, QAB3/A, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAQ4, QAQ4/A, QAR2, QAR2/A, QAW, QAW/A, QD/A, QE/A, QH/A, QH26, QH26/A, QHB5, QHE4, QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A, QKE3, QKE3/A, QKE4, QL2, QME2, QME2/A, QMH, QMH/A, QP/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QT, QT/A, QX/A, QX26, QX26/A, QXB/A, QXB6, QXB6/A, QXB7, QXB7/A, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXQ4, QXQ4/A, QXU, QXU/A, RA2, RA2/A, RA3, RD/A, RH26, RH26/A, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A, SD/A, SE/A, SH/A, SHQ4, SHQ4/A, SJ/A, SJG, SJG/A, SKE1, SMC4, SMC4/A, SMD, SME1, SME1/A, SME6, SME6/A, SMX2, SN, SN/A, SWA4, SWC4, SWC4/A, SX/A, SX2, SXB/A, SXB7, SXB7/A, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB/A, SXQ4, SXQ4/A, SXU, SXU/A, VA2, VA2/A, VAG2, VAG2/A, VAW1, VD16, VDE, VDE2, VDE2/A, VEB6, VKB2, VKB2/A, VKE4, VKK, VKX4, VM2, VM2/A, VME2, VME2/A, VMS2, VMT, VMT/A, VMX2, VN17, VN17/A, VNG1/A, VNT2, VNT2/A, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4, VS5, VSD/A, VSD3/A, VSD7, VSD7/A, VSH7, VW12, VW12/A, VW22, VWA, VWA2, VWA2/A, VWN2, VWN2/A, VWT4, VWT4/A, VX/A, VX26, VXB/A, VXB2, VXB6, VXB7, VXB7/A, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8/A, VXG, VXK, VXP, VXP/A, VXQ4, VXQ4/A, VXQP, VXT1, VXT1/A, VXTB, VXU, VXU/A, VXU1, VXU1/A, WMA4, WMT8, WMT8/A, WXE8, WXE8/A
	12310-ZE3-791	COVER COMP., HEAD (BREATHING TUBE JOINT)	1	-	-	-----	ESS, ESS/A, QSC, QSC9, QSC9/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXK, VMA4, VME4
	12310-ZE3-790		1	-	-	-----	1041913 HAQ, QAQ, QHC, QXC
	12310-ZE2-010	COVER COMP., HEAD	1	-	-	-----	1046250 HA, HH, HX, LH, LHE, LJ, LW, LWD, LX, LXZ, PA, PX, QA, QAE, QD, QE, QH, QHE, QP, QX, QXB, QXE, QXEB, RA, RD, RH, RHE, RX, SD, SE, SH, SHE, SHEZ, SJ, SJP, SK, SW, SWE, SX, SXB, SXE, SXEB, VA, VAW, VH, VNG1, VSD, VSD3, VX, VXB, VXE, VXE8
	12310-ZE3-791	COVER COMP., HEAD (BREATHING TUBE JOINT)	1	-	-	1041914	----- HAQ, QAQ, QHC, QXC
	12310-ZE2-020	COVER COMP., HEAD	1	-	-	1046251	----- HA, HH, HX, LH, LHE, LJ, LW, LWD, LX, LXZ, PA, PX, QA, QAE, QD, QE, QH, QHE, QP, QX, QXB, QXE, QXEB, RA, RD, RH, RHE, RX, SD, SE, SH, SHE, SHEZ, SJ, SJP, SK, SW, SWE, SX, SXB, SXE, SXEB, VA, VAW, VH, VNG1, VSD, VSD3, VX, VXB, VXE, VXE8
			-	(1)	-	-----	L1/A, Q1/A, R1/A, S1/A, W1/A
	12310-ZE3-791	COVER COMP., HEAD (BREATHING TUBE JOINT)	-	(1)	-	-----	L1/A, Q1/A, R1/A, S1/A, W1/A
	12310-ZE3-790		-	(1)	-	1041913	L1, Q1, Q2, R1, S1, V1, W1
	12310-ZE2-010	COVER COMP., HEAD	-	(1)	-	1046250	L1, Q1, Q2, R1, S1, V1, W1
	12310-ZE3-791	COVER COMP., HEAD (BREATHING TUBE JOINT)	-	(1)	-	1041914	L1, Q1, Q2, R1, S1, V1, W1
	12310-ZE2-020	COVER COMP., HEAD	-	(1)	-	1046251	L1, Q1, Q2, R1, S1, V1, W1

E-2

CYLINDER HEAD

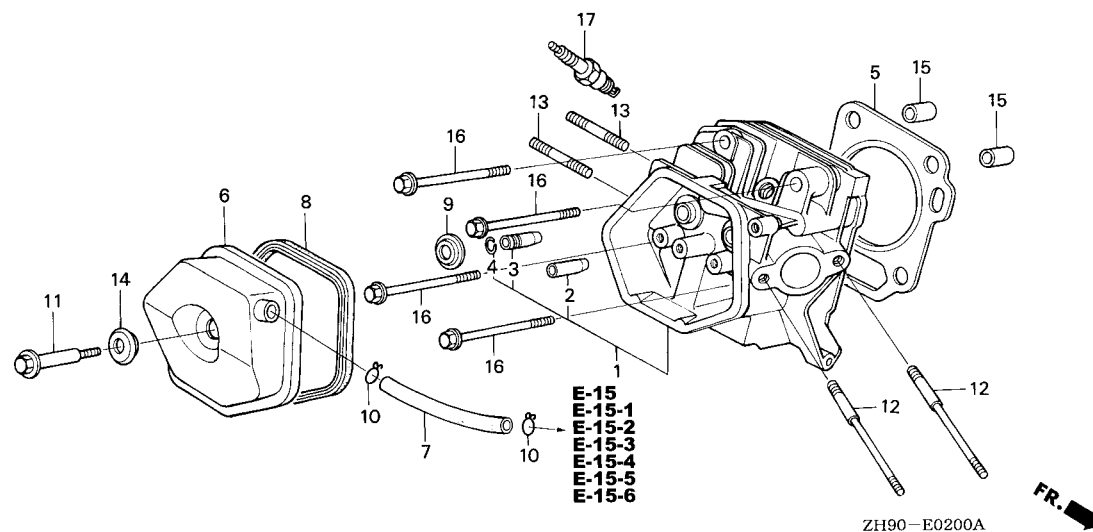

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
7	95005-11100-30	TUBE, 11X100(95005-11001-30M)	1	-	1	-----	ES1, ES1/A, HA2/A, HAP, HAP/A, HEA2/A, HEA8, HEA8/A, HX/A, HX26/A, HX8 HX8/A, HXQ4/A, LH/A, LHB1, LHB3, LHB5, LHE/A, LJ/A, LJC, LJC/A, LJG/A, LT LT/A, LW/A, LWD1, LWD1/A, LX/A, LXE/A, LXE8, LXE8/A, LXQ4/A, LXU, LXU/A PA2/A, PAE2, PAE2/A, PX/A, PX26/A, PXE8, PXE8/A, PXU, PXU/A, QA2/A, QAB1 QAB3, QAB3/A, QAE2/A, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAQ4/A, QAR2/A, QAW QAW/A, QD/A, QE/A, QH/A, QH26/A, QHB5, QHE4/A, QHP1, QHP1/A, QHQ4/A, QHR QHR/A, QHR4, QHR4/A, QHZ, QHZ/A, QKE3, QKE3/A, QKE4, QL2, QME2/A, QMH, QMH/A QP/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QT/A, QX/A, QX26/A, QXB/A, QXB6 QXB6/A, QXB7, QXB7/A, QXE/A, QXE4/A, QXE6/A, QXE8, QXE8/A, QXE9, QXQ4/A QXU, QXU/A, RA2/A, RA3, RD/A, RH26/A, RHE4/A, RHQ4/A, RSC2/A, RSS, RSS/A RX/A, RXP, RXP/A, RXQ4/A, RXU, RXU/A, SD/A, SE/A, SH/A, SHQ4/A, SJ/A, SJG/A SKE1, SMC4/A, SMD, SME1/A, SME6/A, SMX2, SN/A, SWA4, SWC4, SWC4/A, SX/A SXB/A, SXB7, SXB7/A, SXE/A, SXE4/A, SXE8, SXE8/A, SXEB/A, SXQ4/A, SXU SXU/A, VA2/A, VAG2, VAG2/A, VDE2, VDE2/A, VKB2, VKB2/A, VM2, VM2/A, VME2 VME2/A, VN17, VN17/A, VNG1/A, VNT2, VNT2/A, VS37, VSD/A, VSD7, VSD7/A, VSH7 VW12/A, VWA2/A, VWN2/A, VWT4, VWT4/A, VX/A, VXB/A, VXB7, VXB7/A, VXE4/A VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8/A, VKK, VXP/A, VXQ4/A, VXT1, VXT1/A VXTB, VXU/A, VXU1, VXU1/A, WMA4, WMT8, WMT8/A, WXE8, WXE8/A HAQ, QAQ, QHC, QSC, QSC9, QSC9/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QXC, QXC4 QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXK, VMA4, VME4
12315-ZE3-840	TUBE, BREATHER.....	1	-	-	-	-----	1054062 LWD
95005-11105-30	TUBE, 11X105(95005-11001-30M)	1	-	-	-	-----	1174910 HA, HA2, HEA, HEA2, HH, HX, HX26, HXQ4, LH, LHE, LHQ4, LJ, LJG, LSS, LTJ, LW, LX LX16, LXE, LXQ4, LXZ, PA, PA2, PX, PX26, QA, QA2, QAE, QAE2, QAE6, QAQ4, QAR2 QD, QE, QH, QH26, QHE, QHE4, QHQ4, QME2, QP, QT, QX, QX26, QXB, QXE, QXE4, QXE6 QXEB, QXQ4, RA, RA2, RD, RH, RH26, RHE, RHE4, RHQ4, RSC2, RX, RXQ4, SD, SE, SH SHE, SHEZ, SHQ4, SJ, SJG, SJP, SK, SMC4, SME1, SME6, SN, SW, SWE, SX, SX2, SXB SXE, SXE4, SXEB, SXQ4, VA, VA2, VAW, VAW1, VD16, VDE, VEB6, VH, VNG1, VSD, VSD3 VW12, VW22, VWA, VWA2, VWN2, VX, VX26, VXB, VXB2, VXB6, VXE, VXE4, VXE8, VXG VXQ4, VXU


E-2

CYLINDER HEAD

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
(7)	15721-ZE2-780	TUBE, BREATHER.....	1	-	-	1054063	----- LWD
	95005-11100-30	TUBE, 11X100(95005-11001-30M)	1	-	-	1174911	----- HA, HA2, HEA, HEA2, HH, HX, HX26, HXQ4, LH, LHE, LHQ4, LJ, LJG, LSS, LTJ, LW, LX, LX16, LXE, LXQ4, LXZ, PA, PA2, PX, PX26, QA, QA2, QAE, QAE2, QAE6, QAQ4, QAR2, QD, QE, QH, QH26, QHE, QHE4, QHQ4, QME2, QP, QT, QX, QX26, QXB, QXE, QXE4, QXE6, QXEB, QXQ4, RA, RA2, RD, RH, RH26, RHE, RHE4, RHQ4, RSC2, RX, RXQ4, SD, SE, SH, SHE, SHEZ, SHQ4, SJ, SJG, SJP, SK, SMC4, SME1, SME6, SN, SW, SWE, SX, SX2, SXB, SXE, SXE4, SXEB, SXQ4, VA, VA2, VAW, VAW1, VD16, VDE, VEB6, VH, VNG1, VSD, VSD3, VW12, VW22, VWA, VWA2, VWN2, VX, VX26, VXB, VXB2, VXB6, VXE, VXE4, VXEB, VXG, VXQ4, VXU
	12315-ZE3-840	TUBE, BREATHER.....	-	(1)	-		
	95005-11100-30	TUBE, 11X100(95005-11001-30M)	-	(1)	-	-----	L1/A, Q1/A, R1/A, S1/A, W1/A
	95005-11105-30	TUBE, 11X105(95005-11001-30M)	-	(1)	-	-----	Q2
			-	(1)	-	1174910	L1, Q1, R1, S1, V1, W1
	95005-11100-30	TUBE, 11X100(95005-11001-30M)	-	(1)	-	1174911	L1, Q1, R1, S1, V1, W1
	95005-11105-30	TUBE, 11X105(95005-11001-30M)	-	-	1	-----	1000009 VXP, VXQP
	95005-11100-30	TUBE, 11X100(95005-11001-30M)	-	-	1	1000010	----- VXP, VXQP
8	12391-ZE2-020	PACKING, HEAD COVER.....	1	-	1		
			-	(1)	-		
9	14775-ZE2-010	SEAT, VALVE SPRING.....	1	1	1		
10	17316-611-000	CLIP, BREATHER TUBE.....	2	-	-	-----	----- HAQ, QAQ, QHC, QSC, QSC9, QSC9/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXK, VMA4, VME4
			-	(2)	-		
11	90014-ZE2-000	BOLT, HEAD COVER.....	1	1	1		
12	90042-ZE2-000	BOLT, STUD, 8X123.....	2	2	2	-----	----- ES1, ES1/A, HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, HH, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A, L1, L1/A, LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LT, LT/A, LTJ, LW, LW/A, LWD, LWD1, LWD1/A, LX, LX/A, LX16, LXE, LXE/A, LXE8, LXE8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ, PA, PA2, PA2/A, PAE2, PAE2/A, PX, PX/A, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, Q1, Q1/A, Q2, QA, QA2, QA2/A, QAB1, QAB3, QAB3/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAQ, QAQ4, QAQ4/A, QAR2, QAR2/A, QAW, QAW/A, QD, QD/A, QE, QE/A, QH, QH/A, QH26, QH26/A, QHB5, QHC, QHE, QHE4, QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A, QKE3, QKE3/A, QKE4, QL2, QME2, QME2/A, QMH, QMH/A, QP, QP/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QT, QT/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX, QX/A, QX26, QX26/A, QXB, QXB/A, QXB6, QXB6/A, QXB7, QXB7/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXE9, QXQ4, QXQ4/A, QXU, QXU/A, R1, R1/A, RA, RA2, RA2/A, RA3, RD, RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A, S1, S1/A, SD, SD/A, SE, SE/A, SH, SH/A, SHE, SHEZ, SHQ4, SHQ4/A, SJ, SJ/A, SJG, SJG/A, SJP, SK, SKE1, SMC4, SMC4/A, SMD, SME1, SME1/A, SME6, SME6/A, SMX2, SN, SN/A, SW, SWA4, SWC4, SWC4/A, SWE, SX, SX/A, SX2, SXB, SXB/A, SXB7, SXB7/A, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4, SXQ4/A, SXU, SXU/A, V1, VA, VA2, VA2/A, VAG2, VAG2/A, VAW, VAW1, VD16, VDE, VDE2, VDE2/A, VEB6, VH, VKB2, VKB2/A, VM2, VM2/A, VMA4, VME2, VME2/A, VME4, VN17, VN17/A, VNG1, VNG1/A, VNT2, VNT2/A, VSD, VSD/A, VSD7, VSD7/A, VSH7, VW12, VW12/A, VW22, VWA, VWA2, VWA2/A, VWN2, VWN2/A, VWT4, VWT4/A, VX, VX/A, VX26, VXB, VXB/A, VXB2, VXB6, VXB7, VXB7/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8, VXEB, VXEB/A, VXG, VXX, VXP, VXP/A, VXQ4, VXQ4/A, VXQP, VXT1, VXT1/A, VXTB, VXU, VXU/A, VXU1, VXU1/A, W1, W1/A, WMA4, WMT8, WMT8/A, WXE8, WXE8/A
	90042-ZE2-700	BOLT, STUD, 8X98.....	2	-	-	-----	----- ES3, ES3/A, ES4, VKE4, VKK, VKX4, VMS2, VMT, VMT/A, VMX2, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4, VS5, VSD3, VSD3/A
	90042-ZB7-000	BOLT, STUD, 8X111.....	2	-	-	-----	----- ESS, ESS/A

E-2

CYLINDER HEAD

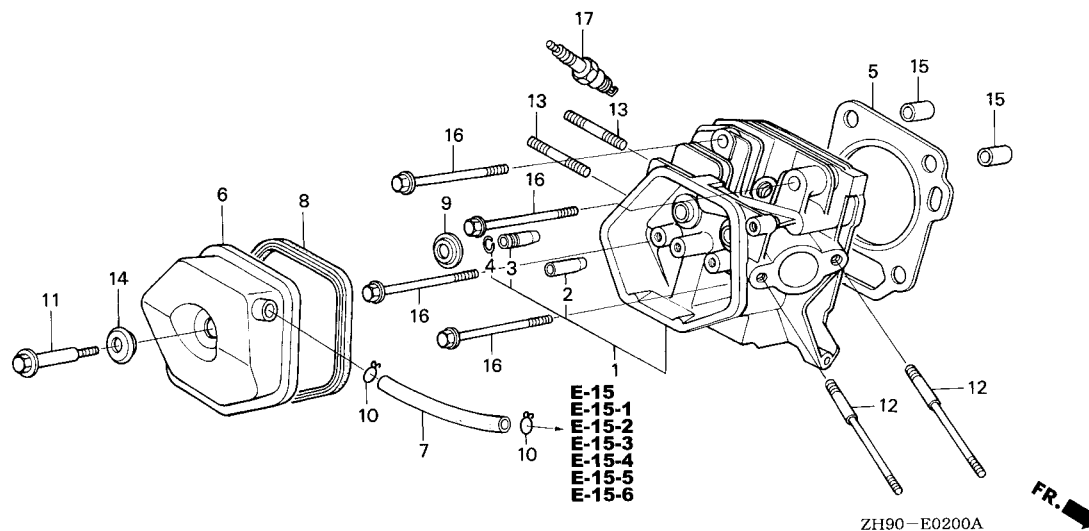

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			GX270				
			(1)	(2)	(3)		
13	92900-08032-0E	BOLT, STUD, 8X32	2	2	2	-----	ES1/A, ES3/A, ES4, HA2/A, HAP, HAP/A, HEA2/A, HEA8/A, HX/A, HX26/A, HX8/A HXQ4/A, L1/A, LH/A, LHB5, LHE/A, LJ/A, LJC/A, LJG/A, LT, LT/A, LW/A, LWD1 LWD1/A, LX/A, LXE/A, LXE8/A, LXQ4/A, LXU/A, PA2/A, PAE2/A, PX/A, PX26/A PXE8, PXE8/A, PXU/A, Q1/A, QA2/A, QAB3/A, QAE2/A, QAE6/A, QAG, QAG/A, QAG2 QAG2/A, QAQ4/A, QAR2/A, QAW, QAW/A, QD/A, QE/A, QH/A, QH26/A, QHB5, QHE4/A QHP1/A, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ/A, QKE3/A, QKE4, QL2, QME2/A QMH/A, QP/A, QSC9/A, QSE/A, QSE2, QSE8/A, QT/A, QWA2, QWA4, QWA4/A, QWH2 QWH2/A, QX/A, QX26/A, QXB/A, QXB6/A, QXB7, QXB7/A, QXC4/A, QXC6/A, QXC9/A QXE/A, QXE4/A, QXE6/A, QXE8/A, QXE9, QXK, QXQ4/A, QXU/A, R1/A, RA2/A, RA3 RD/A, RH26/A, RHE4/A, RHQ4/A, RSC2/A, RSS, RSS/A, RX/A, RXP, RXP/A, RXQ4/A RXU/A, S1/A, SD/A, SE/A, SH/A, SHQ4/A, SJ/A, SJG/A, SMC4/A, SME1/A, SME6/A SMX2, SN/A, SWA4, SWC4/A, SX/A, SXB/A, SXB7, SXB7/A, SXE/A, SXE4/A, SXE8/A SXEB/A, SXQ4/A, SXU/A, VA2/A, VAG2, VAG2/A, VDE2/A, VKB2/A, VKE4, VKK, VKX4 VM2/A, VMA4, VME2/A, VME4, VMT, VMT/A, VN17, VN17/A, VNG1/A, VNT2/A, VPE4/A VPE7, VPE7/A, VPK, VPX4/A, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4, VS5, VSD/A VSD3/A, VSD7, VSD7/A, VSH7, VW12/A, VWA2/A, VWN2/A, VWT4/A, VX/A, VXB/A VXB7, VXB7/A, VXE4/A, VXE6/A, VXE7, VXE7/A, VXE8, VXE8/A, VXX, VXP/A VXQ4/A, VXT1/A, VXU/A, VXU1/A, W1, W1/A, WMA4, WMT8/A, WXE8, WXE8/A

E-2


CYLINDER HEAD

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	GX270 (2)	(3)		
13)	90047-ZE2-000	BOLT, STUD, 8X47	2	2	-	-----	HA, HAQ, HEA, HH, LHB1, LHB3, LHQ4, LXZ, PA, Q2, QA, QAB1, QAE, QAQ, QHC, QHE, QSC, QXC, QXEB, RA, RHE, SHE, SHEZ, SK, SWE, SX2, V1, VA, VAW, VAW1, VEB6, VWA, VXB6
			2	2	-	-----	1457779 ES1, ES3, HA2, HEA2, HEA8, HX, HX26, HX8, HXQ4, L1, LH, LHE, LJ, LJC, LJC, LSS, LTJ, LW, LWD, LX, LX16, LXE, LXE8, LXQ4, LXU, PA2, PAE2, PX, PX26, PXU, Q1, QA2, QAB3, QAE2, QAE6, QAQ4, QAR2, QD, QE, QH, QH26, QHE4, QHP1, QHQ4, QHZ, QKE3, QME2, QMH, QP, QSC9, QSE, QSE8, QT, QX, QX26, QXB, QXB6, QXC4, QXC6, QXC9, QXE, QXE4, QXE6, QXE8, QXQ4, QXU, R1, RA2, RD, RH, RH26, RHE4, RHQ4, RSC2, RX, RXQ4, RXU, S1, SD, SE, SH, SHQ4, SJ, SJG, SKE1, SMC4, SMD, SME1, SME6, SN, SW, SWC4, SX, SXB, SXE, SXE4, SXE8, SXEB, SXQ4, SXU, VA2, VD16, VDE, VDE2, VH, VKB2, VM2, VME2, VNG1, VNT2, VPE4, VPX4, VSD, VSD3, VW12, VW22, VWA2, VWN2, VWT4, VX, VX26, VXB, VXB2, VXE, VXE4, VXE6, VXE8, VXE9, VXT1, VXTB, VXU, VXU1, WMT8
	92900-08032-0E	BOLT, STUD, 8X32	2	2	-	1457780 -----	ES1, ES3, HA2, HEA2, HEA8, HX, HX26, HX8, HXQ4, L1, LH, LHE, LJ, LJC, LJC, LSS, LTJ, LW, LWD, LX, LX16, LXE, LXE8, LXQ4, LXU, PA2, PAE2, PX, PX26, PXU, Q1, QA2, QAB3, QAE2, QAE6, QAQ4, QAR2, QD, QE, QH, QH26, QHE4, QHP1, QHQ4, QHZ, QKE3, QME2, QMH, QP, QSC9, QSE, QSE8, QT, QX, QX26, QXB, QXB6, QXC4, QXC6, QXC9, QXE, QXE4, QXE6, QXE8, QXQ4, QXU, R1, RA2, RD, RH, RH26, RHE4, RHQ4, RSC2, RX, RXQ4, RXU, S1, SD, SE, SH, SHQ4, SJ, SJG, SKE1, SMC4, SMD, SME1, SME6, SN, SW, SWC4, SX, SXB, SXE, SXE4, SXE8, SXEB, SXQ4, SXU, VA2, VD16, VDE, VDE2, VH, VKB2, VM2, VME2, VNG1, VNT2, VPE4, VPX4, VSD, VSD3, VW12, VW22, VWA2, VWN2, VWT4, VX, VX26, VXB, VXB2, VXE, VXE4, VXE6, VXE8, VXE9, VXT1, VXTB, VXU, VXU1, WMT8
	90012-KM9-000	BOLT, STUD, 8X34	2	-	-	-----	ESS, ESS/A, SJP
	90047-ZE3-791	BOLT, STUD, 8X25	2	-	-	-----	VMS2, VMX2
	90018-ZK6-P10	BOLT, STUD, 8X22	2	-	-	-----	VPE5, VPX5
	90047-ZE2-000	BOLT, STUD, 8X47	-	-	2	-----	1000085 VXP, VXQP
	92900-08032-0E	BOLT, STUD, 8X32	-	-	2	1000086 -----	VXP, VXQP
14	90441-ZE2-010	WASHER COMP., HEAD COVER	1	1	1		
15	94301-12200	DOWEL PIN, 12X20	2	2	2		

2

E-2

CYLINDER HEAD

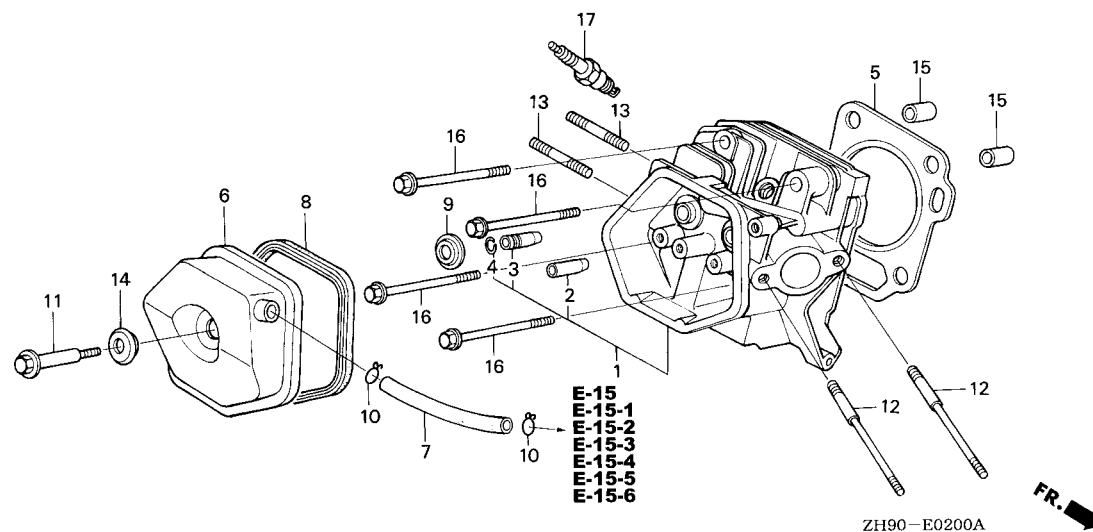


Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
16	95725-10080-00	BOLT, FLANGE, 10X80.....	4	4	4	-----	ES1, ES3, ESS, HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8 HEA8/A, HH, HX, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A, L1, LH, LHB1, LHB3 LHE, LHQ4, LJ, LJC, LJC/A, LJG, LSS, LT, LTJ, LW, LWD, LWD1, LX, LX16, LXE, LXE8 LXE8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ, PA, PA2, PA2/A, PAE2, PAE2/A, PX, PX26 PX26/A, PXE8, PXE8/A, PXU, PXU/A, Q1, Q2, QA, QA2, QA2/A, QAB1, QAB3, QAE QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAO, QAO4, QAO4/A QAR2, QAR2/A, QAW, QAW/A, QD, QE, QE/A, QH, QH26, QH26/A, QHC, QHE, QHE4 QHE4/A, QHP1, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QKE3, QKE3/A QKE4, QL2, QME2, QME2/A, QMH, QP, QSC, QSC9, QSC9/A, QSE, QSE2, QSE8, QSE8/A QT, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX, QX26, QX26/A, QXB, QXB/A, QXB6 QXB6/A, QXB7, QXB7/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXEB, QXQ4, QXQ4/A, QXU, QXU/A, R1 RA, RA2, RA2/A, RD, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2 RSC2/A, RSS, RX, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A, S1, SD, SE, SE/A, SH SHE, SHEZ, SHQ4, SHQ4/A, SJ, SJG, SJP, SK, SKE1, SMC4, SMC4/A, SMD, SME1 SME1/A, SME6, SME6/A, SMX2, SN, SW, SWA4, SWC4, SWC4/A, SWE, SX, SX2, SXB SXB/A, SXB7, SXB7/A, SXE, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4 SXQ4/A, SXU, SXU/A, V1, VA, VA2, VA2/A, VAG2, VAG2/A, VAW, VAW1, VD16, VDE VDE2, VDE2/A, VEB6, VH, VKB2, VKB2/A, VKE4, VKX4, VM2, VM2/A, VMA4, VME2 VME2/A, VME4, VMS2, VMT, VMX2, VN17, VN17/A, VNG1, VNG1/A, VNT2, VNT2/A VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS37 VS37/A, VSD, VSD/A, VSD3, VSD3/A, VSD7, VSD7/A, VSH7, VW12, VW12/A, VW22 VWA, VWA2, VWA2/A, VWN2, VWN2/A, VWT4, VWT4/A, VX, VX26, VXB, VXB/A, VXB2 VXB6, VXB7, VXB7/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8 VXE8/A, VXE8, VXP, VXP/A, VXQ4, VXQ4/A, VXQP, VXT1, VXTB, VXU, VXU1, VXU1/A W1, WMA4, WMT8, WMT8/A, WXE8

CYLINDER HEAD

2

E-2

CYLINDER HEAD

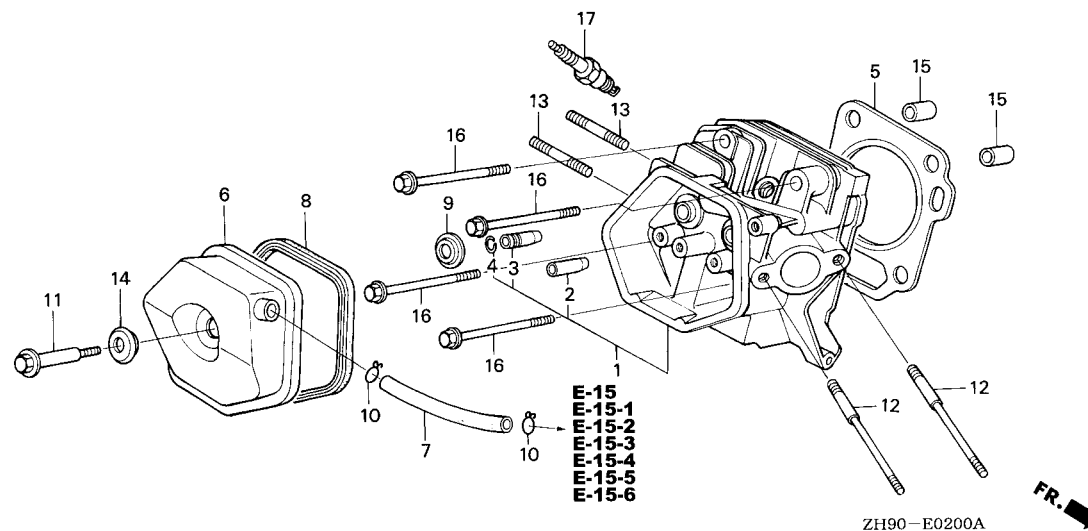

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
17)	98079-55855	PLUG, SPARK(W16EPR-U)(DENSO) •	(1)	(1)	(1)	-----	ES1, ES1/A, ES3, ES3/A, ES4, HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, HH, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A, L1, L1/A, LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LW, LW/A, LWD, LX, LX/A, LX16, LXE, LXE/A, LXE8, LXE8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ, PA, PA2, PA2/A, PAE2, PAE2/A, PX, PX/A, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, Q1, Q1/A, Q2, QA, QA2, QA2/A, QAB1, QAB3, QAB3/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAQ, QAQ4, QAQ4/A, QAR2, QAR2/A, QAW, QAW/A, QE, QE/A, QH, QH/A, QH26, QH26/A, QHB5, QHC, QHE, QHE4, QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A, QL2, QMH, QMH/A, QP, QP/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QT, QT/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX, QX/A, QX26, QX26/A, QXB, QXB/A, QXB6, QXB6/A, QXB7, QXB7/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXE9, QXK, QXQ4, QXQ4/A, QXU, QXU/A, R1, R1/A, RA, RA2, RA2/A, RA3, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A, S1, S1/A, SE, SE/A, SH, SH/A, SHE, SHEZ, SHQ4, SHQ4/A, SKE1, SMD, SMX2, SW, SWA4, SWC4, SWC4/A, SWE, SX, SX/A, SX2, SXB, SXB/A, SXB7, SXB7/A, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4, SXQ4/A, SXU, SXU/A, V1, VA, VA2, VA2/A, VAG2, VAG2/A, VAW, VAW1, VD16, VDE, VDE2, VDE2/A, VEB6, VH, VKB2, VKB2/A, VM2, VM2/A, VMA4, VME2, VME2/A, VME4, VMS2, VMX2, VN17, VN17/A, VNG1, VNG1/A, VNT2, VNT2/A, VSD, VSD/A, VSD7, VSD7/A, VSH7, VW12, VW12/A, VW22, VWA, VWA2, VWA2/A, VWN2, VWN2/A, VWT4, VWT4/A, VX, VX/A, VX26, VXB, VXB/A, VXB2, VXB6, VXB7, VXB7/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8, VXE8/A, VXG, VXX, VXP, VXP/A, VXQ4, VXQ4/A, VXQP, VXT1, VXT1/A, VXTB, VXU, VXU/A, VXU1, VXU1/A, W1, W1/A, WMA4, WMT8, WMT8/A, WXE8, WXE8/A, L1, L1/A, L3, L3/A, L3C, L3C/A, LJG, LJG/A, LSS, LT, LT/A, LTJ, LWD1, LWD1/A, Q1, Q1/A, Q2, QD, QD/A, R1, R1/A, RD, RD/A, S1, S1/A, SD, SD/A, SJ, SJ/A, SJG, SJG/A, SK, SN, SN/A, V1, W1, W1/A
	98079-55841	PLUG, SPARK(BP5ES)(NGK) •••••	(1)	(1)	-	-----	


E-2

CYLINDER HEAD

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
17)	98079-55854	PLUG, SPARK(W16EP-U)(DENSO) ..	1	-	1	-----	L1, L1/A, LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LT, LT/A, LTJ, LWD1, LWD1/A, Q1, Q1/A, Q2, QD, QD/A, R1, R1/A, RD, RD/A, S1, S1/A, SD, SD/A, SJ, SJ/A, SJG, SJG/A, SK, SN, SN/A, V1, W1, W1/A
	98079-56846	PLUG, SPARK(BPR6ES)(NGK)	1	-	1	-----	HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, HH, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A, LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LW, LW/A, LWD, LX, LX/A, LX16, LXE, LXE/A, LXE8, LXE8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ, PA, PA2, PA2/A, PAE2, PAE2/A, PX, PX/A, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, QA, QA2, QA2/A, QAB1, QAB3, QAB3/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAQ, QAQ4, QAQ4/A, QAR2, QAR2/A, QAW, QAW/A, QE, QE/A, QH, QH/A, QH26, QH26/A, QHB5, QHC, QHE, QHE4, QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ/A, QKE3, QKE3/A, QKE4, QL2, QME2, QME2/A, QMH, QMH/A, QP, QP/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX, QX/A, QX26, QX26/A, QXB, QXB/A, QXB6, QXB6/A, QXB7, QXB7/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXE9, QXK, QXQ4, QXQ4/A, QXU, QXU/A, RA, RA2, RA2/A, RA3, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A, SE, SE/A, SH, SH/A, SHE, SHEZ, SHQ4, SHQ4/A, SKE1, SMC4, SMC4/A, SMD, SME1, SME1/A, SME6, SME6/A, SMX2, SW, SWA4, SWC4, SWC4/A, SWE, SX, SX/A, SX2, SXB, SXB/A, SXB7, SXB7/A, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4, SXQ4/A, SXU, SXU/A, VA, VA2, VA2/A, VAG2, VAG2/A, VAW, VAW1, VD16, VDE, VDE2, VDE2/A, VEB6, VH, VKB2, VKB2/A, VM2, VM2/A, VMA4, VME2, VME2/A, VME4, VMS2, VMX2, VN17, VN17/A, VNG1, VNG1/A, VNT2, VNT2/A, VSD, VSD/A, VSD7, VSD7/A, VSH7, VW12, VW12/A, VW22, VWA, VWA2, VWA2/A, VWN2, VWN2/A, VWT4, VWT4/A, VX, VX/A, VX26, VXB, VXB/A, VXB2, VXB6, VXB7, VXB7/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8, VXE8/A, VXG, VXX, VXP, VXP/A, VXQ4, VXQ4/A, VXQP, VXT1, VXT1/A, VXTB, VXU, VXU/A, VXU1, VXU1/A, WMA4, WMT8, WMT8/A, WXE8, WXE8/A
	98079-56855	PLUG, SPARK(W20EPR-U)(DENSO) ..	1	-	1	-----	HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, HH, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A, LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LW, LW/A, LWD, LX, LX/A, LX16, LXE, LXE/A, LXE8, LXE8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ, PA, PA2, PA2/A, PAE2, PAE2/A, PX, PX/A, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, QA, QA2, QA2/A, QAB1, QAB3, QAB3/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAQ, QAQ4, QAQ4/A, QAR2, QAR2/A, QAW, QAW/A, QE, QE/A, QH, QH/A, QH26, QH26/A, QHB5, QHC, QHE, QHE4, QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ/A, QL2, QMH, QMH/A, QP, QP/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX, QX/A, QX26, QX26/A, QXB, QXB/A, QXB6, QXB6/A, QXB7, QXB7/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXE9, QXK, QXQ4, QXQ4/A, QXU, QXU/A, RA, RA2, RA2/A, RA3, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A, SE, SE/A, SH, SH/A, SHE, SHEZ, SHQ4, SHQ4/A, SKE1, SMD, SMX2, SW, SWA4, SWC4, SWC4/A, SWE, SX, SX/A, SX2, SXB, SXB/A, SXB7, SXB7/A, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4, SXQ4/A, SXU, SXU/A, VA, VA2, VA2/A, VAG2, VAG2/A, VAW, VAW1, VD16, VDE, VDE2, VDE2/A, VEB6, VH, VKB2, VKB2/A, VM2, VM2/A, VMA4, VME2, VME2/A, VME4, VMS2, VMX2, VN17, VN17/A, VNG1, VNG1/A, VNT2, VNT2/A, VSD, VSD/A, VSD7, VSD7/A, VSH7, VW12, VW12/A, VW22, VWA, VWA2, VWA2/A, VWN2, VWN2/A, VWT4, VWT4/A, VX, VX/A, VX26, VXB, VXB/A, VXB2, VXB6, VXB7, VXB7/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8, VXE8/A, VXG, VXX, VXP, VXP/A, VXQ4, VXQ4/A, VXQP, VXT1, VXT1/A, VXTB, VXU, VXU/A, VXU1, VXU1/A, WMA4, WMT8, WMT8/A, WXE8, WXE8/A
	98079-56841	PLUG, SPARK(BP6ES)(NGK)	1	-	-	-----	ES1, ES1/A, ES3, ES3/A, ES4, LHB3, LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LT, LT/A, LTJ, LWD1, LWD1/A, QD, QD/A, QT, QT/A, RD, RD/A, SD, SD/A, SJ, SJ/A, SJG, SJG/A, SJP, SK, SN, SN/A
	98079-56854	PLUG, SPARK(W20EP-U)(DENSO) ..	1	-	-	-----	ES1, ES1/A, ES3, ES3/A, ES4, LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LT, LT/A, LTJ, LWD1, LWD1/A, QD, QD/A, QT, QT/A, RD, RD/A, SD, SD/A, SJ, SJ/A, SJG, SJG/A, SJP, SK, SN, SN/A

E-2


CYLINDER HEAD

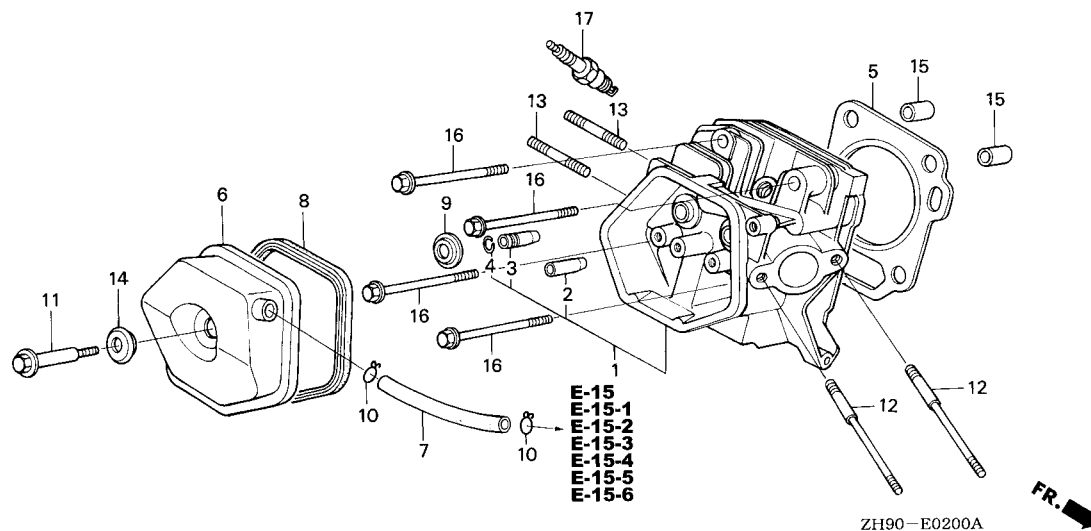

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
17)	98079-55855	PLUG, SPARK(W16EPR-U)(DENSO) •	1	-	-	-----	ESS, ESS/A, VKE4, VKK, VKX4, VMT, VMT/A, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4, VS5, VSD3, VSD3/A
	98079-55846	PLUG, SPARK(BPR5ES)(NGK) •••••	1	-	-	-----	HA2, HA2/A, HX26, HX26/A, PX26, PX26/A, QAE6, QAE6/A, QAQ4, QAQ4/A, QH26, QH26/A, QHE4, QHE4/A, QX26, QX26/A, QXC4, QXC4/A, QXC6, QXC6/A, QXE4, QXE4/A, QXE6, QXE6/A, RH26, RH26/A, RHE4, RHE4/A, SXE4, SXE4/A, VKE4, VKK, VKX4, VMT, VMT/A, VPE4, VPE4/A, VPE5, VPK, VPX4, VPX4/A, VPX5, VS3, VS4, VS5, VXE4, VXE4/A, VXE6, VXE6/A, VXQ4, VXQ4/A
	98079-56841	PLUG, SPARK(BP6ES)(NGK) •••••	1	-	-	-----	1471451 QHZ
	98079-56854	PLUG, SPARK(W20EP-U)(DENSO) ••	1	-	-	-----	1471451 QHZ
	98079-56846	PLUG, SPARK(BPR6ES)(NGK) •••••	1	-	-	1471452	----- QHZ
	98079-56855	PLUG, SPARK(W20EPR-U)(DENSO) •	1	-	-	1471452	----- QHZ
	98079-56841	PLUG, SPARK(BP6ES)(NGK) •••••	-	(1)	-		
	98079-56846	PLUG, SPARK(BPR6ES)(NGK) •••••	-	(1)	-		
	98079-56854	PLUG, SPARK(W20EP-U)(DENSO) ••	-	(1)	-		
	98079-56855	PLUG, SPARK(W20EPR-U)(DENSO) •	-	(1)	-		

E-3

CYLINDER BARREL

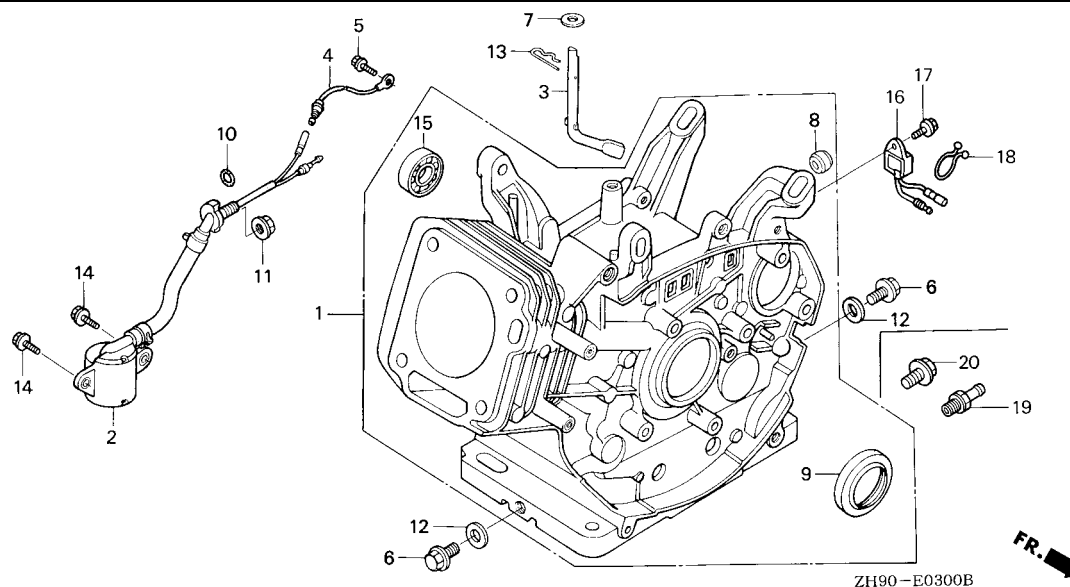


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	1101A0	BARREL, CYLINDER	1.8
2		(10)	
	6151E8	SWITCH, OIL LEVEL	0.5
3	1161B4	SHAFT, GOVERNOR ARM	1.1
4	6111E5	SUB HARNESS, OIL LEVEL SWITCH	0.1
9	1101E4	OIL SEAL, CRANKSHAFT :FRONT ..	1.1
15	1101F4	BEARING, BALANCER WEIGHT	
		:FRONT	1.9
16	6151A0	ALERT UNIT, ENGINE OIL	0.1

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
1	12000-ZH9-406	BARREL ASSY., CYLINDER(ALERT)	1	-	1	-----	ES1/A, ES3/A, ES4, ESS/A, HX/A, HX26/A, HX8/A, HXQ4/A, LJC/A, LX/A, LXQ4/A, LXU/A, PX/A, PX26/A, PXU/A, QAG2/A, QWA4/A, QWH2/A, QX/A, QXB/A, QXB7/A, QXC4/A, QXC6/A, QXC9/A, QXK, QXQ4/A, QXU/A, RX/A, RXP/A, RXQ4/A, RXU/A, SMC4/A, SME6/A, SMX2, SWA4, SWC4/A, SX/A, SXB/A, SXB7/A, SXQ4/A, SXU/A, VAG2/A, VKX4, VMA4, VMT/A, VN17/A, VNG1/A, VPX4/A, VPX5, VPX7/A, VS3, VS37/A, VS4, VS5, VSD/A, VSD3/A, VSD7/A, VSH7, VX/A, VXB/A, VXB7/A, VVK, VXP/A, VXQ4/A, VXT1/A, VXU/A, VXU1/A, WMT8/A
	12000-ZH9-Q00	BARREL ASSY., CYLINDER (BALANCER+ALERT)	1	-	1	-----	HA2/A, HAP/A, PA2/A, QA2/A, QAB3/A, QAG/A, QAA4/A, QAR2/A, QAW/A, QX26/A, RA2/A, RA3, RSC2/A, VA2/A, VM2/A, VMX2, VNT2/A, VW12/A, VWA2/A, VWN2/A, QAG2, QWH2, QXB7, RXP, SXB7, VAG2, VN17, VPX7, VS37, VSD7, VXB7
	12000-ZH9-802	BARREL ASSY., CYLINDER (BALANCER+SELFSTARTER+ALERT)	1	-	-	-----	HEA2/A, HEA8/A, PAE2/A, QAE2/A, QAE6/A, QSC9/A, QXB6/A, VDE2/A, VKB2/A, VME2/A, VMS2
	12000-ZH9-405	BARREL ASSY., CYLINDER(STD.)	1	-	-	-----	LH/A, LHB5, LJ/A, LJG/A, LT/A, LW/A, QD/A, QE/A, QH/A, QH26/A, QHB5, QHP1/A, QHQ4/A, QHR/A, QHZ/A, QMH/A, QP/A, QT/A, RD/A, RH26/A, RHQ4/A, SD/A, SE/A, SH/A, SHQ4/A, SJ/A, SJG/A, SN/A
	12000-ZH9-010		1	-	-	-----	LHB1, LHB3, LHQ4
	12000-ZH9-408	BARREL ASSY., CYLINDER (SELF-STARTER)	1	-	-	-----	LHE/A, QHE4/A, QHR4/A, RHE4/A
	12000-ZH9-841	BARREL ASSY., CYLINDER (BALANCER)	1	-	-	-----	LSS, SK
	12000-ZH9-870	BARREL ASSY., CYLINDER (BALANCER+SELFSTARTER)	1	-	-	-----	LTJ
	12000-ZH9-Q20		1	-	-	-----	LWD1/A
	12000-ZH9-801	BARREL ASSY., CYLINDER(ALERT)	1	-	-	-----	LX16, SMD, SX2, VD16, VX26, VXB2, VXB6, VXG

E-3

CYLINDER BARREL

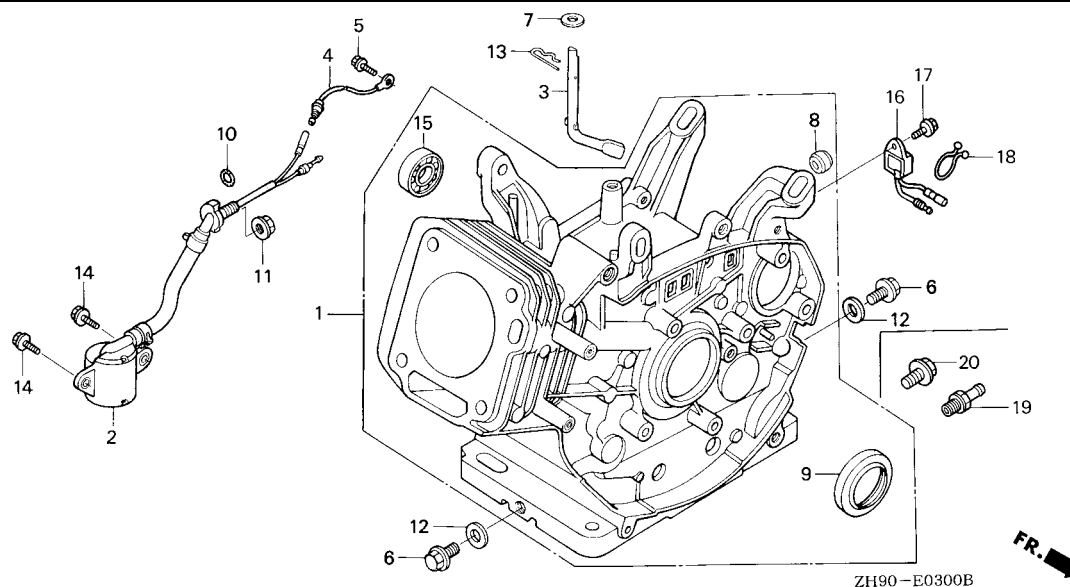

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
(1)	12000-ZH9-407	BARREL ASSY., CYLINDER (SELFSTARTER+ALERT)	1	-	-	-----	LXE/A, LXE8/A, PXE8/A, QKE3/A, QKE4, QME2/A, QSE/A, QSE2, QSE8/A, QXE/A, QXE4/A, QXE6/A, QXE8/A, QXE9, SME1/A, SXE/A, SXE4/A, SXE8/A, SXEB/A, VKK VME4, VPE4/A, VPE5, VPE7/A, VPK, VWT4/A, VXE4/A, VXE6/A, VXE7/A, VXE8 VXE8/A, WMA4, WXE8/A
	12000-ZH9-812		1	-	-	-----	PXE8, VKE4, VPE7, VXE7, WXE8
	12000-ZH9-851	BARREL ASSY., CYLINDER (BALANCER+ALERT)	1	-	-	-----	QAB1, VAW1, VW22
	12000-ZH9-852		1	-	-	-----	QAG
	12000-ZH9-020	BARREL ASSY., CYLINDER(STD.)	1	-	-	-----	QHR
	12000-ZH9-409	BARREL ASSY., CYLINDER (BALANCER)	1	-	-	-----	RSS/A
	12000-ZH9-861	BARREL ASSY., CYLINDER (BALANCER+SELFSTARTER+ALERT)	1	-	-	-----	VDE
	12000-ZH9-811	BARREL ASSY., CYLINDER (SELFSTARTER+ALERT)	1	-	-	-----	VEB6
	120A0-ZH9-850	BARREL ASSY., CYLINDER (BALANCER+ALERT)	1	-	-	-----	1069409 HA, PA, QA, RA, VA, VAW, VWA
	120A0-ZH9-860	BARREL ASSY., CYLINDER (BALANCER+SELFSTARTER+ALERT)	1	-	-	-----	1069783 HEA, QAE
	12000-ZH9-860		1	-	-	-----	1069783 QSC
	120A0-ZH9-000	BARREL ASSY., CYLINDER(STD.)	1	-	-	-----	1069823 HH, LH, LW, QD, QE, QH, QHC, QP, RD, RH, SD, SE, SH, SW, VH
	120A0-ZH9-800	BARREL ASSY., CYLINDER(ALERT)	1	-	-	-----	1069839 ESS, SJP
			1	-	-	-----	1069961 HX, LX, LXZ, PX, QX, QXB, RX, SX, SXB, VNG1, VSD, VSD3, VX, VXB
	120A0-ZH9-000	BARREL ASSY., CYLINDER(STD.)	1	-	-	-----	1070054 LJ, SJ
	120A0-ZH9-800	BARREL ASSY., CYLINDER(ALERT)	1	-	-	-----	1070139 QXC
	120A0-ZH9-810	BARREL ASSY., CYLINDER (SELFSTARTER+ALERT)	1	-	-	-----	1070229 QXE, QXEB, SXE, SXEB, VXE, VXE8


E-3

CYLINDER BARREL

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
(1)	120A0-ZH9-820	BARREL ASSY., CYLINDER (SELF-STARTER)	1	-	-	1081844	LHE, QHE, RHE, SHE, SHEZ, SWE
	120A0-ZH9-850	BARREL ASSY., CYLINDER (BALANCER+ALERT)	1	-	-	1093310	HA2, HAQ, PA2, QA2, QAA, RA2, VA2
	120A0-ZH9-820	BARREL ASSY., CYLINDER (SELF-STARTER)	1	-	-	1097920	LWD
	120A0-ZH9-860	BARREL ASSY., CYLINDER (BALANCER+SELFSTARTER+ALERT)	1	-	-	1121540	QAE2
	12000-ZH9-801	BARREL ASSY., CYLINDER(ALERT)	1	-	-	1680278	ES1, ES3, HX26, HX8, HXQ4, LJC, LXQ4, LXU, PX26, PXU, QWA2, QWA4, QXC4, QXC6 QXC9, QXQ4, QXU, RXQ4, RXU, SMC4, SME6, SWC4, SXQ4, SXU, VMT, VPX4, VXQ4, VXT1 VXTB, VXU, VXU1, WMT8
	12000-ZH9-861	BARREL ASSY., CYLINDER (BALANCER+SELFSTARTER+ALERT)	1	-	-	1680278	HEA2, HEA8, PAE2, QAE6, QSC9, QXB6, VDE2, VKB2, VME2
	12000-ZH9-010	BARREL ASSY., CYLINDER(STD.)	1	-	-	1680278	LJG, LT, QH26, QHP1, QHQ4, QHZ, QMH, QT, RH26, RHQ4, SHQ4, SJG, SN
	12000-ZH9-870	BARREL ASSY., CYLINDER (BALANCER+SELFSTARTER)	1	-	-	1680278	LWD1
	12000-ZH9-811	BARREL ASSY., CYLINDER (SELFSTARTER+ALERT)	1	-	-	1680278	LXE, LXE8, QKE3, QME2, QSE, QSE8, QXE4, QXE6, QXE8, SME1, SXE4, SXE8, VPE4 VWT4, VXE4, VXE6
	12000-ZH9-851	BARREL ASSY., CYLINDER (BALANCER+ALERT)	1	-	-	1680278	QAB3, QAA4, QAR2, QAW, QL2, QX26, RSC2, VM2, VNT2, VW12, VWA2, VWN2
	12000-ZH9-821	BARREL ASSY., CYLINDER (SELF-STARTER)	1	-	-	1680278	QHE4, QHR4, RHE4, SKE1
	12000-ZH9-841	BARREL ASSY., CYLINDER (BALANCER)	1	-	-	1680278	RSS
	12000-ZH9-851	BARREL ASSY., CYLINDER (BALANCER+ALERT)	1	-	-	1069410	HA, PA, QA, RA, VA, VAW, VWA
	12000-ZH9-861	BARREL ASSY., CYLINDER (BALANCER+SELFSTARTER+ALERT)	1	-	-	1069784	HEA, QAE, QSC
	12000-ZH9-010	BARREL ASSY., CYLINDER(STD.)	1	-	-	1069824	HH, QHC, RH, SW, VH
	12000-ZH9-801	BARREL ASSY., CYLINDER(ALERT)	1	-	-	1069824	1680278 LH, LW, QD, QE, QH, QP, RD, SD, SE, SH
			1	-	-	1069840	----- SJP
			1	-	-	1069840	1680278 ESS
			1	-	-	1069962	----- LXZ
			1	-	-	1069962	1680278 HX, LX, PX, QX, QXB, RX, SX, SXB, VNG1, VSD, VSD3, VX, VXB
	12000-ZH9-010	BARREL ASSY., CYLINDER(STD.)	1	-	-	1070055	----- SJ
			1	-	-	1070055	1680278 LJ
	12000-ZH9-801	BARREL ASSY., CYLINDER(ALERT)	1	-	-	1070140	----- QXC
	12000-ZH9-811	BARREL ASSY., CYLINDER (SELFSTARTER+ALERT)	1	-	-	1070230	----- QXEB, VXE
			1	-	-	1070230	1680278 QXE, SXE, SXEB, VXEB
	12000-ZH9-821	BARREL ASSY., CYLINDER (SELF-STARTER)	1	-	-	1081845	----- QHE, RHE, SHE, SHEZ, SWE
			1	-	-	1081845	1680278 LHE
	12000-ZH9-851	BARREL ASSY., CYLINDER (BALANCER+ALERT)	1	-	-	1093311	----- HAQ, QAA
			1	-	-	1093311	1680278 HA2, PA2, QA2, RA2, VA2
	12000-ZH9-821	BARREL ASSY., CYLINDER (SELF-STARTER)	1	-	-	1097921	1680278 LWD
	12000-ZH9-861	BARREL ASSY., CYLINDER (BALANCER+SELFSTARTER+ALERT)	1	-	-	1121541	1680278 QAE2
	12000-ZH9-802	BARREL ASSY., CYLINDER(ALERT)	1	-	-	1680279	----- ES1, ES3, ESS, HX, HX26, HX8, HXQ4, LJC, LX, LXQ4, LXU, PX, PX26, PXU, QWA2 QWA4, QX, QXB, QXC4, QXC6, QXC9, QXQ4, QXU, RX, RXQ4, RXU, SMC4, SME6, SWC4, SX SXB, SXQ4, SXU, VMT, VNG1, VPX4, VSD, VSD3, VX, VXB, VXQ4, VXT1, VXTB, VXU VXU1, WMT8
	12000-ZH9-852	BARREL ASSY., CYLINDER (BALANCER+ALERT)	1	-	-	1680279	----- HA2, PA2, QA2, QAB3, QAA4, QAR2, QAW, QL2, QX26, RA2, RSC2, VA2, VM2, VNT2 VW12, VWA2, VWN2

E-3

CYLINDER BARREL

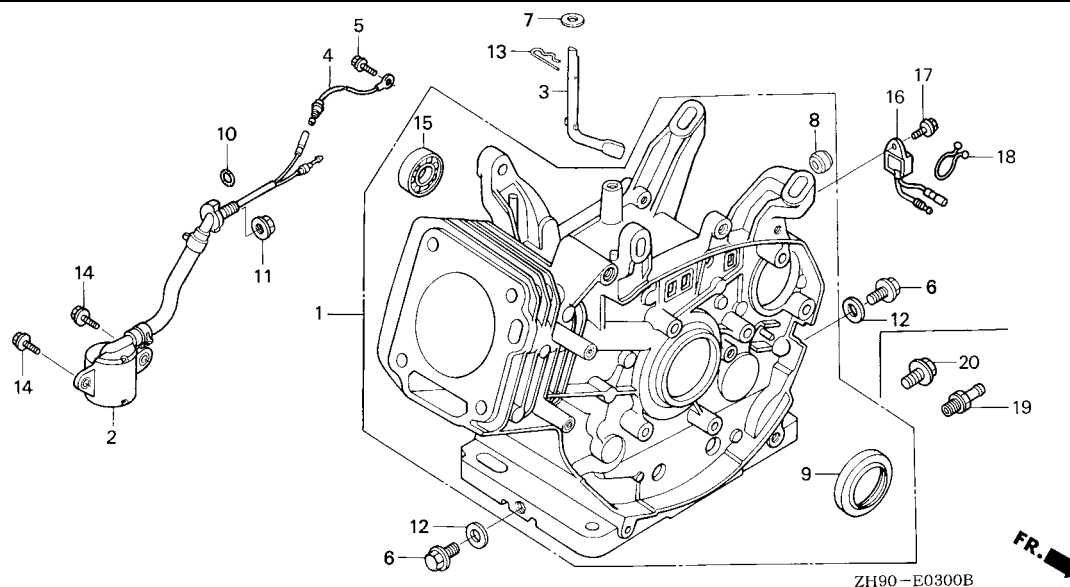

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
(1)	12000-ZH9-862	BARREL ASSY., CYLINDER (BALANCER+SELFSTARTER+ALERT)	1	-	-	1680279	----- HEA2, HEA8, PAE2, QAE2, QAE6, QSC9, QXB6, VDE2, VKB2, VME2
	12000-ZH9-020	BARREL ASSY., CYLINDER(STD.)	1	-	-	1680279	----- LH, LJ, LJG, LT, LW, QD, QE, QH, QH26, QHP1, QHQ4, QHZ, QMH, QP, QT, RD, RH26
	12000-ZH9-822	BARREL ASSY., CYLINDER (SELF-STARTER)	1	-	-	1680279	----- LHE, LWD, QHE4, QHR4, RHE4, SKE1
	12000-ZH9-871	BARREL ASSY., CYLINDER (BALANCER+SELFSTARTER)	1	-	-	1680279	----- LWD1
	12000-ZH9-812	BARREL ASSY., CYLINDER (SELFSTARTER+ALERT)	1	-	-	1680279	----- LXE, LXE8, QKE3, QME2, QSE, QSE8, QXE, QXE4, QXE6, QXE8, SME1, SXE, SXE4, SXE8
	12000-ZH9-842	BARREL ASSY., CYLINDER (BALANCER)	1	-	-	1680279	----- RSS
	12000-ZH9-010	BARREL ASSY., CYLINDER(STD.)	-	(1)	-	-----	----- L1/A, R1/A, S1/A
	12000-ZH9-823	BARREL ASSY., CYLINDER (SELF-STARTER)	-	(1)	-	-----	----- L1/A, R1/A, S1/A
	12000-ZH9-801	BARREL ASSY., CYLINDER(ALERT)	-	(1)	-	-----	----- L1/A, R1/A, W1/A
	12000-ZH9-811	BARREL ASSY., CYLINDER (SELFSTARTER+ALERT)	-	(1)	-	-----	----- L1/A, R1/A, W1/A
	12000-ZH9-802	BARREL ASSY., CYLINDER(ALERT)	-	(1)	-	-----	----- Q1/A, S1/A
	12000-ZH9-812	BARREL ASSY., CYLINDER (SELFSTARTER+ALERT)	-	(1)	-	-----	----- Q1/A, S1/A
	12000-ZH9-020	BARREL ASSY., CYLINDER(STD.)	-	(1)	-	-----	----- Q1/A, W1/A
	12000-ZH9-821	BARREL ASSY., CYLINDER (SELF-STARTER)	-	(1)	-	-----	----- Q1/A, W1/A
	120A0-ZH9-860	BARREL ASSY., CYLINDER (BALANCER+SELFSTARTER+ALERT)	-	(1)	-	1069783	Q2
	120A0-ZH9-000	BARREL ASSY., CYLINDER(STD.)	-	(1)	-	1069839	L1, Q1, R1, S1, V1, W1
	120A0-ZH9-800	BARREL ASSY., CYLINDER(ALERT)	-	(1)	-	1069839	L1, Q1, R1, S1, V1, W1


E-3

CYLINDER BARREL

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
(1)	120A0-ZH9-810	BARREL ASSY., CYLINDER (SELFSTARTER+ALERT)	-	(1)	-	1069839	L1,Q1,R1,S1,V1,W1
	120A0-ZH9-820	BARREL ASSY., CYLINDER (SELF-STARTER)	-	(1)	-	1069839	L1,Q1,R1,S1,V1,W1
	12000-ZH9-861	BARREL ASSY., CYLINDER (BALANCER+SELFSTARTER+ALERT)	-	(1)	-	1069784	Q2
	12000-ZH9-010	BARREL ASSY., CYLINDER(STD.)	-	(1)	-	1069840	L1,R1,S1,V1
	12000-ZH9-801	BARREL ASSY., CYLINDER(ALERT)	-	(1)	-	1069840	L1,R1,V1,W1
	12000-ZH9-811	BARREL ASSY., CYLINDER (SELFSTARTER+ALERT)	-	(1)	-	1069840	L1,R1,V1,W1
	12000-ZH9-821	BARREL ASSY., CYLINDER (SELF-STARTER)	-	(1)	-	1069840	Q1,V1,W1
			-	(1)	-	1069840	1680278 L1,R1,S1
	12000-ZH9-801	BARREL ASSY., CYLINDER(ALERT)	-	(1)	-	1069840	1680278 Q1,S1
	12000-ZH9-811	BARREL ASSY., CYLINDER (SELFSTARTER+ALERT)	-	(1)	-	1069840	1680278 Q1,S1
	12000-ZH9-010	BARREL ASSY., CYLINDER(STD.)	-	(1)	-	1069840	1680278 Q1,W1
	12000-ZH9-822	BARREL ASSY., CYLINDER (SELF-STARTER)	-	(1)	-	1680279	L1,R1,S1
	12000-ZH9-802	BARREL ASSY., CYLINDER(ALERT)	-	(1)	-	1680279	Q1,S1
	12000-ZH9-812	BARREL ASSY., CYLINDER (SELFSTARTER+ALERT)	-	(1)	-	1680279	Q1,S1
	12000-ZH9-020	BARREL ASSY., CYLINDER(STD.)	-	(1)	-	1680279	Q1,W1
	12000-ZH9-851	BARREL ASSY., CYLINDER (BALANCER+ALERT)	-	-	1	1000318	HAP
	12000-ZH9-801	BARREL ASSY., CYLINDER(ALERT)	-	-	1	1000319	VXP,VXQP
	12000-ZH9-852	BARREL ASSY., CYLINDER (BALANCER+ALERT)	-	-	1	1000319	HAP
	12000-ZH9-802	BARREL ASSY., CYLINDER(ALERT)	-	-	1	1000320	VXP,VXQP
2	15510-ZE2-043	SWITCH ASSY., OIL LEVEL.....	1	-	1	-----	ES1, ES3, ESS, HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8 HEA8/A, HX, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A, LJC, LJC/A, LX, LX16, LX8 LX8/A, LX8, LX8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ, PA, PA2, PA2/A, PAE2 PAE2/A, PX, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, QA, QA2, QA2/A, QAB1 QAB3, QAB3/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAQ QAQ4, QAQ4/A, QAR2, QAR2/A, QAW, QAW/A, QKE3, QKE3/A, QKE4, QL2, QME2 QME2/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QWA2, QWA4 QWA4/A, QWH2, QWH2/A, QX, QX26, QX26/A, QXB, QXB/A, QXB6, QXB6/A, QXB7 QXB7/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE, QXE4, QXE4/A QXE6, QXE6/A, QXE8, QXE8/A, QXEB, QXQ4, QXQ4/A, QXU, QXU/A, RA, RA2, RA2/A RSC2, RSC2/A, RX, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A, SJP, SMC4, SMC4/A SMD, SME1, SME1/A, SME6, SME6/A, SMX2, SWA4, SWC4, SWC4/A, SX, SX2, SXB SXB/A, SXB7, SXB7/A, SXE, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4 SXQ4/A, SXU, SXU/A, VA, VA2, VA2/A, VAG2, VAG2/A, VAW, VAW1, VD16, VDE, VDE2 VDE2/A, VEB6, VKB2, VKB2/A, VKE4, VKX4, VM2, VM2/A, VMA4, VME2, VME2/A, VME4 VMS2, VMT, VMX2, VN17, VN17/A, VNG1, VNG1/A, VNT2, VNT2/A, VPE4, VPE4/A VPE5, VPE7, VPE7/A, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS37, VS37/A, VSD VSD/A, VSD3, VSD3/A, VSD7, VSD7/A, VSH7, VW12, VW12/A, VW22, VWA, VWA2 VWA2/A, VWN2, VWN2/A, VWT4, VWT4/A, VX, VX26, VXB, VXB/A, VXB2, VXB6, VXB7 VXB7/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXEB, VXEB/A, VXG VXP, VXP/A, VXQ4, VXQ4/A, VXQP, VXT1, VXT1/A, VXTB, VXU, VXU1, VXU1/A, WMA4 WMT8, WMT8/A, WXE8, WXE8/A
			1	-	-	2438529	ES1/A, ES3/A, ESS/A, HX/A, LX/A, PX/A, QX/A, QXE/A, QXE9, QXK, RX/A, SX/A SXE/A, VKK, VMT/A, VPK, VS3, VS4, VX/A, VXE8, VVK, VXU/A
	15510-ZE2-053		1	-	-	2471791	ES4, RA3, VS5
			1	-	-	2438530	2471791 ES1/A, ES3/A, ESS/A, HX/A, LX/A, PX/A, QX/A, QXE/A, QXE9, QXK, RX/A, SX/A SXE/A, VKK, VMT/A, VPK, VS3, VS4, VX/A, VXE8, VVK, VXU/A
	35480-ZF6-003		1	-	-	2471792	----- ES1/A, ES3/A, ES4, ESS/A, HX/A, LX/A, PX/A, QX/A, QXE/A, QXE9, QXK, RA3, RX/A SX/A, SXE/A, VKK, VMT/A, VPK, VS3, VS4, VS5, VX/A, VXE8, VVK, VXU/A

E-3

CYLINDER BARREL

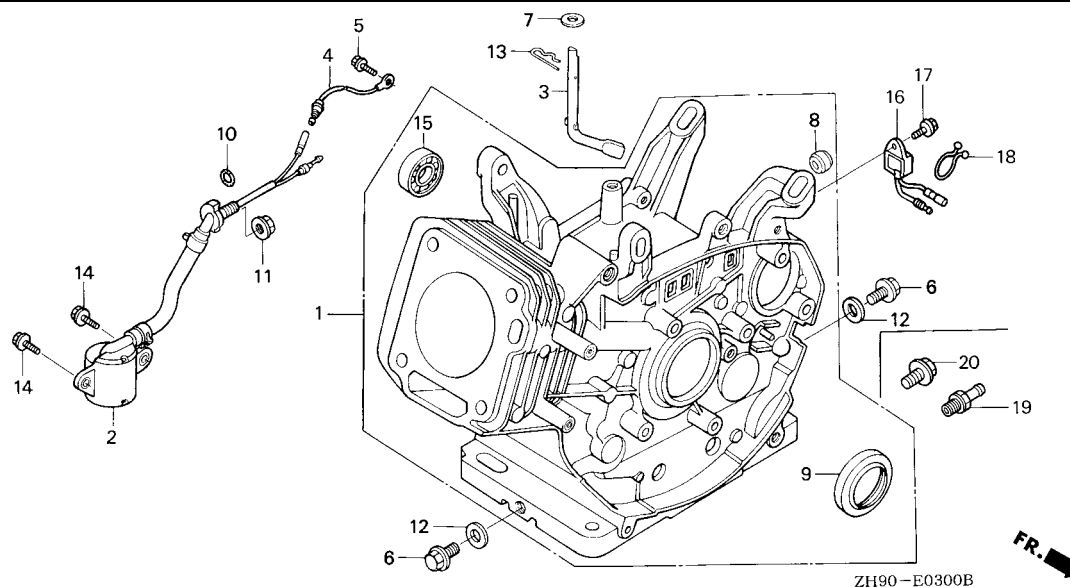


Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
(2)	15510-ZE2-043	SWITCH ASSY., OIL LEVEL.....	-	(1)	-	-----	L1, L1/A, Q1, Q2, R1, R1/A, S1, V1, W1, W1/A
	15510-ZE2-053		-	(1)	-	2438529	Q1/A, S1/A
	35480-ZF6-003		-	(1)	-	2438530	2506112 Q1/A, S1/A
	16541-ZE2-010	SHAFT, GOVERNOR ARM.....	1	1	1	2506113	----- Q1/A, S1/A
4	32197-ZE2-003	SUB HARNESS.....	1	-	1	-----	1225386 HA2, HAQ, HEA, HEA2, HX26, HXQ4, LX16, LXE, LXQ4, PA2, PX26, QA2, QAB1, QAB3 QAE2, QAE6, QAQ, QAQ4, QAR2, QME2, QSC, QSC9, QSE, QX26, QXC4, QXC6, QXC9 QXE4, QXE6, QXQ4, RA2, RSC2, RXQ4, SMC4, SMD, SME1, SME6, SWC4, SX2, SXE4 SXQ4, VA2, VAW1, VD16, VDE, VDE2, VEB6, VSD3, VW12, VW22, VWA, VWA2, VWN2 VX26, VXB2, VXB6, VXE4, VXG, VXP, VXQ4, VXQP, VXU ES3, ES3/A, ES4, ESS/A, VMT, VMT/A, VS3, VS4, VS5
	31161-ZE2-000	CORD, EARTH.....	1	-	-	-----	----- SJP
	32197-ZE2-003	SUB HARNESS.....	1	-	-	1033680	-----
			1	-	-	1033680	1225386 HA, HX, LX, LXZ, PA, PX, QA, QAE, QX, QXB, QXC, QXE, QXEB, RA, RX, SX, SXB, SXE SXEB, VA, VAW, VNG1, VSD, VX, VXB, VXE, VXEB
	31161-ZE2-000	CORD, EARTH.....	1	-	-	1225387	----- ESS
	32197-ZE2-003	SUB HARNESS.....	-	(1)	-	-----	1225386 Q2
			-	(1)	-	1033680	1225386 L1, Q1, R1, S1, V1, W1
5	90013-883-000	BOLT, FLANGE, 6X12(CT200)....	1	-	-	-----	----- ES3, ES3/A, ES4, ESS/A, VMT, VMT/A, VS3, VS4, VS5
			1	-	-	1225387	----- ESS
6	90131-883-000	BOLT, DRAIN PLUG, 12X15.....	2	2	2		
7	90446-KE1-000	WASHER, 8.2X17X0.8.....	1	1	1		

CYLINDER BARREL

2

E-3

CYLINDER BARREL

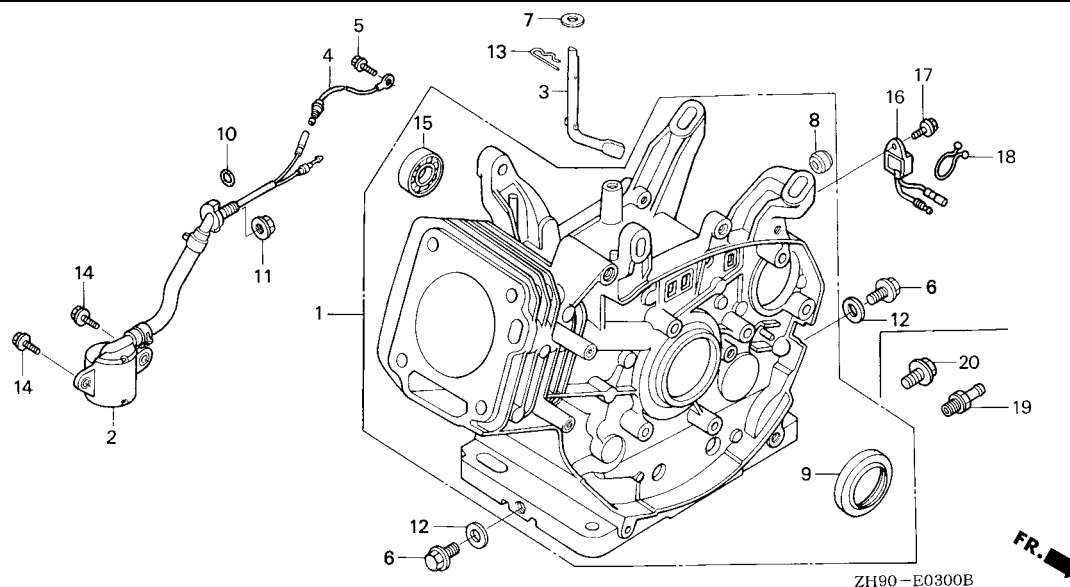

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	GX270 (2)	(3)		
12	94109-12000	WASHER, DRAIN PLUG, 12MM.....	2	2	2		
13	94251-10000	PIN, LOCK, 10MM.....	1	1	1	-----	ES1, ES1/A, ES3, ES3/A, ES4, ESS/A, HA2/A, HAP, HAP/A, HEA2, HEA2/A, HEA8 HEA8/A, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A, L1/A, LH/A, LHB1, LHB3 LHB5, LHE/A, LHQ4, LJ/A, LJC, LJC/A, LJG/A, LT, LT/A, LW/A, LWD1, LWD1/A LX/A, LX16, LX6, LX6/A, LX8, LX8/A, LXQ4, LXQ4/A, LXU, LXU/A, PA2/A, PAE2 PAE2/A, PX/A, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, Q1/A, QA2/A, QAB1 QAB3, QAB3/A, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAQ4, QAQ4/A QAR2, QAR2/A, QAW, QAW/A, QD/A, QE/A, QH/A, QH26, QH26/A, QHB5, QHE4, QHE4/A QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A, QKE3 QKE3/A, QKE4, QL2, QME2, QME2/A, QMH, QMH/A, QP/A, QSC9, QSC9/A, QSE, QSE/A QSE2, QSE8, QSE8/A, QT, QT/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX/A, QX26 QX26/A, QXB/A, QXB6, QXB6/A, QXB7, QXB7/A, QXC4, QXC4/A, QXC6, QXC6/A, QXC9 QXC9/A, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXK, QXQ4 QXQ4/A, QXU, QXU/A, R1/A, RA2/A, RA3, RD/A, RH26, RH26/A, RHE4, RHE4/A, RHQ4 RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A S1/A, SD/A, SE/A, SH/A, SHQ4, SHQ4/A, SJ/A, SJG/A, SKE1, SMC4, SMC4/A, SMD SME1, SME1/A, SME6, SME6/A, SMX2, SN/A, SWA4, SWC4, SWC4/A, SX/A, SX2, SXB/A SXB7, SXB7/A, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB/A, SXQ4, SXQ4/A, SXU SXU/A, VA2/A, VAG2, VAG2/A, VD16, VDE2, VDE2/A, VEB6, VKB2, VKB2/A, VKE4 VKK, VKX4, VM2, VM2/A, VMA4, VME2, VME2/A, VME4, VMS2, VMT, VMT/A, VMX2, VN17 VN17/A, VNG1/A, VNT2, VNT2/A, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPX4 VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4, VS5, VSD/A, VSD3/A, VSD7 VSD7/A, VSH7, VW12, VW12/A, VW22, VWA2, VWA2/A, VWN2, VWN2/A, VWT4, VWT4/A VX/A, VX26, VXB/A, VXB2, VXB6, VXB7, VXB7/A, VXE4, VXE4/A, VXE6, VXE6/A VXE7, VXE7/A, VXE8, VXE8/A, VXX, VXP, VXP/A, VXQ4, VXQ4/A, VXQP, VXT1 VXT1/A, VXTB, VXU/A, VXU1, VXU1/A, W1/A, WMA4, WMT8, WMT8/A, WXE8, WXE8/A


E-3

CYLINDER BARREL

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
13)	94251-08000	PIN, LOCK, 8MM	1	1	-	1116513	HA, HA2, HAQ, HEA, HH, HX, LH, LHE, LW, LX, LXZ, PA, PA2, PX, Q2, QA, QA2, QAE, QAE2, QAQ, QD, QE, QH, QHC, QHE, QP, QSC, QX, QXB, QXC, QXE, QXEB, RA, RA2, RD, RH, RHE, RX, SD, SE, SH, SHE, SHEZ, SN, SW, SWE, SX, SXB, SXE, SXEB, VA, VA2, VAW, VAW1, VDE, VH, VNG1, VSD, VSD3, VWA, VX, VXB, VXE, VXEB, VXG, VXU
	94251-10000	PIN, LOCK, 10MM	1	1	-	1116745	ESS, L1, LJ, LJG, LSS, LTJ, LWD, Q1, R1, S1, SJ, SJG, SJP, SK, V1, W1
			1	1	-	1116514	HA, HA2, HAQ, HEA, HH, HX, LH, LHE, LW, LX, LXZ, PA, PA2, PX, Q2, QA, QA2, QAE, QAE2, QAQ, QD, QE, QH, QHC, QHE, QP, QSC, QX, QXB, QXC, QXE, QXEB, RA, RA2, RD, RH, RHE, RX, SD, SE, SH, SHE, SHEZ, SN, SW, SWE, SX, SXB, SXE, SXEB, VA, VA2, VAW, VAW1, VDE, VH, VNG1, VSD, VSD3, VWA, VX, VXB, VXE, VXEB, VXG, VXU
14	95701-06012-00	BOLT, FLANGE, 6X12	1	1	-	1116746	ESS, L1, LJ, LJG, LSS, LTJ, LWD, Q1, R1, S1, SJ, SJG, SJP, SK, V1, W1
			2	-	2		ES1, ES1/A, ES3, ES3/A, ES4, ESS, ESS/A, HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A, LJC, LJC/A, LX, LX/A, LX16, LXE, LXE/A, LXE8, LXE8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ, PA, PA2, PA2/A, PAE2, PAE2/A, PX, PX/A, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, QA, QA2, QA2/A, QAB1, QAB3, QAB3/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAQ, QAQ4, QAQ4/A, QAR2, QAR2/A, QAW, QAW/A, QKE3, QKE3/A, QKE4, QL2, QME2, QME2/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX, QX/A, QX26, QX26/A, QXB, QXB/A, QXB6, QXB6/A, QXB7, QXB7/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXE9/A, QXK, QXK4, QXQ4, QXQ4/A, QXU, QXU/A, RA, RA2, RA2/A, RA3, RSC2, RSC2/A, RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A, SJP, SMC4, SMC4/A, SMD, SME1, SME1/A, SME6, SME6/A, SMX2, SWA4, SWC4, SWC4/A, SX, SX/A, SX2, SXB, SXB/A, SXB7, SXB7/A, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4, SXQ4/A, SXU, SXU/A, VA, VA2, VA2/A, VAG2, VAG2/A, VAW, VAW1, VD16, VDE, VDE2, VDE2/A, VEB6, VKB2, VKB2/A, VKE4, VKK, VKX4, VM2, VM2/A, VMA4, VME2, VME2/A, VME4, VMS2, VMT, VMT/A, VMX2, VN17, VN17/A, VNG1, VNG1/A, VNT2, VNT2/A, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4, VS5, VSD, VSD/A, VSD3, VSD3/A, VSD7, VSD7/A, VSH7, VW12, VW12/A, VW22, VWA, VWA2, VWA2/A, VWN2, VWN2/A, VWT4, VWT4/A, VX, VX/A, VX26, VXB, VXB/A, VXB2, VXB6, VXB7, VXB7/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8, VXE8/A, VXG, VXK, VXP, VXP/A, VXQ4, VXQ4/A, VXQP, VXT1, VXT1/A, VXTB, VXU, VXU/A, VXU1, VXU1/A, WMA4, WMT8, WMT8/A, WXE8, WXE8/A
15	96100-62020-00	BEARING, RADIAL BALL, 6202 ...	-	(2)	-		
			1	1	1		HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, LSS, LTJ, LWD1, LWD1/A, PA, PA2, PA2/A, PAE2, PAE2/A, Q2, QA, QA2, QA2/A, QAB1, QAB3, QAB3/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAQ, QAQ4, QAQ4/A, QAR2, QAR2/A, QAW, QAW/A, QL2, QSC, QSC9, QSC9/A, QX26, QX26/A, QXB6, QXB6/A, RA, RA2, RA2/A, RA3, RSC2, RSC2/A, RSS, RSS/A, SK, VA, VA2, VA2/A, VAW, VAW1, VDE, VDE2, VDE2/A, VKB2, VKB2/A, VM2, VM2/A, VME2, VME2/A, VMS2, VMX2, VNT2, VNT2/A, VW12, VW12/A, VW22, VWA, VWA2, VWA2/A, VWN2, VWN2/A
16	34150-ZH7-003	ALERT UNIT, OIL	1	-	1		HA2/A, HAP, HAP/A, HX26/A, HX8, HX8/A, HXQ4/A, LJC, LJC/A, LXQ4/A, LXU, LXU/A, PA2/A, PX26/A, PXU, PXU/A, QA2/A, QAB3/A, QAG, QAG/A, QAG2, QAG2/A, QAQ4/A, QAR2/A, QAW, QAW/A, QKE3/A, QL2, QME2/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX26/A, QXB7, QXB7/A, QXC4/A, QXC6/A, QXC9/A, QXC9/A, QXU, QXU/A, RA2/A, RSC2/A, RXP, RXP/A, RXQ4/A, RXU, RXU/A, SMC4/A, SME1/A, SME6/A, SMX2, SWA4, SWC4/A, SXB7, SXB7/A, SXQ4/A, SXU, SXU/A, VA2/A, VAG2, VAG2/A, VKE4, VKX4, VM2/A, VMA4, VME4, VMT, VMX2, VN17, VN17/A, VNG1/A, VNT2/A, VPE4/A, VPE5, VPE7, VPE7/A, VPX4/A, VPX5, VPX7, VPX7/A, VS37, VS37/A, VSD/A, VSD3/A, VSD7, VSD7/A, VSH7, VW12/A, VWA2/A, VWN2/A, VWT4/A, VXB/A, VXB7, VXB7/A, VXP/A, VXQ4/A, VXT1, VXT1/A, VXU1, VXU1/A, WMT8, WMT8/A
	34150-ZH7-013		1	-	-		ES4, RA3, VS5

E-3


CYLINDER BARREL

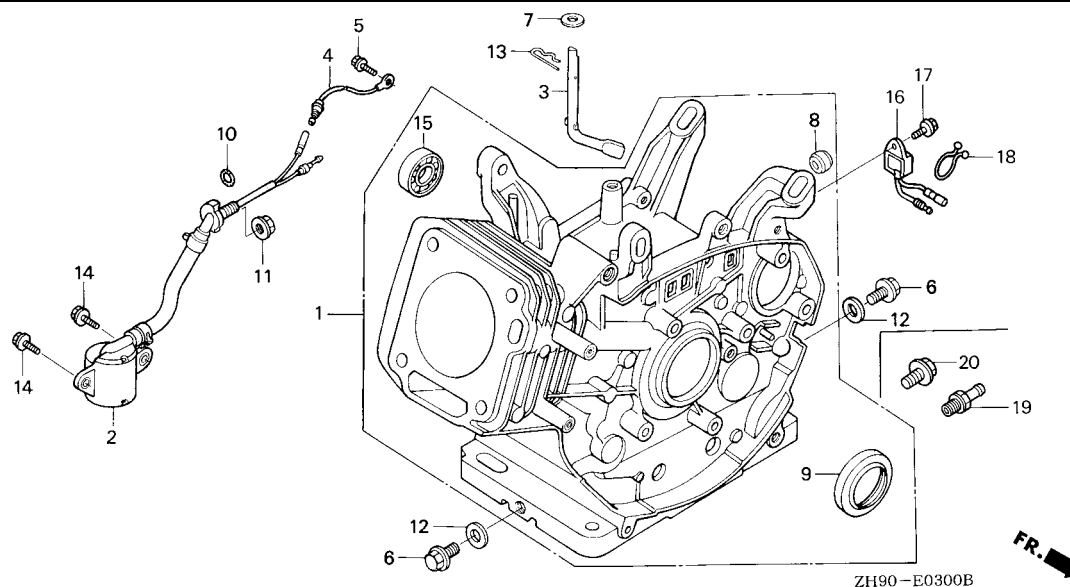

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
16)	34150-ZH7-003	ALERT UNIT, OIL	1	-	-	2440203	ES1/A, ES3/A, ESS/A, HX/A, LX/A, PX/A, QX/A, QXK, RX/A, SX/A, VKK, VMT/A, VPK VS3, VS4, VX/A, VXX, VXU/A
			1	-	-	1321603	ES1, ES3, ESS, HA2, HX, HX26, HXQ4, LX, LX16, LXQ4, PA2, PX, PX26, QA2, QAB3 QAQ4, QAR2, QKE3, QME2, QX, QX26, QXB, QXC4, QXC6, QXC9, QXQ4, RA2, RSC2, RX RXQ4, SMC4, SMD, SME1, SME6, SWC4, SX, SXB, SXQ4, VA2, VD16, VM2, VNG1, VNT2 VPE4, VPX4, VSD, VSD3, VW12, VW22, VWA2, VWN2, VWT4, VX, VX26, VXB, VXB2, VXG VXQ4, VXTB, VXU
	34150-ZH7-013		1	-	-	2440204	ES1/A, ES3/A, ESS/A, HX/A, LX/A, PX/A, QX/A, QXK, RX/A, SX/A, VKK, VMT/A, VPK VS3, VS4, VX/A, VXX, VXU/A
	34150-ZH7-003		-	(1)	-	2440203	Q1/A, S1/A
			-	(1)	-	1321603	Q1, S1
	34150-ZH7-013		-	(1)	-	2440204	Q1/A, S1/A
	34150-ZH7-003		-	-	1	1000070	VXP, VXQP

E-3


CYLINDER BARREL

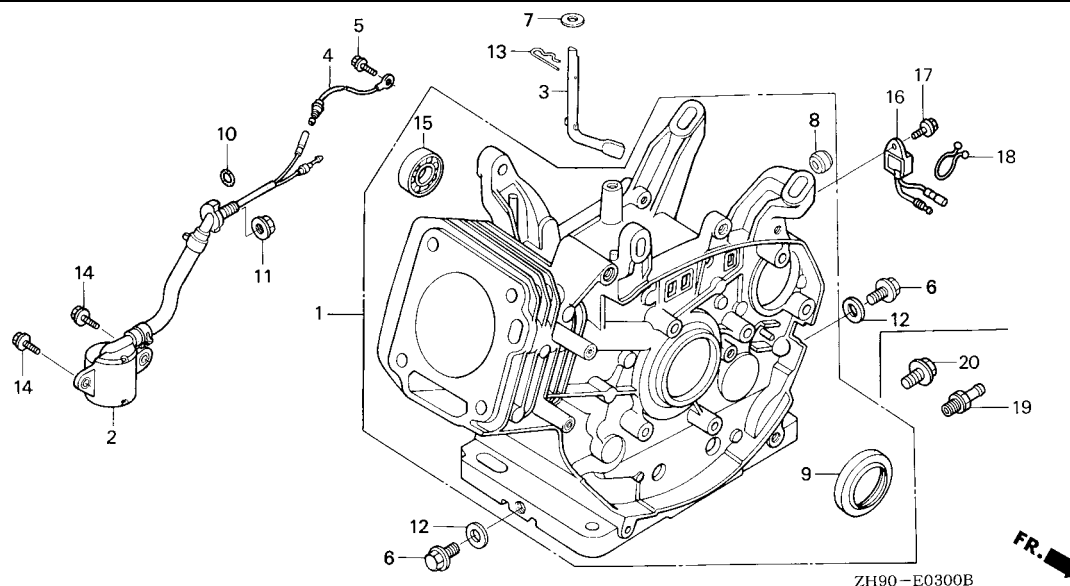

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
17	90013-883-000	BOLT, FLANGE, 6X12(CT200).....	1	-	1	-----	ES1/A, ES3/A, ES4, ESS/A, HA2/A, HAP, HAP/A, HX/A, HX26/A, HX8, HX8/A, HXQ4/A, LJC, LJC/A, LX/A, LXQ4/A, LXU, LXU/A, PA2/A, PX/A, PX26/A, PXU, PXU/A, QA2/A, QAB3/A, QAG, QAG/A, QAG2, QAG2/A, QAQ4/A, QAR2/A, QAW, QAW/A, QKE3/A, QL2, QME2/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX/A, QX26/A, QXB/A, QXB7, QXB7/A, QXC4/A, QXC6/A, QXC9/A, QXK, QXQ4/A, QXU, QXU/A, RA2/A, RA3, RSC2/A, RX/A, RXP, RXP/A, RXQ4/A, RXU, RXU/A, SMC4/A, SME1/A, SME6/A, SMX2, SWA4, SWC4/A, SX/A, SXB/A, SXB7, SXB7/A, SXQ4/A, SXU, SXU/A, VA2/A, VAG2, VAG2/A, VKE4, VKK, VKX4, VM2/A, VMA4, VME4, VMT, VMT/A, VMX2, VN17, VN17/A, VNG1/A, VNT2/A, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4, VS5, VSD/A, VSD3/A, VSD7, VSD7/A, VSH7, VW12/A, VWA2/A, VWN2/A, VWT4/A, VX/A, VXB/A, VXB7, VXB7/A, VXX, VXP/A, VXQ4/A, VXT1, VXT1/A, VXU/A, VXU1, VXU1/A, WMT8, WMT8/A
			1	-	-	1321603	-----
			-	(1)	-	-----	Q1/A, S1/A
			-	(1)	-	1321603	-----
			-	-	1	1000070	-----
			-	-	-	-----	VXP, VXQP
			-	-	-	1350461	-----
			-	-	-	-----	VS37, VS37/A, VSD3/A
			-	-	-	-----	VSD3
			-	-	-	-----	SMX2
			-	-	-	-----	SMX2
18	90630-751-000	CLIP, PURSE LOCK.....	1	-	-	-----	VS37, VS37/A, VSD3/A
19	90131-ZE3-790	PLUG, OIL DRAIN.....	1	-	-	-----	VSD3
20	92800-12000	BOLT, DRAIN PLUG, 12MM.....	1	-	-	-----	SMX2

2

2021.03.20 E



Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
2	11300-ZE-602	COVER ASSY., CRANKCASE	1	1	1	-----	PX/A, PX26/A, PXE8/A, PXU/A, Q1/A, QAG2/A, QD/A, QE/A, QH/A, QH26/A, QHB5 QHE4/A, QHP1/A, QHQ4/A, QHR/A, QHR4/A, QHZ/A, QKE3/A, QKE4, QME2/A, QMH/A QP/A, QSE/A, QSE2, QSE8/A, QT/A, QWA4/A, QWH2/A, QX/A, QXB/A, QXB7/A QXC4/A, QXC6/A, QXC9/A, QXE/A, QXE4/A, QXE6/A, QXE8/A, QXE9, QXK, QXQ4/A QXU/A, VAG2/A, VKE4, VKK, VKX4, VN17/A, VNG1/A, VPE7/A, VPX7/A, VS37/A VSD/A, VSD3/A, VSD7/A, VSH7, VMT4/A, VX/A, VXB/A, VXE4/A, VXE6/A, VXE8 VXE9/A, VXK, VXP/A, VXQ4/A, VXT1/A, VXU/A, VXU1/A
	11300-ZE-600		1	1	1	-----	QHC, QHE, QWA2, QXC, QXEB, V1, VD16, VEB6, VH, VX26, VXB2, VXB6, VXE, VXG, VXQP VXTB
	11300-ZE-020		1	1	1	-----	R1/A, RD/A, RH26/A, RHE4/A, RHQ4/A, RX/A, RXP/A, RXQ4/A, RXU/A, S1/A, SD/A SE/A, SH/A, SHQ4/A, SJA/A, SJG/A, SMC4/A, SME1/A, SME6/A, SN/A, SWA4, SWC4/A SX/A, SXB/A, SXB7/A, SXE/A, SXE4/A, SXE8/A, SXEB/A, SXQ4/A, SXU/A, VMA4 VME4
	11300-ZE-632		1	1	-	-----	W1/A, WMA4, WMT8/A, WXE8/A
	11300-ZE-600		1	1	-	-----	1832354 PX, PX26, PXE8, PXU, Q1, QAG2, QD, QE, QH, QH26, QHE4, QHP1, QHQ4, QHR, QHR4 QHZ, QKE3, QME2, QMH, QP, QSE, QSE8, QT, QWA4, QWH2, QX, QXB, QXC4, QXC6, QXC9 QXE, QXE4, QXE6, QXE8, QXQ4, QXU, VN17, VNG1, VPE4, VPE7, VPX4, VSD, VSD3 VMT4, VX, VXB, VXE4, VXE6, VXE8, VXQ4, VXT1, VXU, VXU1
	11300-ZE-000		1	1	-	-----	1832354 R1, RD, RH26, RHE4, RHQ4, RX, RXQ4, RXU, S1, SD, SE, SH, SHQ4, SJG, SMC4, SME1 SME6, SN, SWC4, SX, SXB, SXE, SXE4, SXE8, SXEB, SXQ4, SXU
	11300-ZE-630		1	1	-	-----	1832354 W1, WMT8, WXE8
	11300-ZE-601		1	1	-	-----	1832355 PX, PX26, PXE8, PXU, Q1, QAG2, QD, QE, QH, QH26, QHE4, QHP1, QHQ4, QHR, QHR4 QHZ, QKE3, QME2, QMH, QP, QSE, QSE8, QT, QWA4, QWH2, QX, QXB, QXC4, QXC6, QXC9 QXE, QXE4, QXE6, QXE8, QXQ4, QXU, VN17, VNG1, VPE4, VPE7, VPX4, VSD, VSD3 VMT4, VX, VXB, VXE4, VXE6, VXE8, VXQ4, VXT1, VXU, VXU1
	11300-ZE-010		1	1	-	-----	1832355 R1, RD, RH26, RHE4, RHQ4, RX, RXQ4, RXU, S1, SD, SE, SH, SHQ4, SJG, SMC4, SME1 SME6, SN, SWC4, SX, SXB, SXE, SXE4, SXE8, SXEB, SXQ4, SXU
	11300-ZE-631		1	1	-	-----	1832355 W1, WMT8, WXE8
	11300-ZE-601		1	-	1	-----	QXB7, VAG2, VPX7, VS37, VSD7, VXB7, VXE7, VXP


E-6

CRANKCASE COVER(1)

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
(2)	11300-ZE2-010	COVER ASSY., CRANKCASE	1	-	1	-----	RXP, SXB7
	11300-ZE2-405		1	-	-	-----	ES1/A
	11300-ZE2-000		1	-	-	-----	RH, RHE, SHE, SHEZ, SJ, SJP, SKE1, SMD, SW, SWE, SX2
	11300-ZH9-S50		1	-	-	-----	SMX2, VS3, VS4, VS5
	11300-ZK9-U60		1	-	-	-----	VPE5, VPK, VPX5
	11300-ZE2-E70		1	-	-	-----	1832354 ES1
	11300-ZE2-602		1	-	-	-----	2134945 VPE4/A, VPX4/A, VXB7/A, VXE7/A
	11300-ZE2-E71		1	-	-	-----	1832355 ES1
	11300-ZK9-U60		1	-	-	-----	2134946 VPE4/A, VPX4/A, VXB7/A, VXE7/A
3	11381-ZE2-801	PACKING, CASE COVER	1	-	1	-----	ES1, ES1/A, PX, PX/A, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, QAG2, QAG2/A, QD, QD/A, QE, QE/A, QH, QH/A, QH26, QH26/A, QHB5, QHC, QHE, QHE4, QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A, QKE3, QKE3/A, QKE4, QME2, QME2/A, QMH, QMH/A, QP, QP/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QT, QT/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX, QX/A, QXB, QXB/A, QXB7, QXB7/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXE9, QXK, QXQ4, QXQ4/A, QXU, QXU/A, RD, RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A, SD, SD/A, SE, SE/A, SH, SH/A, SHE, SHEZ, SHQ4, SHQ4/A, SJ, SJ/A, SJG, SJG/A, SJP, SKE1, SMC4, SMC4/A, SMD, SME1, SME1/A, SME6, SME6/A, SMX2, SN, SN/A, SW, SWA4, SWC4, SWC4/A, SWE, SX, SX/A, SX2, SXB, SXB/A, SXB7, SXB7/A, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4, SXQ4/A, SXU, SXU/A, VAG2, VAG2/A, VD16, VEB6, VH, VKE4, VKK, VKX4, VMA4, VME4, VN17, VN17/A, VNG1, VNG1/A, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4, VS5, VSD, VSD/A, VSD3, VSD3/A, VSD7, VSD7/A, VSH7, VWT4, VWT4/A, VX, VX/A, VX26, VXB, VXB/A, VXB2, VXB6, VXB7, VXB7/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8, VXE8/A, VXG, VXK, VXP, VXP/A, VXQ4, VXQ4/A, VXQP, VXT1, VXT1/A, VXTB, VXU, VXU/A, VXU1, VXU1/A, WMA4, WMT8, WMT8/A, WXE8, WXE8/A
4	15600-735-003	CAP ASSY., OIL FILLER	-	(1)	-	-----	Q1, Q1/A, R1, R1/A, S1, S1/A, V1, W1, W1/A
			1	-	1	-----	PX/A, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, QAG2, QAG2/A, QD/A, QE/A, QH/A, QH26, QH26/A, QHB5, QHE4, QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A, QKE3, QKE3/A, QKE4, QME2, QME2/A, QMH, QMH/A, QP/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QT, QT/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX/A, QXB, QXB7, QXB7/A, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXK, QXQ4, QXQ4/A, QXU, QXU/A, RD/A, RH26, RH26/A, RHE4, RHE4/A, RHQ4, RHQ4/A, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A, SD/A, SE/A, SH/A, SHQ4, SHQ4/A, SJ/A, SJG, SJG/A, SKE1, SMC4, SMC4/A, SMD, SME1, SME1/A, SME6, SME6/A, SMX2, SN, SN/A, SWA4, SWC4, SWC4/A, SX/A, SX2, SXB, SXB7, SXB7/A, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4, SXQ4/A, SXU, SXU/A, VAG2, VAG2/A, VD16, VEB6, VKE4, VKK, VKX4, VMA4, VME4, VN17, VN17/A, VNG1, VNG1/A, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4, VS5, VSD, VSD3/A, VSD7, VSD7/A, VSH7, VWT4, VWT4/A, VX, VX/A, VX26, VXB, VXB2, VXB6, VXB7, VXB7/A, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8/A, VXG, VXK, VXP, VXP/A, VXQ4, VXQ4/A, VXQP, VXT1, VXT1/A, VXTB, VXU, VXU/A, VXU1, VXU1/A, WMA4, WMT8, WMT8/A, WXE8, WXE8/A
	15600-735-700		1	-	-	-----	1071798 PX, QD, QE, QH, QHC, QHE, QP, QX, QXB, QXC, QXE, QXE8, RD, RH, RHE, RX, SD, SE, SH, SHE, SHEZ, SJ, SJP, SW, SWE, SX, SXB, SXE, SXEB, VH, VNG1, VSD, VSD3, VX, VXB, VXE, VXE8
	15600-735-003		1	-	-	-----	1071799 PX, QD, QE, QH, QHC, QHE, QP, QX, QXB, QXC, QXE, QXE8, RD, RH, RHE, RX, SD, SE, SH, SHE, SHEZ, SJ, SJP, SW, SWE, SX, SXB, SXE, SXEB, VH, VNG1, VSD, VSD3, VX, VXB, VXE, VXE8
	15600-735-700		-	(1)	-	-----	Q1/A, R1/A, S1/A, W1/A
	15600-735-003		-	(1)	-	-----	1071798 Q1, R1, S1, V1, W1
			-	(1)	-	-----	1071799 Q1, R1, S1, V1, W1

E-6

CRANKCASE COVER(1)

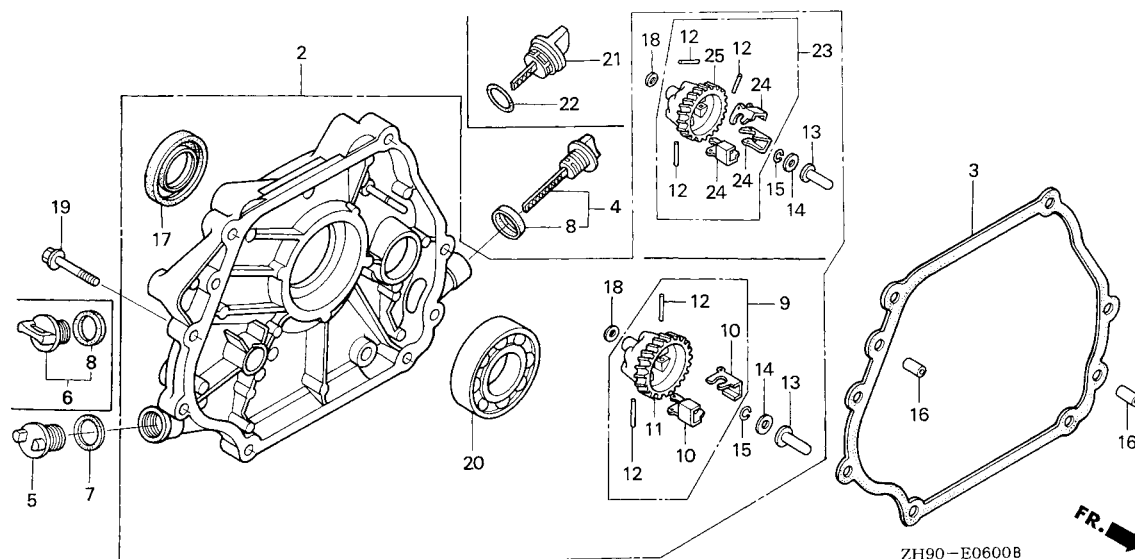

ZH90-E0600B

FR. →

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
5	15620-ZG4-910	CAP, OIL FILLER.....	1	1	-	1071798	PX, Q1, QD, QE, QH, QHC, QHE, QP, QX, QXB, QXE, QXEB, R1, RD, RH, RHE, RX, S1, SD, SE, SH, SHE, SHEZ, SJ, SJP, SW, SWE, SX, SXB, SXE, SXEB, V1, VH, VNG1, VSD, VSD3, VX, VXB, VXE, VXEB, W1
			1	-	-		QXC
6	15600-ZG4-003	CAP ASSY., OIL FILLER.....	1	1	1		PX/A, PX26/A, PXE8, PXE8/A, PXU, PXU/A, Q1/A, QAG2, QAG2/A, QD/A, QE/A, QH/A, QH26, QH26/A, QHB5, QHE4, QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A, QKE3, QKE3/A, QKE4, QME2, QME2/A, QMH, QMH/A, QP/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QT, QT/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX/A, QXB/A, QXB7, QXB7/A, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXK, QXQ4, QXQ4/A, QXU, QXU/A, R1/A, RD/A, RH26, RH26/A, RHE4, RHE4/A, RHQ4, RHQ4/A, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A, S1/A, SD/A, SE/A, SH/A, SHQ4, SHQ4/A, SJ/A, SJG, SJG/A, SKE1, SMC4, SMC4/A, SMD, SME1, SME1/A, SME6, SME6/A, SMX2, SN, SN/A, SWA4, SWC4, SWC4/A, SX/A, SX2, SXB/A, SXB7, SXB7/A, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB/A, SXQ4, SXQ4/A, SXU, SXU/A, VAG2, VAG2/A, VD16, VEB6, VKE4, VKK, VKX4, VMA4, VME4, VN17, VN17/A, VNG1/A, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4, VS5, VSD/A, VSD3/A, VSD7, VSD7/A, VSH7, VWT4, VWT4/A, VX/A, VX26, VXB/A, VXB2, VXB6, VXB7, VXB7/A, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8/A, VXG, VXK, VXP, VXP/A, VXQ4, VXQ4/A, VXQP, VXT1, VXT1/A, VXTB, VXU, VXU/A, VXU1, VXU1/A, W1/A, WMA4, WMT8, WMT8/A, WXE8, WXE8/A, PX, Q1, QD, QE, QH, QHC, QHE, QP, QX, QXB, QXC, QXE, QXEB, R1, RD, RH, RHE, RX, S1, SD, SE, SH, SHE, SHEZ, SJ, SJP, SW, SWE, SX, SXB, SXE, SXEB, V1, VH, VNG1, VSD, VSD3, VX, VXB, VXE, VXEB, W1
7	15621-896-010	PACKING, OIL FILLER CAP.....	1	1	-	1071798	PX, Q1, QD, QE, QH, QHC, QHE, QP, QX, QXB, QXC, QXE, QXEB, R1, RD, RH, RHE, RX, S1, SD, SE, SH, SHE, SHEZ, SJ, SJP, SW, SWE, SX, SXB, SXE, SXEB, V1, VH, VNG1, VSD, VSD3, VX, VXB, VXE, VXEB, W1

E-6


CRANKCASE COVER(1)

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
8	15625-ZE1-003	PACKING, OIL FILLER CAP.....	2	-	2	-----	PX/A, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, QAG2, QAG2/A, QD/A, QE/A, QH/A, QH26, QH26/A, QHB5, QHE4, QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A, QKE3, QKE3/A, QKE4, QME2, QME2/A, QMH, QMH/A, QP/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QT, QT/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX/A, QXB/A, QXB7, QXB7/A, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXK, QXQ4, QXQ4/A, QXU, QXU/A, RD/A, RH26, RH26/A, RHE4, RHE4/A, RHQ4, RHQ4/A, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A, SD/A, SE/A, SH/A, SHQ4, SHQ4/A, SJ/A, SJG, SJG/A, SKE1, SMC4, SMC4/A, SMD, SME1, SME1/A, SME6, SME6/A, SMX2, SN, SN/A, SWA4, SWC4, SWC4/A, SX/A, SX2, SXB/A, SXB7, SXB7/A, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB/A, SXQ4, SXQ4/A, SXU, SXU/A, VAG2, VAG2/A, VD16, VEB6, VKE4, VKK, VKX4, VMA4, VME4, VN17, VN17/A, VNG1/A, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4, VS5, VSD/A, VSD3/A, VSD7, VSD7/A, VSH7, VWT4, VWT4/A, VX/A, VX26, VXB/A, VXB2, VXB6, VXB7, VXB7/A, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8/A, VXG, VXK, VXP, VXP/A, VXQ4, VXQ4/A, VXQP, VXT1, VXT1/A, VXTB, VXU, VXU/A, VXU1, VXU1/A, WMA4, WMT8, WMT8/A, WXE8, WXE8/A
	15625-ZE1-000		1	-	-	-----	QXC
			1	-	-	-----	1071798 PX, QD, QE, QH, QHC, QHE, QP, QX, QXB, QXE, QXEB, RD, RH, RHE, RX, SD, SE, SH, SHE, SHEZ, SJ, SJP, SW, SWE, SX, SXB, SXE, SXEB, VH, VNG1, VSD, VSD3, VX, VXB, VXE, VXE8
	15625-ZE1-003		2	-	-	1071799	----- PX, QD, QE, QH, QHC, QHE, QP, QX, QXB, QXC, QXE, QXEB, RD, RH, RHE, RX, SD, SE, SH, SHE, SHEZ, SJ, SJP, SW, SWE, SX, SXB, SXE, SXEB, VH, VNG1, VSD, VSD3, VX, VXB, VXE, VXE8
			-	(2)	-	-----	Q1/A, R1/A, S1/A, W1/A
	15625-ZE1-000		-	(1)	-	-----	1071798 Q1, R1, S1, V1, W1
	15625-ZE1-003		-	(2)	-	1071799	----- Q1, R1, S1, V1, W1
9	16510-ZE2-000	GOVERNOR ASSY.	1	1	1	-----	ES1, ES1/A, PX, PX/A, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, Q1, Q1/A, QAG2, QAG2/A, QD, QD/A, QE, QE/A, QH, QH/A, QH26, QH26/A, QHB5, QHC, QHE, QHE4, QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A, QKE3, QKE3/A, QKE4, QME2, QME2/A, QMH, QMH/A, QP, QP/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QT, QT/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX, QX/A, QXB, QXB/A, QXB7, QXB7/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXE9, QXK, QXQ4, QXQ4/A, QXU, QXU/A, R1, R1/A, RD, RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A, S1, S1/A, SD, SD/A, SE, SE/A, SH, SH/A, SHE, SHEZ, SHQ4, SHQ4/A, SJ, SJ/A, SJG, SJG/A, SJP, SKE1, SMC4, SMC4/A, SMD, SME1, SME1/A, SME6, SME6/A, SMX2, SN, SN/A, SW, SWA4, SWC4, SWC4/A, SWE, SX, SX/A, SX2, SXB, SXB/A, SXB7, SXB7/A, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4, SXQ4/A, SXU, SXU/A, V1, VAG2, VAG2/A, VD16, VEB6, VH, VKE4, VKK, VKX4, VMA4, VME4, VN17, VN17/A, VNG1, VNG1/A, VPE4, VPE7, VPE7/A, VPX4, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4, VS5, VSD, VSD/A, VSD3, VSD3/A, VSD7, VSD7/A, VSH7, VWT4, VWT4/A, VX, VX/A, VX26, VXB, VXB/A, VXB2, VXB6, VXB7, VXE, VXE4, VXE6, VXE6/A, VXE7, VXE8, VXE8, VXE8/A, VXG, VXK, VXP, VXP/A, VXQ4, VXQ4/A, VXQP, VXT1, VXT1/A, VXTB, VXU, VXU/A, VXU1, VXU1/A, W1, W1/A, WMA4, WMT8, WMT8/A, WXE8, WXE8/A
			1	-	-	-----	2134945 VPE4/A, VPX4/A, VXB7/A, VXE7/A

2

E-6

CRANKCASE COVER(1)

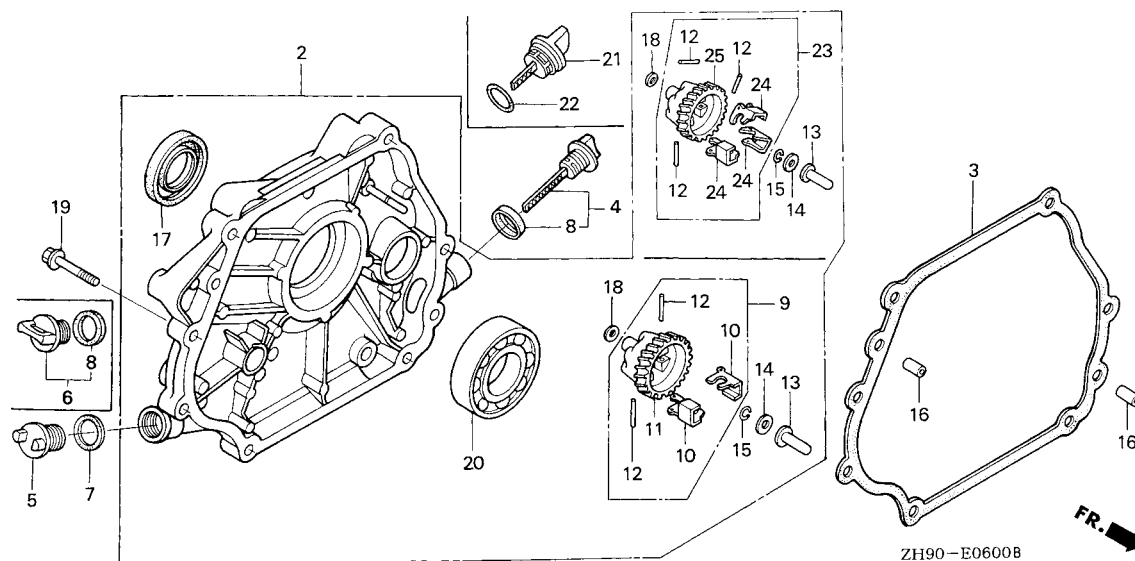


Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
10	16511-ZE2-000	WEIGHT, GOVERNOR.....	2	2	2	-----	ES1, ES1/A, PX, PX/A, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, Q1, Q1/A, QAG2, QAG2/A, QD, QD/A, QE, QE/A, QH, QH/A, QH26, QH26/A, QHB5, QHC, QHE, QHE4, QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A, QKE3, QKE3/A, QKE4, QME2, QME2/A, QMH, QMH/A, QP, QP/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QT, QT/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX, QX/A, QXB, QXB/A, QXB7, QXB7/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXE9, QXK, QXQ4, QXQ4/A, QXU, QXU/A, R1, R1/A, RD, RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A, S1, S1/A, SD, SD/A, SE, SE/A, SH, SH/A, SHE, SHEZ, SHQ4, SHQ4/A, SJ, SJ/A, SJG, SJG/A, SJP, SKE1, SMC4, SMC4/A, SMD, SME1, SME1/A, SME6, SME6/A, SMX2, SN, SN/A, SW, SWA4, SWC4, SWC4/A, SWE, SX, SX/A, SX2, SXB, SXB/A, SXB7, SXB7/A, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4, SXQ4/A, SXU, SXU/A, V1, VAG2, VAG2/A, VD16, VEB6, VH, VKE4, VKK, VKX4, VMA4, VME4, VN17, VN17/A, VNG1, VNG1/A, VPE4, VPE7, VPE7/A, VPX4, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4, VS5, VSD, VSD/A, VSD3, VSD3/A, VSD7, VSD7/A, VSH7, VWT4, VWT4/A, VX, VX/A, VX26, VXB, VXB/A, VXB2, VXB6, VXB7, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE8, VXE8, VXE8/A, VXG, VXX, VXP, VXP/A, VXQ4, VXQ4/A, VXQP, VXT1, VXT1/A, VXTB, VXU, VXU/A, VXU1, VXU1/A, W1, W1/A, WMA4, WMT8, WMT8/A, WXE8, WXE8/A, VPE4/A, VPX4/A, VXB7/A, VXE7/A
			2	-	-	-----	2134945

CRANKCASE COVER(1)

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	GX270 (2)	(3)		
11	16512-ZE2-000	HOLDER, GOVERNOR WEIGHT.....	1	1	1	-----	ES1, ES1/A, PX, PX/A, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, QAG2, QAG2/A, QD, QD/A, QE, QE/A, QH, QH/A, QH26, QH26/A, QHB5, QHC, QHE, QHE4, QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A, QKE3, QKE3/A, QKE4, QME2, QME2/A, QMH, QMH/A, QP, QP/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QT, QT/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX, QX/A, QXB, QXB/A, QXB7, QXB7/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXE9, QXK, QXQ4, QXQ4/A, QXU, QXU/A, R1, R1/A, RD, RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A, S1, S1/A, SD, SD/A, SE, SE/A, SH, SH/A, SHE, SHEZ, SHQ4, SHQ4/A, SJ, SJ/A, SJG, SJG/A, SJP, SKE1, SMC4, SMC4/A, SMD, SME1, SME1/A, SME6, SME6/A, SMX2, SN, SN/A, SW, SWA4, SWC4, SWC4/A, SWE, SX, SX/A, SX2, SXB, SXB/A, SXB7, SXB7/A, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4, SXQ4/A, SXU, SXU/A, V1, VAG2, VAG2/A, VD16, VEB6, VH, VKE4, VKK, VKX4, VMA4, VME4, VN17, VN17/A, VNG1, VNG1/A, VPE4, VPE7, VPE7/A, VPX4, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4, VS5, VSD, VSD/A, VSD3, VSD3/A, VSD7, VSD7/A, VSH7, VWT4, VWT4/A, VX, VX/A, VX26, VXB, VXB/A, VXB2, VXB6, VXB7, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE8, VXE8, VXE8/A, VXG, VXK, VXP, VXP/A, VXQ4, VXQ4/A, VXQP, VXT1, VXT1/A, VXTB, VXU, VXU/A, VXU1, VXU1/A, W1, W1/A, WMA4, WMT8, WMT8/A, WXE8, WXE8/A, VPE4/A, VPX4/A, VXB7/A, VXE7/A
12	16513-ZE2-000	PIN, GOVERNOR WEIGHT.....	1	-	-	-----	2134945
			2	-	-	-----	-----
							ES1, ES1/A, PX, PX/A, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, QAG2, QAG2/A, QD, QD/A, QE, QE/A, QH, QH/A, QH26, QH26/A, QHB5, QHC, QHE, QHE4, QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A, QKE3, QKE3/A, QKE4, QME2, QME2/A, QMH, QMH/A, QP, QP/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QT, QT/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX, QX/A, QXB, QXB/A, QXB7, QXB7/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXE9, QXK, QXQ4, QXQ4/A, QXU, QXU/A, RD, RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RX, RX/A, RXQ4, RXQ4/A, RXU, RXU/A, SD, SD/A, SE, SE/A, SH, SH/A, SHE, SHEZ, SHQ4, SHQ4/A, SJ, SJ/A, SJG, SJG/A, SJP, SKE1, SMC4, SMC4/A, SMD, SME1, SME1/A, SME6, SME6/A, SMX2, SN, SN/A, SW, SWA4, SWC4, SWC4/A, SWE, SX, SX/A, SX2, SXB, SXB/A, SXB7, SXB7/A, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4, SXQ4/A, SXU, SXU/A, VAG2, VAG2/A, VD16, VEB6, VH, VKE4, VKK, VKX4, VMA4, VME4, VN17, VN17/A, VNG1, VNG1/A, VPE4, VPE7, VPE7/A, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4, VS5, VSD, VSD/A, VSD3, VSD3/A, VSD7, VSD7/A, VSH7, VWT4, VWT4/A, VX, VX/A, VX26, VXB, VXB/A, VXB2, VXB6, VXB7, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE8, VXE8, VXE8/A, VXG, VXK, VXQ4, VXQ4/A, VXT1, VXT1/A, VXTB, VXU, VXU/A, VXU1, VXU1/A, WMA4, WMT8, WMT8/A, WXE8, WXE8/A, VPE5, VPK, VPX5
			3	-	-	-----	-----
			2	-	-	-----	2134945
			3	-	-	-----	2134946
			-	2	2	-----	-----
13	16531-Z0A-000	SLIDER, GOVERNOR.....	1	1	1	-----	Q1, Q1/A, R1, R1/A, RXP, RXP/A, S1, S1/A, V1, VXP, VXP/A, VXQP, W1, W1/A, ES1/A, PX/A, PX26/A, PXE8/A, PXU/A, Q1/A, QAG2/A, QD/A, QE/A, QH/A, QH26/A, QHB5, QHC, QHE, QHE4/A, QHP1/A, QHQ4/A, QHR/A, QHR4/A, QHZ/A, QKE3/A, QKE4, QME2/A, QMH/A, QP/A, QSE/A, QSE2, QSE8/A, QT/A, QWA2, QWA4/A, QWH2/A, QX/A, QXB/A, QXB7, QXB7/A, QXC, QXC4/A, QXC6/A, QXC9/A, QXE/A, QXE4/A, QXE6/A, QXE8/A, QXE9, QXE9, QXK, QXQ4/A, QXU/A, R1/A, RD/A, RH, RH26/A, RHE, RHE4/A, RHQ4/A, RX/A, RXP, RXP/A, RXQ4/A, RXU/A, S1/A, SD/A, SE/A, SH/A, SHE, SHEZ, SHQ4/A, SJ, SJ/A, SJG/A, SJP, SKE1, SMC4/A, SMD, SME1/A, SME6/A, SMX2, SN/A, SW, SWA4, SWC4/A, SWE, SX/A, SX2, SXB/A, SXB7, SXB7/A, SXE/A, SXE4/A, SXE8/A, SXEB/A, SXQ4/A, SXU/A, V1, VAG2, VAG2/A, VD16, VEB6, VH, VKE4, VKK, VKX4, VMA4, VME4, VN17/A, VNG1/A, VPE4/A, VPE5, VPE7/A, VPK, VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4, VS5, VSD/A, VSD3/A, VSD7, VSD7/A, VSH7, VWT4, VWT4/A, VX, VX/A, VX26, VXB, VXB/A, VXB2, VXB6, VXB7, VXB7/A, VXE, VXE4/A, VXE6/A, VXE7, VXE7/A, VXE8, VXE8/A, VXG, VXK, VXP, VXP/A, VXQ4/A, VXQP, VXT1/A, VXTB, VXU/A, VXU1/A, W1/A, WMA4, WMT8/A, WXE8/A

E-6

CRANKCASE COVER(1)

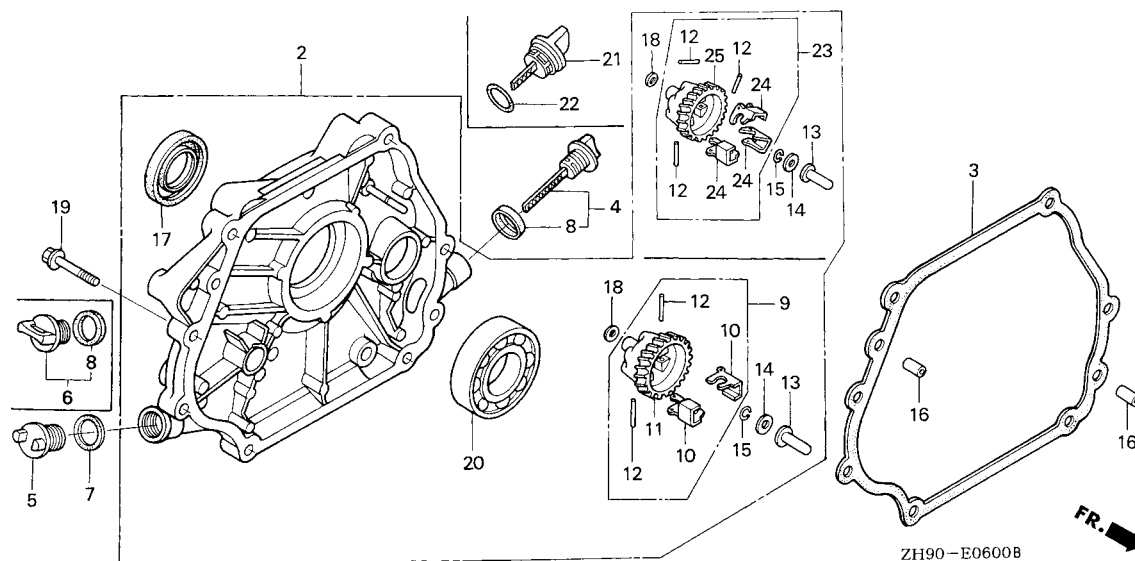

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
13)	16531-ZE2-000	SLIDER, GOVERNOR.....	1	1	-	1832354	ES1, PX, PX26, PXE8, PXU, Q1, QAG2, QD, QE, QH, QH26, QHE4, QHP1, QHQ4, QHR QHR4, QHZ, QKE3, QME2, QMH, QP, QSE, QSE8, QT, QWA4, QWH2, QX, QXB, QXC4, QXC6 QXC9, QXE, QXE4, QXE6, QXE8, QXQ4, QXU, R1, RD, RH26, RHE4, RHQ4, RX, RXQ4, RXU S1, SD, SE, SH, SHQ4, SJG, SMC4, SME1, SME6, SN, SWC4, SX, SXB, SXE, SXE4, SXE8 SXEB, SXQ4, SXU, VN17, VNG1, VPE4, VPE7, VPX4, VSD, VSD3, VWT4, VX, VXB, VXE4 VXE6, VXE8, VXQ4, VXT1, VXU, VXU1, W1, WMT8, WXE8
	16531-Z0A-000		1	1	-	1832355	ES1, PX, PX26, PXE8, PXU, Q1, QAG2, QD, QE, QH, QH26, QHE4, QHP1, QHQ4, QHR QHR4, QHZ, QKE3, QME2, QMH, QP, QSE, QSE8, QT, QWA4, QWH2, QX, QXB, QXC4, QXC6 QXC9, QXE, QXE4, QXE6, QXE8, QXQ4, QXU, R1, RD, RH26, RHE4, RHQ4, RX, RXQ4, RXU S1, SD, SE, SH, SHQ4, SJG, SMC4, SME1, SME6, SN, SWC4, SX, SXB, SXE, SXE4, SXE8 SXEB, SXQ4, SXU, VN17, VNG1, VPE4, VPE7, VPX4, VSD, VSD3, VWT4, VX, VXB, VXE4 VXE6, VXE8, VXQ4, VXT1, VXU, VXU1, W1, WMT8, WXE8
14	90473-147-000	WASHER, 6X16.....	1	1	-	1065525	Q1, R1, S1, SJ, SJP, V1, W1
			1	1	-	1832355	ES1, PX, PX26, PXE8, PXU, Q1, QAG2, QD, QE, QH, QH26, QHE4, QHP1, QHQ4, QHR QHR4, QHZ, QKE3, QME2, QMH, QP, QSE, QSE8, QT, QWA4, QWH2, QX, QXB, QXC4, QXC6 QXC9, QXE, QXE4, QXE6, QXE8, QXQ4, QXU, R1, RD, RH26, RHE4, RHQ4, RX, RXQ4, RXU S1, SD, SE, SH, SHQ4, SJG, SMC4, SME1, SME6, SN, SWC4, SX, SXB, SXE, SXE4, SXE8 SXEB, SXQ4, SXU, VN17, VNG1, VPE4, VPE7, VPX4, VSD, VSD3, VWT4, VX, VXB, VXE4 VXE6, VXE8, VXQ4, VXT1, VXU, VXU1, W1, WMT8, WXE8
			1	-	1	-----	RXP, VPE5, VPK, VPX5, VXP
			1	-	-	1064745	PX, QD, QE, QH, QHC, QHE, QP, QX, QXB, QXC, QXE, QXE8, RD, RH, RHE, RX, SD, SE, SH SHE, SHEZ, SW, SWE, SX, SXB, SXE, SXEB, VH, VNG1, VSD, VSD3, VX, VXB, VXE, VXE8
			1	-	-	1073307	SN
			1	-	-	2134946	VPE4/A, VPX4/A, VXB7/A, VXE7/A

E-6

CRANKCASE COVER(1)

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
15	90602-ZE1-000	CLIP, GOVERNOR HOLDER	1	1	1	-----	ES1, ES1/A, PX, PX/A, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, Q1, Q1/A, QAG2, QAG2/A, QD, QD/A, QE, QE/A, QH, QH/A, QH26, QH26/A, QHB5, QHC, QHE, QHE4, QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A, QKE3, QKE3/A, QKE4, QME2, QME2/A, QMH, QMH/A, QP, QP/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QT, QT/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX, QX/A, QXB, QXB/A, QXB7, QXB7/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXEB, QXK, QXQ4, QXQ4/A, QXU, QXU/A, R1, R1/A, RD, RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A, S1, S1/A, SD, SD/A, SE, SE/A, SH, SH/A, SHE, SHEZ, SHQ4, SHQ4/A, SJ, SJ/A, SJG, SJG/A, SJP, SKE1, SMC4, SMC4/A, SMD, SME1, SME1/A, SME6, SME6/A, SMX2, SN, SN/A, SW, SWA4, SWC4, SWC4/A, SWE, SX, SX/A, SX2, SXB, SXB/A, SXB7, SXB7/A, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4, SXQ4/A, SXU, SXU/A, V1, VAG2, VAG2/A, VD16, VEB6, VH, VKE4, VKK, VKX4, VMA4, VME4, VN17, VN17/A, VNG1, VNG1/A, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPK4, VPK5, VPK7, VPK7/A, VS3, VS37, VS37/A, VS4, VS5, VSD, VSD/A, VSD3, VSD3/A, VSD7, VSD7/A, VSH7, VWT4, VWT4/A, VX, VX/A, VX26, VXB, VXB/A, VXB2, VXB6, VXB7, VXB7/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8/A, VXG, VXX, VXP, VXP/A, VXQ4, VXQ4/A, VXQP, VXT1, VXT1/A, VXTB, VXU, VXU/A, VXU1, VXU1/A, W1, W1/A, WMA4, WMT8, WMT8/A, WXE8, WXE8/A
16	90701-HC4-000	DOWEL PIN, 8X12	2	2	2	-----	ES1, ES1/A, PX, PX/A, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, Q1, Q1/A, QAG2, QAG2/A, QD, QD/A, QE, QE/A, QH, QH/A, QH26, QH26/A, QHB5, QHC, QHE, QHE4, QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A, QKE3, QKE3/A, QKE4, QME2, QME2/A, QMH, QMH/A, QP, QP/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QT, QT/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX, QX/A, QXB, QXB/A, QXB7, QXB7/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXEB, QXK, QXQ4, QXQ4/A, QXU, QXU/A, R1, R1/A, RD, RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A, S1, S1/A, SD, SD/A, SE, SE/A, SH, SH/A, SHE, SHEZ, SHQ4, SHQ4/A, SJ, SJ/A, SJG, SJG/A, SJP, SKE1, SMC4, SMC4/A, SMD, SME1, SME1/A, SME6, SME6/A, SMX2, SN, SN/A, SW, SWA4, SWC4, SWC4/A, SWE, SX, SX/A, SX2, SXB, SXB/A, SXB7, SXB7/A, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4, SXQ4/A, SXU, SXU/A, V1, VAG2, VAG2/A, VD16, VEB6, VH, VKE4, VKK, VKX4, VMA4, VME4, VN17, VN17/A, VNG1, VNG1/A, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPK4, VPK5, VPK7, VPK7/A, VS3, VS37, VS37/A, VS4, VS5, VSD, VSD/A, VSD3, VSD3/A, VSD7, VSD7/A, VSH7, VWT4, VWT4/A, VX, VX/A, VX26, VXB, VXB/A, VXB2, VXB6, VXB7, VXB7/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8/A, VXG, VXX, VXP, VXP/A, VXQ4, VXQ4/A, VXQP, VXT1, VXT1/A, VXTB, VXU, VXU/A, VXU1, VXU1/A, W1, W1/A, WMA4, WMT8, WMT8/A, WXE8, WXE8/A

2

2

80 |


E-6

CRANKCASE COVER(1)

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
18	94101-06800	WASHER, PLAIN, 6MM.....	1	1	1	-----	ES1, ES1/A, PX, PX/A, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, Q1, Q1/A, QAG2, QAG2/A, QD, QD/A, QE, QE/A, QH, QH/A, QH26, QH26/A, QHB5, QHC, QHE, QHE4, QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A, QKE3, QKE3/A, QKE4, QME2, QME2/A, QMH, QMH/A, QP, QP/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QT, QT/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX, QX/A, QXB, QXB/A, QXB7, QXB7/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXE9/A, QXB, QXB/A, QXQ4, QXQ4/A, QXU, QXU/A, R1, R1/A, RD, RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A, S1, S1/A, SD, SD/A, SE, SE/A, SH, SH/A, SHE, SHEZ, SHQ4, SHQ4/A, SJ, SJ/A, SJG, SJG/A, SJP, SKE1, SMC4, SMC4/A, SMD, SME1, SME1/A, SME6, SME6/A, SMX2, SN, SN/A, SW, SWA4, SWC4, SWC4/A, SWE, SX, SX/A, SX2, SXB, SXB/A, SXB7, SXB7/A, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4, SXQ4/A, SXU, SXU/A, V1, VAG2, VAG2/A, VD16, VEB6, VH, VKE4, VKK, VKX4, VMA4, VME4, VN17, VN17/A, VNG1, VNG1/A, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPK4, VPK5, VPK7, VPK7/A, VPS3, VPS37, VPS37/A, VS4, VS5, VSD, VSD/A, VSD3, VSD3/A, VSD7, VSD7/A, VSH7, VSH7/A, VWT4, VWT4/A, VX, VX/A, VX26, VXB, VXB/A, VXB2, VXB6, VXB7, VXB7/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8/A, VXE9, VXE9/A, VXP, VXP/A, VXQ4, VXQ4/A, VXQP, VXT1, VXT1/A, VXTB, VXU, VXU/A, VXU1, VXU1/A, W1, W1/A, WMA4, WMT8, WMT8/A, WXE8, WXE8/A
19	95701-08035-00	BOLT, FLANGE, 8X35.....	7	7	7	-----	ES1, ES1/A, PX, PX/A, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, Q1, Q1/A, QAG2, QAG2/A, QD, QD/A, QE, QE/A, QH, QH/A, QH26, QH26/A, QHB5, QHE4, QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A, QKE3, QKE3/A, QKE4, QME2, QME2/A, QMH, QMH/A, QP, QP/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QT, QT/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX, QX/A, QXB, QXB/A, QXB7, QXB7/A, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXK, QXQ4, QXQ4/A, QXU, QXU/A, R1, R1/A, RD, RD/A, RH26, RH26/A, RHE4, RHE4/A, RHQ4, RHQ4/A, RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A, S1, S1/A, SD, SD/A, SE, SE/A, SH, SH/A, SHQ4, SHQ4/A, SJ, SJ/A, SJG, SJG/A, SKE1, SMC4, SMC4/A, SMD, SME1, SME1/A, SME6, SME6/A, SMX2, SN, SN/A, SWA4, SWC4, SWC4/A, SX, SX/A, SX2, SXB, SXB/A, SXB7, SXB7/A, SXE, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4, SXQ4/A, SXU, SXU/A, VAG2, VAG2/A, VD16, VEB6, VKE4, VKK, VKX4, VMA4, VME4, VN17, VN17/A, VNG1, VNG1/A, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPK4, VPK5, VPK7, VPK7/A, VPS3, VPS37, VPS37/A, VS4, VS5, VSD, VSD/A, VSD3, VSD3/A, VSD7, VSD7/A, VSH7, VSH7/A, VWT4, VWT4/A, VX, VX/A, VX26, VXB, VXB/A, VXB2, VXB6, VXB7, VXB7/A, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8/A, VXE9, VXE9/A, VXP, VXP/A, VXQ4, VXQ4/A, VXQP, VXT1, VXT1/A, VXTB, VXU, VXU/A, VXU1, VXU1/A, W1, W1/A, WMA4, WMT8, WMT8/A, WXE8, WXE8/A
95900-08035-00			7	7	-	-----	Q1, QD, QE, QH, QHC, QHE, QP, QX, QXB, QXC, QXE, QXE8, QXE8/A, QXU, RD, RH, RHE, RX, RXU, S1, SD, SE, SH, SHE, SHEZ, SJ, SJP, SW, SWE, SX, SXB, SXE, SXE8, SXEB, SXU, V1, VH, VNG1, VX, VXB, VXE, VXE8, W1


2

2021.03.20 E

82

E-6-1

CRANKCASE COVER(2)

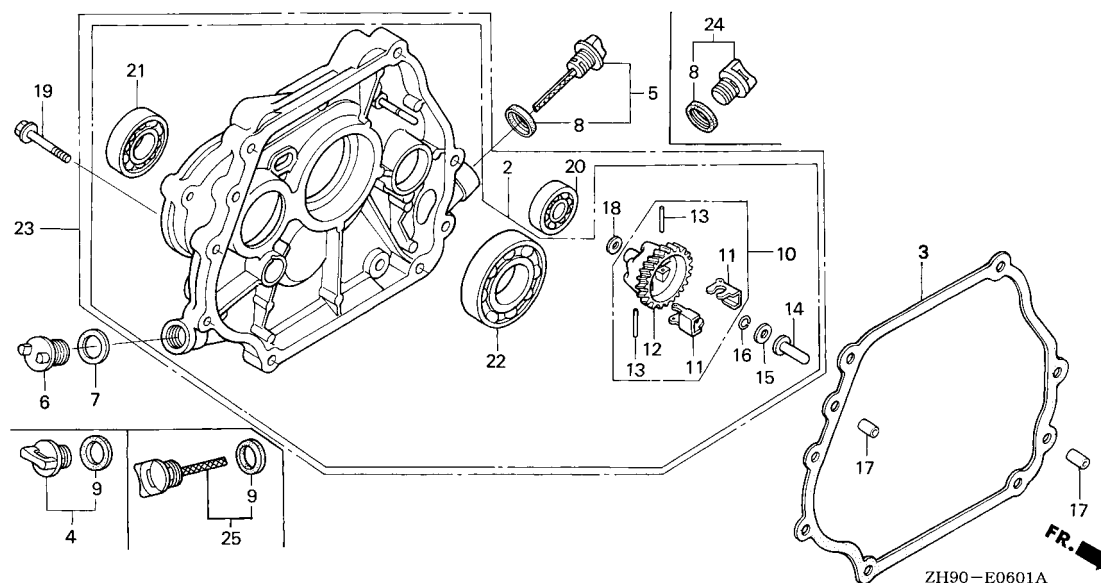


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
3	1101F9	PACKING, CRANKCASE COVER(A) ..	0.3
12		(11)	
	1161A7	HOLDER, GOVERNOR WEIGHT	0.4
14	1161B6	SLIDER, GOVERNOR	0.3
20	1101F5	BEARING, BALANCER WEIGHT :REAR	0.4
21	2141A7	BEARING, POWER TAKE OFF SHAFT :FRONT	0.4
22	1101A6	BEARING, CRANKSHAFT :REAR	0.4
23		(2)	
	1101G0	COVER, CRANKCASE(A)	0.3

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
2	11300-ZE2-612	COVER ASSY., CRANKCASE	1	1	-	-----	L1/A, LH/A, LHB5, LHE/A, LJ/A, LJC/A, LJG/A, LT/A, LW/A, LX/A, LXE/A, LXE8/A, LXQ4/A, LXU/A
	11300-ZE2-610		1	1	-	-----	1832354 L1, LH, LHE, LJ, LJC, LJG, LT, LW, LX, LXE, LXE8, LXQ4, LXU
	11300-ZE2-611		1	1	-	-----	1832355 L1, LH, LHE, LJ, LJC, LJG, LT, LW, LX, LXE, LXE8, LXQ4, LXU
	11300-ZE2-610		1	-	-	-----	LHB1, LHB3, LHQ4, LWD, LX16, LXZ
3	11381-ZE2-801	PACKING, CASE COVER	1	-	-	-----	LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LT, LT/A, LTJ, LW, LW/A, LWD, LWD1, LWD1/A, LX, LX/A, LX16, LXE, LXE/A, LXE8, LXE8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ
			-	(1)	-	-----	L1, L1/A
4	15600-ZG4-003	CAP ASSY., OIL FILLER	1	1	-	-----	L1/A, LH/A, LHB1, LHB3, LHB5, LHE/A, LHQ4, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LT, LT/A, LTJ, LW, LW/A, LX/A, LX16, LXE, LXE/A, LXE8, LXE8/A, LXQ4, LXQ4/A, LXU, LXU/A
			1	1	-	-----	1071799 L1, LH, LHE, LJ, LW, LWD, LX, LXZ
5	15600-735-003	CAP ASSY., OIL FILLER	1	-	-	-----	LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LT, LT/A, LTJ, LW, LW/A, LWD, LX, LX/A, LX16, LXE, LXE/A, LXE8, LXE8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ
			-	(1)	-	-----	L1, L1/A
6	15620-ZG4-910	CAP, OIL FILLER	1	1	-	-----	1071798 L1, LH, LHE, LJ, LW, LWD, LX, LXZ
7	15621-896-010	PACKING, OIL FILLER CAP	1	1	-	-----	1071798 L1, LH, LHE, LJ, LW, LWD, LX, LXZ
8	15625-ZE1-003	PACKING, OIL FILLER CAP	1	-	-	-----	LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LT, LT/A, LTJ, LW, LW/A, LWD, LWD1, LWD1/A, LX, LX/A, LX16, LXE, LXE/A, LXE8, LXE8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ
			-	(1)	-	-----	L1, L1/A

E-6-1


CRANKCASE COVER(2)

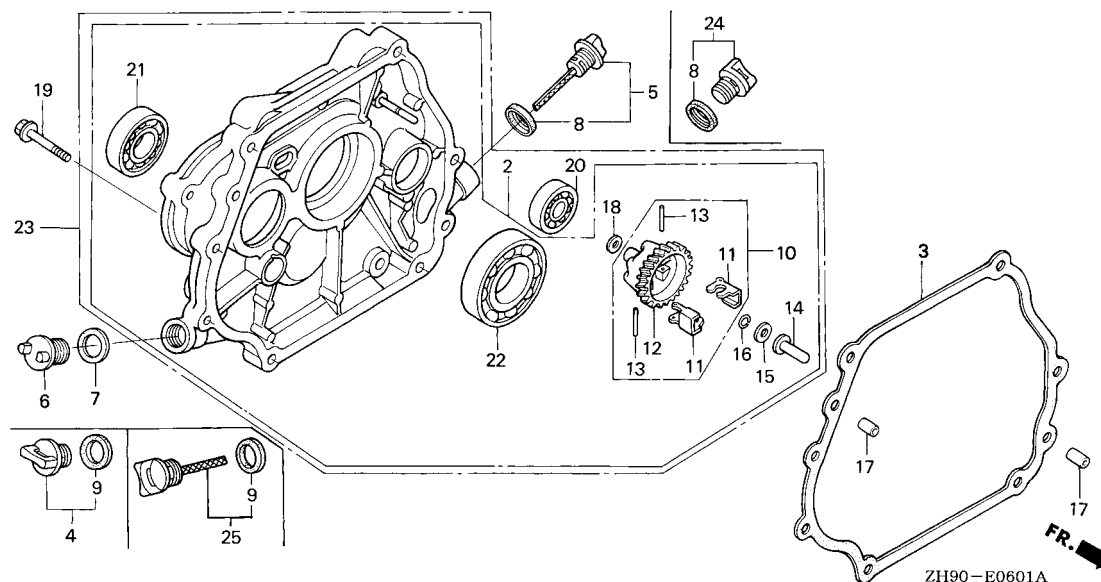

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
9	15625-ZE1-003	PACKING, OIL FILLER CAP.....	1	-	-	-	LH/A, LHB1, LHB3, LHB5, LHE/A, LHQ4, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LT LT/A, LTJ, LW/A, LWD1, LWD1/A, LX/A, LX16, LXE, LXE/A, LXE8, LXE8/A, LXQ4 LXQ4/A, LXU, LXU/A
			1	-	-	1071799	LH, LHE, LJ, LW, LWD, LX, LXZ
			-	(1)	-	-	L1/A
			-	(1)	-	1071799	L1
10	16510-ZE2-000	GOVERNOR ASSY.	1	-	-	-	LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LJ, LJ/A, LJC, LJC/A, LJG, LJG/A LT, LT/A, LW, LW/A, LWD, LX, LX/A, LX16, LXE, LXE/A, LXE8, LXE8/A, LXQ4 LXQ4/A, LXU, LXU/A, LXZ
	16510-ZE2-811		1	-	-	-	LSS, LTJ, LWD1, LWD1/A
	16510-ZE2-000		-	(1)	-	-	L1, L1/A
11	16511-ZE2-000	WEIGHT, GOVERNOR.....	2	2	-	-	L1, L1/A, LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LJ, LJ/A, LJC, LJC/A LJG, LJG/A, LSS, LT, LT/A, LTJ, LW, LW/A, LWD, LWD1, LWD1/A, LX, LX/A, LX16 LXE, LXE/A, LXE8, LXE8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ
12	16512-ZE2-000	HOLDER, GOVERNOR WEIGHT.....	1	1	-	-	L1, L1/A, LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LJ, LJ/A, LJC, LJC/A LJG, LJG/A, LT, LT/A, LW, LW/A, LWD, LX, LX/A, LX16, LXE, LXE/A, LXE8, LXE8/A LXQ4, LXQ4/A, LXU, LXU/A, LXZ
	16512-ZE2-811		1	-	-	-	LSS, LTJ, LWD1, LWD1/A
13	16513-ZE2-000	PIN, GOVERNOR WEIGHT.....	2	2	-	-	L1, L1/A, LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LJ, LJ/A, LJC, LJC/A LJG, LJG/A, LSS, LT, LT/A, LTJ, LW, LW/A, LWD, LWD1, LWD1/A, LX, LX/A, LX16 LXE, LXE/A, LXE8, LXE8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ
14	16531-Z0A-000	SLIDER, GOVERNOR.....	1	1	-	-	L1/A, LH/A, LHB1, LHB3, LHB5, LHE/A, LHQ4, LJ/A, LJC/A, LJG/A, LSS, LT/A, LTJ LW/A, LWD, LWD1/A, LX/A, LX16, LXE/A, LXE8/A, LXQ4/A, LXU/A, LXZ
	16531-ZE2-000		1	1	-	1832354	L1, LH, LHE, LJ, LJC, LJG, LT, LW, LWD1, LX, LXE, LXE8, LXQ4, LXU
	16531-Z0A-000		1	1	-	1832355	L1, LH, LHE, LJ, LJC, LJG, LT, LW, LWD1, LX, LXE, LXE8, LXQ4, LXU
15	90473-147-000	WASHER, 6X16.....	1	1	-	-	L1, LJ, LWD
			1	1	-	1832355	L1, LH, LHE, LJ, LJC, LJG, LT, LW, LWD1, LX, LXE, LXE8, LXQ4, LXU
			1	-	-	1064745	LH, LHE, LW, LX, LXZ

E-6-1


CRANKCASE COVER(2)

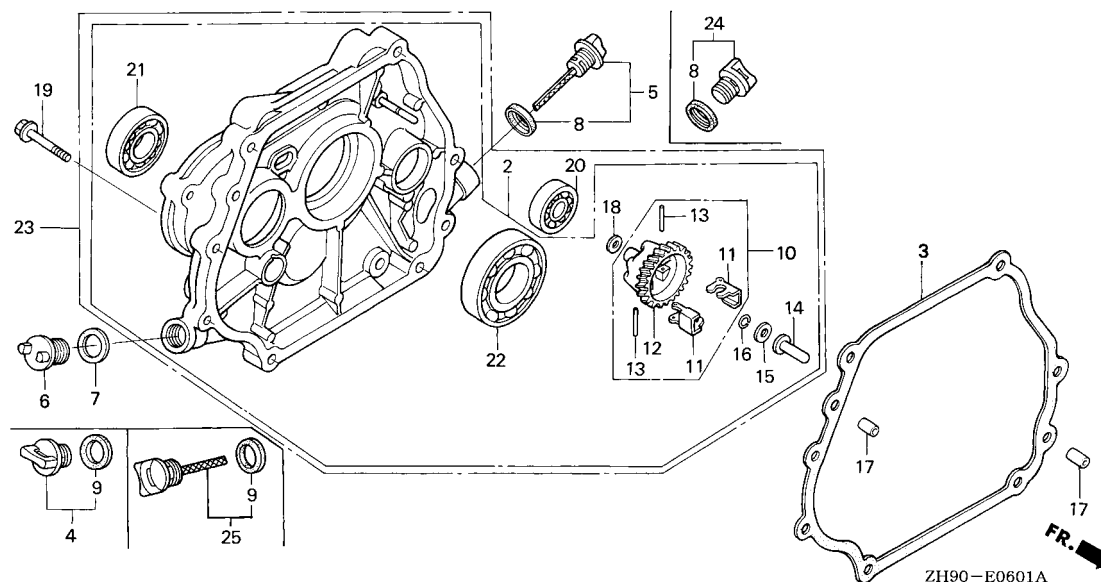

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
16	90602-ZE1-000	CLIP, GOVERNOR HOLDER	1	1	-	-----	L1, L1/A, LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LT, LT/A, LTJ, LW, LW/A, LWD, LWD1, LWD1/A, LX, LX/A, LX16, LXE, LXE/A, LX8, LX8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ
17	90701-HC4-000	DOWEL PIN, 8X12	2	2	-	-----	L1, L1/A, LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LT, LT/A, LTJ, LW, LW/A, LWD, LWD1, LWD1/A, LX, LX/A, LX16, LXE, LXE/A, LX8, LX8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ
18	94101-06800	WASHER, PLAIN, 6MM	1	1	-	-----	L1, L1/A, LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LT, LT/A, LTJ, LW, LW/A, LWD, LWD1, LWD1/A, LX, LX/A, LX16, LXE, LXE/A, LX8, LX8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ
19	95900-08035-00 95701-08035-00	BOLT, FLANGE, 8X35	7	7	-	-----	L1, LH, LHE, LJ, LW, LX, LXU, LXZ
			7	7	-	-----	L1/A, LH/A, LHB1, LHB3, LHB5, LHE/A, LHQ4, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LT, LT/A, LTJ, LW/A, LWD, LWD1, LWD1/A, LX/A, LX16, LXE, LXE/A, LX8, LX8/A, LXQ4, LXQ4/A, LXU/A
20	96100-62020-00	BEARING, RADIAL BALL, 6202 ...	1	-	-	-----	LSS, LTJ, LWD1, LWD1/A
21	96100-62040-00	BEARING, RADIAL BALL, 6204 ...	1	1	-	-----	L1, L1/A, LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LT, LT/A, LTJ, LW, LW/A, LWD, LWD1, LWD1/A, LX, LX/A, LX16, LXE, LXE/A, LX8, LX8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ
22	96100-62060-00	BEARING, RADIAL BALL, 6206 ...	1	1	-	-----	L1, L1/A, LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LT, LT/A, LTJ, LW, LW/A, LWD, LWD1, LWD1/A, LX, LX/A, LX16, LXE, LXE/A, LX8, LX8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ
23	11400-ZE2-611 11400-ZE2-613 11400-ZE2-611 11400-ZE2-612	COVER ASSY., CRANKCASE	1	-	-	-----	LSS, LTJ
			1	-	-	-----	LWD1/A
			1	-	-	1832354	LWD1
			1	-	-	1832355	LWD1
24	15600-ZG4-003	CAP ASSY., OIL FILLER	1	-	-	-----	LWD1, LWD1/A
25	15600-735-003	CAP ASSY., OIL FILLER	1	-	-	-----	LWD1, LWD1/A

E-6-2

CRANKCASE COVER(3)

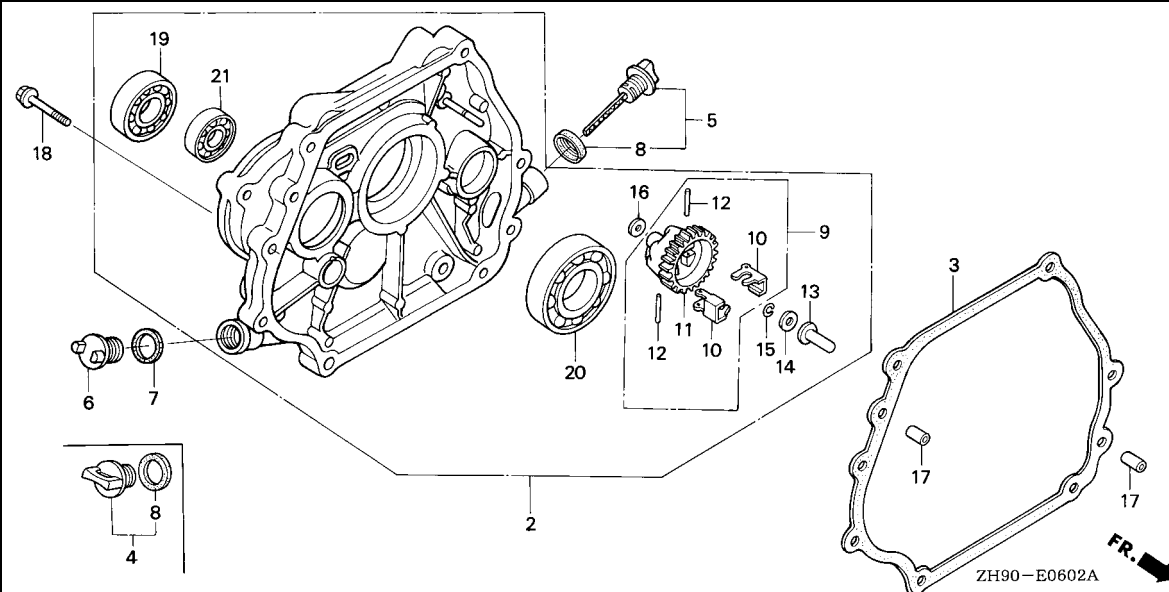


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
2	1101G0	COVER, CRANKCASE(A)	0.3
3	1101F9	PACKING, CRANKCASE COVER(A) ..	0.3
11	1161A7	HOLDER, GOVERNOR WEIGHT	0.4
13	1161B6	SLIDER, GOVERNOR	0.3
19	2141A7	BEARING, POWER TAKE OFF SHAFT :FRONT	0.4
20	1101A6	BEARING, CRANKSHAFT :REAR	0.4
21	2101U3	BEARING, COUNTERSHAFT :FRONT .	0.4

Ref. No.	Part No.	Description	Reqd. QTY	Serial No.	Parts catalogue code
			(1) (2) (3)		
2	11300-ZE2-620	COVER ASSY., CRANKCASE	1	-	HH
	11300-ZE2-622		1	-	HX/A, HX26/A, HX8/A, HXQ4/A
	11300-ZE2-620		1	-	1832354 HX, HX26, HX8, HXQ4
	11300-ZE2-621		1	-	1832355 HX, HX26, HX8, HXQ4
3	11381-ZE2-801	PACKING, CASE COVER	1	-	HH, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A
4	15600-ZG4-003	CAP ASSY., OIL FILLER	1	-	HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A
			1	-	1071799 HH, HX
5	15600-735-003	CAP ASSY., OIL FILLER	1	-	HH, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A
6	15620-ZG4-910	CAP, OIL FILLER	1	-	1071798 HH, HX
7	15621-896-010	PACKING, OIL FILLER CAP	1	-	1071798 HH, HX
8	15625-ZE1-003	PACKING, OIL FILLER CAP	2	-	HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A
			1	-	1071798 HH, HX
			2	-	1071799 HH, HX
9	16510-ZE2-000	GOVERNOR ASSY.	1	-	HH, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A
10	16511-ZE2-000	WEIGHT, GOVERNOR	2	-	HH, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A
11	16512-ZE2-000	HOLDER, GOVERNOR WEIGHT	1	-	HH, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A
12	16513-ZE2-000	PIN, GOVERNOR WEIGHT	2	-	HH, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A
13	16531-Z0A-000	SLIDER, GOVERNOR	1	-	HH, HX/A, HX26/A, HX8/A, HXQ4/A
	16531-ZE2-000		1	-	1832354 HX, HX26, HX8, HXQ4
	16531-Z0A-000		1	-	1832355 HX, HX26, HX8, HXQ4
14	90473-147-000	WASHER, 6X16	1	-	1064745 HH
			1	-	1832355 HX, HX26, HX8, HXQ4
15	90602-896-000	CLIP, GOVERNOR HOLDER	1	-	HH, HX, HX8
	90602-ZE1-000		1	-	HX/A, HX26, HX26/A, HX8/A, HXQ4, HXQ4/A
16	94101-06800	WASHER, PLAIN, 6MM	1	-	HH, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A
17	94301-08140	DOWEL PIN, 8X14	2	-	HH, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A


E-6-2

CRANKCASE COVER(3)

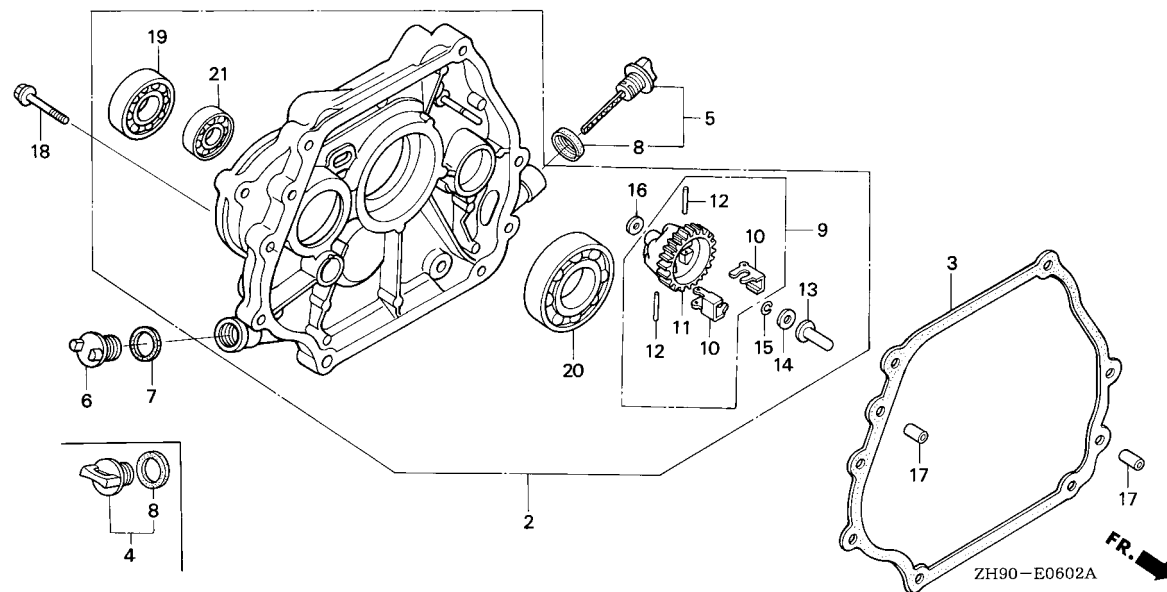

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
18	95900-08035-00	BOLT, FLANGE, 8X35.....	7	-	-	HH, HX, HX8	
	95701-08035-00		7	-	-	HX/A, HX26, HX26/A, HX8/A, HXQ4, HXQ4/A	
19	96100-62040-00	BEARING, RADIAL BALL, 6204...	1	-	-	HH, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A	
20	96100-62060-00	BEARING, RADIAL BALL, 6206...	1	-	-	HH, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A	
21	96100-63020-00	BEARING, RADIAL BALL, 6302...	1	-	-	HH, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A	

ZH90-E0603A

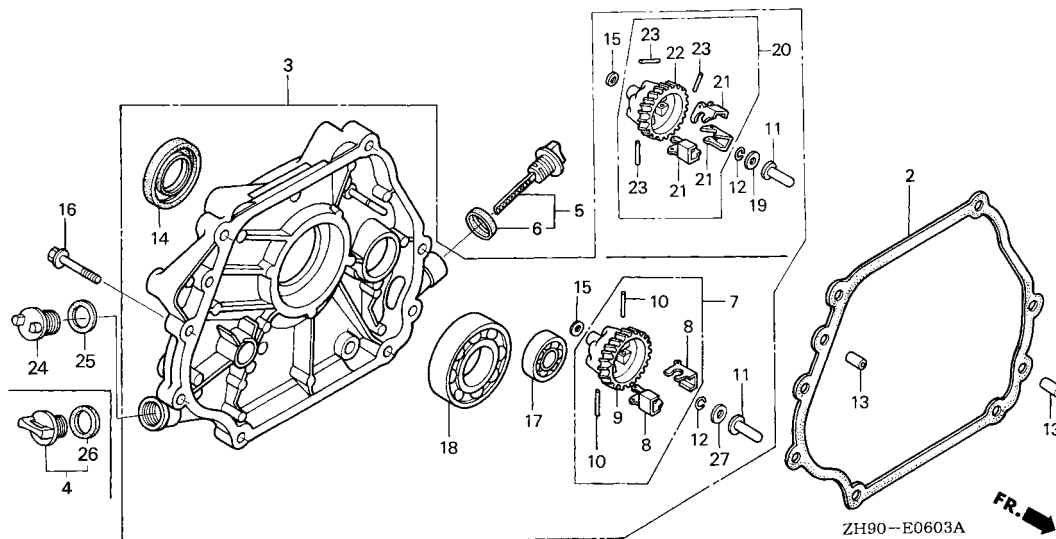

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
2	1101F9	PACKING, CRANKCASE COVER(A) ..	0.3
3	1101G0	COVER, CRANKCASE(A)	0.3
9		(8,21,22)	
	1161A7	SLIDER, GOVERNOR WEIGHT	0.4
11	1161B6	SLIDER, GOVERNOR	0.3
14	1101E5	OIL SEAL, CRANKSHAFT :REAR ...	0.3
17	1101F5	BEARING, BALANCER WEIGHT :REAR	0.4
18	1101A6	BEARING, CRANKSHAFT :REAR ...	0.4

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			GX270				
			(1)	(2)	(3)		
2	11381-ZE2-801	PACKING, CASE COVER	1	-	-	-----	PA, PA2, PA2/A, PAE2, PAE2/A, QA, QA2, QA2/A, QAB1, QAB3, QAB3/A, QAE, QAE2 QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAQ, QAQ4, QAQ4/A, QAR2, QAR2/A, QAW QAW/A, QL2, QSC, QSC9, QSC9/A, QX26, QX26/A, QXB6, QXB6/A, RA, RA2, RA2/A RA3, RSC2, RSC2/A, RSS, RSS/A, SK, VA, VA2, VA2/A, VAW, VAW1, VDE, VDE2 VDE2/A, VKB2, VKB2/A, VM2, VM2/A, VME2, VME2/A, VMS2, VMX2, VNT2, VNT2/A VW12, VW12/A, VW22, VWA, VWA2, VWA2/A, VWN2, VWN2/A
			-	(1)	-	-----	Q2
3	11400-ZE2-601	COVER ASSY., CRANKCASE	1	1	-	-----	PA, Q2, QA, QAB1, QAE, QAQ, QL2, QSC, VA, VAW, VAW1, VDE, VW22, VWA
	11400-ZE2-603		1	-	-	-----	PA2/A, PAE2/A, QA2/A, QAB3/A, QAE2/A, QAE6/A, QAG/A, QAQ4/A, QAR2/A, QAW/A QSC9/A, QX26/A, QXB6/A, VA2/A, VDE2/A, VNT2/A, VW12/A, VWA2/A, VWN2/A
	11400-ZE2-010		1	-	-	-----	RA, SK
	11400-ZE2-030		1	-	-	-----	RA2/A, RA3, RSC2/A, RSS/A
	11400-ZE2-671		1	-	-	-----	VKB2/A, VM2/A, VME2/A, VMS2, VMX2
	11400-ZE2-601		1	-	-	-----	1304886 VME2
			1	-	-	-----	1368686 VM2
			1	-	-	-----	1832354 PA2, PAE2, QA2, QAB3, QAE2, QAE6, QAG, QAQ4, QAR2, QAW, QSC9, QX26, QXB6, VA2 VDE2, VNT2, VW12, VWA2, VWN2
	11400-ZE2-010		1	-	-	-----	1832354 RA2, RSC2, RSS
	11400-ZE2-670		1	-	-	-----	1832354 VKB2
			1	-	-	1304887	1832354 VME2
			1	-	-	1368687	1832354 VM2
	11400-ZE2-602		1	-	-	1832355	----- PA2, PAE2, QA2, QAB3, QAE2, QAE6, QAG, QAQ4, QAR2, QAW, QSC9, QX26, QXB6, VA2 VDE2, VNT2, VW12, VWA2, VWN2
	11400-ZE2-020		1	-	-	1832355	----- RA2, RSC2, RSS
	11400-ZE2-671		1	-	-	1832355	----- VKB2, VM2, VME2


E-6-3

CRANKCASE COVER(4)

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
4	15600-ZG4-003	CAP ASSY., OIL FILLER.....	1	1	-	1071799	----- PA, PA2, Q2, QA, QA2, QAE, QAE2, QAQ, QSC, RA, RA2, SK, VA, VA2, VAW, VWA PA2/A, PAE2, PAE2/A, QA2/A, QAB1, QAB3, QAB3/A, QAE2/A, QAE6, QAE6/A, QAG QAG/A, QAQ4, QAQ4/A, QAR2, QAR2/A, QAW, QAW/A, QL2, QSC9, QSC9/A, QX26 QX26/A, QXB6, QXB6/A, RA2/A, RA3, RSC2, RSC2/A, RSS, RSS/A, VA2/A, VAW1, VDE VDE2, VDE2/A, VKB2, VKB2/A, VM2, VM2/A, VME2, VME2/A, VMS2, VMX2, VNT2 VNT2/A, VW12, VW12/A, VW22, VWA2, VWA2/A, VWN2, VWN2/A
5	15600-735-003	CAP ASSY., OIL FILLER.....	1	-	-	-----	----- PA, PA2, PA2/A, PAE2, PAE2/A, QA, QA2, QA2/A, QAB1, QAB3, QAB3/A, QAE, QAE2 QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAQ, QAQ4, QAQ4/A, QAR2, QAR2/A, QAW QAW/A, QL2, QSC, QSC9, QSC9/A, QX26, QX26/A, QXB6, QXB6/A, RA, RA2, RA2/A RA3, RSC2, RSC2/A, RSS, RSS/A, SK, VA, VA2, VA2/A, VAW, VAW1, VDE, VDE2 VDE2/A, VKB2, VKB2/A, VM2, VM2/A, VME2, VME2/A, VMS2, VMX2, VNT2, VNT2/A VW12, VW12/A, VW22, VWA, VWA2, VWA2/A, VWN2, VWN2/A
			-	(1)	-	-----	----- Q2
6	15625-ZE1-003	PACKING, OIL FILLER CAP.....	1	-	-	-----	----- PA, PA2, PA2/A, PAE2, PAE2/A, QA, QA2, QA2/A, QAB1, QAB3, QAB3/A, QAE, QAE2 QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAQ, QAQ4, QAQ4/A, QAR2, QAR2/A, QAW QAW/A, QL2, QSC, QSC9, QSC9/A, QX26, QX26/A, QXB6, QXB6/A, RA, RA2, RA2/A RA3, RSC2, RSC2/A, RSS, RSS/A, SK, VA, VA2, VA2/A, VAW, VAW1, VDE, VDE2 VDE2/A, VKB2, VKB2/A, VM2, VM2/A, VME2, VME2/A, VMS2, VMX2, VNT2, VNT2/A VW12, VW12/A, VW22, VWA, VWA2, VWA2/A, VWN2, VWN2/A
			-	(1)	-	-----	----- Q2
7	16510-ZE2-811	GOVERNOR ASSY.	1	1	-	-----	----- PA, PA2, PA2/A, PAE2, PAE2/A, Q2, QA, QA2, QA2/A, QAB1, QAB3, QAB3/A, QAE QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAQ, QAQ4, QAQ4/A, QAR2, QAR2/A, QAW QAW/A, QL2, QSC, QSC9, QSC9/A, QX26, QX26/A, QXB6, QXB6/A, RA, RA2, RA2/A RA3, RSC2, RSC2/A, RSS, RSS/A, SK, VA, VA2, VA2/A, VAW, VAW1, VDE, VDE2 VDE2/A, VNT2, VNT2/A, VW12, VW12/A, VW22, VWA, VWA2, VWA2/A, VWN2, VWN2/A
			1	-	-	-----	----- 1304886 VME2
			1	-	-	-----	----- 1368686 VM2
8	16511-ZE2-000	WEIGHT, GOVERNOR.....	2	2	-	-----	----- PA, PA2, PA2/A, PAE2, PAE2/A, Q2, QA, QA2, QA2/A, QAB1, QAB3, QAB3/A, QAE QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAQ, QAQ4, QAQ4/A, QAR2, QAR2/A, QAW QAW/A, QL2, QSC, QSC9, QSC9/A, QX26, QX26/A, QXB6, QXB6/A, RA, RA2, RA2/A RA3, RSC2, RSC2/A, RSS, RSS/A, SK, VA, VA2, VA2/A, VAW, VAW1, VDE, VDE2 VDE2/A, VNT2, VNT2/A, VW12, VW12/A, VW22, VWA, VWA2, VWA2/A, VWN2, VWN2/A
			2	-	-	-----	----- 1304886 VME2
			2	-	-	-----	----- 1368686 VM2
9	16512-ZE2-811	HOLDER, GOVERNOR WEIGHT.....	1	1	-	-----	----- PA, PA2, PA2/A, PAE2, PAE2/A, Q2, QA, QA2, QA2/A, QAB1, QAB3, QAB3/A, QAE QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAQ, QAQ4, QAQ4/A, QAR2, QAR2/A, QAW QAW/A, QL2, QSC, QSC9, QSC9/A, QX26, QX26/A, QXB6, QXB6/A, RA, RA2, RA2/A RA3, RSC2, RSC2/A, RSS, RSS/A, SK, VA, VA2, VA2/A, VAW, VAW1, VDE, VDE2 VDE2/A, VNT2, VNT2/A, VW12, VW12/A, VW22, VWA, VWA2, VWA2/A, VWN2, VWN2/A
			1	-	-	-----	----- 1304886 VME2
			1	-	-	-----	----- 1368686 VM2
10	16513-ZE2-000	PIN, GOVERNOR WEIGHT.....	2	2	-	-----	----- PA, PA2, PA2/A, PAE2, PAE2/A, Q2, QA, QA2, QA2/A, QAB1, QAB3, QAB3/A, QAE QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAQ, QAQ4, QAQ4/A, QAR2, QAR2/A, QAW QAW/A, QL2, QSC, QSC9, QSC9/A, QX26, QX26/A, QXB6, QXB6/A, RA, RA2, RA2/A RA3, RSC2, RSC2/A, RSS, RSS/A, SK, VA, VA2, VA2/A, VAW, VAW1, VDE, VDE2 VDE2/A, VNT2, VNT2/A, VW12, VW12/A, VW22, VWA, VWA2, VWA2/A, VWN2, VWN2/A
			2	-	-	-----	----- 1304886 VME2
			2	-	-	-----	----- 1368686 VM2
11	16531-Z0A-000	SLIDER, GOVERNOR.....	1	1	-	-----	----- PA, PA2/A, PAE2/A, Q2, QA, QA2/A, QAB1, QAB3, QAB3/A, QAE, QAE2/A, QAE6/A, QAG/A QAQ, QAQ4/A, QAR2/A, QAW/A, QL2, QSC, QSC9/A, QX26/A, QXB6/A, RA, RA2/A, RA3 RSC2/A, RSS/A, SK, VA, VA2/A, VAW, VAW1, VDE, VDE2/A, VKB2/A, VM2/A, VME2/A VMS2, VMX2, VNT2/A, VW12/A, VW22, VWA, VWA2/A, VWN2/A
	16531-ZE2-000		1	-	-	-----	----- 1832354 PA2, PAE2, QA2, QAB3, QAE2, QAE6, QAG, QAQ4, QAR2, QAW, QSC9, QX26, QXB6, RA2 RSC2, RSS, VA2, VDE2, VKB2, VM2, VME2, VNT2, VW12, VWA2, VWN2
	16531-Z0A-000		1	-	-	1832355	----- PA2, PAE2, QA2, QAB3, QAE2, QAE6, QAG, QAQ4, QAR2, QAW, QSC9, QX26, QXB6, RA2 RSC2, RSS, VA2, VDE2, VKB2, VM2, VME2, VNT2, VW12, VWA2, VWN2

E-6-3

CRANKCASE COVER(4)

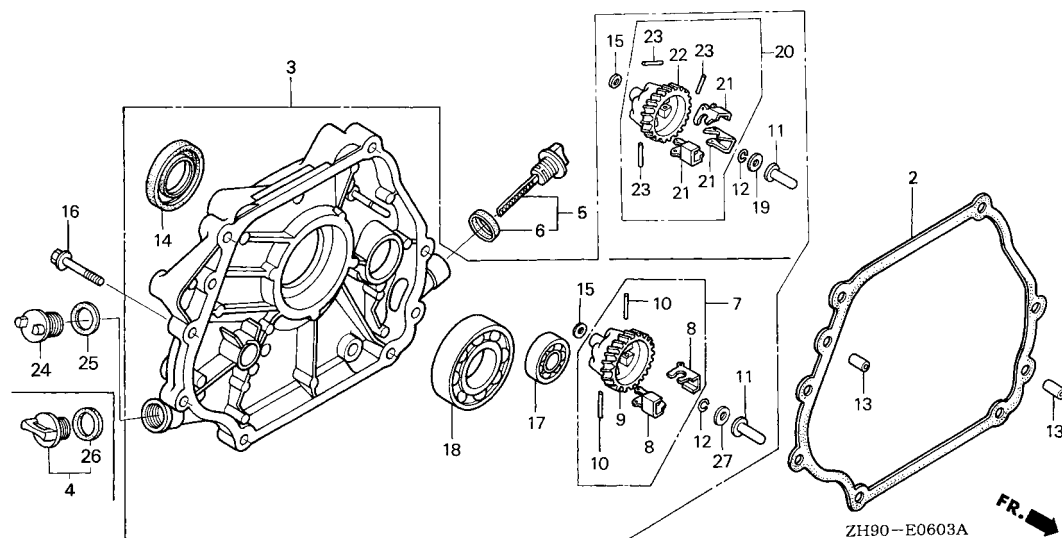

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
12	90602-ZE1-000	CLIP, GOVERNOR HOLDER	1	1	-	-----	PA, PA2, PA2/A, PAE2, PAE2/A, Q2, QA, QA2, QA2/A, QAB1, QAB3, QAB3/A, QAE QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAQ, QAQ4, QAQ4/A, QAR2, QAR2/A, QAW QAW/A, QL2, QSC, QSC9, QSC9/A, QX26, QX26/A, QXB6, QXB6/A, RA, RA2, RA2/A RA3, RSC2, RSC2/A, RSS, RSS/A, SK, VA, VA2, VA2/A, VAW, VAW1, VDE, VDE2 VDE2/A, VKB2, VKB2/A, VM2, VM2/A, VME2, VME2/A, VMS2, VMX2, VNT2, VNT2/A VW12, VW12/A, VW22, VWA, VWA2, VWA2/A, VWN2, VWN2/A
	90602-896-000		(1)	-	-	-----	PA, PA2, PA2/A, PAE2, PAE2/A, QA, QA2, QA2/A, QAB1, QAB3, QAB3/A, QAE, QAE2 QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAQ4, QAQ4/A, QAR2, QAR2/A, QAW, QAW/A QX26, QX26/A, RA, RA2, RA2/A, RA3, RSC2, RSC2/A, RSS, RSS/A, SK, VA, VA2 VA2/A, VAW, VAW1, VDE, VDE2, VDE2/A, VKB2, VKB2/A, VNT2, VNT2/A, VW12 VW12/A, VW22, VWA, VWA2, VWA2/A, VWN2, VWN2/A
			(1)	-	-	-----	1304886 VME2
			(1)	-	-	-----	1368686 VM2
13	90701-HC4-000	DOWEL PIN, 8X12	2	2	-	-----	PA, PA2, PA2/A, PAE2, PAE2/A, Q2, QA, QA2, QA2/A, QAB1, QAB3, QAB3/A, QAE QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAQ, QAQ4, QAQ4/A, QAR2, QAR2/A, QAW QAW/A, QL2, QSC, QSC9, QSC9/A, QX26, QX26/A, QXB6, QXB6/A, RA, RA2, RA2/A RA3, RSC2, RSC2/A, RSS, RSS/A, SK, VA, VA2, VA2/A, VAW, VAW1, VDE, VDE2 VDE2/A, VKB2, VKB2/A, VM2, VM2/A, VME2, VME2/A, VMS2, VMX2, VNT2, VNT2/A VW12, VW12/A, VW22, VWA, VWA2, VWA2/A, VWN2, VWN2/A
14	91201-890-003	OIL SEAL, 30X46X8	1	1	-	-----	PA, PA2, PA2/A, PAE2, PAE2/A, Q2, QA, QA2, QA2/A, QAB1, QAB3, QAB3/A, QAE QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAQ, QAQ4, QAQ4/A, QAR2, QAR2/A, QAW QAW/A, QL2, QSC, QSC9, QSC9/A, QX26, QX26/A, QXB6, QXB6/A, RA, RA2, RA2/A RA3, RSC2, RSC2/A, RSS, RSS/A, SK, VA, VA2, VA2/A, VAW, VAW1, VDE, VDE2 VDE2/A, VKB2, VKB2/A, VM2, VM2/A, VME2, VME2/A, VMS2, VMX2, VNT2, VNT2/A VW12, VW12/A, VW22, VWA, VWA2, VWA2/A, VWN2, VWN2/A

E-6-3


CRANKCASE COVER(4)

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
15	94101-06800	WASHER, PLAIN, 6MM	1	1	-	-----	PA, PA2, PA2/A, PAE2, PAE2/A, Q2, QA, QA2, QA2/A, QAB1, QAB3, QAB3/A, QAE QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAQ, QAQ4, QAQ4/A, QAR2, QAR2/A, QAW QAW/A, QL2, QSC, QSC9, QSC9/A, QX26, QX26/A, QXB6, QXB6/A, RA, RA2, RA2/A RA3, RSC2, RSC2/A, RSS, RSS/A, SK, VA, VA2, VA2/A, VAW, VAW1, VDE, VDE2 VDE2/A, VKB2, VKB2/A, VM2, VM2/A, VME2, VME2/A, VMS2, VMX2, VNT2, VNT2/A VW12, VW12/A, VW22, VWA, VWA2, VWA2/A, VWN2, VWN2/A
16	95701-08035-00	BOLT, FLANGE, 8X35	7	7	-	-----	PA2, PA2/A, PAE2, PAE2/A, Q2, QA2, QA2/A, QAB1, QAB3, QAB3/A, QAE2, QAE2/A QAE6, QAE6/A, QAG, QAG/A, QAQ, QAQ4, QAQ4/A, QAR2, QAR2/A, QAW, QAW/A, QL2 QSC, QSC9, QSC9/A, QX26, QX26/A, QXB6, QXB6/A, RA2, RA2/A, RA3, RSC2, RSC2/A RSS, RSS/A, VA2, VA2/A, VAW1, VDE, VDE2, VDE2/A, VKB2, VKB2/A, VM2, VM2/A VME2, VME2/A, VMS2, VMX2, VNT2, VNT2/A, VW12, VW12/A, VW22, VWA, VWA2 VWA2/A, VWN2, VWN2/A
95900-08035-00			7	-	-	-----	PA, QA, QAE, RA, SK, VA, VAW
17	96100-62020-00	BEARING, RADIAL BALL, 6202 ...	1	1	-	-----	PA, PA2, PA2/A, PAE2, PAE2/A, Q2, QA, QA2, QA2/A, QAB1, QAB3, QAB3/A, QAE QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAQ, QAQ4, QAQ4/A, QAR2, QAR2/A, QAW QAW/A, QL2, QSC, QSC9, QSC9/A, QX26, QX26/A, QXB6, QXB6/A, RA, RA2, RA2/A RA3, RSC2, RSC2/A, RSS, RSS/A, SK, VA, VA2, VA2/A, VAW, VAW1, VDE, VDE2 VDE2/A, VKB2, VKB2/A, VM2, VM2/A, VME2, VME2/A, VMS2, VMX2, VNT2, VNT2/A VW12, VW12/A, VW22, VWA, VWA2, VWA2/A, VWN2, VWN2/A
18	96100-62060-00	BEARING, RADIAL BALL, 6206 ...	1	1	-	-----	PA, PA2, PA2/A, PAE2, PAE2/A, Q2, QA, QA2, QA2/A, QAB1, QAB3, QAB3/A, QAE QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAQ, QAQ4, QAQ4/A, QAR2, QAR2/A, QAW QAW/A, QL2, QSC, QSC9, QSC9/A, QX26, QX26/A, QXB6, QXB6/A, RA, RA2, RA2/A RA3, RSC2, RSC2/A, RSS, RSS/A, SK, VA, VA2, VA2/A, VAW, VAW1, VDE, VDE2 VDE2/A, VKB2, VKB2/A, VM2, VM2/A, VME2, VME2/A, VMS2, VMX2, VNT2, VNT2/A VW12, VW12/A, VW22, VWA, VWA2, VWA2/A, VWN2, VWN2/A
19	90473-147-000	WASHER, 6X16	1	-	-	-----	VKB2, VKB2/A, VM2/A, VME2/A, VMS2, VMX2
			1	-	-	1304887	VME2
			1	-	-	1368687	VM2
20	16510-ZE3-000	GOVERNOR ASSY.	1	-	-	-----	VKB2, VKB2/A, VM2/A, VME2/A, VMS2, VMX2
			1	-	-	1304887	VME2
			1	-	-	1368687	VM2
21	16511-ZE8-000	WEIGHT, GOVERNOR	3	-	-	-----	VKB2, VKB2/A, VM2/A, VME2/A, VMS2, VMX2
			3	-	-	1304887	VME2
			3	-	-	1368687	VM2
22	16512-ZE3-000	HOLDER, GOVERNOR WEIGHT	1	-	-	-----	VKB2, VKB2/A, VM2/A, VME2/A, VMS2, VMX2
			1	-	-	1304887	VME2
			1	-	-	1368687	VM2
23	16513-ZE2-000	PIN, GOVERNOR WEIGHT	3	-	-	-----	VKB2, VKB2/A, VM2/A, VME2/A, VMS2, VMX2
			3	-	-	1304887	VME2
			3	-	-	1368687	VM2
24	15620-ZG4-910	CAP, OIL FILLER	1	1	-	-----	1071798 PA, PA2, Q2, QA, QA2, QAE, QAE2, QAQ, QSC, RA, RA2, SK, VA, VA2, VAW, VWA
25	15621-896-010	PACKING, OIL FILLER CAP	1	1	-	-----	1071798 PA, PA2, Q2, QA, QA2, QAE, QAE2, QAQ, QSC, RA, RA2, SK, VA, VA2, VAW, VWA
26	15625-ZE1-003	PACKING, OIL FILLER CAP	1	1	-	1071799	----- PA, PA2, Q2, QA, QA2, QAE, QAE2, QAQ, QSC, RA, RA2, SK, VA, VA2, VAW, VWA
			1	-	-	-----	PA2/A, PAE2, PAE2/A, QA2/A, QAB1, QAB3, QAB3/A, QAE2/A, QAE6, QAE6/A, QAG QAG/A, QAQ4, QAQ4/A, QAR2, QAR2/A, QAW, QAW/A, QL2, QSC9, QSC9/A, QX26 QX26/A, QXB6, QXB6/A, RA2/A, RA3, RSC2, RSC2/A, RSS, RSS/A, VA2/A, VAW1, VDE VDE2, VDE2/A, VKB2, VKB2/A, VM2, VM2/A, VME2, VME2/A, VMS2, VMX2, VNT2 VNT2/A, VW12, VW12/A, VW22, VWA2, VWA2/A, VWN2, VWN2/A
27	90473-147-000	WASHER, 6X16	1	1	-	-----	1064745 PA, Q2, QA, QAE, QSC, RA, VA, VAW, VWA
			1	-	-	-----	1065525 SK
			1	-	-	-----	1090816 PA2, QA2, QAE2, QAQ, RA2, VA2
			1	-	-	1832355	----- PA2, PAE2, QA2, QAB3, QAE2, QAE6, QAG, QAQ4, QAR2, QAW, QSC9, QX26, QXB6, RA2 RSC2, RSS, VA2, VDE2, VNT2, VW12, VWA2, VWN2

2

E-6-4

CRANKCASE COVER(5)

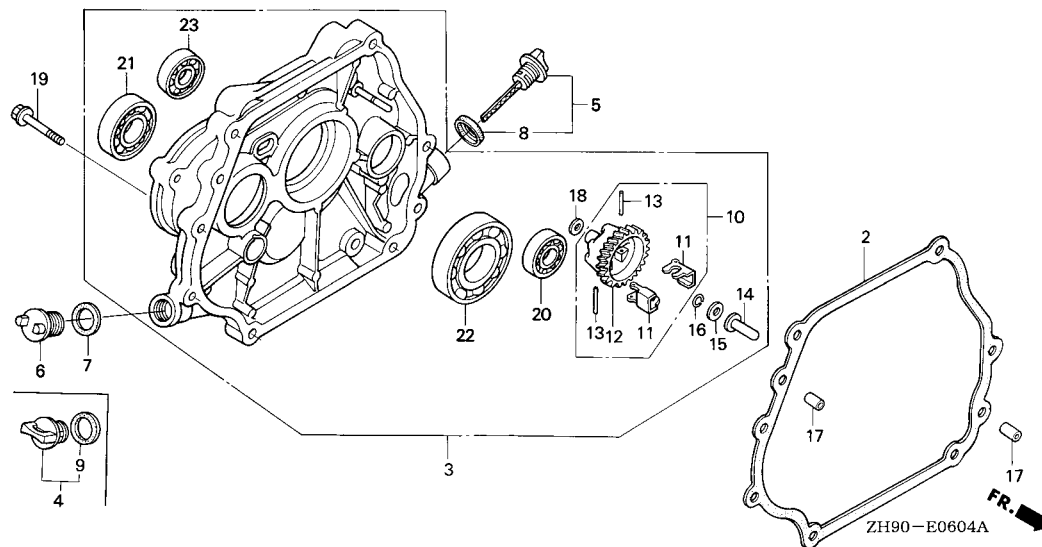


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
2	1101F9	PACKING, CRANKCASE COVER(A) ..	0.3
3	1101G0	COVER, CRANKCASE(A)	0.3
12		(11)	
12	1161A7	HOLDER, GOVERNOR WEIGHT	0.4
14	1161C7	SLIDER, GOVERNOR(A)	0.3
20	1101F5	BEARING, BALANCER WEIGHT :REAR	0.4
21	2141A7	BEARING, POWER TAKE OFF SHAFT :FRONT	0.4
22	1101A6	BEARING, CRANKSHAFT :REAR	0.4
23	2101U3	BEARING, COUNTERSHAFT :FRONT .	0.4


Ref. No.	Part No.	Description	Reqd. QTY	Serial No.	Parts catalogue code
			(1) (2) (3)		
2	11381-ZE2-801	PACKING, CASE COVER.....	1 - 1	-----	HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A
3	11400-ZE2-623	COVER ASSY., CRANKCASE	1 - 1	-----	HA2/A, HAP/A, HEA2/A, HEA8/A
	11400-ZE2-621		1 - -	-----	HA, HAQ, HEA
	11400-ZE2-622		1 - -	1832354	HA2, HEA2, HEA8
			1 - -	1832355	HA2, HEA2, HEA8
			- - 1	-----	HAP
4	15600-ZG4-003	CAP ASSY., OIL FILLER	1 - 1	-----	HA2/A, HAP, HAP/A, HEA2, HEA2/A, HEA8, HEA8/A
			1 - -	1071799	HA2, HEA
5	15600-735-003	CAP ASSY., OIL FILLER	1 - 1	-----	HA2/A, HAP, HAP/A, HEA2, HEA2/A, HEA8, HEA8/A
	15600-735-700		1 - -	-----	HA, HEA
			1 - -	1071798	HA2, HAQ
	15600-735-003		1 - -	1071799	HA2, HAQ
6	15620-ZG4-910	CAP, OIL FILLER	1 - -	-----	HA, HAQ
			1 - -	1071798	HA2, HEA
7	15621-896-010	PACKING, OIL FILLER CAP	1 - -	-----	HA, HAQ
			1 - -	1071798	HA2, HEA
8	15625-ZE1-003	PACKING, OIL FILLER CAP	1 - 1	-----	HA2/A, HAP, HAP/A, HEA2, HEA2/A, HEA8, HEA8/A
	15625-ZE1-000		1 - -	-----	HA, HEA
			1 - -	1071798	HA2, HAQ
	15625-ZE1-003		1 - -	1071799	HA2, HAQ
9	15625-ZE1-003	PACKING, OIL FILLER CAP	1 - 1	-----	HA2/A, HAP, HAP/A, HEA2, HEA2/A, HEA8, HEA8/A
			1 - -	1071799	HA2, HEA
10	16510-ZE2-811	GOVERNOR ASSY.	1 - 1	-----	HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A
11	16511-ZE2-000	WEIGHT, GOVERNOR	2 - 2	-----	HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A
12	16512-ZE2-811	HOLDER, GOVERNOR WEIGHT	1 - 1	-----	HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A
13	16513-ZE2-000	PIN, GOVERNOR WEIGHT	2 - 2	-----	HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A
14	16531-Z0A-000	SLIDER, GOVERNOR	1 - 1	-----	HA, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2/A, HEA8/A

E-6-4

CRANKCASE COVER(5)

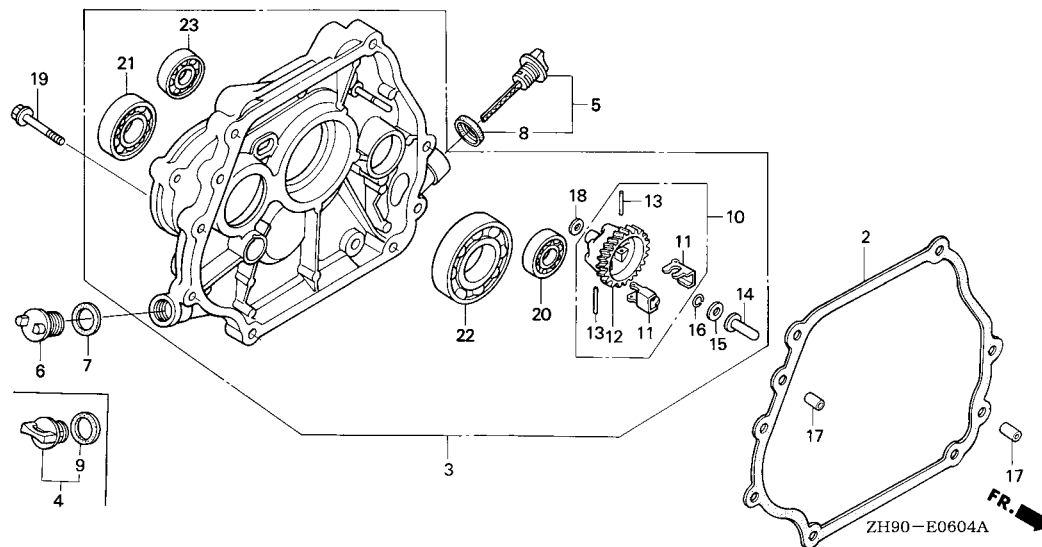

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
14)	16531-ZE2-000	SLIDER, GOVERNOR.....	1	-	-	1832354	HA2, HEA2, HEA8
	16531-Z0A-000		1	-	-	1832355	HA2, HEA2, HEA8
15	90473-147-000	WASHER, 6X16.....	1	-	-	1064745	HA, HEA
			1	-	-	1090816	HAQ
			1	-	-	1832355	HA2, HEA2, HEA8
			-	-	1	-----	HAP
16	90602-ZE1-000	CLIP, GOVERNOR HOLDER.....	1	-	1	-----	HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A
	90602-896-000		(1)	-	-	-----	HA, HEA, HEA2, HEA2/A, HEA8, HEA8/A
17	90701-HC4-000	DOWEL PIN, 8X12.....	2	-	2	-----	HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A
18	94101-06800	WASHER, PLAIN, 6MM.....	1	-	1	-----	HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A
19	95701-08035-00	BOLT, FLANGE, 8X35.....	7	-	7	-----	HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A
	95900-08035-00		7	-	-	-----	HA
20	96100-62020-00	BEARING, RADIAL BALL, 6202...	1	-	1	-----	HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A
21	96100-62040-00	BEARING, RADIAL BALL, 6204...	1	-	1	-----	HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A
22	96100-62060-00	BEARING, RADIAL BALL, 6206...	1	-	1	-----	HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A
23	96100-63020-00	BEARING, RADIAL BALL, 6302...	1	-	1	-----	HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A

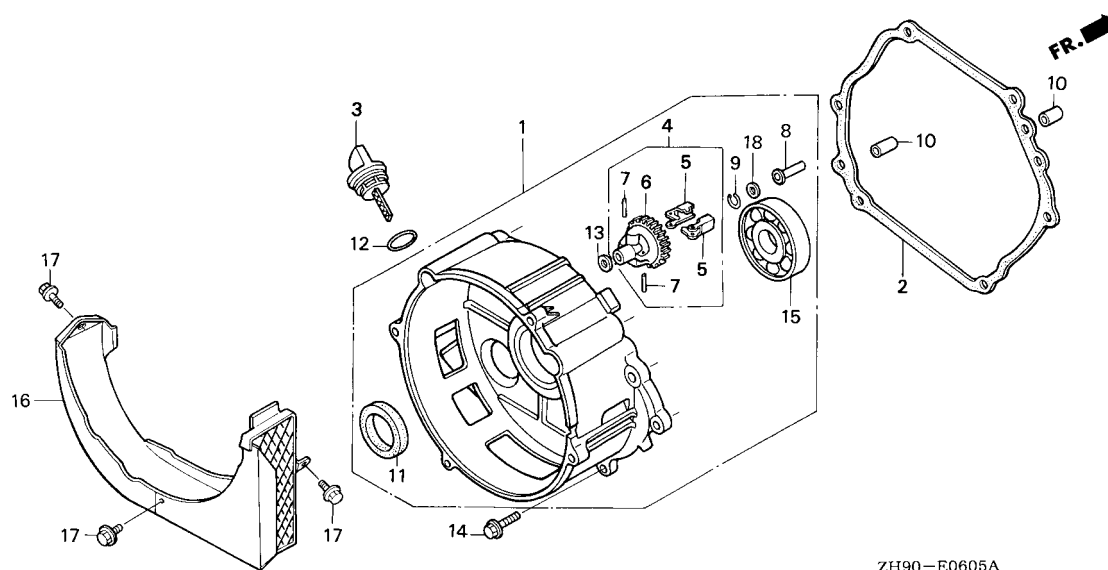


ZH90-E0605A

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	1101G0	COVER, CRANKCASE(A)	0.3
2	1101F9	PACKING, CRANKCASE COVER(A) ..	0.3
6		(5)	
	1161A7	HOLDER, GOVERNOR WEIGHT	0.4
8	1161B6	SLIDER, GOVERNOR	0.3
11	1101G3	OIL SEAL, CRANKCASE COVER ...	0.3
15	1101A6	BEARING, CRANKSHAFT :REAR ...	0.4
16	4141J5	COVER, DUCT	0.1

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			GX270				
			(1)	(2)	(3)		
1	11300-ZE2-406	COVER ASSY., CRANKCASE	1	-	-	-----	ES3/A, ES4, ESS/A, VMT/A
	11300-ZE2-700		1	-	-	-----	1832354 ES3, ESS, VMT
	11300-ZE2-701		1	-	-	-----	1832355 ES3, ESS, VMT
2	11381-ZE2-801	PACKING, CASE COVER	1	-	-	-----	ES3, ES3/A, ES4, ESS, ESS/A, VMT, VMT/A
3	15620-ZE2-700	CAP, OIL FILLER	1	-	-	-----	ES3, ES3/A, ES4, ESS, ESS/A, VMT, VMT/A
4	16510-ZE2-000	GOVERNOR ASSY.	1	-	-	-----	ES3, ES3/A, ES4, ESS, ESS/A, VMT, VMT/A
5	16511-ZE2-000	WEIGHT, GOVERNOR	2	-	-	-----	ES3, ES3/A, ES4, ESS, ESS/A, VMT, VMT/A
6	16512-ZE2-000	HOLDER, GOVERNOR WEIGHT	1	-	-	-----	ES3, ES3/A, ES4, ESS, ESS/A, VMT, VMT/A
7	16513-ZE2-000	PIN, GOVERNOR WEIGHT	2	-	-	-----	ES3, ES3/A, ES4, ESS, ESS/A, VMT, VMT/A
8	16531-Z0A-000	SLIDER, GOVERNOR	1	-	-	-----	ES3/A, ES4, ESS/A, VMT/A
	16531-ZE2-000		1	-	-	-----	1832354 ES3, ESS, VMT
	16531-Z0A-000		1	-	-	-----	1832355 ES3, ESS, VMT
9	90602-ZE1-000	CLIP, GOVERNOR HOLDER	1	-	-	-----	ES3, ES3/A, ES4, ESS, ESS/A, VMT, VMT/A
10	90701-HC4-000	DOWEL PIN, 8X12	2	-	-	-----	ES3, ES3/A, ES4, ESS, ESS/A, VMT, VMT/A
11	91201-890-003	OIL SEAL, 30X46X8	1	-	-	-----	ES3, ES3/A, ES4, ESS, ESS/A, VMT, VMT/A
12	91301-805-000	O-RING, 26X2.7	1	-	-	-----	ES3, ES3/A, ES4, ESS, ESS/A, VMT, VMT/A
13	94101-06800	WASHER, PLAIN, 6MM	1	-	-	-----	ES3, ES3/A, ES4, ESS, ESS/A, VMT, VMT/A
14	95701-08035-00	BOLT, FLANGE, 8X35	7	-	-	-----	ES3, ES3/A, ES4, ESS, ESS/A, VMT, VMT/A
15	96100-62060-00	BEARING, RADIAL BALL, 6206 ...	1	-	-	-----	ES3, ES3/A, ES4, ESS, ESS/A, VMT, VMT/A
16	11315-ZE2-700	COVER, DUCT	1	-	-	-----	VMT, VMT/A
17	90019-883-000	BOLT, FLANGE, 5X10(CT200)....	3	-	-	-----	VMT, VMT/A
18	90473-147-000	WASHER, 6X16	1	-	-	-----	1832355 ES3, ESS, VMT

E-7


CRANKSHAFT

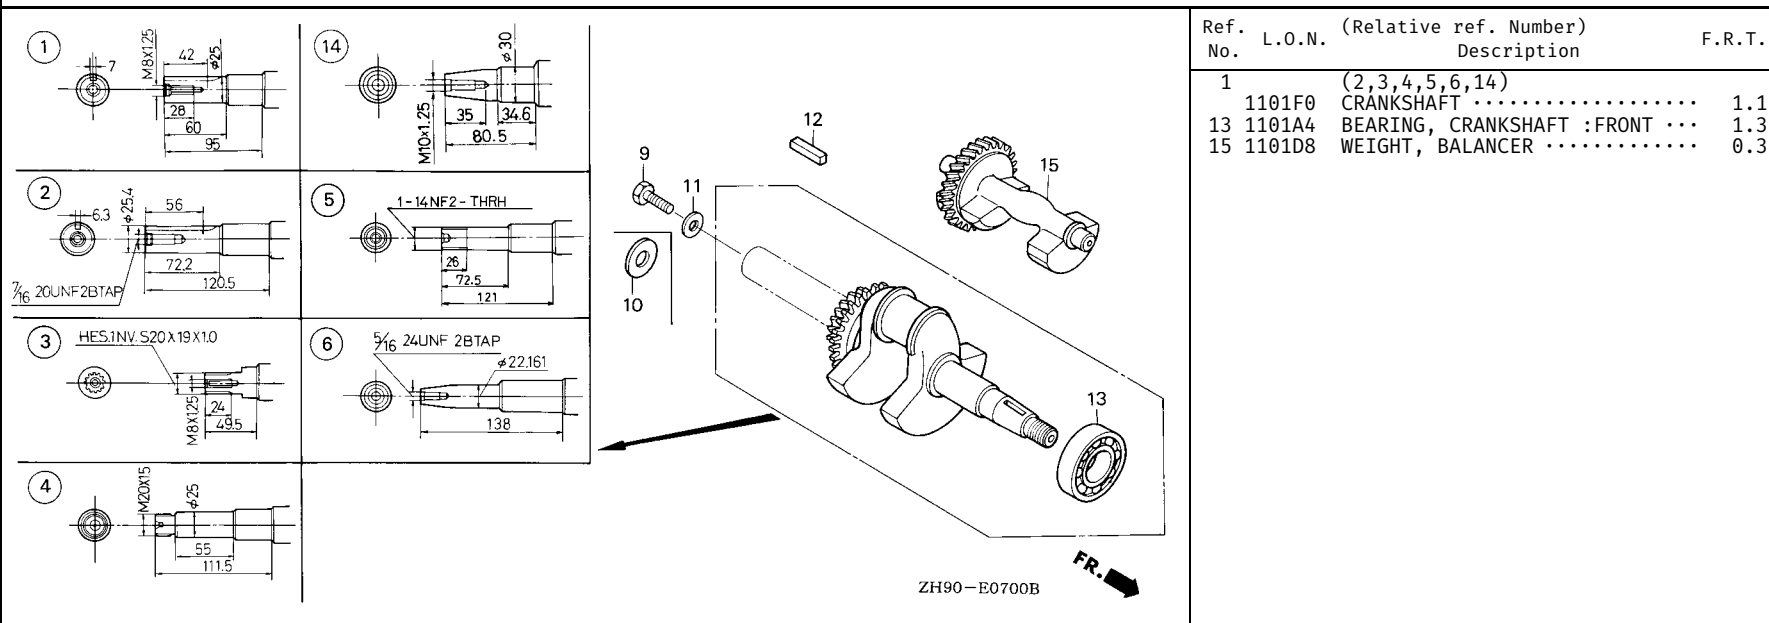

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	1101F0	(2,3,4,5,6,14) CRANKSHAFT	1.1
13	1101A4	BEARING, CRANKSHAFT :FRONT ...	1.3
15	1101D8	WEIGHT, BALANCER	0.3

Ref. No.	Part No.	Description	Reqd. QTY	Serial No.	Parts catalogue code
			(1) (2) (3)		
1	13310-ZH9-000	CRANKSHAFT COMP.	1 1 1	-----	R1, RD, RH, RH26, RHE, RHE4, RHQ4, RX, RXP, RXQ4, RXU, S1, SD, SE, SH, SHE, SHEZ, SHQ4, SJ, SJG, SJP, SKE1, SMC4, SMD, SME1, SME6, SN, SW, SWC4, SWE, SX, SX2, SXB, SXE, SXE4, SXE8, SXEB, SXQ4, SXU
			1 1 -	2394272	R1/A, RD/A, RH26/A, RHE4/A, RHQ4/A, RX/A, RXQ4/A, RXU/A, S1/A, SD/A, SE/A, SH/A, SHQ4/A, SJ/A, SJG/A, SMC4/A, SME1/A, SME6/A, SMX2, SN/A, SWA4, SWC4/A, SX/A, SXB/A, SXE/A, SXE4/A, SXE8/A, SXEB/A, SXQ4/A, SXU/A
	13310-ZH9-010		1 1 -	2394273	R1/A, RD/A, RH26/A, RHE4/A, RHQ4/A, RX/A, RXQ4/A, RXU/A, S1/A, SD/A, SE/A, SH/A, SHQ4/A, SJ/A, SJG/A, SMC4/A, SME1/A, SME6/A, SMX2, SN/A, SWA4, SWC4/A, SX/A, SXB/A, SXE/A, SXE4/A, SXE8/A, SXEB/A, SXQ4/A, SXU/A
	13310-ZH9-800		1 - -	-----	RA, RA2, RSC2, RSS, SK
	13310-ZH9-801		1 - -	-----	RA3
	13310-ZK9-000		1 - -	-----	SXB7, SXB7/A
	13310-ZH9-800		1 - -	2394435	RA2/A, RSC2/A, RSS/A
	13310-ZH9-801		1 - -	2394436	RA2/A, RSC2/A, RSS/A
	13310-ZH9-000		- - 1	2395512	RXP/A
	13310-ZH9-010		- - 1	2395513	RXP/A
2	13310-ZH9-600	CRANKSHAFT COMP.	1 1 -	-----	Q1, QAG2, QD, QE, QH, QH26, QHC, QHE, QHE4, QHP1, QHQ4, QHR, QHR4, QHZ, QKE3, QME2, QMH, QP, QSE, QSE8, QT, QWA2, QWA4, QWH2, QX, QXB, QXC, QXC4, QXC6, QXC9, QXE, QXE4, QXE6, QXE8, QXEB, QXQ4, QXU
	13310-ZH9-810		1 1 -	-----	Q2, QA, QA2, QAB1, QAB3, QAE, QAE2, QAE6, QAG, QAQ, QAQ4, QAR2, QAW, QL2, QSC, QSC9, QX26, QXB6
	13310-ZH9-600		1 1 -	2395510	Q1/A, QAG2/A, QD/A, QE/A, QH/A, QH26/A, QHB5, QHE4/A, QHP1/A, QHQ4/A, QHR/A, QHR4/A, QHZ/A, QKE3/A, QKE4, QME2/A, QMH/A, QP/A, QSE/A, QSE2, QSE8/A, QT/A, QWA4/A, QWH2/A, QX/A, QXB/A, QXC4/A, QXC6/A, QXC9/A, QXE/A, QXE4/A, QXE6/A, QXE8/A, QXQ4/A, QXU/A
	13310-ZH9-601		1 1 -	2395511	Q1/A, QAG2/A, QD/A, QE/A, QH/A, QH26/A, QHB5, QHE4/A, QHP1/A, QHQ4/A, QHR/A, QHR4/A, QHZ/A, QKE3/A, QKE4, QME2/A, QMH/A, QP/A, QSE/A, QSE2, QSE8/A, QT/A, QWA4/A, QWH2/A, QX/A, QXB/A, QXC4/A, QXC6/A, QXC9/A, QXE/A, QXE4/A, QXE6/A, QXE8/A, QXQ4/A, QXU/A

CRANKSHAFT

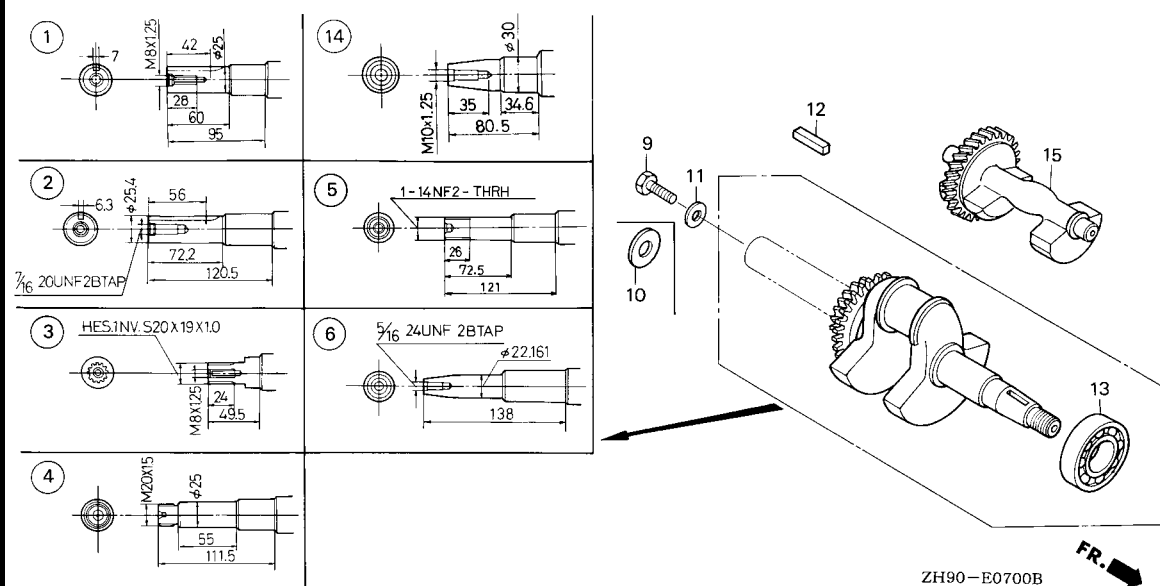


Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code	
			(1)	GX270				(3)
				(2)				
(2)	13310-ZK9-600	CRANKSHAFT COMP.	1	-	-	-----	QXB7, QXB7/A	
	13310-ZH9-601		1	-	-	-----	QXE9, QXK	
	13310-ZH9-810		1	-	-	-----	2400731 QA2/A, QAB3/A, QAE2/A, QAE6/A, QAG/A, QAQ4/A, QAR2/A, QAW/A, QSC9/A	
							QX26/A, QXB6/A	
	13310-ZH9-811		1	-	-	2400732 -----	QA2/A, QAB3/A, QAE2/A, QAE6/A, QAG/A, QAQ4/A, QAR2/A, QAW/A, QSC9/A	
							QX26/A, QXB6/A	
3	13310-ZH9-610	CRANKSHAFT COMP.	1	1	-	-----	HH, HX, HX26, HX8, HXQ4, L1, LH, LHB1, LHB3, LHE, LHQ4, LJ, LJC, LJG, LT, LW, LWD	
							LX, LX16, LXE, LXE8, LXQ4, LXU, LXZ	
			1	1	-	-----	2394580 HX/A, HX26/A, HX8/A, HXQ4/A, L1/A, LH/A, LHB5, LHE/A, LJ/A, LJC/A, LJG/A	
							LT/A, LW/A, LX/A, LXE/A, LXE8/A, LXQ4/A, LXU/A	
	13310-ZH9-611		1	1	-	2394581 -----	HX/A, HX26/A, HX8/A, HXQ4/A, L1/A, LH/A, LHB5, LHE/A, LJ/A, LJC/A, LJG/A	
							LT/A, LW/A, LX/A, LXE/A, LXE8/A, LXQ4/A, LXU/A	
	13310-ZH9-820		1	-	1	-----	HA, HA2, HAP, HAQ, HEA, HEA2, HEA8, LSS, LTJ, LWD1	
	13310-ZH9-821		1	-	-	-----	HA2/A, HEA2/A, HEA8/A, LWD1/A	
	13310-ZH9-820		-	-	1	-----	1100192 HAP/A	
	13310-ZH9-821		-	-	1	1100193 -----	HAP/A	
4	13310-ZH9-630	CRANKSHAFT COMP.	1	1	-	-----	W1, W1/A, WMA4, WMT8, WMT8/A, WXE8, WXE8/A	
5	13310-ZH9-830	CRANKSHAFT COMP.	1	-	-	-----	PA, PA2, PA2/A, PAE2, PAE2/A	
	13310-ZH9-650		1	-	-	-----	PX, PX26, PXE8, PXU	
			1	-	-	-----	2401132 PX/A, PX26/A, PXE8/A, PXU/A	
	13310-ZH9-651		1	-	-	2401133 -----	PX/A, PX26/A, PXE8/A, PXU/A	
6	13310-ZH9-670	CRANKSHAFT COMP.	1	1	1	-----	V1, VAG2, VD16, VEB6, VH, VNG1, VPE4, VPX4, VSD, VSD3, VWT4, VX, VX26, VXB	
							VXB2, VXB6, VXE, VXE4, VXE6, VXE8, VXE8/A, VXE8/A, VXE8/A, VXE8/A, VXE8/A, VXE8/A	
							VXU, VXU1	
	13310-ZH9-840		1	-	-	-----	VA, VA2, VA2/A, VAW, VAW1, VDE, VDE2, VDE2/A, VKB2, VKB2/A, VM2, VM2/A, VME2	
							VME2/A, VMS2, VMX2, VNT2, VNT2/A, VPE5, VPX5, VW12, VW12/A, VW22, VWA, VWA2	
							VWA2/A, VWN2, VWN2/A	
	13310-ZH9-671		1	-	-	-----	VKK, VS4, VS5, VXE8, VXX	

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
(6)	13310-ZK9-670	CRANKSHAFT COMP.	1	-	-	-----	VN17, VPE7, VPX7, VS37, VSD7, VXB7, VXE7
	13310-ZK9-671		1	-	-	-----	VN17/A, VPE7/A, VPX7/A, VS37/A, VSD7/A, VSH7
	13310-ZH9-841		1	-	-	-----	VPK
	13310-ZH9-670		1	-	-	2133729	VPE4/A, VPX4/A
	13310-ZK9-670		1	-	-	2135204	VXB7/A, VXE7/A
	13310-ZH9-670		1	-	-	2394170	VAG2/A, VKE4, VKX4, VNG1/A, VS3, VSD/A, VSD3/A, VWT4/A, VX/A, VXB/A, VXE4/A
							VXE6/A, VXE6/A, VXQ4/A, VXT1/A, VXU/A, VXU1/A
	13310-ZH9-840		1	-	-	2133730	VPE4/A, VPX4/A
	13310-ZK9-800		1	-	-	2135205	VXB7/A, VXE7/A
	13310-ZH9-671		1	-	-	2394171	VAG2/A, VKE4, VKX4, VNG1/A, VS3, VSD/A, VSD3/A, VWT4/A, VX/A, VXB/A, VXE4/A
9	90003-ZE3-600	BOLT, HEX., 3/8-24UNF(25MM) ..	1	-	-	-----	VXE6/A, VXE6/A, VXQ4/A, VXT1/A, VXU/A, VXU1/A
	92101-08025-0A	BOLT, HEX., 8X25	1	-	-	-----	LT, LT/A
	92000-08025-0A		1	-	-	-----	SJ, SJ/A, SJG, SJG/A, SMX2
	90003-ZE2-000	BOLT, HEX.(7/16-20UNF)	-	(1)	-	-----	SJP, SK
	92000-08025-0A	BOLT, HEX., 8X25	-	(1)	-	-----	Q1, Q1/A
			-	(1)	-	-----	R1, S1
	92101-08025-0A		-	(1)	-	2437805	R1/A, S1/A
	10 90473-ZE2-000	WASHER, 11.7MM	-	(1)	-	-----	R1/A, S1/A
			-	(1)	-	-----	Q1, Q1/A
	11 90534-706-010	WASHER, LOCK, 8.5X35X4.5	1	-	-	-----	SJ, SJ/A, SJG, SJG/A, SJP, SK, SMX2
12	90741-889-810	KEY, 7X7X33(YELLOW)(O.S.)	(1)	(1)	-	-----	R1, R1/A, S1, S1/A
						-----	ES1, ES1/A, ES3, ES3/A, ES4, L1, L1/A, S1, S1/A, SD, SD/A, SE, SE/A, SH, SH/A
						-----	SHQ4, SHQ4/A, SJ, SJ/A, SJG, SJG/A, SJP, SK, SKE1, SMC4, SMC4/A, SMD, SME1
						-----	SME1/A, SME6, SME6/A, SN, SN/A, SWA4, SWC4, SWC4/A, SX, SX/A, SXB, SXB/A
						-----	SXB7, SXB7/A, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4
						-----	SXQ4/A, SXU, SXU/A
	90745-ZE2-600	KEY, 6.3X6.3X43	1	-	-	-----	QA, QA2, QA2/A, QAB1, QAB3, QAB3/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG
						-----	QAG/A, QAG2, QAG2/A, QAQ, QAQ4, QAQ4/A, QAW, QAW/A, QD, QD/A, QE, QE/A, QH
						-----	QH/A, QH26, QH26/A, QHB5, QHC, QHE, QHE4, QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A
						-----	QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A, QKE3, QKE3/A, QKE4, QME2, QME2/A, QMH
13	90741-805-000	KEY, 7X7X33	1	-	-	-----	QMH/A, QP, QP/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QT, QT/A
						-----	QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX, QX/A, QX26, QX26/A, QXB, QXB/A, QXB7
						-----	QXB7/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE, QXE/A, QXE4
						-----	QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXE9, QXK, QXQ4, QXQ4/A, QXU
						-----	QXU/A, VME2, VME2/A, VMS2
						-----	SD, SD/A, SE, SE/A, SH, SH/A, SHE, SHEZ, SHQ4, SHQ4/A, SJ, SJ/A, SJG, SJG/A
						-----	SJP, SK, SKE1, SMD, SMX2, SN, SN/A, SW, SWA4, SWC4, SWC4/A, SWE, SX, SX/A, SXB
						-----	SXB/A, SXB7, SXB7/A, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A
						-----	SXQ4, SXQ4/A, SXU, SXU/A
	90745-ZE2-600	KEY, 6.3X6.3X43	-	(1)	-	-----	Q1, Q1/A, Q2
14	90741-805-000	KEY, 7X7X33	-	(1)	-	-----	S1, S1/A
	91001-ZH9-003	BEARING, RADIAL BALL(6206 SH)	1	1	1	-----	
	13310-ZH9-700	CRANKSHAFT COMP.	1	-	-	-----	ES1, ES3, ESS, VMT
	13310-ZH9-701		1	-	-	-----	ES4
	13310-ZH9-700		1	-	-	2395177	ES1/A, ES3/A, ESS/A, VMA4, VME4, VMT/A
	13310-ZH9-701		1	-	-	2395178	ES1/A, ES3/A, ESS/A, VMA4, VME4, VMT/A
	15 13351-ZE2-010	WEIGHT, BALANCER	1	-	1	-----	HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, LSS, LTJ
						-----	LWD1, LWD1/A, PA, PA2, PA2/A, PAE2, PAE2/A, QA, QA2, QA2/A, QAB1, QAB3
						-----	QAB3/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAQ, QAQ4, QAQ4/A, QAR2
						-----	QAR2/A, QAW, QAW/A, QL2, QSC, QSC9, QSC9/A, QX26, QX26/A, QXB6, QXB6/A, RA
15						-----	RA2, RA2/A, RA3, RSC2, RSC2/A, RSS, RSS/A, SK, VA, VA2, VA2/A, VAW, VAW1, VDE
						-----	VDE2, VDE2/A, VKB2, VKB2/A, VM2, VM2/A, VME2, VME2/A, VMS2, VMX2, VNT2
						-----	VNT2/A, VW12, VW12/A, VW22, VWA, VWA2, VWA2/A, VWN2, VWN2/A
						-----	Q2
			-	(1)	-	-----	

E-8

PISTON

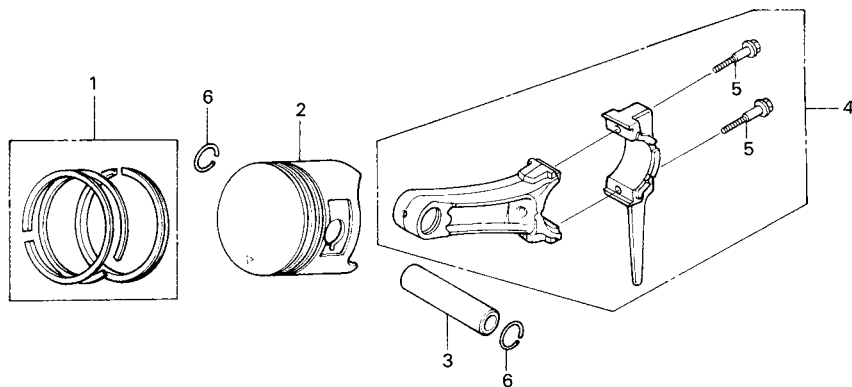

ZH90-E0800A



Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
2	1111R1	(1,3,4) PISTON AND/OR RING SET AND/OR BEARING AND/OR ROD	1.2


Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	GX270 (2)	(3)		
1	13010-ZE8-601	RING SET, PISTON(STD.)(NIPPON)	1	1	1	-----	ES1, ES3, ESS, HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8 HEA8/A, HH, HX, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A, L1, LH, LHB1, LHB3 LHE, LHQ4, LJ, LJC, LJC/A, LJG, LSS, LT, LTJ, LW, LWD, LWD1, LX, LX16, LXE, LXE8 LXE8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ, PA, PA2, PA2/A, PAE2, PAE2/A, PX, PX26 PX26/A, PXE8, PXE8/A, PXU, PXU/A, Q1, Q2, QA, QA2, QA2/A, QAB1, QAB3, QAE QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAO, QAO4, QAO4/A QAR2, QAR2/A, QAW, QAW/A, QD, QE, QE/A, QH, QH26, QH26/A, QHC, QHE, QHE4 QHE4/A, QHP1, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QKE3, QKE3/A QKE4, QL2, QME2, QME2/A, QMH, QP, QSC, QSC9, QSC9/A, QSE, QSE2, QSE8, QSE8/A QT, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX, QX26, QX26/A, QXB, QXB/A, QXB6 QXB6/A, QXB7, QXB7/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXEB, QXQ4, QXQ4/A, QXU, QXU/A, R1 RA, RA2, RA2/A, RD, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2 RSC2/A, RSS, RX, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A, S1, SD, SE, SE/A, SH SHE, SHEZ, SHQ4, SHQ4/A, SJ, SJG, SJP, SK, SKE1, SMC4, SMC4/A, SMD, SME1 SME1/A, SME6, SME6/A, SMX2, SN, SW, SWA4, SWC4, SWC4/A, SWE, SX, SX2, SXB SXB/A, SXB7, SXB7/A, SXE, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4 SXQ4/A, SXU, SXU/A, V1, VA, VA2, VA2/A, VAG2, VAG2/A, VAW, VAW1, VD16, VDE VDE2, VDE2/A, VEB6, VH, VKB2, VKB2/A, VKE4, VKX4, VM2, VM2/A, VMA4, VME2 VME2/A, VME4, VMS2, VMT, VMX2, VN17, VN17/A, VNG1, VNG1/A, VNT2, VNT2/A VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS37 VS37/A, VSD, VSD/A, VSD3, VSD3/A, VSD7, VSD7/A, VSH7, VW12, VW12/A, VW22 VWA, VWA2, VWA2/A, VWN2, VWN2/A, VWT4, VWT4/A, VX, VX26, VXB, VXB/A, VXB2 VXB6, VXB7, VXB7/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXEB VXEB/A, VXG, VXP, VXP/A, VXQ4, VXQ4/A, VXQP, VXT1, VXT1/A, VXTB, VXU, VXU1 VXU1/A, W1, WMA4, WMT8, WXE8

E-8

PISTON

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
(1)	13010-ZE8-602	RING SET, PISTON(STD.) (TEIKOKU)	1	1	1	-----	ES1, ES3, ESS, HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8 HEA8/A, HH, HX, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A, L1, LH, LHB1, LHB3 LHE, LHQ4, LJ, LJC, LJC/A, LJG, LSS, LT, LTJ, LW, LWD, LWD1, LX, LX16, LXE, LXE8 LXE8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ, PA, PA2, PA2/A, PAE2, PAE2/A, PX, PX26 PX26/A, PXE8, PXE8/A, PXU, PXU/A, Q1, Q2, QA, QA2, QA2/A, QAB1, QAB3, QAE QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAQ, QAQ4, QAQ4/A QAR2, QAR2/A, QAW, QAW/A, QD, QE, QE/A, QH, QH26, QH26/A, QHC, QHE, QHE4 QHE4/A, QHP1, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QKE3, QKE3/A QKE4, QL2, QME2, QME2/A, QMH, QP, QSC, QSC9, QSC9/A, QSE, QSE2, QSE8, QSE8/A QT, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX, QX26, QX26/A, QXB, QXB/A, QXB6 QXB6/A, QXB7, QXB7/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXEB, QXQ4, QXQ4/A, QXU, QXU/A, R1 RA, RA2, RA2/A, RD, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2 RSC2/A, RSS, RX, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A, S1, SD, SE, SE/A, SH SHE, SHEZ, SHQ4, SHQ4/A, SJ, SJG, SJP, SK, SKE1, SMC4, SMC4/A, SMD, SME1 SME1/A, SME6, SME6/A, SMX2, SN, SW, SWA4, SWC4, SWC4/A, SWE, SX, SX2, SXB SXB/A, SXB7, SXB7/A, SXE, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4 SXQ4/A, SXU, SXU/A, V1, VA, VA2, VA2/A, VAG2, VAG2/A, VAW, VAW1, VD16, VDE VDE2, VDE2/A, VEB6, VH, VKB2, VKB2/A, VKE4, VKX4, VM2, VM2/A, VMA4, VME2 VME2/A, VME4, VMS2, VMT, VMX2, VN17, VN17/A, VNG1, VNG1/A, VNT2, VNT2/A VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS37 VS37/A, VSD, VSD/A, VSD3, VSD3/A, VSD7, VSD7/A, VSH7, VW12, VW12/A, VW22 VWA, VWA2, VWA2/A, VWN2, VWN2/A, VWT4, VWT4/A, VX, VX26, VXB, VXB/A, VXB2 VXB6, VXB7, VXB7/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXEB VXEB/A, VXG, VXP, VXP/A, VXQ4, VXQ4/A, VXQP, VXT1, VXT1/A, VXTB, VXU, VXU1 VXU1/A, W1, WMA4, WMT8, WXE8
	13011-ZE8-601	RING SET, PISTON(0.25)(NIPPON)	(1)	(1)	(1)	-----	ES1, ES3, ESS, HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8 HEA8/A, HH, HX, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A, L1, LH, LHB1, LHB3 LHE, LHQ4, LJ, LJC, LJC/A, LJG, LSS, LT, LTJ, LW, LWD, LWD1, LX, LX16, LXE, LXE8 LXE8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ, PA, PA2, PA2/A, PAE2, PAE2/A, PX, PX26 PX26/A, PXE8, PXE8/A, PXU, PXU/A, Q1, Q2, QA, QA2, QA2/A, QAB1, QAB3, QAE QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAQ, QAQ4, QAQ4/A QAR2, QAR2/A, QAW, QAW/A, QD, QE, QE/A, QH, QH26, QH26/A, QHC, QHE, QHE4 QHE4/A, QHP1, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QKE3, QKE3/A QKE4, QL2, QME2, QME2/A, QMH, QP, QSC, QSC9, QSC9/A, QSE, QSE2, QSE8, QSE8/A QT, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX, QX26, QX26/A, QXB, QXB/A, QXB6 QXB6/A, QXB7, QXB7/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXEB, QXQ4, QXQ4/A, QXU, QXU/A, R1 RA, RA2, RA2/A, RD, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2 RSC2/A, RSS, RX, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A, S1, SD, SE, SE/A, SH SHE, SHEZ, SHQ4, SHQ4/A, SJ, SJG, SJP, SK, SKE1, SMC4, SMC4/A, SMD, SME1 SME1/A, SME6, SME6/A, SMX2, SN, SW, SWA4, SWC4, SWC4/A, SWE, SX, SX2, SXB SXB/A, SXB7, SXB7/A, SXE, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4 SXQ4/A, SXU, SXU/A, V1, VA, VA2, VA2/A, VAG2, VAG2/A, VAW, VAW1, VD16, VDE VDE2, VDE2/A, VEB6, VH, VKB2, VKB2/A, VKE4, VKX4, VM2, VM2/A, VMA4, VME2 VME2/A, VME4, VMS2, VMT, VMX2, VN17, VN17/A, VNG1, VNG1/A, VNT2, VNT2/A VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS37 VS37/A, VSD, VSD/A, VSD3, VSD3/A, VSD7, VSD7/A, VSH7, VW12, VW12/A, VW22 VWA, VWA2, VWA2/A, VWN2, VWN2/A, VWT4, VWT4/A, VX, VX26, VXB, VXB/A, VXB2 VXB6, VXB7, VXB7/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXEB VXEB/A, VXG, VXP, VXP/A, VXQ4, VXQ4/A, VXQP, VXT1, VXT1/A, VXTB, VXU, VXU1 VXU1/A, W1, WMA4, WMT8, WXE8

2

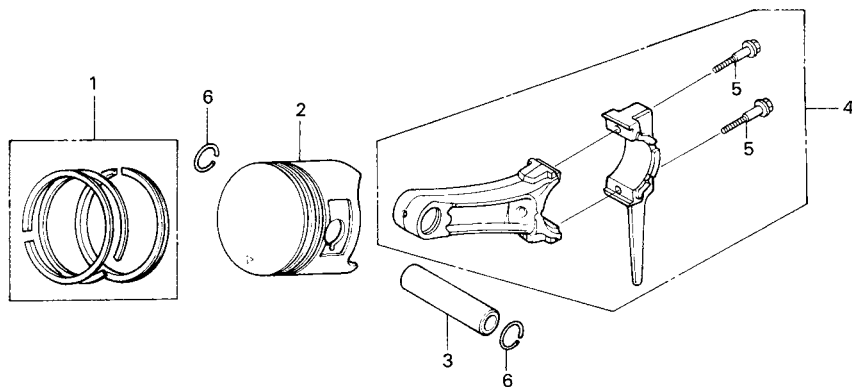

ZH90-E0800A




Ref. No.	Part No.	Description	Reqd. QTY (1) (2) (3)	Serial No.	Parts catalogue code
(1)	13011-ZE8-602	RING SET, PISTON(0.25)	(1) (1) (1)	-----	ES1, ES3, ESS, HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, HH, HX, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A, L1, LH, LHB1, LHB3, LHE, LHQ4, LJ, LJC, LJC/A, LJG, LSS, LT, LTJ, LW, LWD, LWD1, LX, LX16, LXE, LXE8, LXE8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ, PA, PA2, PA2/A, PAE2, PAE2/A, PX, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, Q1, Q2, QA, QA2, QA2/A, QAB1, QAB3, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAQ, QAQ4, QAQ4/A, QAR2, QAR2/A, QAW, QAW/A, QD, QE, QE/A, QH, QH26, QH26/A, QHC, QHE, QHE4, QHE4/A, QHP1, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QKE3, QKE3/A, QKE4, QL2, QME2, QME2/A, QMH, QP, QSC, QSC9, QSC9/A, QSE, QSE2, QSE8, QSE8/A, QT, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX, QX26, QX26/A, QXB, QXB/A, QXB6, QXB6/A, QXB7, QXB7/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXEB, QXQ4, QXQ4/A, QXU, QXU/A, R1, RA, RA2, RA2/A, RD, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RX, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A, S1, SD, SE, SE/A, SH, SHE, SHEZ, SHQ4, SHQ4/A, SJ, SJG, SJP, SK, SKE1, SMC4, SMC4/A, SMD, SME1, SME1/A, SME6, SME6/A, SMX2, SN, SW, SWA4, SWC4, SWC4/A, SWE, SX, SX2, SXB, SXB/A, SXB7, SXB7/A, SXE, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4, SXQ4/A, SXU, SXU/A, V1, VA, VA2, VA2/A, VAG2, VAG2/A, VAW, VAW1, VD16, VDE, VDE2, VDE2/A, VEB6, VH, VKB2, VKB2/A, VKE4, VKX4, VM2, VM2/A, VMA4, VME2, VME2/A, VME4, VMS2, VMT, VMX2, VN17, VN17/A, VNG1, VNG1/A, VNT2, VNT2/A, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS37, VS37/A, VSD, VSD/A, VSD3, VSD3/A, VSD7, VSD7/A, VSH7, VW12, VW12/A, VW22, VWA, VWA2, VWA2/A, VWN2, VWN2/A, VWT4, VWT4/A, VX, VX26, VXB, VXB/A, VXB2, VXB6, VXB7, VXB7/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXEB, VXEB/A, VXG, VXP, VXP/A, VXQ4, VXQ4/A, VXQP, VXT1, VXT1/A, VXTB, VXU, VXU1, VXU1/A, W1, WMA4, WMT8, WXE8

E-8

PISTON

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
(1)	13012-ZE8-601	RING SET, PISTON(0.50)(NIPPON)	(1)	(1)	(1)	-----	ES1, ES3, ESS, HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8 HEA8/A, HH, HX, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A, L1, LH, LHB1, LHB3 LHE, LHQ4, LJ, LJC, LJC/A, LJG, LSS, LT, LTJ, LW, LWD, LWD1, LX, LX16, LXE, LXE8 LXE8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ, PA, PA2, PA2/A, PAE2, PAE2/A, PX, PX26 PX26/A, PXE8, PXE8/A, PXU, PXU/A, Q1, Q2, QA, QA2, QA2/A, QAB1, QAB3, QAE QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAQ, QAQ4, QAQ4/A QAR2, QAR2/A, QAW, QAW/A, QD, QE, QE/A, QH, QH26, QH26/A, QHC, QHE, QHE4 QHE4/A, QHP1, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QKE3, QKE3/A QKE4, QL2, QME2, QME2/A, QMH, QP, QSC, QSC9, QSC9/A, QSE, QSE2, QSE8, QSE8/A QT, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX, QX26, QX26/A, QXB, QXB/A, QXB6 QXB6/A, QXB7, QXB7/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXEB, QXQ4, QXQ4/A, QXU, QXU/A, R1 RA, RA2, RA2/A, RD, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2 RSC2/A, RSS, RX, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A, S1, SD, SE, SE/A, SH SHE, SHEZ, SHQ4, SHQ4/A, SJ, SJG, SJP, SK, SKE1, SMC4, SMC4/A, SMD, SME1 SME1/A, SME6, SME6/A, SMX2, SN, SW, SWA4, SWC4, SWC4/A, SWE, SX, SX2, SXB SXB/A, SXB7, SXB7/A, SXE, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4 SXQ4/A, SXU, SXU/A, V1, VA, VA2, VA2/A, VAG2, VAG2/A, VAW, VAW1, VD16, VDE VDE2, VDE2/A, VEB6, VH, VKB2, VKB2/A, VKE4, VKX4, VM2, VM2/A, VMA4, VME2 VME2/A, VME4, VMS2, VMT, VMX2, VN17, VN17/A, VNG1, VNG1/A, VNT2, VNT2/A VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS37 VS37/A, VSD, VSD/A, VSD3, VSD3/A, VSD7, VSD7/A, VSH7, VW12, VW12/A, VW22 VWA, VWA2, VWA2/A, VWN2, VWN2/A, VWT4, VWT4/A, VX, VX26, VXB, VXB/A, VXB2 VXB6, VXB7, VXB7/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXEB VXEB/A, VVG, VXP, VXP/A, VXQ4, VXQ4/A, VXQP, VXT1, VXT1/A, VXTB, VXU, VXU1 VXU1/A, W1, WMA4, WMT8, WXE8
	13012-ZE8-602	RING SET, PISTON(0.50) (TEIKOKU)	(1)	(1)	(1)	-----	ES1, ES3, ESS, HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8 HEA8/A, HH, HX, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A, L1, LH, LHB1, LHB3 LHE, LHQ4, LJ, LJC, LJC/A, LJG, LSS, LT, LTJ, LW, LWD, LWD1, LX, LX16, LXE, LXE8 LXE8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ, PA, PA2, PA2/A, PAE2, PAE2/A, PX, PX26 PX26/A, PXE8, PXE8/A, PXU, PXU/A, Q1, Q2, QA, QA2, QA2/A, QAB1, QAB3, QAE QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAQ, QAQ4, QAQ4/A QAR2, QAR2/A, QAW, QAW/A, QD, QE, QE/A, QH, QH26, QH26/A, QHC, QHE, QHE4 QHE4/A, QHP1, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QKE3, QKE3/A QKE4, QL2, QME2, QME2/A, QMH, QP, QSC, QSC9, QSC9/A, QSE, QSE2, QSE8, QSE8/A QT, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX, QX26, QX26/A, QXB, QXB/A, QXB6 QXB6/A, QXB7, QXB7/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXEB, QXQ4, QXQ4/A, QXU, QXU/A, R1 RA, RA2, RA2/A, RD, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2 RSC2/A, RSS, RX, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A, S1, SD, SE, SE/A, SH SHE, SHEZ, SHQ4, SHQ4/A, SJ, SJG, SJP, SK, SKE1, SMC4, SMC4/A, SMD, SME1 SME1/A, SME6, SME6/A, SMX2, SN, SW, SWA4, SWC4, SWC4/A, SWE, SX, SX2, SXB SXB/A, SXB7, SXB7/A, SXE, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4 SXQ4/A, SXU, SXU/A, V1, VA, VA2, VA2/A, VAG2, VAG2/A, VAW, VAW1, VD16, VDE VDE2, VDE2/A, VEB6, VH, VKB2, VKB2/A, VKE4, VKX4, VM2, VM2/A, VMA4, VME2 VME2/A, VME4, VMS2, VMT, VMX2, VN17, VN17/A, VNG1, VNG1/A, VNT2, VNT2/A VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS37 VS37/A, VSD, VSD/A, VSD3, VSD3/A, VSD7, VSD7/A, VSH7, VW12, VW12/A, VW22 VWA, VWA2, VWA2/A, VWN2, VWN2/A, VWT4, VWT4/A, VX, VX26, VXB, VXB/A, VXB2 VXB6, VXB7, VXB7/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXEB VXEB/A, VVG, VXP, VXP/A, VXQ4, VXQ4/A, VXQP, VXT1, VXT1/A, VXTB, VXU, VXU1 VXU1/A, W1, WMA4, WMT8, WXE8

2

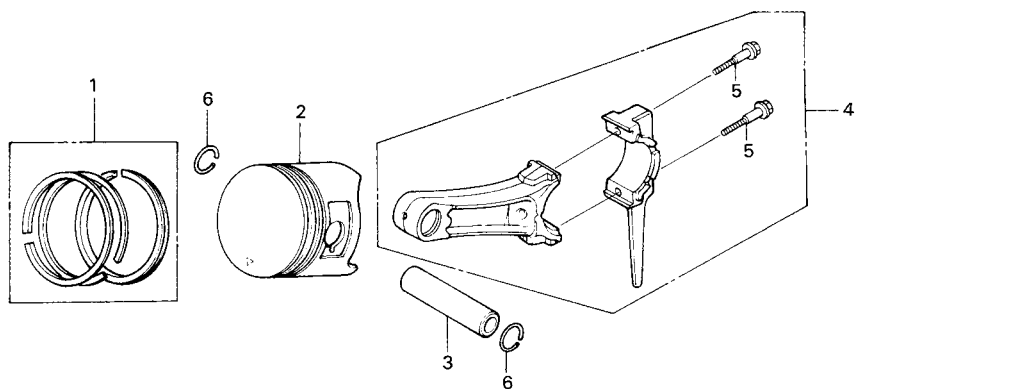

ZH90-E0800A




Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
(1)	13013-ZE8-601	RING SET, PISTON(0.75)(NIPPON)	(1)	(1)	(1)	-----	ES1, ES3, ESS, HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8 HEA8/A, HH, HX, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A, L1, LH, LHB1, LHB3 LHE, LHQ4, LJ, LJC, LJC/A, LJG, LSS, LT, LTJ, LW, LWD, LWD1, LX, LX16, LXE, LXE8 LXE8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ, PA, PA2, PA2/A, PAE2, PAE2/A, PX, PX26 PX26/A, PXE8, PXE8/A, PXU, PXU/A, Q1, Q2, QA, QA2, QA2/A, QAB1, QAB3, QAE QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAO, QAO4, QAO4/A QAR2, QAR2/A, QAW, QAW/A, QD, QE, QE/A, QH, QH26, QH26/A, QHC, QHE, QHE4 QHE4/A, QHP1, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QKE3, QKE3/A QKE4, QL2, QME2, QME2/A, QMH, QP, QSC, QSC9, QSC9/A, QSE, QSE2, QSE8, QSE8/A QT, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX, QX26, QX26/A, QXB, QXB/A, QXB6 QXB6/A, QXB7, QXB7/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXEB, QXQ4, QXQ4/A, QXU, QXU/A, R1 RA, RA2, RA2/A, RD, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2 RSC2/A, RSS, RX, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A, S1, SD, SE, SE/A, SH SHE, SHEZ, SHQ4, SHQ4/A, SJ, SJG, SJG, SK, SKE1, SMC4, SMC4/A, SMD, SME1 SME1/A, SME6, SME6/A, SMX2, SN, SW, SWA4, SWC4, SWC4/A, SWE, SX, SX2, SXB SXB/A, SXB7, SXB7/A, SXE, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4 SXQ4/A, SXU, SXU/A, V1, VA, VA2, VA2/A, VAG2, VAG2/A, VAW, VAW1, VD16, VDE VDE2, VDE2/A, VEB6, VH, VKB2, VKB2/A, VKE4, VKX4, VM2, VM2/A, VMA4, VME2 VME2/A, VME4, VMS2, VMT, VMX2, VN17, VN17/A, VNG1, VNG1/A, VNT2, VNT2/A VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS37 VS37/A, VSD, VSD/A, VSD3, VSD3/A, VSD7, VSD7/A, VSH7, VW12, VW12/A, VW22 VWA, VWA2, VWA2/A, VWN2, VWN2/A, VWT4, VWT4/A, VX, VX26, VXB, VXB/A, VXB2 VXB6, VXB7, VXB7/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8 VXE8/A, VXG, VXP, VXP/A, VXQ4, VXQ4/A, VXQP, VXT1, VXT1/A, VXTB, VXU, VXU1 VXU1/A, W1, WMA4, WMT8, WXE8

E-8

PISTON

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
(1)	13013-ZE8-602	RING SET, PISTON(0.75) (TEIKOKU)	(1)	(1)	(1)	-----	ES1, ES3, ESS, HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8 HEA8/A, HH, HX, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A, L1, LH, LHB1, LHB3 LHE, LHQ4, LJ, LJC, LJC/A, LJG, LSS, LT, LTJ, LW, LWD, LWD1, LX, LX16, LXE, LXE8 LXE8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ, PA, PA2, PA2/A, PAE2, PAE2/A, PX, PX26 PX26/A, PXE8, PXE8/A, PXU, PXU/A, Q1, Q2, QA, QA2, QA2/A, QAB1, QAB3, QAE QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAQ, QAQ4, QAQ4/A QAR2, QAR2/A, QAW, QAW/A, QD, QE, QE/A, QH, QH26, QH26/A, QHC, QHE, QHE4 QHE4/A, QHP1, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QKE3, QKE3/A QKE4, QL2, QME2, QME2/A, QMH, QP, QSC, QSC9, QSC9/A, QSE, QSE2, QSE8, QSE8/A QT, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX, QX26, QX26/A, QXB, QXB/A, QXB6 QXB6/A, QXB7, QXB7/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXEB, QXQ4, QXQ4/A, QXU, QXU/A, R1 RA, RA2, RA2/A, RD, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2 RSC2/A, RSS, RX, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A, S1, SD, SE, SE/A, SH SHE, SHEZ, SHQ4, SHQ4/A, SJ, SJG, SJP, SK, SKE1, SMC4, SMC4/A, SMD, SME1 SME1/A, SME6, SME6/A, SMX2, SN, SW, SWA4, SWC4, SWC4/A, SWE, SX, SX2, SXB SXB/A, SXB7, SXB7/A, SXE, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4 SXQ4/A, SXU, SXU/A, V1, VA, VA2, VA2/A, VAG2, VAG2/A, VAW, VAW1, VD16, VDE VDE2, VDE2/A, VEB6, VH, VKB2, VKB2/A, VKE4, VKX4, VM2, VM2/A, VMA4, VME2 VME2/A, VME4, VMS2, VMT, VMX2, VN17, VN17/A, VNG1, VNG1/A, VNT2, VNT2/A VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS37 VS37/A, VSD, VSD/A, VSD3, VSD3/A, VSD7, VSD7/A, VSH7, VW12, VW12/A, VW22 VWA, VWA2, VWA2/A, VWN2, VWN2/A, VWT4, VWT4/A, VX, VX26, VXB, VXB/A, VXB2 VXB6, VXB7, VXB7/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXEB VXEB/A, VXG, VXP, VXP/A, VXQ4, VXQ4/A, VXQP, VXT1, VXT1/A, VXTB, VXU, VXU1 VXU1/A, W1, WMA4, WMT8, WXE8
	13010-ZE8-601	RING SET, PISTON(STD.)(NIPPON)	1	1	-	-----	2456210 ES1/A, ES3/A, ESS/A, HX/A, L1/A, LH/A, LHB5, LHE/A, LJ/A, LJG/A, LT/A, LW/A LWD1/A, LX/A, LXE/A, PX/A, Q1/A, QAB3/A, QD/A, QH/A, QHB5, QHP1/A, QHZ/A QMH/A, QP/A, QSE/A, QT/A, QX/A, QXE/A, QXE9, QXK, R1/A, RD/A, RSS/A, RX/A S1/A, SD/A, SH/A, SJ/A, SJG/A, SN/A, SX/A, SXE/A, VKK, VMT/A, VPK, VS3, VS4 VX/A, VXE8, VXX, VXU/A, W1/A, WMT8/A, WXE8/A
	13010-ZE8-602	RING SET, PISTON(STD.) (TEIKOKU)	1	1	-	-----	2456210 ES1/A, ES3/A, ESS/A, HX/A, L1/A, LH/A, LHB5, LHE/A, LJ/A, LJG/A, LT/A, LW/A LWD1/A, LX/A, LXE/A, PX/A, Q1/A, QAB3/A, QD/A, QH/A, QHB5, QHP1/A, QHZ/A QMH/A, QP/A, QSE/A, QT/A, QX/A, QXE/A, QXE9, QXK, R1/A, RD/A, RSS/A, RX/A S1/A, SD/A, SH/A, SJ/A, SJG/A, SN/A, SX/A, SXE/A, VKK, VMT/A, VPK, VS3, VS4 VX/A, VXE8, VXX, VXU/A, W1/A, WMT8/A, WXE8/A
	13011-ZE8-601	RING SET, PISTON(0.25)(NIPPON)	(1)	(1)	-	-----	2456210 ES1/A, ES3/A, ESS/A, HX/A, L1/A, LH/A, LHB5, LHE/A, LJ/A, LJG/A, LT/A, LW/A LWD1/A, LX/A, LXE/A, PX/A, Q1/A, QAB3/A, QD/A, QH/A, QHB5, QHP1/A, QHZ/A QMH/A, QP/A, QSE/A, QT/A, QX/A, QXE/A, QXE9, QXK, R1/A, RD/A, RSS/A, RX/A S1/A, SD/A, SH/A, SJ/A, SJG/A, SN/A, SX/A, SXE/A, VKK, VMT/A, VPK, VS3, VS4 VX/A, VXE8, VXX, VXU/A, W1/A, WMT8/A, WXE8/A
	13011-ZE8-602	RING SET, PISTON(0.25) (TEIKOKU)	(1)	(1)	-	-----	2456210 ES1/A, ES3/A, ESS/A, HX/A, L1/A, LH/A, LHB5, LHE/A, LJ/A, LJG/A, LT/A, LW/A LWD1/A, LX/A, LXE/A, PX/A, Q1/A, QAB3/A, QD/A, QH/A, QHB5, QHP1/A, QHZ/A QMH/A, QP/A, QSE/A, QT/A, QX/A, QXE/A, QXE9, QXK, R1/A, RD/A, RSS/A, RX/A S1/A, SD/A, SH/A, SJ/A, SJG/A, SN/A, SX/A, SXE/A, VKK, VMT/A, VPK, VS3, VS4 VX/A, VXE8, VXX, VXU/A, W1/A, WMT8/A, WXE8/A
	13012-ZE8-601	RING SET, PISTON(0.50)(NIPPON)	(1)	(1)	-	-----	2456210 ES1/A, ES3/A, ESS/A, HX/A, L1/A, LH/A, LHB5, LHE/A, LJ/A, LJG/A, LT/A, LW/A LWD1/A, LX/A, LXE/A, PX/A, Q1/A, QAB3/A, QD/A, QH/A, QHB5, QHP1/A, QHZ/A QMH/A, QP/A, QSE/A, QT/A, QX/A, QXE/A, QXE9, QXK, R1/A, RD/A, RSS/A, RX/A S1/A, SD/A, SH/A, SJ/A, SJG/A, SN/A, SX/A, SXE/A, VKK, VMT/A, VPK, VS3, VS4 VX/A, VXE8, VXX, VXU/A, W1/A, WMT8/A, WXE8/A


2

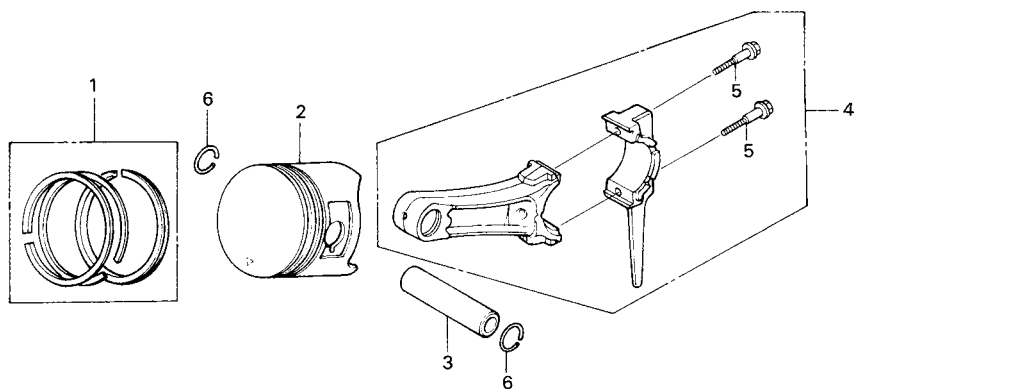

ZH90-E0800A



Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
(1)	13012-ZE8-602	RING SET, PISTON(0.50) (TEIKOKU)	(1)	(1)	-	2456210	ES1/A, ES3/A, ESS/A, HX/A, L1/A, LH/A, LHB5, LHE/A, LJ/A, LJG/A, LT/A, LW/A, LWD1/A, LX/A, LXE/A, PX/A, Q1/A, QAB3/A, QD/A, QH/A, QHB5, QHP1/A, QHZ/A, QMH/A, QP/A, QSE/A, QT/A, QX/A, QXE/A, QXE9, QXK, R1/A, RD/A, RSS/A, RX/A, S1/A, SD/A, SH/A, SJ/A, SJG/A, SN/A, SX/A, SXE/A, VKK, VMT/A, VPK, VS3, VS4, VX/A, VXE8, VXX, VXU/A, W1/A, WMT8/A, WXE8/A
	13013-ZE8-601	RING SET, PISTON(0.75)(NIPPON)	(1)	(1)	-	2456210	ES1/A, ES3/A, ESS/A, HX/A, L1/A, LH/A, LHB5, LHE/A, LJ/A, LJG/A, LT/A, LW/A, LWD1/A, LX/A, LXE/A, PX/A, Q1/A, QAB3/A, QD/A, QH/A, QHB5, QHP1/A, QHZ/A, QMH/A, QP/A, QSE/A, QT/A, QX/A, QXE/A, QXE9, QXK, R1/A, RD/A, RSS/A, RX/A, S1/A, SD/A, SH/A, SJ/A, SJG/A, SN/A, SX/A, SXE/A, VKK, VMT/A, VPK, VS3, VS4, VX/A, VXE8, VXX, VXU/A, W1/A, WMT8/A, WXE8/A
	13013-ZE8-602	RING SET, PISTON(0.75) (TEIKOKU)	(1)	(1)	-	2456210	ES1/A, ES3/A, ESS/A, HX/A, L1/A, LH/A, LHB5, LHE/A, LJ/A, LJG/A, LT/A, LW/A, LWD1/A, LX/A, LXE/A, PX/A, Q1/A, QAB3/A, QD/A, QH/A, QHB5, QHP1/A, QHZ/A, QMH/A, QP/A, QSE/A, QT/A, QX/A, QXE/A, QXE9, QXK, R1/A, RD/A, RSS/A, RX/A, S1/A, SD/A, SH/A, SJ/A, SJG/A, SN/A, SX/A, SXE/A, VKK, VMT/A, VPK, VS3, VS4, VX/A, VXE8, VXX, VXU/A, W1/A, WMT8/A, WXE8/A
	13010-Z5H-004	RING SET, PISTON(STD.)(TPR)··	1	1	-	2456211	ES1/A, ES3/A, ESS/A, HX/A, L1/A, LH/A, LHB5, LHE/A, LJ/A, LJG/A, LT/A, LW/A, LWD1/A, LX/A, LXE/A, PX/A, Q1/A, QAB3/A, QD/A, QH/A, QHB5, QHP1/A, QHZ/A, QMH/A, QP/A, QSE/A, QT/A, QX/A, QXE/A, QXE9, QXK, R1/A, RD/A, RSS/A, RX/A, S1/A, SD/A, SH/A, SJ/A, SJG/A, SN/A, SX/A, SXE/A, VKK, VMT/A, VPK, VS3, VS4, VX/A, VXE8, VXX, VXU/A, W1/A, WMT8/A, WXE8/A
	13011-Z5H-004	RING SET, PISTON(0.25)(TPR)··	(1)	(1)	-	2456211	ES1/A, ES3/A, ESS/A, HX/A, L1/A, LH/A, LHB5, LHE/A, LJ/A, LJG/A, LT/A, LW/A, LWD1/A, LX/A, LXE/A, PX/A, Q1/A, QAB3/A, QD/A, QH/A, QHB5, QHP1/A, QHZ/A, QMH/A, QP/A, QSE/A, QT/A, QX/A, QXE/A, QXE9, QXK, R1/A, RD/A, RSS/A, RX/A, S1/A, SD/A, SH/A, SJ/A, SJG/A, SN/A, SX/A, SXE/A, VKK, VMT/A, VPK, VS3, VS4, VX/A, VXE8, VXX, VXU/A, W1/A, WMT8/A, WXE8/A

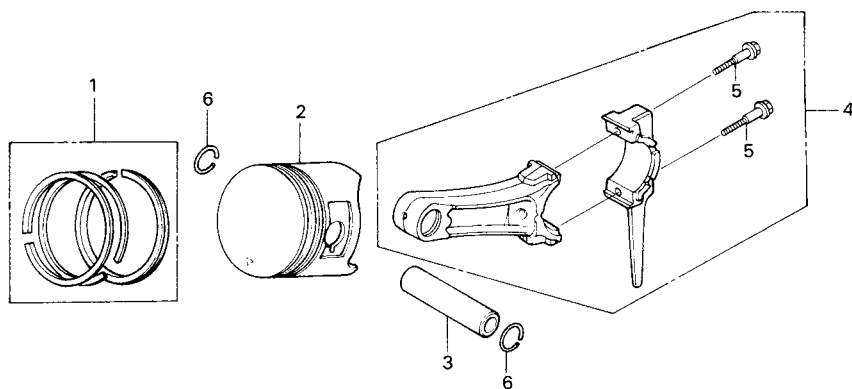

ZH90-E0800A



Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
(2)	13103-ZH9-000	PISTON(0.50).....	(1)	(1)	(1)	-----	ES1, ES3, ESS, HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8 HEA8/A, HH, HX, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A, L1, LH, LHB1, LHB3 LHE, LHQ4, LJ, LJC, LJC/A, LJG, LSS, LT, LTJ, LW, LWD, LWD1, LX, LX16, LXE, LXE8 LXE8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ, PA, PA2, PA2/A, PAE2, PAE2/A, PX, PX26 PX26/A, PXE8, PXE8/A, PXU, PXU/A, Q1, Q2, QA, QA2, QA2/A, QAB1, QAB3, QAE QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAO, QAO4, QAO4/A QAR2, QAR2/A, QAW, QAW/A, QD, QE, QE/A, QH, QH26, QH26/A, QHC, QHE, QHE4 QHE4/A, QHP1, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QKE3, QKE3/A QKE4, QL2, QME2, QME2/A, QMH, QP, QSC, QSC9, QSC9/A, QSE, QSE2, QSE8, QSE8/A QT, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX, QX26, QX26/A, QXB, QXB/A, QXB6 QXB6/A, QXB7, QXB7/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXEB, QXQ4, QXQ4/A, QXU, QXU/A, R1 RA, RA2, RA2/A, RD, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2 RSC2/A, RSS, RX, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A, S1, SD, SE, SE/A, SH SHE, SHEZ, SHQ4, SHQ4/A, SJ, SJG, SJG, SK, SKE1, SMC4, SMC4/A, SMD, SME1 SME1/A, SME6, SME6/A, SMX2, SN, SW, SWA4, SWC4, SWC4/A, SWE, SX, SX2, SXB SXB/A, SXB7, SXB7/A, SXE, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4 SXQ4/A, SXU, SXU/A, V1, VA, VA2, VA2/A, VAG2, VAG2/A, VAW, VAW1, VD16, VDE VDE2, VDE2/A, VEB6, VH, VKB2, VKB2/A, VKE4, VKX4, VM2, VM2/A, VMA4, VME2 VME2/A, VME4, VMS2, VMT, VMX2, VN17, VN17/A, VNG1, VNG1/A, VNT2, VNT2/A VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS37 VS37/A, VSD, VSD/A, VSD3, VSD3/A, VSD7, VSD7/A, VSH7, VW12, VW12/A, VW22 VWA, VWA2, VWA2/A, VWN2, VWN2/A, VWT4, VWT4/A, VX, VX26, VXB, VXB/A, VXB2 VXB6, VXB7, VXB7/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8 VXE8/A, VXG, VXP, VXP/A, VXQ4, VXQ4/A, VXQP, VXT1, VXT1/A, VXTB, VXU, VXU1 VXU1/A, W1, WMA4, WMT8, WXE8


E-8

PISTON

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
(2)	13104-ZH9-000	PISTON(0.75)	(1)	(1)	(1)	-----	ES1, ES3, ESS, HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8 HEA8/A, HH, HX, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A, L1, LH, LHB1, LHB3 LHE, LHQ4, LJ, LJC, LJC/A, LJG, LSS, LT, LTJ, LW, LWD, LWD1, LX, LX16, LXE, LXE8 LXE8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ, PA, PA2, PA2/A, PAE2, PAE2/A, PX, PX26 PX26/A, PXE8, PXE8/A, PXU, PXU/A, Q1, Q2, QA, QA2, QA2/A, QAB1, QAB3, QAE QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAO, QAO4, QAO4/A QAR2, QAR2/A, QAW, QAW/A, QD, QE, QE/A, QH, QH26, QH26/A, QHC, QHE, QHE4 QHE4/A, QHP1, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QKE3, QKE3/A QKE4, QL2, QME2, QME2/A, QMH, QP, QSC, QSC9, QSC9/A, QSE, QSE2, QSE8, QSE8/A QT, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX, QX26, QX26/A, QXB, QXB/A, QXB6 QXB6/A, QXB7, QXB7/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXEB, QXQ4, QXQ4/A, QXU, QXU/A, R1 RA, RA2, RA2/A, RD, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2 RSC2/A, RSS, RX, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A, S1, SD, SE, SE/A, SH SHE, SHEZ, SHQ4, SHQ4/A, SJ, SJG, SJP, SK, SKE1, SMC4, SMC4/A, SMD, SME1 SME1/A, SME6, SME6/A, SMX2, SN, SW, SWA4, SWC4, SWC4/A, SWE, SX, SX2, SXB SXB/A, SXB7, SXB7/A, SXE, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4 SXQ4/A, SXU, SXU/A, V1, VA, VA2, VA2/A, VAG2, VAG2/A, VAW, VAW1, VD16, VDE VDE2, VDE2/A, VEB6, VH, VKB2, VKB2/A, VKE4, VKX4, VM2, VM2/A, VMA4, VME2 VME2/A, VME4, VMS2, VMT, VMX2, VN17, VN17/A, VNG1, VNG1/A, VNT2, VNT2/A VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS37 VS37/A, VSD, VSD/A, VSD3, VSD3/A, VSD7, VSD7/A, VSH7, VW12, VW12/A, VW22 VWA, VWA2, VWA2/A, VWN2, VWN2/A, VWT4, VWT4/A, VX, VX26, VXB, VXB/A, VXB2 VXB6, VXB7, VXB7/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8 VXE8/A, VXE8/A, VXE8/A, VXE8/A, VXE8/A, VXE8/A, VXE8/A, VXE8/A, VXE8/A, VXE8/A VXU1/A, W1, WMA4, WMT8, WXE8
	13101-ZH9-000	PISTON(STD.)	1	1	1	-----	ES1, ES3, ESS, HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8 HEA8/A, HH, HX, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A, L1, LH, LHB1, LHB3 LHE, LHQ4, LJ, LJC, LJC/A, LJG, LSS, LT, LTJ, LW, LWD, LWD1, LX, LX16, LXE, LXE8 LXE8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ, PA, PA2, PA2/A, PAE2, PAE2/A, PX, PX26 PX26/A, PXE8, PXE8/A, PXU, PXU/A, Q1, Q2, QA, QA2, QA2/A, QAB1, QAB3, QAE QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAO, QAO4, QAO4/A QAR2, QAR2/A, QAW, QAW/A, QD, QE, QE/A, QH, QH26, QH26/A, QHC, QHE, QHE4 QHE4/A, QHP1, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QKE3, QKE3/A QKE4, QL2, QME2, QME2/A, QMH, QP, QSC, QSC9, QSC9/A, QSE, QSE2, QSE8, QSE8/A QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX, QX26, QX26/A, QXB, QXB/A, QXB6, QXB6/A QXB7, QXB7/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE, QXE4 QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXEB, QXQ4, QXQ4/A, QXU, QXU/A, R1, RA RA2, RA2/A, RD, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2 RSC2/A, RSS, RX, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A, S1, SD, SE, SE/A, SH SHE, SHEZ, SHQ4, SHQ4/A, SJ, SJG, SJP, SK, SKE1, SMC4, SMC4/A, SMD, SME1 SME1/A, SME6, SME6/A, SMX2, SW, SWA4, SWC4, SWC4/A, SWE, SX, SX2, SXB, SXB/A SXB7, SXB7/A, SXE, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4, SXQ4/A SXU, SXU/A, V1, VA, VA2, VA2/A, VAG2, VAG2/A, VAW, VAW1, VD16, VDE, VDE2 VDE2/A, VEB6, VH, VKB2, VKB2/A, VKE4, VKX4, VM2, VM2/A, VMA4, VME2, VME2/A VME4, VMS2, VMT, VMX2, VN17, VN17/A, VNG1, VNG1/A, VNT2, VNT2/A, VPE4 VPE4/A, VPE5, VPE7, VPE7/A, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS37, VS37/A VSD, VSD/A, VSD3, VSD3/A, VSD7, VSD7/A, VSH7, VW12, VW12/A, VW22, VWA, VWA2 VWA2/A, VWN2, VWN2/A, VWT4, VWT4/A, VX, VX26, VXB, VXB/A, VXB2, VXB6, VXB7 VXB7/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8/A, VXE8/A VXP, VXP/A, VXQ4, VXQ4/A, VXQP, VXT1, VXT1/A, VXTB, VXU, VXU1/A, W1 WMA4, WMT8, WXE8
	13102-ZH9-000	PISTON(0.25)	(1)	(1)	-	-----	2456210 ES1/A, ES3/A, ESS/A, HX/A, L1/A, LH/A, LHB5, LHE/A, LJ/A, LJG/A, LT/A, LW/A LWD1/A, LX/A, LXE/A, PX/A, Q1/A, QAB3/A, QD/A, QH/A, QHB5, QHP1/A, QHZ/A QMH/A, QP/A, QSE/A, QT/A, QX/A, QXE/A, QXE9, QXK, R1/A, RD/A, RSS/A, RX/A S1/A, SD/A, SH/A, SJ/A, SJG/A, SN/A, SX/A, SXE/A, VKK, VMT/A, VPK, VS3, VS4 VX/A, VXE8, VXE8/A, VXE8/A, VXE8/A, VXE8/A, VXE8/A, VXE8/A, VXE8/A, VXE8/A

E-8

PISTON

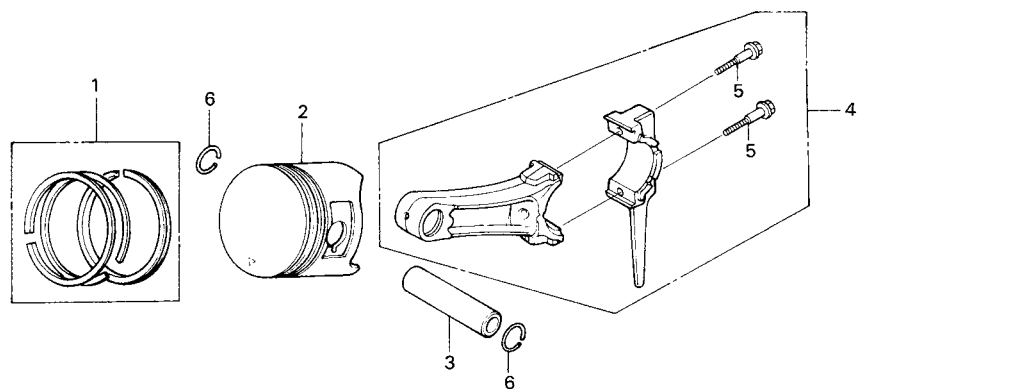


ZH90-E0800A

FR. →

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			GX270				
			(1)	(2)	(3)		
(2)	13103-ZH9-000	PISTON(0.50)	(1)	(1)	-	2456210	ES1/A, ES3/A, ESS/A, HX/A, L1/A, LH/A, LHB5, LHE/A, LJ/A, LJG/A, LT/A, LW/A, LWD1/A, LX/A, LXE/A, PX/A, Q1/A, QAB3/A, QD/A, QH/A, QHB5, QHP1/A, QHZ/A, QMH/A, QP/A, QSE/A, QT/A, QX/A, QXE/A, QXE9, QXK, R1/A, RD/A, RSS/A, RX/A, S1/A, SD/A, SH/A, SJ/A, SJG/A, SN/A, SX/A, SXE/A, VKK, VMT/A, VPK, VS3, VS4, VX/A, VXE8, VXX, VXU/A, W1/A, WMT8/A, WXE8/A
	13104-ZH9-000	PISTON(0.75)	(1)	(1)	-	2456210	ES1/A, ES3/A, ESS/A, HX/A, L1/A, LH/A, LHB5, LHE/A, LJ/A, LJG/A, LT/A, LW/A, LWD1/A, LX/A, LXE/A, PX/A, Q1/A, QAB3/A, QD/A, QH/A, QHB5, QHP1/A, QHZ/A, QMH/A, QP/A, QSE/A, QT/A, QX/A, QXE/A, QXE9, QXK, R1/A, RD/A, RSS/A, RX/A, S1/A, SD/A, SH/A, SJ/A, SJG/A, SN/A, SX/A, SXE/A, VKK, VMT/A, VPK, VS3, VS4, VX/A, VXE8, VXX, VXU/A, W1/A, WMT8/A, WXE8/A
	13101-ZH9-000	PISTON(STD.)	1	1	-	2456210	ES1/A, ES3/A, ESS/A, HX/A, L1/A, LH/A, LHB5, LHE/A, LJ/A, LJG/A, LT/A, LW/A, LWD1/A, LX/A, LXE/A, PX/A, Q1/A, QAB3/A, QD/A, QH/A, QHB5, QHP1/A, QHZ/A, QMH/A, QP/A, QSE/A, QT/A, QX/A, QXE/A, QXE9, QXK, R1/A, RD/A, RSS/A, RX/A, S1/A, SD/A, SH/A, SJ/A, SJG/A, SN/A, SX/A, SXE/A, VKK, VMT/A, VPK, VS3, VS4, VX/A, VXE8, VXX, VXU/A, W1/A, WMT8/A, WXE8/A
	13101-ZH9-010		1	1	-	2456211	ES1/A, ES3/A, ESS/A, HX/A, L1/A, LH/A, LHB5, LHE/A, LJ/A, LJG/A, LT/A, LW/A, LWD1/A, LX/A, LXE/A, PX/A, Q1/A, QAB3/A, QD/A, QH/A, QHB5, QHP1/A, QHZ/A, QMH/A, QP/A, QSE/A, QT/A, QX/A, QXE/A, QXE9, QXK, R1/A, RD/A, RSS/A, RX/A, S1/A, SD/A, SH/A, SJ/A, SJG/A, SN/A, SX/A, SXE/A, VKK, VMT/A, VPK, VS3, VS4, VX/A, VXE8, VXX, VXU/A, W1/A, WMT8/A, WXE8/A
	13102-ZH9-010	PISTON(0.25)	(1)	(1)	-	2456211	ES1/A, ES3/A, ESS/A, HX/A, L1/A, LH/A, LHB5, LHE/A, LJ/A, LJG/A, LT/A, LW/A, LWD1/A, LX/A, LXE/A, PX/A, Q1/A, QAB3/A, QD/A, QH/A, QHB5, QHP1/A, QHZ/A, QMH/A, QP/A, QSE/A, QT/A, QX/A, QXE/A, QXE9, QXK, R1/A, RD/A, RSS/A, RX/A, S1/A, SD/A, SH/A, SJ/A, SJG/A, SN/A, SX/A, SXE/A, VKK, VMT/A, VPK, VS3, VS4, VX/A, VXE8, VXX, VXU/A, W1/A, WMT8/A, WXE8/A

E-8

PISTON

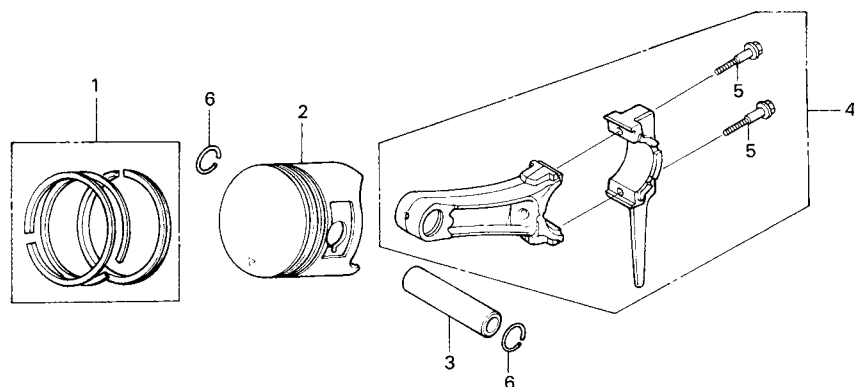


ZH90-E0800A

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
(2)	13103-ZH9-010	PISTON(0.50).....	(1)	(1)	-	2456211	----- ES1/A, ES3/A, ESS/A, HX/A, L1/A, LH/A, LHB5, LHE/A, LJ/A, LJG/A, LT/A, LW/A, LWD1/A, LX/A, LXE/A, PX/A, Q1/A, QAB3/A, QD/A, QH/A, QHB5, QHP1/A, QHZ/A, QMH/A, QP/A, QSE/A, QT/A, QX/A, QXE/A, QXE9, QXK, R1/A, RD/A, RSS/A, RX/A, S1/A, SD/A, SH/A, SJ/A, SJG/A, SN/A, SX/A, SXE/A, VKK, VMT/A, VPK, VS3, VS4, VX/A, VXE8, VXX, VXU/A, W1/A, WMT8/A, WXE8/A
	13104-ZH9-010	PISTON(0.75).....	(1)	(1)	-	2456211	----- ES1/A, ES3/A, ESS/A, HX/A, L1/A, LH/A, LHB5, LHE/A, LJ/A, LJG/A, LT/A, LW/A, LWD1/A, LX/A, LXE/A, PX/A, Q1/A, QAB3/A, QD/A, QH/A, QHB5, QHP1/A, QHZ/A, QMH/A, QP/A, QSE/A, QT/A, QX/A, QXE/A, QXE9, QXK, R1/A, RD/A, RSS/A, RX/A, S1/A, SD/A, SH/A, SJ/A, SJG/A, SN/A, SX/A, SXE/A, VKK, VMT/A, VPK, VS3, VS4, VX/A, VXE8, VXX, VXU/A, W1/A, WMT8/A, WXE8/A
	13101-ZH9-010	PISTON(STD.).....	1	-	-	-----	----- ES4, RA3, VS5
	13102-ZH9-010	PISTON(0.25).....	(1)	-	-	-----	----- ES4, RA3, VS5
	13103-ZH9-010	PISTON(0.50).....	(1)	-	-	-----	----- ES4, RA3, VS5
	13104-ZH9-010	PISTON(0.75).....	(1)	-	-	-----	----- ES4, RA3, VS5
	13101-ZE8-810	PISTON(E=7.1).....	1	-	-	-----	----- QT, QT/A, SN, SN/A
3	13111-ZE2-000	PIN, PISTON.....	1	1	1		
4	13200-ZE2-010	ROD ASSY., CONNECTING(STD.)..	1	1	1		
	13200-ZE2-305	ROD ASSY., CONNECTING (0.25 UNDER SIZE)	(1)	(1)	(1)		
5	90001-ZE8-000	BOLT, CONNECTING ROD.....	2	2	2		
6	90551-ZE1-000	CLIP, PISTON PIN, 18MM.....	2	2	2		

E-9

CAMSHAFT

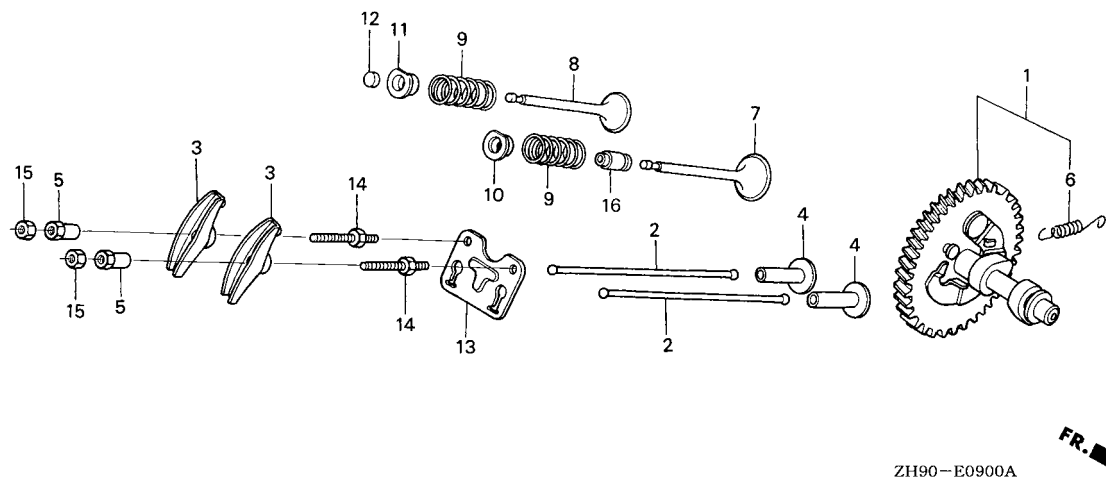


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	1111C2	CAMSHAFT INCLUDES: Valve clearance adjustment	0.4
2	1111L6	ROD, PUSH :INTAKE INCLUDES: Valve clearance adjustment	0.2
	1111L6A	.Replace exhaust push rod add	0.1
	1111L7	ROD, PUSH :EXHAUST INCLUDES: Valve clearance adjustment	0.2
	1111L7A	.Replace intake push rod add	0.1
3	1111A2	ARM, ROCKER :INTAKE INCLUDES: Valve clearance adjustment	0.2
	1111A2A	.Replace exhaust rocker arm add	0.1
	1111A1	ARM, ROCKER :EXHAUST INCLUDES: Valve clearance adjustment	0.2
	1111A1A	.Replace intake rocker arm add	0.1
4	1111L9	LIFTER, VALVE :INTAKE NOTE: Same time for two units	0.4
	1111M0	LIFTER, VALVE :EXHAUST NOTE: Same time for two units	0.4
+	7	1111L1 VALVE, INTAKE	0.7

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
1	14100-ZH9-010	CAMSHAFT ASSY.	1	1	1	-----	ES1, ES1/A, ES3, ES3/A, ES4, ESS/A, L1/A, LJ/A, LJC, LJC/A, LJG/A, LT, LT/A, LW/A, LWD1, LWD1/A, Q1/A, QD/A, QE/A, QKE3, QKE3/A, QP/A, QT/A, QXC4/A, R1/A, RD/A, RXP, RXP/A, S1/A, SD/A, SE/A, SJ/A, SJG/A, SKE1, SMC4/A, SME6/A, SN/A, VKE4, VKK, VKX4, VMT, VMT/A, VPE4, VPE4/A, VPE5, VPK, VPX4, VPX4/A, VPX5, VS3 VS4, VS5, VSD3/A, VWT4/A, VXP/A, VXT1, VXT1/A, W1/A
	14100-ZH9-000		1	1	-	1268284	ESS, HA, HEA, HH, HX, HXQ4, L1, LH, LHB1, LHB3, LHE, LHQ4, LJ, LJG, LSS, LTJ, LW, LWD, LX, LXE, LXQ4, LXZ, PA, PX, Q1, Q2, QA, QAB1, QAB3, QAE, QAQ4, QD, QE, QH, QHC, QHE, QHE4, QHP1, QHQ4, QHZ, QME2, QMH, QP, QSC, QSE, QT, QX, QXB, QXC, QXC4, QXE, QXE4, QXEB, QXQ4, R1, RA, RD, RH, RHE, RHE4, RHQ4, RX, RXQ4, S1, SD, SE, SH, SHE, SHEZ, SHQ4, SJ, SJG, SJP, SK, SMC4, SMD, SME1, SME6, SN, SW, SWC4, SWE, SX, SXB, SXE, SXE4, SXEB, SXQ4, V1, VA, VAW, VAW1, VDE, VH, VNG1, VSD, VSD3, VWA, VWT4, VX, VXB, VXE, VXQ4, VXEB, VXG, VXQ4, VXU, W1
	14100-ZH9-010		1	1	-	1268285	ESS, HA, HEA, HH, L1, LHB1, LHB3, LHQ4, LJ, LJG, LSS, LTJ, LW, LWD, LXZ, PA, Q1, Q2, QA, QAB1, QAE, QD, QE, QHC, QHE, QP, QSC, QT, QXC, QXC4, QXEB, R1, RA, RD, RHE, S1, SD, SE, SHE, SHEZ, SJ, SJG, SJP, SK, SMC4, SME6, SN, SW, SWE, V1, VA, VAW, VAW1, VSD3, VWA, VWT4, W1
	14100-ZE3-020		1	-	1	-----	HA2/A, HAP, HAP/A, HEA2/A, HEA8, HEA8/A, HX/A, HX26/A, HX8/A, HXQ4/A, LH/A, LHB5, LHE/A, LX/A, LXE/A, LXE8/A, LXQ4/A, LXU/A, PA2/A, PAE2/A, PX/A, PX26/A, PXE8, PXE8/A, PXU/A, QA2/A, QAB3/A, QAE2/A, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAQ4/A, QAR2/A, QAW, QAW/A, QH/A, QH26/A, QHB5, QHE4/A, QHP1/A, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ/A, QKE4, QL2, QME2/A, QMH/A, QSC9/A, QSE/A, QSE2, QSE8/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX/A, QX26/A, QXB/A, QXB6/A, QXC6/A, QXC9/A, QXE/A, QXE4/A, QXE6/A, QXE8/A, QXE9, QXK, QXQ4/A, QXU/A, RA2/A, RA3, RH26/A, RHE4/A, RHQ4/A, RSC2/A, RSS, RSS/A, RX/A, RXQ4/A, RXU/A, SH/A, SHQ4/A, SME1/A, SMX2, SWA4, SWC4/A, SX/A, SXB/A, SXE/A, SXE4/A, SXE8/A, SXEB/A, SXQ4/A, SXU/A, VA2/A, VAG2, VAG2/A, VDE2/A, VKB2, VKB2/A, VM2/A, VMA4, VME2/A, VME4, VMS2, VMX2, VNG1/A, VNT2, VNT2/A, VSD/A, VW12/A, VWA2/A, VWN2/A, VX/A, VXB/A, VXE4/A, VXE6, VXE6/A, VXE8, VXEB/A, VXX, VXQ4/A, VXU/A, VXU1/A, WMA4, WMT8/A, WXE8, WXE8/A

E-9

CAMSHAFT

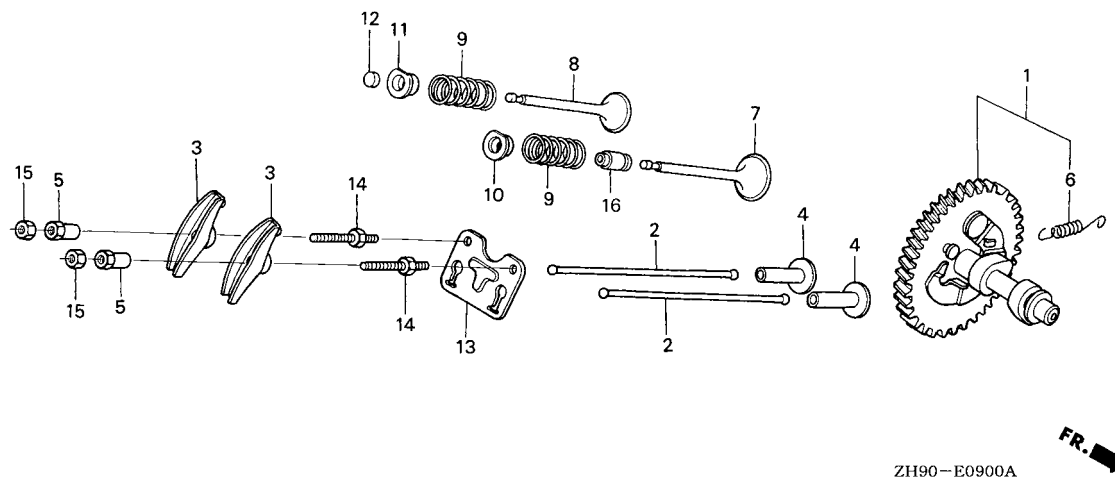


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
+ 7		.INCLUDES: Valve clearance adjustment and reface	
1111L1E		.Replace intake and exhaust all add	0.1
8 1111L0		VALVE, EXHAUST	0.7
		.INCLUDES: Valve clearance adjustment and reface	
1111L0E		.Replace intake and exhaust all add	0.1
9 1111P3		SPRING, VALVE :INTAKE	0.6
		.INCLUDES:	
1111P3A		Valve clearance adjustment .Replace intake and exhaust all add	0.1
1111P4		SPRING, VALVE :EXHAUST	0.6
		.INCLUDES:	
1111P4A		Valve clearance adjustment .Replace intake and exhaust all add	0.1
12 1111J7		ROTATOR, VALVE	0.2
		.INCLUDES:	
16 1111K2		Valve clearance adjustment SEAL, INTAKE VALVE STEM	0.6
		.INCLUDES:	
		Valve clearance adjustment	

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
(1)	14100-ZK3-870	CAMSHAFT ASSY.	1	-	-	-----	QXB7,QXB7/A,SXB7,SXB7/A,VN17,VN17/A,VSD7,VSD7/A,VSH7,VXB7,VXB7/A VXE7,VXE7/A
	14100-ZK9-870		1	-	-	-----	VPE7,VPE7/A,VPX7,VPX7/A,VS37,VS37/A
	14100-ZE3-010		1	-	-	1267906	HA2,HAQ,HEA2,HX26,LX16,PA2,PAE2,PX26,QA2,QAE2,QAE6,QAQ,QAR2,QH26 QSC9,QX26,QXB6,QXC6,QXC9,QXE6,RA2,RH26,RSC2,SX2,VA2,VD16,VDE2 VEB6,VM2,VME2,VW12,VW22,VWA2,VWN2,VX26,VXB2,VXB6
	14100-ZH9-010		1	-	-	1445376	WMT8
	14100-ZE3-020		1	-	-	1471451	HX8,LXE8,LXU,PXU,QSE8,QXE8,QXU,RXU,SXE8,SXU,VXTB,VXU1
	14100-ZH9-010		1	-	-	1267907	HA2,HAQ,HEA2,HX26,LX16,PA2,PAE2,PX26,QA2,QAE2,QAE6,QAQ,QAR2,QH26 QSC9,QX26,QXB6,QXC6,QXC9,QXE6,RA2,RH26,RSC2,SX2,VA2,VD16,VDE2 VEB6,VM2,VME2,VW12,VW22,VWA2,VWN2,VX26,VXB2,VXB6
	14100-ZH9-010		1	-	-	1268285	1340169 SWC4
	14100-ZE3-020		1	-	-	1471451	HX,HXQ4,LH,LHE,LX,LXE,LXQ4,PX,QAB3,QAQ4,QH,QHE4,QHP1,QHQ4,QHZ QME2,QMH,QSE,QX,QXB,QXE,QXE4,QXQ4,RH,RHE4,RHQ4,RX,RXQ4,SH,SHQ4 SMD,SME1,SX,SXB,SXE,SXE4,SXEB,SXQ4,VDE,VH,VNG1,VSD,VX,VXB,VXE VXE4,VXEB,VXG,VXQ4,VXU
	14100-ZH9-000		-	-	1	1000029	VXP,VXQP
	14100-ZH9-010		-	-	1	1000030	VXP,VXQP
2	14410-ZE2-013	ROD, PUSH	2	2	2		
3	14431-ZE2-010	ARM, VALVE ROCKER	2	2	2		
4	14441-ZE2-000	LIFTER, VALVE	2	2	2		
5	14451-ZE1-013	PIVOT, ROCKER ARM	2	2	2		


E-9

CAMSHAFT

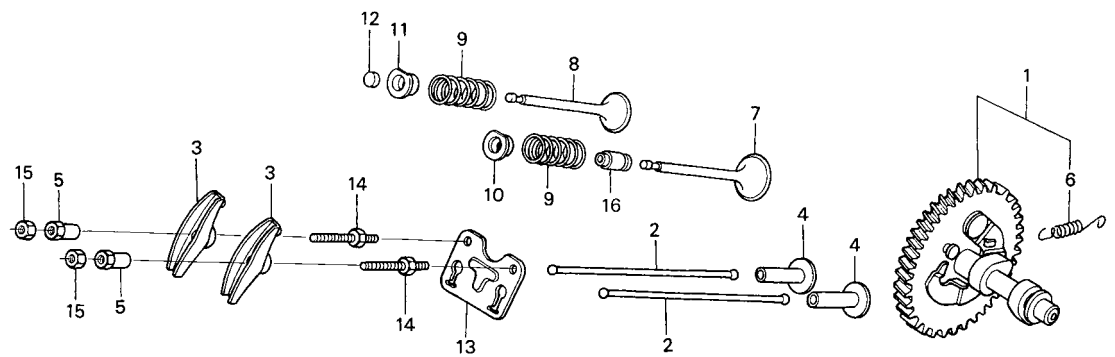

ZH90-E0900A

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	GX270 (2)	(3)		
6	14568-ZE1-000	SPRING, WEIGHT RETURN	1	1	1		
7	14711-ZE2-000	VALVE, IN.	1	1	-		
	14711-ZE2-W00		-	-	1		
8	14721-ZE2-000	VALVE, EX.	1	-	-		
	14721-ZE2-810	VALVE, EX.(STELLITE)	-	(1)	-		
	14721-ZE2-W00		-	(1)	-		
9	14751-ZE2-003	SPRING, VALVE	2	2	2		
10	14771-ZE2-000	RETAINER, IN. VALVE SPRING...	1	1	1		
11	14773-ZE2-000	RETAINER, EX. VALVE SPRING...	1	1	-		
	14771-ZE2-000	RETAINER, IN. VALVE SPRING... (EXHAUST SIDE)	-	-	1		
12	14781-ZE2-000	ROTATOR, VALVE	1	1	-		
13	14791-ZE2-010	GUIDE, PUSH ROD	1	1	1		
14	90012-ZE0-010	BOLT, PIVOT, 8MM	2	2	2		
15	90206-ZE1-000	NUT, PIVOT ADJUSTING	2	2	2		

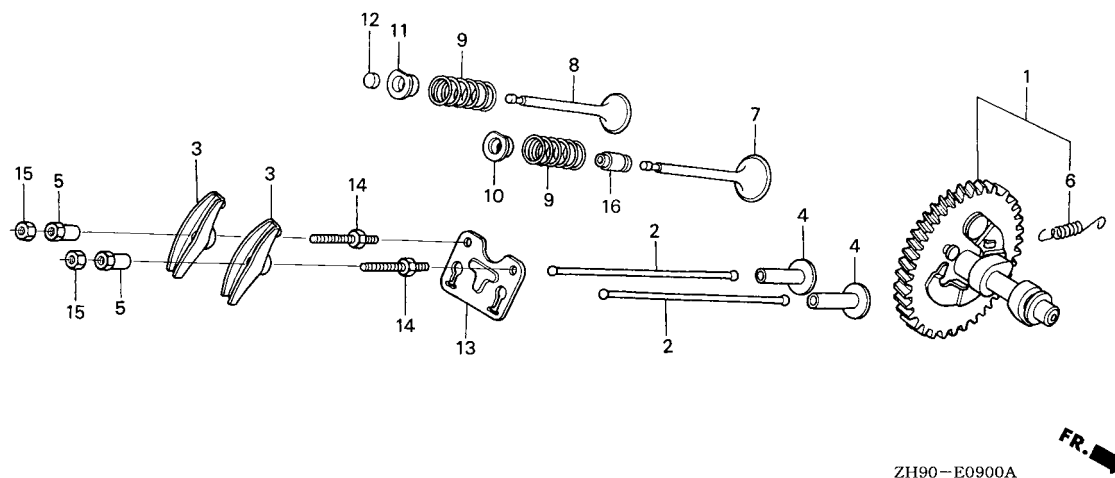

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
16	12209-ZE8-003	SEAL, VALVE STEM.....	1	1	1	-----	ES1/A, ES3/A, ES4, ESS/A, HA2/A, HAP, HAP/A, HEA2/A, HEA8/A, HX/A, HX26/A, HX8/A, HXQ4/A, L1/A, LH/A, LHB5, LHE/A, LJ/A, LJC/A, LJG/A, LT/A, LW/A, LWD1/A, LX/A, LXE/A, LXE8/A, LXQ4/A, LXU/A, PA2/A, PAE2/A, PX/A, PX26/A, PXE8/A, PXU/A, Q1/A, QA2/A, QAB3/A, QAE2/A, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAQ4/A, QAR2/A, QAW/A, QD/A, QE/A, QH/A, QH26/A, QHB5, QHE4/A, QHP1/A, QHQ4/A, QHR/A, QHR4/A, QHZ/A, QKE3/A, QKE4, QME2/A, QMH/A, QP/A, QSC9/A, QSE/A, QSE2, QSE8/A, QT/A, QWA4/A, QWH2, QWH2/A, QX/A, QX26/A, QXB/A, QXB6/A, QXB7, QXB7/A, QXC4/A, QXC6/A, QXC9/A, QXE/A, QXE4/A, QXE6/A, QXE8/A, QXE9, QXK, QXQ4/A, QXU/A, R1/A, RA2/A, RA3, RD/A, RH26/A, RHE4/A, RHQ4/A, RSC2/A, RSS/A, RX/A, RXP, RXP/A, RXQ4/A, RXU/A, S1/A, SD/A, SE/A, SH/A, SHQ4/A, SJ/A, SJG/A, SMC4/A, SME1/A, SME6/A, SMX2, SN/A, SWA4, SWC4/A, SX/A, SXB/A, SXB7, SXB7/A, SXE/A, SXE4/A, SXE8/A, SXEB/A, SXQ4/A, SXU/A, VA2/A, VAG2, VAG2/A, VDE2/A, VKB2/A, VKE4, VKK, VKX4, VM2/A, VMA4, VME2/A, VME4, VMS2, VMT/A, VMX2, VN17, VN17/A, VNG1/A, VNT2/A, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4, VS5, VSD/A, VSD3/A, VSD7, VSD7/A, VSH7, VW12/A, VWA2/A, VWN2/A, VWT4/A, VX/A, VXB/A, VXB7, VXB7/A, VXE4/A, VXE6/A, VXE7, VXE7/A, VXE8, VXEB/A, VXX, VXP, VXP/A, VXQ4/A, VXQP, VXT1/A, VXU/A, VXU1/A, W1/A, WMA4, WMT8/A, WXE8/A
			1	1	-	1703119	-----
							ES1, ES3, ESS, HA2, HEA2, HEA8, HX, HX26, HX8, HXQ4, L1, LH, LHE, LJ, LJC, LJG, LT, LW, LWD, LWD1, LX, LXE, LXE8, LXQ4, LXU, PA2, PAE2, PX, PX26, PXE8, PXU, Q1, QA2, QAB3, QAE2, QAE6, QAQ4, QAR2, QAW, QD, QE, QH, QH26, QHE4, QHP1, QHQ4, QHR, QHR4, QHZ, QKE3, QL2, QME2, QMH, QP, QSC9, QSE, QSE8, QT, QWA2, QWA4, QX, QX26, QXB, QXB6, QXC4, QXC6, QXC9, QXE, QXE4, QXE6, QXE8, QXQ4, QXU, R1, RA2, RD, RH26, RHE4, RHQ4, RSC2, RSS, RX, RXQ4, RXU, S1, SD, SE, SH, SHQ4, SJ, SJG, SKE1, SMC4, SME1, SME6, SN, SWC4, SX, SXB, SXE, SXE4, SXE8, SXEB, SXQ4, SXU, VA2, VDE2, VKB2, VM2, VME2, VMT, VNG1, VNT2, VPE4, VPX4, VSD, VSD3, VW12, VWA2, VWN2, VWT4, VX, VXB, VXE4, VXE6, VXEB, VXQ4, VXT1, VXTB, VXU, VXU1, W1, WMT8, WXE8

E-11

RECOIL STARTER

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
(1)	28400-ZE2-W01ZA	STARTER ASSY., RECOIL *R8*.....BRIGHT RED	1	-	-	2080023	ES1/A, ES3/A, ESS/A, HA2/A, HEA2/A, HEA8/A, HX/A, HX26/A, HX8/A, HXQ4/A, LH/A, LHB5, LHE/A, LJ/A, LJC/A, LJG/A, LT/A, LW/A, LX/A, LX26/A, LX8/A, LXQ4/A, LXU/A, PA2/A, PAE2/A, PX/A, PX26/A, PXE8/A, PXU/A, QA2/A, QAB3/A, QAE2/A, QAE6/A, QAG/A, QAG2/A, QAQ4/A, QAR2/A, QAW/A, QD/A, QE/A, QH/A, QH26/A, QHB5, QHE4/A, QHP1/A, QHQ4/A, QHR/A, QHR4/A, QHZ/A, QME2/A, QMH/A, QP/A, QSC9/A, QSE/A, QSE2, QSE8/A, QT/A, QX/A, QX26/A, QXB/A, QXB6/A, QXB7/A, QXC4/A, QXC6/A, QXC9/A, QXE/A, QXE4/A, QXE6/A, QXE8/A, QXQ4/A, QXU/A, RA2/A, RD/A, RH26/A, RHE4/A, RHQ4/A, RSC2/A, RSS/A, RX/A, RXQ4/A, RXU/A, SD/A, SE/A, SH/A, SHQ4/A, SJ/A, SJG/A, SMC4/A, SME1/A, SME6/A, SN/A, SWC4/A, SX/A, SXB/A, SXB7/A, SXE/A, SXE4/A, SXE8/A, SXEB/A, SXQ4/A, SXU/A, VA2/A, VAG2/A, VDE2/A, VKB2/A, VM2/A, VME2/A, VMT/A, VNG1/A, VNT2/A, VPE4/A, VPE7/A, VPX4/A, VPX7/A, VS37/A, VSD/A, VSD3/A, VSD7/A, VW12/A, VWN2/A, VWT4/A, VX/A, VXB/A, VXB7/A, VXE4/A, VXE6/A, VXE7/A, VXE8/A, VXQ4/A, VXT1/A, VXU/A, VXU1/A, WMT8/A, WXE8/A
	28400-ZE2-W01ZN	*R280*.....POWER RED	1	-	-	2481929	ES4, QXE9, QXK, RA3, VPK, VXE8, VXK
	28400-ZE2-W01ZB	*NH1*.....BLACK	1	-	-	2481929	QXK, RA3, VKK, VXE8
	28400-ZE2-W01ZG	*NH105*.....MAT BLACK(#15-#20)	1	-	-	2481929	VS3, VS4, VS5
	28400-ZE2-W01ZL	*T77*.....SEC WINE RED	1	-	-	2485910	ES3/A, ES4
	28400-ZE2-W01ZN	*R280*.....POWER RED	1	-	-	2080024	HA2/A, HEA2/A, HEA8/A, HX26/A, HX8/A, HXQ4/A, LJC/A, LJG/A, LT/A, LX26/A, LX8/A, LXQ4/A, LXU/A, PA2/A, PAE2/A, PX26/A, PXE8/A, PXU/A, QA2/A, QAB3/A, QAE2/A, QAE6/A, QAG/A, QAG2/A, QAQ4/A, QAR2/A, QAW/A, QE/A, QH/A, QH26/A, QHE4/A, QHQ4/A, QHR/A, QHR4/A, QHZ/A, QME2/A, QMH/A, QP/A, QSC9/A, QSE/A, QSE2, QSE8/A, QT/A, QX26/A, QXB/A, QXB6/A, QXB7/A, QXC4/A, QXC6/A, QXC9/A, QXE4/A, QXE6/A, QXE8/A, QXQ4/A, QXU/A, RA2/A, RH26/A, RHE4/A, RHQ4/A, RSC2/A, RXQ4/A, RXU/A, SE/A, SHQ4/A, SMC4/A, SME1/A, SME6/A, SN/A, SWC4/A, SXB/A, SXB7/A, SXE4/A, SXE8/A, SXEB/A, SXQ4/A, SXU/A, VA2/A, VAG2/A, VDE2/A, VKB2/A, VM2/A, VME2/A, VNG1/A, VNT2/A, VPE4/A, VPE7/A, VPX4/A, VPX7/A, VS37/A, VSD/A, VSD3/A, VSD7/A, VW12/A, VWN2/A, VWT4/A, VXB/A, VXB7/A, VXE4/A, VXE6/A, VXE7/A, VXE8/A, VXQ4/A, VXT1/A, VXU1/A, WMT8/A, WXE8/A
			1	-	-	2080024	2481929 ES1/A, ES3/A, ESS/A, HX/A, LH/A, LHB5, LHE/A, LJ/A, LW/A, LX/A, PX/A, QD/A, QHB5, QHP1/A, QX/A, QXE/A, RD/A, RSS/A, RX/A, SD/A, SH/A, SJ/A, SJG/A, SX/A, SXE/A, VMT/A, VX/A, VXU/A
	28400-ZE2-W01ZM	*T80*.....BAKELITE ORANGE	1	-	-	2475695	2485910 ES3/A
	28400-ZE2-W02ZN	*R280*.....POWER RED	1	-	-	2481930	ES1/A, ES3/A, ES4, ESS/A, HX/A, LH/A, LHB5, LHE/A, LJ/A, LW/A, LX/A, PX/A, QD/A, QHB5, QHP1/A, QX/A, QXE/A, RD/A, RSS/A, RX/A, SD/A, SH/A, SJ/A, SJG/A, SX/A, SXE/A, VMT/A, VPK, VX/A, VXE8, VXK, VXU/A
	28400-ZE2-W02ZB	*NH1*.....BLACK	1	-	-	2481930	QXK, RA3, VKK, VXE8
	28400-ZE2-W02ZG	*NH105*.....MAT BLACK(#15-#20)	1	-	-	2481930	VS3, VS4, VS5
	28400-ZE2-W02ZM	*T80*.....BAKELITE ORANGE	1	-	-	2485911	ES3/A
	28400-ZE2-W02ZL	*T77*.....SEC WINE RED	1	-	-	2485911	ES3/A, ES4
	28400-ZE2-W01ZA	*R8*.....BRIGHT RED	-	(1)	-		L1, Q1, Q2, R1, S1, V1, W1
			-	(1)	-	2085591	L1/A, Q1/A, R1/A, S1/A, W1/A
	28400-ZE2-W01ZN	*R280*.....POWER RED	-	(1)	-	2085592	R1/A, W1/A
			-	(1)	-	2085592	L1/A, Q1/A, S1/A
	28400-ZE2-W02ZN	*R280*.....POWER RED	-	(1)	-	2481930	L1/A, Q1/A, S1/A
	28400-ZE2-W01ZA	*R8*.....BRIGHT RED	-	-	1	1100008	HAP/A, RXP/A, VXP/A
	28400-ZE2-W01ZN	*R280*.....POWER RED	-	-	1	1100009	HAP/A, RXP/A, VXP/A

E-11


RECOIL STARTER

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
(2)	28410-ZE2-W01ZA	CASE COMP., RECOIL STARTER *R8*.....BRIGHT RED	1	-	-	2080023	ES1/A, ES3/A, ESS/A, HA2/A, HEA2/A, HEA8/A, HX/A, HX26/A, HX8/A, HXQ4/A LH/A, LHB5, LHE/A, LJ/A, LJC/A, LJG/A, LT/A, LW/A, LX/A, LX8/A, LXQ4/A LXQ4/A, LXU/A, PA2/A, PAE2/A, PX/A, PX26/A, PXE8/A, PXU/A, QA2/A, QAB3/A QAE2/A, QAE6/A, QAG/A, QAG2/A, QAQ4/A, QAR2/A, QAW/A, QD/A, QE/A, QH/A QH26/A, QHB5, QHE4/A, QHP1/A, QHQ4/A, QHR/A, QHR4/A, QHZ/A, QME2/A, QMH/A QP/A, QSC9/A, QSE/A, QSE2, QSE8/A, QT/A, QX/A, QX26/A, QXB/A, QXB6/A QXB7/A, QXC4/A, QXC6/A, QXC9/A, QXE/A, QXE4/A, QXE6/A, QXE8/A, QXQ4/A QXU/A, RA2/A, RD/A, RH26/A, RHE4/A, RHQ4/A, RSC2/A, RSS/A, RX/A, RXQ4/A RXU/A, SD/A, SE/A, SH/A, SHQ4/A, SJ/A, SJG/A, SMC4/A, SME1/A, SME6/A, SN/A SWC4/A, SX/A, SXB/A, SXB7/A, SXE/A, SXE4/A, SXE8/A, SXEB/A, SXQ4/A, SXU/A VA2/A, VAG2/A, VDE2/A, VKB2/A, VM2/A, VME2/A, VMT/A, VNT2/A, VPE4/A VPE7/A, VPX4/A, VPX7/A, VS37/A, VSD/A, VSD3/A, VSD7/A, VW12/A, VWN2/A VWT4/A, VX/A, VXB/A, VXB7/A, VXE4/A, VXE6/A, VXE7/A, VXEB/A, VXQ4/A VXT1/A, VXU/A, VXU1/A, WMT8/A, WXE8/A
	28410-ZE2-W01ZN	*R280*.....POWER RED	1	-	-	2080024	ES1/A, ES3/A, ESS/A, HA2/A, HEA2/A, HEA8/A, HX/A, HX26/A, HX8/A, HXQ4/A LH/A, LHB5, LHE/A, LJ/A, LJC/A, LJG/A, LT/A, LW/A, LX/A, LX8/A, LXQ4/A LXQ4/A, LXU/A, PA2/A, PAE2/A, PX/A, PX26/A, PXE8/A, PXU/A, QA2/A, QAB3/A QAE2/A, QAE6/A, QAG/A, QAG2/A, QAQ4/A, QAR2/A, QAW/A, QD/A, QE/A, QH/A QH26/A, QHB5, QHE4/A, QHP1/A, QHQ4/A, QHR/A, QHR4/A, QHZ/A, QME2/A, QMH/A QP/A, QSC9/A, QSE/A, QSE2, QSE8/A, QT/A, QX/A, QX26/A, QXB/A, QXB6/A QXB7/A, QXC4/A, QXC6/A, QXC9/A, QXE/A, QXE4/A, QXE6/A, QXE8/A, QXQ4/A QXU/A, RA2/A, RD/A, RH26/A, RHE4/A, RHQ4/A, RSC2/A, RSS/A, RX/A, RXQ4/A RXU/A, SD/A, SE/A, SH/A, SHQ4/A, SJ/A, SJG/A, SMC4/A, SME1/A, SME6/A, SN/A SWC4/A, SX/A, SXB/A, SXB7/A, SXE/A, SXE4/A, SXE8/A, SXEB/A, SXQ4/A, SXU/A VA2/A, VAG2/A, VDE2/A, VKB2/A, VM2/A, VME2/A, VMT/A, VNT2/A, VPE4/A VPE7/A, VPX4/A, VPX7/A, VS37/A, VSD/A, VSD3/A, VSD7/A, VW12/A, VWN2/A VWT4/A, VX/A, VXB/A, VXB7/A, VXE4/A, VXE6/A, VXE7/A, VXEB/A, VXQ4/A VXT1/A, VXU/A, VXU1/A, WMT8/A, WXE8/A
	28410-ZE2-W01ZM	*T80*.....BAKELITE ORANGE	1	-	-	2475695	ES3/A
	28410-ZE2-W01ZA	*R8*.....BRIGHT RED	-	(1)	-	2085591	L1, Q1, Q2, R1, S1, V1, W1
	28410-ZE2-W01ZN	*R280*.....POWER RED	-	(1)	-	2085592	L1/A, Q1/A, R1/A, S1/A, W1/A
	28410-ZE2-W01ZA	*R8*.....BRIGHT RED	-	-	1	1100008	HAP/A, RXP/A, VXP/A
	28410-ZE2-W01ZN	*R280*.....POWER RED	-	-	1	1100009	HAP/A, RXP/A, VXP/A

2

E-11

RECOIL STARTER

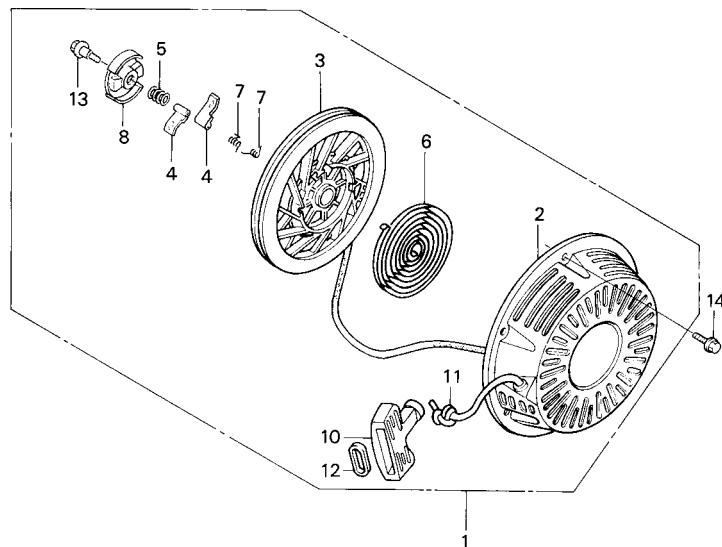

ZH90-E11008



Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
3	28421-ZE2-W01	PULLEY, RECOIL STARTER.....	1	-	1	-----	ES1, ES1/A, ES3, ES3/A, ES4, ESS, ESS/A, HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, HH, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A, LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LT, LT/A, LTJ, LW, LW/A, LX, LX/A, LX16, LX16/A, LX8, LX8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ, PA, PA2, PA2/A, PAE2, PAE2/A, PX, PX/A, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, QA, QA2, QA2/A, QAB1, QAB3, QAB3/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAQ, QAQ4, QAQ4/A, QAR2, QAR2/A, QAW, QAW/A, QD, QD/A, QE, QE/A, QH, QH/A, QH26, QH26/A, QHB5, QHC, QHE, QHE4, QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A, QL2, QME2, QME2/A, QMH, QMH/A, QP, QP/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QT, QT/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX, QX/A, QX26, QX26/A, QXB, QXB/A, QXB6, QXB6/A, QXB7, QXB7/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXE9, QXK, QXQ4, QXQ4/A, QXU, QXU/A, RA, RA2, RA2/A, RA3, RD, RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A, SD, SD/A, SE, SE/A, SH, SH/A, SHE, SHEZ, SHQ4, SHQ4/A, SJ, SJ/A, SJG, SJG/A, SJP, SK, SMC4, SMC4/A, SMD, SME1, SME1/A, SME6, SME6/A, SMX2, SN, SN/A, SW, SWA4, SWC4, SWC4/A, SWE, SX, SX/A, SX2, SXB, SXB/A, SXB7, SXB7/A, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4, SXQ4/A, SXU, SXU/A, VA, VA2, VA2/A, VAG2, VAG2/A, VAW, VAW1, VD16, VDE, VDE2, VDE2/A, VEB6, VH, VKB2, VKB2/A, VKE4, VKE4, VKE4/A, VM2, VM2/A, VMA4, VME2, VME2/A, VME4, VMS2, VMT, VMT/A, VMX2, VN17, VN17/A, VNG1, VNG1/A, VNT2, VNT2/A, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPK4, VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4, VS5, VSD, VSD/A, VSD3, VSD3/A, VSD7, VSD7/A, VSH7, VW12, VW12/A, VW22, VWA, VWA2, VWA2/A, VWN2, VWN2/A, VWT4, VWT4/A, VX, VX/A, VX26, VXB, VXB/A, VXB2, VXB6, VXB7, VXB7/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8, VXE8/A, VXG, VXK, VXP, VXP/A, VXQ4, VXQ4/A, VXQP, VXT1, VXT1/A, VXTB, VXU, VXU/A, VXU1, VXU1/A, WMA4, WMT8, WMT8/A, WXE8, WXE8/A

E-11


RECOIL STARTER

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	GX270 (2)	(3)		
(3)	28421-ZE2-W01	PULLEY, RECOIL STARTER.....	-	(1)	-		
4	28422-ZE2-W01	RATCHET, STARTER.....	2	-	2	-----	ES1, ES1/A, ES3, ES3/A, ES4, ESS, ESS/A, HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA HEA2, HEA2/A, HEA8, HEA8/A, HH, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4 HXQ4/A, LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LJ, LJ/A, LJC, LJC/A LJG, LJG/A, LSS, LT, LT/A, LTJ, LW, LW/A, LX, LX/A, LX16, LXE, LXE/A, LXE8 LXE8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ, PA, PA2, PA2/A, PAE2, PAE2/A, PX, PX/A PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, QA, QA2, QA2/A, QAB1, QAB3, QAB3/A QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAQ, QAQ4, QAQ4/A QAR2, QAR2/A, QAW, QAW/A, QD, QD/A, QE, QE/A, QH, QH/A, QH26, QH26/A, QHB5 QHC, QHE, QHE4, QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A QHZ, QHZ/A, QL2, QME2, QME2/A, QMH, QMH/A, QP, QP/A, QSC, QSC9, QSC9/A, QSE QSE/A, QSE2, QSE8, QSE8/A, QT, QT/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX QX/A, QX26, QX26/A, QXB, QXB/A, QXB6, QXB6/A, QXB7, QXB7/A, QXC, QXC4 QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A QXE8, QXE8/A, QXE9, QXEB, QXK, QXQ4, QXQ4/A, QXU, QXU/A, RA, RA2, RA2/A, RA3 RD, RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2, RSC2/A RSS, RSS/A, RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A, SD, SD/A, SE, SE/A SH, SH/A, SHE, SHEZ, SHQ4, SHQ4/A, SJ, SJ/A, SJG, SJG/A, SJP, SK, SMC4, SMC4/A SMD, SME1, SME1/A, SME6, SME6/A, SMX2, SN, SN/A, SW, SWA4, SWC4, SWC4/A, SWE SX, SX/A, SX2, SXB, SXB/A, SXB7, SXB7/A, SXE, SXE/A, SXE4, SXE4/A, SXE8 SXE8/A, SXEB, SXEB/A, SXQ4, SXQ4/A, SXU, SXU/A, VA, VA2, VA2/A, VAG2, VAG2/A VAW, VAW1, VD16, VDE, VDE2, VDE2/A, VEB6, VH, VKB2, VKB2/A, VKE4, VKK, VKX4 VM2, VM2/A, VMA4, VME2, VME2/A, VME4, VMS2, VMT, VMT/A, VMX2, VN17, VN17/A VNG1, VNG1/A, VNT2, VNT2/A, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPX4 VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4, VS5, VSD, VSD/A, VSD3 VSD3/A, VSD7, VSD7/A, VSH7, VW12, VW12/A, VW22, VWA, VWA2, VWA2/A, VWN2 VWN2/A, VWT4, VWT4/A, VX, VX/A, VX26, VXB, VXB/A, VXB2, VXB6, VXB7, VXB7/A VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8/A, VXG, VXX VXP, VXP/A, VXQ4, VXQ4/A, VXQP, VXT1, VXT1/A, VXTB, VXU, VXU/A, VXU1, VXU1/A WMA4, WMT8, WMT8/A, WXE8, WXE8/A
			-	(2)	-		

2

E-11

RECOIL STARTER

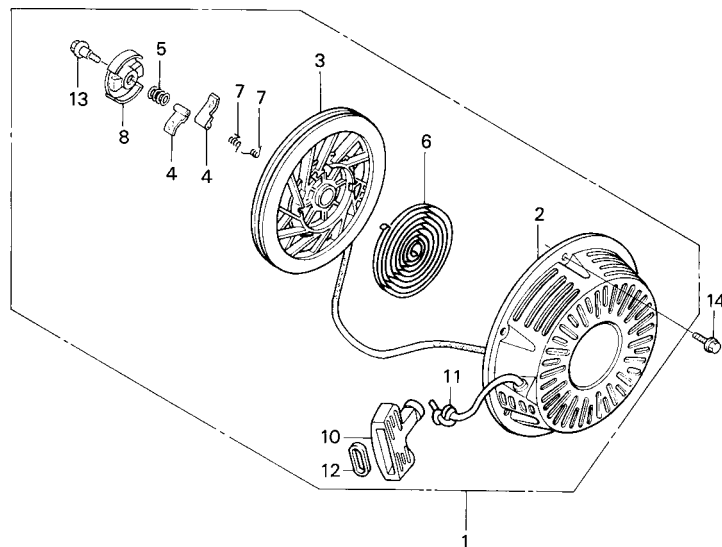

ZH90-E11008




Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	GX270 (2)	(3)		
5	28441-ZE2-W01	SPRING, FRICTION.....	1	-	1	-----	ES1, ES1/A, ES3, ES3/A, ES4, ESS, ESS/A, HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA HEA2, HEA2/A, HEA8, HEA8/A, HH, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4 HXQ4/A, LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LJ, LJ/A, LJC, LJC/A LJG, LJG/A, LSS, LT, LT/A, LTJ, LW, LW/A, LX, LX/A, LX16, LX16/A, LX16, LX16/A, LX16 LXE8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ, PA, PA2, PA2/A, PAE2, PAE2/A, PX, PX/A PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, QA, QA2, QA2/A, QAB1, QAB3, QAB3/A QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAG, QAG/A, QAG4/A, QAG4/A QAR2, QAR2/A, QAW, QAW/A, QD, QD/A, QE, QE/A, QH, QH/A, QH26, QH26/A, QHB5 QHC, QHE, QHE4, QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A QHZ, QHZ/A, QL2, QME2, QME2/A, QMH, QMH/A, QP, QP/A, QSC, QSC9, QSC9/A, QSE QSE/A, QSE2, QSE8, QSE8/A, QT, QT/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX QX/A, QX26, QX26/A, QXB, QXB/A, QXB6, QXB6/A, QXB7, QXB7/A, QXC, QXC4 QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A QXE8, QXE8/A, QXE9, QXE9, QXK, QXQ4, QXQ4/A, QXU, QXU/A, RA, RA2, RA2/A, RA3 RD, RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2, RSC2/A RSS, RSS/A, RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A, SD, SD/A, SE, SE/A SH, SH/A, SHE, SHEZ, SHQ4, SHQ4/A, SJ, SJ/A, SJG, SJG/A, SJP, SK, SMC4, SMC4/A SMD, SME1, SME1/A, SME6, SME6/A, SMX2, SN, SN/A, SW, SWA4, SWC4, SWC4/A, SWE SX, SX/A, SX2, SXB, SXB/A, SXB7, SXB7/A, SXE, SXE/A, SXE4, SXE4/A, SXE8 SXE8/A, SXEB, SXEB/A, SXQ4, SXQ4/A, SXU, SXU/A, VA, VA2, VA2/A, VAG2, VAG2/A VAW, VAW1, VD16, VDE, VDE2, VDE2/A, VEB6, VH, VKB2, VKB2/A, VKE4, VKE4/A, VM2 VM2/A, VMA4, VME2, VME2/A, VME4, VMS2, VMT, VMT/A, VMX2, VN17, VN17/A VNG1, VNG1/A, VNT2, VNT2/A, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPK4 VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4, VS5, VSD, VSD/A, VSD3 VSD3/A, VSD7, VSD7/A, VSH7, VW12, VW12/A, VW22, VWA, VWA2, VWA2/A, VWN2 VWN2/A, VWT4, VWT4/A, VX, VX/A, VX26, VXB, VXB/A, VXB2, VXB6, VXB7, VXB7/A VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8/A, VXE9, VXE9/A, VXE9 VXP, VXP/A, VXQ4, VXQ4/A, VXQP, VXT1, VXT1/A, VXTB, VXU, VXU/A, VXU1, VXU1/A WMA4, WMT8, WMT8/A, WXE8, WXE8/A

E-11

RECOIL STARTER

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
(5)	28441-ZE2-W01	SPRING, FRICTION.....	-	(1)	-		
6	28442-ZE2-W01	SPRING, STARTER RETURN.....	1	-	1	-----	ES1, ES1/A, ES3, ES3/A, ES4, ESS, ESS/A, HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA HEA2, HEA2/A, HEA8, HEA8/A, HH, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4 HXQ4/A, LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LJ, LJ/A, LJC, LJC/A LJG, LJG/A, LSS, LT, LT/A, LTJ, LW, LW/A, LX, LX/A, LX16, LXE, LXE/A, LXE8 LXE8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ, PA, PA2, PA2/A, PAE2, PAE2/A, PX, PX/A PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, QA, QA2, QA2/A, QAB1, QAB3, QAB3/A QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAO, QAO4, QAO4/A QAR2, QAR2/A, QAW, QAW/A, QD, QD/A, QE, QE/A, QH, QH/A, QH26, QH26/A, QHB5 QHC, QHE, QHE4, QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A QHZ, QHZ/A, QL2, QME2, QME2/A, QMH, QMH/A, QP, QP/A, QSC, QSC9, QSC9/A, QSE QSE/A, QSE2, QSE8, QSE8/A, QT, QT/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX QX/A, QX26, QX26/A, QXB, QXB/A, QXB6, QXB6/A, QXB7, QXB7/A, QXC, QXC4 QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A QXE8, QXE8/A, QXE9, QXEB, QXK, QXQ4, QXQ4/A, QXU, QXU/A, RA, RA2, RA2/A, RA3 RD, RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2, RSC2/A RSS, RSS/A, RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A, SD, SD/A, SE, SE/A SH, SH/A, SHE, SHEZ, SHQ4, SHQ4/A, SJ, SJ/A, SJG, SJG/A, SJP, SK, SMC4, SMC4/A SMD, SME1, SME1/A, SME6, SME6/A, SMX2, SN, SN/A, SW, SWA4, SWC4, SWC4/A, SWE SX, SX/A, SX2, SXB, SXB/A, SXB7, SXB7/A, SXE, SXE/A, SXE4, SXE4/A, SXE8 SXE8/A, SXEB, SXEB/A, SXQ4, SXQ4/A, SXU, SXU/A, VA, VA2, VA2/A, VAG2, VAG2/A VAW, VAW1, VD16, VDE, VDE2, VDE2/A, VEB6, VH, VKB2, VKB2/A, VKE4, VKK, VKX4 VM2, VM2/A, VMA4, VME2, VME2/A, VME4, VMS2, VMT, VMT/A, VMX2, VN17, VN17/A VNG1, VNG1/A, VNT2, VNT2/A, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPX4 VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4, VS5, VSD, VSD/A, VSD3 VSD3/A, VSD7, VSD7/A, VSH7, VW12, VW12/A, VW22, VWA, VWA2, VWA2/A, VWN2 VWN2/A, VWT4, VWT4/A, VX, VX/A, VX26, VXB, VXB/A, VXB2, VXB6, VXB7, VXB7/A VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8/A, VXG, VXX VXP, VXP/A, VXQ4, VXQ4/A, VXQP, VXT1, VXT1/A, VXTB, VXU, VXU/A, VXU1, VXU1/A WMA4, WMT8, WMT8/A, WXE8, WXE8/A
			-	(1)	-		

2

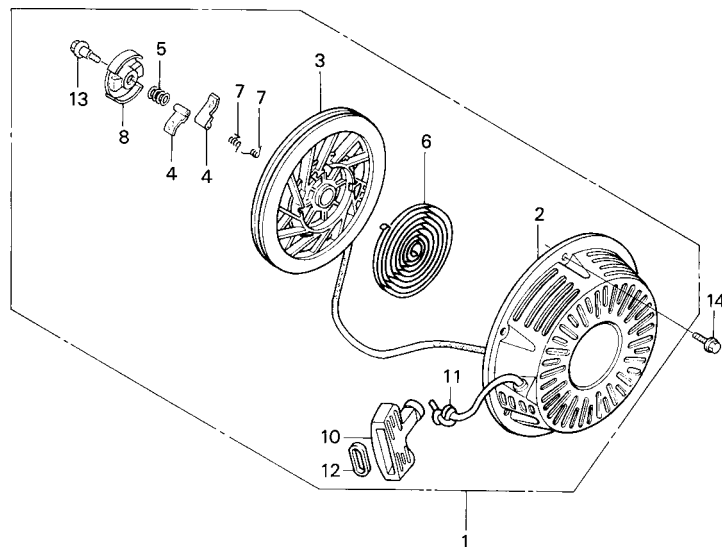

ZH90-E11008



Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
7	28443-ZE2-W01	SPRING, RATCHET	2	-	2	-----	ES1, ES1/A, ES3, ES3/A, ES4, ESS, ESS/A, HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, HH, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A, LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LT, LT/A, LTJ, LW, LW/A, LX, LX/A, LX16, LX16/A, LX8, LX8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ, PA, PA2, PA2/A, PAE2, PAE2/A, PX, PX/A, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, QA, QA2, QA2/A, QAB1, QAB3, QAB3/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAQ, QAQ4, QAQ4/A, QAR2, QAR2/A, QAW, QAW/A, QD, QD/A, QE, QE/A, QH, QH/A, QH26, QH26/A, QHB5, QHC, QHE, QHE4, QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A, QL2, QME2, QME2/A, QMH, QMH/A, QP, QP/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QT, QT/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX, QX/A, QX26, QX26/A, QXB, QXB/A, QXB6, QXB6/A, QXB7, QXB7/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXE9, QXK, QXQ4, QXQ4/A, QXU, QXU/A, RA, RA2, RA2/A, RA3, RD, RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A, SD, SD/A, SE, SE/A, SH, SH/A, SHE, SHEZ, SHQ4, SHQ4/A, SJ, SJ/A, SJG, SJG/A, SJP, SK, SMC4, SMC4/A, SMD, SME1, SME1/A, SME6, SME6/A, SMX2, SN, SN/A, SW, SWA4, SWC4, SWC4/A, SWE, SX, SX/A, SX2, SXB, SXB/A, SXB7, SXB7/A, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4, SXQ4/A, SXU, SXU/A, VA, VA2, VA2/A, VAG2, VAG2/A, VAW, VAW1, VAW16, VDE, VDE2, VDE2/A, VEB6, VH, VKB2, VKB2/A, VKE4, VKE4, VKE4/A, VM2, VM2/A, VMA4, VME2, VME2/A, VME4, VMS2, VMT, VMT/A, VMX2, VN17, VN17/A, VNG1, VNG1/A, VNT2, VNT2/A, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPK4, VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4, VS5, VSD, VSD/A, VSD3, VSD3/A, VSD7, VSD7/A, VSH7, VW12, VW12/A, VW22, VWA, VWA2, VWA2/A, VWN2, VWN2/A, VWT4, VWT4/A, VX, VX/A, VX26, VXB, VXB/A, VXB2, VXB6, VXB7, VXB7/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8, VXE8/A, VXG, VXK, VXP, VXP/A, VXQ4, VXQ4/A, VXQP, VXT1, VXT1/A, VXTB, VXU, VXU/A, VXU1, VXU1/A, WMA4, WMT8, WMT8/A, WXE8, WXE8/A


E-11

RECOIL STARTER

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	GX270 (2)	(3)		
(7)	28443-ZE2-W01	SPRING, RATCHET	-	(2)	-		
8	28444-ZE2-W01	RETAINER, SPRING	1	-	1	-----	ES1, ES1/A, ES3, ES3/A, ES4, ESS, ESS/A, HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA HEA2, HEA2/A, HEA8, HEA8/A, HH, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4 HXQ4/A, LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LJ, LJ/A, LJC, LJC/A LJG, LJG/A, LSS, LT, LT/A, LTJ, LW, LW/A, LX, LX/A, LX16, LXE, LXE/A, LXE8 LXE8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ, PA, PA2, PA2/A, PAE2, PAE2/A, PX, PX/A PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, QA, QA2, QA2/A, QAB1, QAB3, QAB3/A QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAQ, QAQ4, QAQ4/A QAR2, QAR2/A, QAW, QAW/A, QD, QD/A, QE, QE/A, QH, QH/A, QH26, QH26/A, QHB5 QHC, QHE, QHE4, QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A QHZ, QHZ/A, QL2, QME2, QME2/A, QMH, QMH/A, QP, QP/A, QSC, QSC9, QSC9/A, QSE QSE/A, QSE2, QSE8, QSE8/A, QT, QT/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX QX/A, QX26, QX26/A, QXB, QXB/A, QXB6, QXB6/A, QXB7, QXB7/A, QXC, QXC4 QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A QXE8, QXE8/A, QXE9, QXEB, QXK, QXQ4, QXQ4/A, QXU, QXU/A, RA, RA2, RA2/A, RA3 RD, RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2, RSC2/A RSS, RSS/A, RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A, SD, SD/A, SE, SE/A SH, SH/A, SHE, SHEZ, SHQ4, SHQ4/A, SJ, SJ/A, SJG, SJG/A, SJP, SK, SMC4, SMC4/A SMD, SME1, SME1/A, SME6, SME6/A, SMX2, SN, SN/A, SW, SWA4, SWC4, SWC4/A, SWE SX, SX/A, SX2, SXB, SXB/A, SXB7, SXB7/A, SXE, SXE/A, SXE4, SXE4/A, SXE8 SXE8/A, SXEB, SXEB/A, SXQ4, SXQ4/A, SXU, SXU/A, VA, VA2, VA2/A, VAG2, VAG2/A VAW, VAW1, VD16, VDE, VDE2, VDE2/A, VEB6, VH, VKB2, VKB2/A, VKE4, VKK, VKX4 VM2, VM2/A, VMA4, VME2, VME2/A, VME4, VMS2, VMT, VMT/A, VMX2, VN17, VN17/A VNG1, VNG1/A, VNT2, VNT2/A, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPX4 VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4, VS5, VSD, VSD/A, VSD3 VSD3/A, VSD7, VSD7/A, VSH7, VW12, VW12/A, VW22, VWA, VWA2, VWA2/A, VWN2 VWN2/A, VWT4, VWT4/A, VX, VX/A, VX26, VXB, VXB/A, VXB2, VXB6, VXB7, VXB7/A VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8/A, VXG, VXX VXP, VXP/A, VXQ4, VXQ4/A, VXQP, VXT1, VXT1/A, VXTB, VXU, VXU/A, VXU1, VXU1/A WMA4, WMT8, WMT8/A, WXE8, WXE8/A

- (1) -

2

FR. 124


E-11

RECOIL STARTER

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
10)	28461-ZE2-W02	GRIP, STARTER	1	-	-	2481929	ES1/A, ES3/A, ES4, ESS/A, HX/A, LH/A, LHB5, LHE/A, LJ/A, LJG/A, LW/A, LX/A, PX/A, QD/A, QHB5, QHP1/A, QX/A, QXE/A, QXE9, QXK, RA3, RD/A, RSS/A, RX/A, SD/A, SH/A, SJ/A, SJG/A, SX/A, SXE/A, VKK, VMT/A, VPK, VS3, VS4, VS5, VX/A, VXE8, VXX, VXU/A
	28461-ZE2-W03		1	-	-	2481930	ES1/A, ES3/A, ES4, ESS/A, HX/A, LH/A, LHB5, LHE/A, LJ/A, LJG/A, LW/A, LX/A, PX/A, QD/A, QHB5, QHP1/A, QX/A, QXE/A, QXE9, QXK, RA3, RD/A, RSS/A, RX/A, SD/A, SH/A, SJ/A, SJG/A, SX/A, SXE/A, VKK, VMT/A, VPK, VS3, VS4, VS5, VX/A, VXE8, VXX, VXU/A
	28461-ZE2-W02		-	(1)	-	2481929	L1, Q1, Q2, R1, R1/A, S1, V1, W1, W1/A
	28461-ZE2-W03		-	(1)	-	2481930	L1/A, Q1/A, S1/A
	28461-ZE2-W03		-	(1)	-	2481930	L1/A, Q1/A, S1/A
11	28462-ZE2-W11	ROPE, RECOIL STARTER	1	-	1	-----	ES1/A, ES3/A, ES4, ESS/A, HA2/A, HAP, HAP/A, HEA2/A, HEA8/A, HX/A, HX26/A, HX8/A, HXQ4/A, LH/A, LHB5, LHE/A, LJ/A, LJC/A, LJG/A, LT, LT/A, LW/A, LX/A, LX8/A, LX8/A, LXQ4/A, LXU/A, PA2/A, PAE2/A, PX/A, PX26/A, PXE8, PXE8/A, PXU/A, QA2/A, QAB3/A, QAE2/A, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAQ4/A, QAR2/A, QAW, QAW/A, QD/A, QE/A, QH/A, QH26/A, QHB5, QHE4/A, QHP1/A, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ/A, QKE4, QL2, QME2/A, QMH/A, QP/A, QSC9/A, QSE/A, QSE2, QSE8/A, QT/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX/A, QX26/A, QXB/A, QXB6/A, QXB7, QXB7/A, QXC4/A, QXC6/A, QXC9/A, QXE/A, QXE4/A, QXE6/A, QXE8/A, QXE9, QXK, QXQ4/A, QXU/A, RA2/A, RA3, RD/A, RH26/A, RHE4/A, RHQ4/A, RSC2/A, RSS, RSS/A, RX/A, RXP, RXP/A, RXQ4/A, RXU/A, SD/A, SE/A, SH/A, SHQ4/A, SJ/A, SJG/A, SMC4/A, SME1/A, SME6/A, SMX2, SN/A, SWA4, SWC4/A, SX/A, SXB/A, SXB7, SXB7/A, SXE/A, SXE4/A, SXE8/A, SXE8/A, SXQ4/A, SXU/A, VA2/A, VAG2, VAG2/A, VDE2/A, VKB2/A, VKE4, VKK, VKX4, VM2/A, VMA4, VME2/A, VME4, VMS2, VMT, VMT/A, VMX2, VN17, VN17/A, VNG1/A, VNT2/A, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4, VS5, VSD/A, VSD3/A, VSD7, VSD7/A, VSH7, VW12/A, VWA2/A, VWN2/A, VWT4/A, VX/A, VXB/A, VXB7, VXB7/A, VXE4/A, VXE6/A, VXE7, VXE7/A, VXE8, VXE8/A, VXX, VXP/A, VXQ4/A, VXT1/A, VXU/A, VXU1/A, WMA4, WMT8/A, WXE8, WXE8/A
	28462-ZE2-W01		1	-	-	-----	HA, HAQ, HEA, HH, LHB1, LHB3, LHQ4, LXZ, PA, QA, QAB1, QAE, QAQ, QHC, QHE, QSC, QXC, QXEB, RA, RHE, SHE, SHEZ, SJP, SK, SWE, SX2, VA, VAW, VAW1, VEB6, VWA, VXB6
	28462-ZE2-W01		1	-	-	1413598	ES1, ES3, ESS, HA2, HEA2, HEA8, HX, HX26, HX8, HXQ4, LH, LHE, LJ, LJC, LJG, LSS, LTJ, LW, LX, LX16, LX8, LX8/A, LXQ4, LXU, PA2, PAE2, PX, PX26, PXU, QA2, QAB3, QAE2, QAE6, QAQ4, QAR2, QD, QE, QH, QH26, QHE4, QHP1, QHQ4, QHZ, QME2, QMH, QP, QSC9, QSE, QSE8, QT, QX, QX26, QXB, QXB6, QXC4, QXC6, QXC9, QXE, QXE4, QXE6, QXE8, QXQ4, QXU, RA2, RD, RH, RH26, RHE4, RHQ4, RSC2, RX, RXQ4, RXU, SD, SE, SH, SHQ4, SJ, SJG, SMC4, SMD, SME1, SME6, SN, SW, SWC4, SX, SXB, SXE, SXE4, SXE8, SXEB, SXQ4, SXU, VA2, VD16, VDE, VDE2, VH, VKB2, VM2, VME2, VNG1, VNT2, VPE4, VPX4, VSD, VSD3, VW12, VWA2, VWN2, VWT4, VX, VX26, VXB, VXB2, VXE, VXE4, VXE6, VXE8, VXG, VXQ4, VXT1, VXTB, VXU, VXU1, WMT8
	28462-ZE2-W11		1	-	-	1413599	ES1, ES3, ESS, HA2, HEA2, HEA8, HX, HX26, HX8, HXQ4, LH, LHE, LJ, LJC, LJG, LSS, LTJ, LW, LX, LX16, LX8, LX8/A, LXQ4, LXU, PA2, PAE2, PX, PX26, PXU, QA2, QAB3, QAE2, QAE6, QAQ4, QAR2, QD, QE, QH, QH26, QHE4, QHP1, QHQ4, QHZ, QME2, QMH, QP, QSC9, QSE, QSE8, QT, QX, QX26, QXB, QXB6, QXC4, QXC6, QXC9, QXE, QXE4, QXE6, QXE8, QXQ4, QXU, RA2, RD, RH, RH26, RHE4, RHQ4, RSC2, RX, RXQ4, RXU, SD, SE, SH, SHQ4, SJ, SJG, SMC4, SMD, SME1, SME6, SN, SW, SWC4, SX, SXB, SXE, SXE4, SXE8, SXEB, SXQ4, SXU, VA2, VD16, VDE, VDE2, VH, VKB2, VM2, VME2, VNG1, VNT2, VPE4, VPX4, VSD, VSD3, VW12, VWA2, VWN2, VWT4, VX, VX26, VXB, VXB2, VXE, VXE4, VXE6, VXE8, VXG, VXQ4, VXT1, VXTB, VXU, VXU1, WMT8
	28462-ZE2-W01		-	(1)	-	-----	L1/A, Q1/A, R1/A, S1/A
	28462-ZE2-W01		-	(1)	-	-----	Q2, V1, W1, W1/A
	28462-ZE2-W11		-	(1)	-	1413598	L1, Q1, R1, S1
	28462-ZE2-W01		-	(1)	-	1413599	L1, Q1, R1, S1
	28462-ZE2-W01		-	-	1	1000085	VXP, VXQP
	28462-ZE2-W11		-	-	1	1000086	VXP, VXQP

E-11

RECOIL STARTER

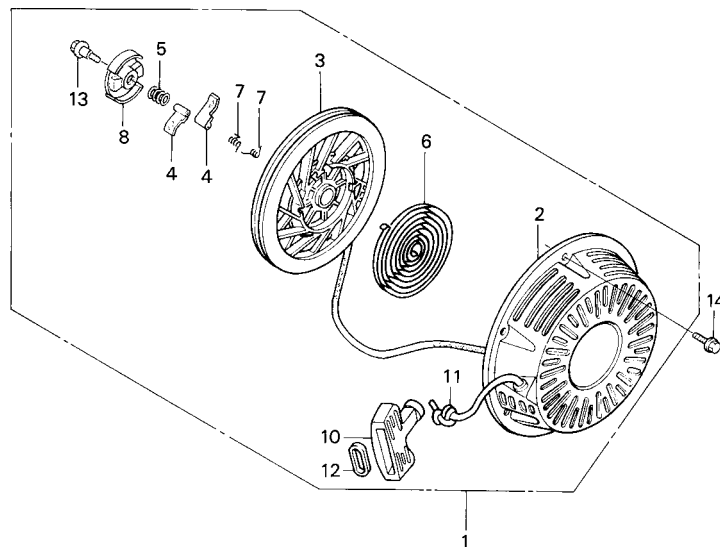

ZH90-E11008




Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
12	28469-ZE2-W01	REINFORCEMENT, GRIP.....	1	-	-	-----	HA, HAQ, HEA, HH, LHB1, LHB3, LHQ4, LXZ, PA, QA, QAB1, QAE, QAQ, QHC, QHE, QSC, QXC, QXEB, RA, RHE, SHE, SHEZ, SJP, SK, SWE, SX2, VA, VAW, VAW1, VEB6, VWA, VXB6, ES1, ES3, ESS, HA2, HEA2, HEA8, HX, HX26, HX8, HXQ4, LH, LHE, LJ, LJC, LJG, LSS, LTJ, LW, LX, LX16, LXE, LXE8, LXQ4, LXU, PA2, PAE2, PX, PX26, PXU, QA2, QAB3, QAE2, QAE6, QAQ4, QAR2, QD, QE, QH, QH26, QHE4, QHP1, QHQ4, QHZ, QME2, QMH, QP, QSC9, QSE, QSE8, QT, QX, QX26, QXB, QXB6, QXC4, QXC6, QXC9, QXE, QXE4, QXE6, QXE8, QXQ4, QXU, RA2, RD, RH, RH26, RHE4, RHQ4, RSC2, RX, RXQ4, RXU, SD, SE, SH, SHQ4, SJ, SJG, SMC4, SMD, SME1, SME6, SN, SW, SWC4, SX, SXB, SXE, SXE4, SXE8, SXEB, SXQ4, SXU, VA2, VD16, VDE, VDE2, VH, VKB2, VM2, VME2, VNG1, VNT2, VPE4, VPX4, VSD, VSD3, VW12, VW22, VWA2, VWN2, VWT4, VX, VX26, VXB, VXB2, VXE, VXE4, VXE6, VXEB, VXG, VXQ4, VXT1, VXTB, VXU, VXU1, WMT8
			-	(1)	-	-----	Q2, V1, W1, W1/A
			-	(1)	-	-----	1413598 L1, Q1, R1, S1
			-	-	1	-----	1000079 VXP, VXQP

RECOIL STARTER

2

E-11

RECOIL STARTER

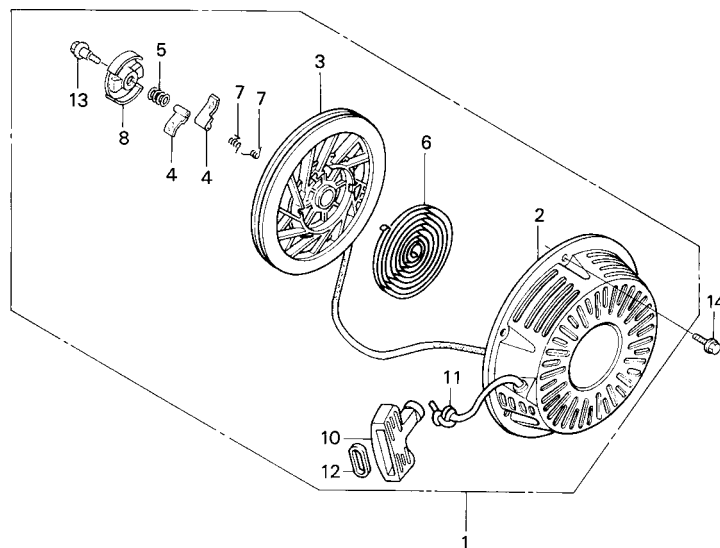


ZH90-E11008

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
14)	95701-06008-00	BOLT, FLANGE, 6X8	3	-	-	-----	ES3, ES4, HA, HAQ, HEA, HH, LHB1, LHB3, LHE, LHQ4, LSS, LTJ, LX16, LXZ, PA, QA, QAB1, QAE, QAQ, QH, QHC, QHE, QSC, QXC, QXEB, RA, RH, RHE, SHE, SHEZ, SJ, SJP, SK SMD, SW, SWE, SX2, VA, VAW, VAW1, VD16, VDE, VEB6, VH, VW22, VWA, VX26, VXB2, VXB6, VXE, VXG
	90008-ZE2-003	BOLT, FLANGE, 6X10	3	-	-	-----	2490010 ES3/A
	95701-06008-00	BOLT, FLANGE, 6X8	3	-	-	-----	2490011 ES3/A
	90008-ZE2-003	BOLT, FLANGE, 6X10	-	(3)	-	-----	L1, L1/A, Q1, Q1/A, Q2, R1, R1/A, V1, W1, W1/A
	90008-ZE2-003	BOLT, FLANGE, 6X10	-	(3)	-	-----	L1, L1/A, Q1, Q1/A, R1, R1/A, S1, S1/A, W1, W1/A

E-12

FAN COVER

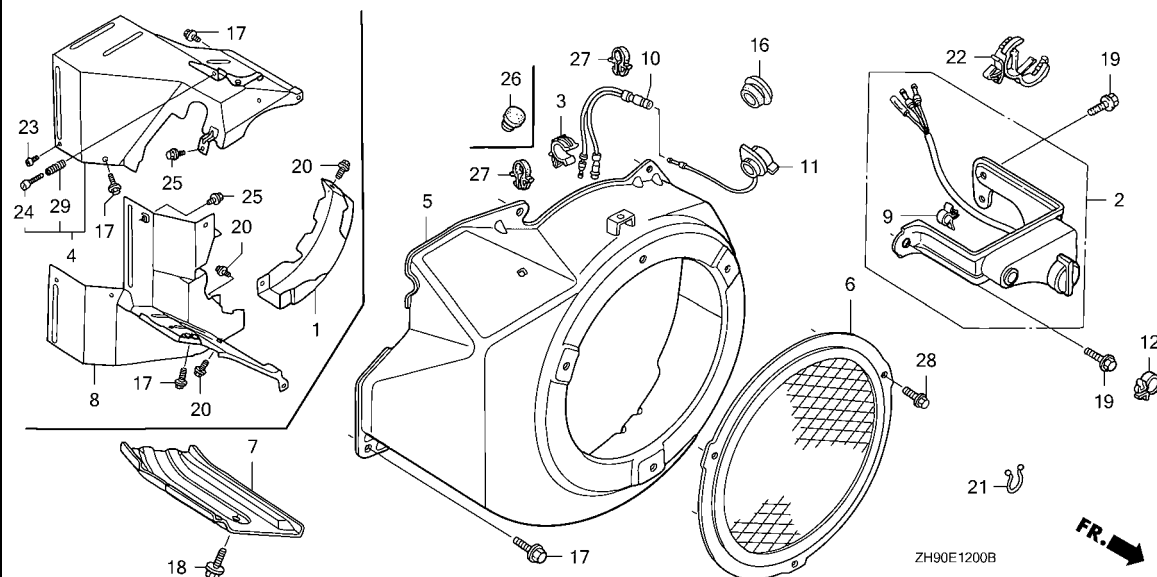

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
2	6151C6	SWITCH, OIL ALERT UNIT	0.1
4	4141E2	SHROUD, ENGINE :UPPER	0.3
5	1141G8	COVER, ENGINE COOLING FAN ...	0.2
6	4141C9	PROTECTOR, FAN COVER	0.1
7	4141E3	SHROUD, ENGINE	0.3
8	4141E0	SHROUD, ENGINE :LOWER	0.3
10	6111A3	CORD, ENGINE STOP SWITCH	0.1
11	6151D9	SWITCH, ENGINE STOP	0.1

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	GX270 (2)	(3)		
1	11315-ZB7-000	SCROLL, GENERATOR FAN	1	-	-	-----	ESS,ESS/A
2	36100-ZH9-V02	SWITCH ASSY., ENGINE STOP (SDMO)	1	-	-	-----	VS37,VS37/A,VSD3/A
	15520-ZE2-003	ALERT UNIT, OIL / SWITCH, ENGINE STOP	1	-	-	-----	1033679 HA,HX,LX,LXZ,PA,PX,QA,QX,QXB,QXC,RA,RX,SJP,SX,SXB,VA,VAW,VNG1,VSD VX,VXB
	36100-ZH9-V01	SWITCH ASSY., ENGINE STOP (SDMO)	1	-	-	1056015	1225610 VSD3
	36100-ZH9-V02		1	-	-	1225611	----- VSD3
	15520-ZE2-003	ALERT UNIT, OIL / SWITCH, ENGINE STOP	-	(1)	-	-----	1033679 L1,Q1,R1,S1,V1,W1

2



2


E-12

FAN COVER

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
4	19602-ZE2-E10	SHROUD ASSY., UPPER.....	1	-	-	-----	ESS,ESS/A
5	19610-ZE2-010ZA	COVER COMP., FAN *R8*.....BRIGHT RED	1	-	1	-----	ES1, HA, HA2, HAP, HEA, HEA2, HEA8, HH, HX, HX26, HX8, HXQ4, LH, LHB1, LHB3, LHB5, LHE, LHQ4, LJ, LJC, LJG, LSS, LT, LTJ, LW, LWD, LWD1, LX, LX16, LXE, LXE8, LXQ4, LXU, LXZ, PA, PA2, PAE2, PX, PX26, PXE8, PXU, QA, QA2, QAB1, QAB3, QAE, QAE2, QAE6, QAG, QAG2, QAQ4, QAR2, QAW, QD, QE, QH, QH26, QHB5, QHC, QHE, QHE4, QHP1, QHQ4, QHR, QHR4, QHZ, QKE3, QKE4, QME2, QMH, QP, QSC, QSC9, QSE, QSE8, QT, QWA4, QX, QX26, QXB, QXB6, QXB7, QXB7/A, QXC, QXC4, QXC6, QXC9, QXE, QXE4, QXE6, QXE8, QXEB, QXQ4, QXU, RA, RA2, RD, RH, RH26, RHE, RHE4, RHQ4, RSC2, RSS, RX, RXP, RXQ4, RXU, SD, SE, SH, SHE, SHEZ, SHQ4, SJ, SJG, SJP, SK, SKE1, SMC4, SMD, SME1, SME6, SN, SW, SWC4, SWE, SX, SX2, SXB, SXB7, SXB7/A, SXE, SXE4, SXE8, SXEB, SXQ4, SXU, VA, VA2, VAW, VD16, VDE, VDE2, VEB6, VH, VKB2, VM2, VME2, VNG1, VNG1/A, VNT2, VPE4, VPE7, VPX4, VPX7, VPX7/A, VS37, VS37/A, VSD, VSD3, VSD7, VSD7/A, VW12, VWA, VWN2, VWT4, VX, VX26, VXB, VXB2, VXB6, VXB7, VXB7/A, VXE, VXE4, VXE6, VXE7, VXE7/A, VXEB, VXG, VXP, VXQ4, VXQP, VXT1, VXTB, VXU, VXU1, WMT8, WXE8
			1	-	1	-----	2080023 ES1/A, HA2/A, HAP/A, HEA2/A, HEA8/A, HX/A, HX26/A, HX8/A, HXQ4/A, LH/A, LHE/A, LJ/A, LJC/A, LJG/A, LT/A, LW/A, LWD1/A, LX/A, LXE/A, LXE8/A, LXQ4/A, LXU/A, PA2/A, PAE2/A, PX/A, PX26/A, PXE8/A, PXU/A, QA2/A, QAB3/A, QAE2/A, QAE6/A, QAG/A, QAG2/A, QAQ4/A, QAR2/A, QAW/A, QD/A, QE/A, QH/A, QH26/A, QHE4/A, QHP1/A, QHQ4/A, QHR/A, QHR4/A, QHZ/A, QKE3/A, QME2/A, QMH/A, QP/A, QSC9/A, QSE/A, QSE2, QSE8/A, QT/A, QWA4/A, QX/A, QX26/A, QXB/A, QXB6/A, QXC4/A, QXC6/A, QXC9/A, QXE/A, QXE4/A, QXE6/A, QXE8/A, QXQ4/A, QXU/A, RA2/A, RD/A, RH26/A, RHE4/A, RHQ4/A, RSC2/A, RSS/A, RX/A, RXQ4/A, RXU/A, SD/A, SE/A, SH/A, SHQ4/A, SJ/A, SJG/A, SMC4/A, SME1/A, SME6/A, SN/A, SWC4/A, SX/A, SXB/A, SXE/A, SXE4/A, SXE8/A, SXEB/A, SXQ4/A, SXU/A, VA2/A, VAG2, VAG2/A, VDE2/A, VKB2/A, VM2/A, VME2/A, VNT2/A, VPE4/A, VPE7/A, VPX4/A, VSD/A, VSD3/A, VWN2/A, VWT4/A, VX/A, VXB/A, VXE4/A, VXE6/A, VXE8/A, VXE8/A, VXT1/A, VXU/A, VXU1/A, WMT8/A, WXE8/A
	19610-ZE2-010ZL	*R280*.....POWER RED	1	-	1	2080024	----- ES1/A, HA2/A, HAP/A, HEA2/A, HEA8/A, HX/A, HX26/A, HX8/A, HXQ4/A, LH/A, LHB5, LHE/A, LJ/A, LJC/A, LJG/A, LT/A, LW/A, LWD1/A, LX/A, LXE/A, LXE8/A, LXQ4/A, LXU/A, PA2/A, PAE2/A, PX/A, PX26/A, PXE8/A, PXU/A, QA2/A, QAB3/A, QAE2/A, QAE6/A, QAG/A, QAG2/A, QAQ4/A, QAR2/A, QAW/A, QD/A, QE/A, QH/A, QH26/A, QHB5, QHE4/A, QHP1/A, QHQ4/A, QHR/A, QHR4/A, QHZ/A, QKE3/A, QKE4, QME2/A, QMH/A, QP/A, QSC9/A, QSE/A, QSE2, QSE8/A, QT/A, QWA4/A, QX/A, QX26/A, QXB/A, QXB6/A, QXB7/A, QXB7/A, QXC4/A, QXC6/A, QXC9/A, QXE/A, QXE4/A, QXE6/A, QXE8/A, QXQ4/A, QXU/A, RA2/A, RD/A, RH26/A, RHE4/A, RHQ4/A, RSC2/A, RSS/A, RX/A, RXQ4/A, RXU/A, SD/A, SE/A, SH/A, SHQ4/A, SJ/A, SJG/A, SMC4/A, SME1/A, SME6/A, SN/A, SWC4/A, SX/A, SXB/A, SXE/A, SXE4/A, SXE8/A, SXEB/A, SXQ4/A, SXU/A, VA2/A, VAG2/A, VDE2/A, VKB2/A, VM2/A, VME2/A, VNT2/A, VPE4/A, VPE7/A, VPX4/A, VPX7, VPX7/A, VS37, VS37/A, VSD/A, VSD3/A, VSD7/A, VW12/A, VWN2/A, VWT4/A, VX/A, VXB/A, VXB7, VXB7/A, VXE4/A, VXE6/A, VXE7, VXE7/A, VXEB/A, VXQ4/A, VXT1/A, VXU/A, VXU1/A, WMT8/A, WXE8/A
	19610-ZE2-010ZJ	*T77*.....SEC WINE RED	1	-	-	-----	ES1, ES1/A
	19610-ZH9-D40ZA	*R8*.....BRIGHT RED	1	-	-	-----	ES3
	19610-ZH9-D40ZB	*T77*.....SEC WINE RED	1	-	-	-----	ES3, ES3/A, ES4
	19610-ZH9-D40ZE	*T80*.....BAKELITE ORANGE	1	-	-	-----	ES3/A
	19610-ZH9-D40ZC	*R280*.....POWER RED	1	-	-	-----	ES4, VS3
	19610-ZH9-V10	COVER COMP., FAN(SHIBAURA)...	1	-	-	-----	ESS, ESS/A
	19610-ZE2-010ZC	COVER COMP., FAN *NH1*.....BLACK	1	-	-	-----	HA, HA2, HA2/A, PA2, PA2/A, QA, QA2, QA2/A, QAE2, QAE2/A, QAQ4, QAQ4/A, QAR2, QAR2/A, QL2, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QXC9, QXC9/A, QXK, RA2, RA2/A, RA3, SMX2, SWC4, SWC4/A, VA2, VA2/A, VKE4, VKK, VKX4, VM2, VM2/A, VMA4, VME2, VME4, VN17, VN17/A, VXE7, VXE7/A, VXE8
	19610-ZE2-010ZF	*NH246*.....LOOSEY GRAY	1	-	-	-----	HAQ, QAQ, QXK, RA3
	19610-ZE2-010ZD	*T41*...BARTELL BLUE METALLIC	1	-	-	-----	QA, QA2, QA2/A, QAQ4, QAQ4/A, QX26, QX26/A
	19610-ZE2-010ZL	*R280*.....POWER RED	1	-	-	-----	QXE9, QXK, RA3, SWA4, VPE5, VPK, VPX5, VSH7, VWA2/A, VXE8, VXX, WMA4

E-12

FAN COVER

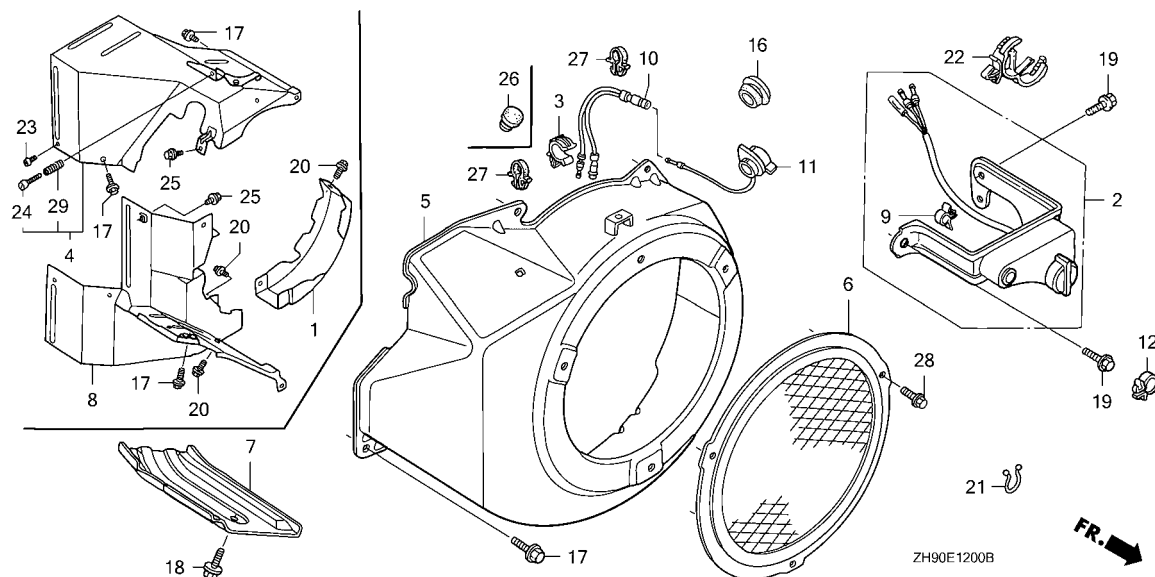


Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
(5)	19610-ZE2-010ZG	COVER COMP., FAN					
		NH105....MAT BLACK(#15-#20)	1	-	-	-----	VA, VAW1, VM2, VM2/A, VME2, VME2/A, VMS2, VMX2, VW12, VW12/A, VW22, VWA2
	19610-ZE2-700ZA	*R8*.....BRIGHT RED	1	-	-	-----	VWA2/A
	19610-ZH9-D40ZD	*NH105*....MAT BLACK(#15-#20)	1	-	-	-----	VMT
	19610-ZE2-W00ZB	*R8*.....BRIGHT RED	1	-	-	-----	VS3, VS4, VS5
	19610-ZE2-W00ZC	*NH1*.....BLACK	1	-	-	-----	1061099 HAQ, QAQ
	19610-ZH9-D40ZA	*R8*.....BRIGHT RED	1	-	-	-----	1061099 HAQ, QAQ
	19610-ZE2-700ZA	*R8*.....BRIGHT RED	1	-	-	-----	2088446 ES3/A
	19610-ZE2-010ZA	*R8*.....BRIGHT RED	1	-	-	-----	2105530 VMT/A
	19610-ZE2-010ZC	*NH1*.....BLACK	1	-	-	-----	1061100 HAQ, QAQ
	19610-ZE2-010ZA	*R8*.....BRIGHT RED	1	-	-	-----	1061100 HAQ, QAQ
	19610-ZH9-D40ZC	*R280*.....POWER RED	1	-	-	-----	2080024 VW12/A
	19610-ZE2-700ZL	*R280*.....POWER RED	1	-	-	-----	2088447 ES3/A
	19610-ZE2-010ZA	*R8*.....BRIGHT RED	-	(1)	-	-----	2105531 VMT/A
	19610-ZE2-010ZL	*R280*.....POWER RED	-	(1)	-	-----	L1, Q1, Q2, R1, S1, V1, W1
	19610-ZE2-010ZA	*R8*.....BRIGHT RED	-	(1)	-	-----	2085591 L1/A, Q1/A, R1/A, S1/A, W1/A
	19610-ZE2-010ZL	*R280*.....POWER RED	-	(1)	-	-----	L1/A, Q1/A, R1/A, S1/A, W1/A
	19610-ZE2-010ZL	*R280*.....POWER RED	-	-	1	-----	1100008 RXP/A, VXP/A
	19610-ZE2-010ZL	*R280*.....POWER RED	-	-	1	-----	1100009 RXP/A, VXP/A
6	19620-ZE2-000ZA	PROTECTOR COMP., FAN COVER					
		R8.....BRIGHT RED	1	-	-	-----	LWD, LWD1, QKE3, SKE1
	19620-ZE2-000ZD	*R280*.....POWER RED	1	-	-	-----	LWD1/A, QKE3/A

FAN COVER

2

E-12

FAN COVER

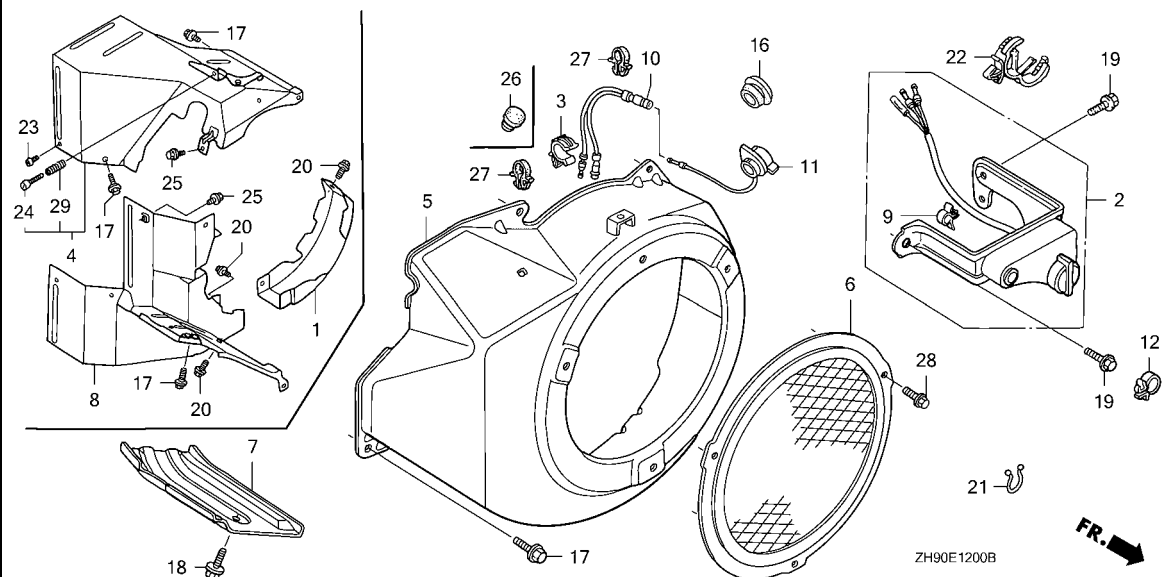

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
11)	36100-ZF6-P82	SWITCH ASSY., ENGINE STOP....	1	-	-	RA3	
	36100-ZF6-P81		1	-	-	VPX5	
	36100-ZH8-W41		1	-	-	1033679	VD16
	36100-ZE1-015		1	-	-	1056014	VSD3
			1	-	-	1110060	QE, SE, VXG
			1	-	-	1225386	HA2, HAQ, HX26, LX16, PA2, PX26, QA2, QAB1, QAB3, QAA, QAR2, QX26, QXC6, QXC9
							RA2, RSC2, SMD, SX2, VA2, VAW1, VW12, VW22, VWN2, VX26, VXB2, VXB6, VXU
	36100-ZH8-W41		1	-	-	1225386	HXQ4, LXQ4, QAA4, QXC4, QXQ4, RXQ4, SMC4, SME6, SWC4, SXQ4, VXQ4
	36100-ZH7-003		1	-	-	2372800	QA2/A, QAW/A, QXC9/A
	36100-ZH7-W41		1	-	-	2375749	QWA4/A, SWC4/A
	36100-ZF6-P81		1	-	-	2449125	QXK
	36100-ZE1-015		1	-	-	1033680	1110060
			1	-	-	1033680	QXB, SXB, VNG1, VSD, VXB
	36100-ZH8-W41		1	-	-	1225386	HA, HX, LX, LXZ, PA, PX, QA, QX, QXC, RA, RX, SJP, SX, VA, VAW, VD16, VX
			1	-	-	1110061	QE, SE
			1	-	-	1110061	QXB, SXB, VNG1, VSD, VXB, VXG
	36100-ZH7-003		1	-	-	1225387	HA, HA2, HAQ, HX, HX26, LX, LX16, LXZ, PA, PA2, PX, PX26, QA, QA2, QAB1, QAB3
							QAA, QAR2, QX, QX26, QXC, QXC6, QXC9, RA, RA2, RSC2, RX, SJP, SMD, SX, SX2, VA
							VA2, VAW, VAW1, VD16, VW12, VW22, VWN2, VX, VX26, VXB2, VXB6, VXU
	36100-ZH7-W41		1	-	-	1225387	HXQ4, LXQ4, QAA4, QXB, QXC4, QXQ4, RXQ4, SMC4, SME6, SWC4, SXB, SXQ4, VNG1
							VSD, VXB, VXG, VXQ4
	36100-ZF6-P81		1	-	-	2372801	QA2/A, QAW/A, QXC9/A
			1	-	-	2375750	QWA4/A, SWC4/A
	36100-ZF6-P82		1	-	-	2449126	QXK
	36100-ZH7-003		-	(1)	-	-----	L1/A, Q1/A, R1/A, S1/A, W1/A
	36100-ZE1-015		-	(1)	-	1225386	L1, Q1, Q2, R1, S1, V1, W1
	36100-ZH7-003		-	(1)	-	1225387	L1, Q1, Q2, R1, S1, V1, W1
	36100-ZE1-015		-	-	1	1000009	VXP
	36100-ZH8-W41		-	-	1	1000009	VXQP
	36100-ZH7-003		-	-	1	1000010	VXP


E-12

FAN COVER

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
11)	36100-ZH7-W41	SWITCH ASSY., ENGINE STOP....	-	-	1	1000010	----- VXQP
12	36103-ZE1-000	HOLDER, STOP SWITCH CORD.....	1	-	-	-----	-----
16	81329-567-020	GROMMET, DRAIN HOLE.....	1	-	-	-----	-----
							ESS, ESS/A, LHB5, LWD, QHB5
							ES3, ES3/A, ES4, ESS, ESS/A, HEA, HEA2, HEA2/A, HEA8, HEA8/A, LHE, LHE/A, LTJ
							LWD, LWD1, LWD1/A, LX, LX/A, LX8, LX8/A, PAE2, PAE2/A, PXE8, PXE8/A, QAE
							QAE2, QAE2/A, QAE6, QAE6/A, QHE, QHE4, QHE4/A, QHR4, QHR4/A, QKE3, QKE3/A
							QKE4, QME2, QME2/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QXB6
							QXB6/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXEB
							RHE, RHE4, RHE4/A, SHE, SHEZ, SKE1, SME1, SME1/A, SWE, SXE, SXE/A, SXE4
							SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, VDE, VDE2, VDE2/A, VEB6, VKB2, VKB2/A
							VKE4, VKK, VMA4, VME2, VME2/A, VME4, VMS2, VMT, VMT/A, VPE4, VPE4/A, VPE5
							VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4, VS5
							VSD3/A, VWA, VWA2, VWA2/A, VWT4, VWT4/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A
							VXE7, VXE7/A, VXE8, VXE8, VXE8/A, WMA4, WXE8, WXE8/A
			1	-	-	-----	1033679 HA, HX, LX, LXZ, PA, PX, QA, QX, QXB, QXC, RA, RX, SJP, SX, SXB, VA, VAW, VNG1, VSD
							VX, VXB
			1	-	-	-----	1056015 VSD3
			-	(1)	-	-----	-----
17	90013-883-000	BOLT, FLANGE, 6X12(CT200)....	5	5	5	-----	-----
18	90013-883-000	BOLT, FLANGE, 6X12(CT200)....	1	1	1	-----	-----
							ES1, ES1/A, ES3, ES3/A, ES4, HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA2, HEA2/A
							HEA8, HEA8/A, HH, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A, L1, L1/A
							LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LJ, LJ/A, LJC, LJC/A, LJG, LJG/A
							LSS, LT, LT/A, LTJ, LW, LW/A, LWD, LWD1, LWD1/A, LX, LX/A, LX16, LX, LX/A
							LXE8, LX8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ, PA, PA2, PA2/A, PAE2, PAE2/A, PX
							PX/A, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, Q1, Q1/A, Q2, QA, QA2, QA2/A
							QAB1, QAB3, QAB3/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2
							QAG2/A, QAQ, QAQ4, QAQ4/A, QAR2, QAR2/A, QAW, QAW/A, QD, QD/A, QE, QE/A, QH
							QH/A, QH26, QH26/A, QHB5, QHC, QHE, QHE4, QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A
							QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A, QKE3, QKE3/A, QKE4, QL2, QME2, QME2/A
							QMH, QMH/A, QP, QP/A, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QT, QT/A
							QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX, QX/A, QX26, QX26/A, QXB, QXB/A, QXB6
							QXB6/A, QXB7, QXB7/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE
							QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXEB, QXK, QXQ4
							QXQ4/A, QXU, QXU/A, R1, R1/A, RA, RA2, RA2/A, RA3, RD, RD/A, RH, RH26, RH26/A
							RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX, RX/A, RXP
							RXP/A, RXQ4, RXQ4/A, RXU, RXU/A, S1, S1/A, SD, SD/A, SE, SE/A, SH, SH/A, SHE
							SHEZ, SHQ4, SHQ4/A, SJ, SJ/A, SJG, SJG/A, SJP, SK, SKE1, SMC4, SMC4/A, SMD
							SME1, SME1/A, SME6, SME6/A, SMX2, SN, SN/A, SW, SWA4, SWC4, SWC4/A, SWE, SX
							SX/A, SX2, SXB, SXB/A, SXB7, SXB7/A, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A
							SXEB, SXEB/A, SXQ4, SXQ4/A, SXU, SXU/A, V1, VA, VA2, VA2/A, VAG2, VAG2/A, VAW
							VD16, VDE2, VDE2/A, VEB6, VH, VKB2, VKB2/A, VKE4, VKK, VKX4, VM2, VM2/A, VMA4
							VME2, VME2/A, VME4, VMS2, VMT, VMT/A, VMX2, VN17, VN17/A, VNG1, VNG1/A, VNT2
							VNT2/A, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7
							VPX7/A, VS3, VS37, VS37/A, VS4, VS5, VSD, VSD/A, VSD3, VSD3/A, VSD7, VSD7/A
							VSH7, VW12, VW12/A, VW22, VWA2, VWA2/A, VWN2, VWN2/A, VWT4, VWT4/A, VX, VX/A
							VX26, VXB, VXB/A, VXB2, VXB6, VXB7, VXB7/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A
							VXE7, VXE7/A, VXE8, VXE8, VXE8/A, VXE8, VXE8/A, VXP, VXP/A, VXQ4, VXQ4/A, VXP
							VXT1, VXT1/A, VXTB, VXU, VXU/A, VXU1, VXU1/A, W1, W1/A, WMA4, WMT8, WMT8/A
							WXE8, WXE8/A
19	90013-883-000	BOLT, FLANGE, 6X12(CT200)....	2	-	-	-----	-----
			2	-	-	-----	-----
							VS37/A, VSD3/A
							1033679 HA, HX, LX, LXZ, PA, PX, QA, QX, QXB, QXC, RA, RX, SX, SXB, VA, VAW, VNG1, VSD, VX
							VXB
			2	-	-	-----	-----
				(2)	-	-----	-----
							VS37, VSD3
20	90019-883-000	BOLT, FLANGE, 5X10(CT200)....	3	-	-	-----	-----
							1033679 L1, Q1, R1, S1, V1, W1
							ESS, ESS/A
21	90630-751-000	CLIP, PURSE LOCK.....	1	-	-	-----	-----
							LWD

E-12


FAN COVER

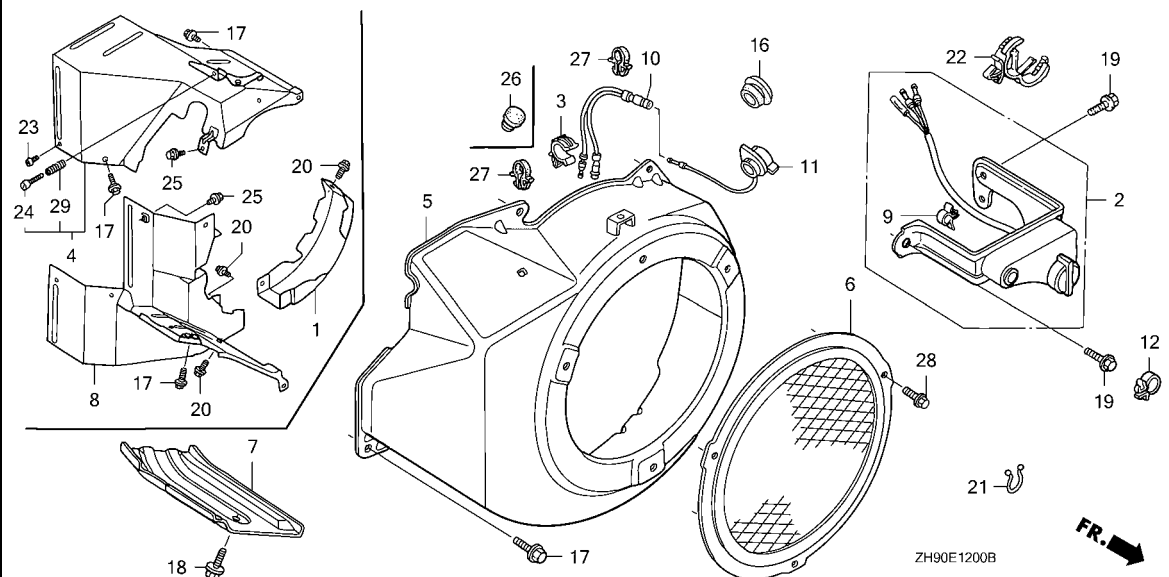

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
22	90684-ZA0-601	CLIP, HARNESS	1	-	1	-----	ES1, ES1/A, HA, HA2, HA2/A, HAP, HAP/A, HAQ, HX, HX/A, HX26, HX26/A, HX8 HX8/A, HXQ4, HXQ4/A, LJC, LJC/A, LX, LX/A, LX16, LXQ4, LXQ4/A, LXU, LXU/A LXZ, PA, PA2, PA2/A, PX, PX/A, PX26, PX26/A, PXU, PXU/A, QA, QA2, QA2/A, QAB1 QAB3, QAB3/A, QAG, QAG/A, QAG2, QAG2/A, QAQ, QAQ4, QAQ4/A, QAR2, QAR2/A, QAW QAW/A, QWA4, QWA4/A, QWH2, QWH2/A, QX, QX/A, QX26, QX26/A, QXB, QXB/A, QXC QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXQ4, QXQ4/A, QXU, QXU/A, RA, RA2 RA2/A, RSC2, RSC2/A, RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A, SJP SMC4, SMC4/A, SMD, SME6, SME6/A, SMX2, SWA4, SWC4, SWC4/A, SX, SX/A, SX2, SXB SXB/A, SXQ4, SXQ4/A, SXU, SXU/A, VA, VA2, VA2/A, VAG2, VAG2/A, VAW, VAW1 VD16, VKX4, VM2, VM2/A, VMX2, VN17, VN17/A, VNG1, VNG1/A, VNT2, VNT2/A, VPX4 VPX4/A, VPX5, VSD, VSD/A, VSD3, VSD3/A, VW12, VW12/A, VW22, VWA, VWA2 VWA2/A, VWN2, VWN2/A, VX, VX/A, VX26, VXB, VXB/A, VXB2, VXB6, VXG, VXP, VXP/A VXQ4, VXQ4/A, VXQP, VXT1, VXT1/A, VXTB, VXU, VXU/A, VXU1, VXU1/A, WMT8 WMT8/A
			1	-	-	-----	1284916 VPE4
			(1)	-	-	-----	L1, L1/A, Q1, Q1/A, R1, R1/A, S1, S1/A, V1, W1, W1/A
23	93500-05008-0A	SCREW, PAN, 5X8	1	-	-	-----	ESS, ESS/A
24	93500-05032-0A	SCREW, PAN, 5X32	1	-	-	-----	ESS, ESS/A
25	90008-ZE2-003	BOLT, FLANGE, 6X10	3	-	-	-----	ESS, ESS/A
26	50317-254-000	PLUG, USELESS HOLE	-	-	1	-----	ES3, ES3/A, ES4, VMT, VMT/A, VS3, VS4, VS5
27	90654-SA4-003	CLIP, WIRE HARNESS, 6MM(WHITE)	2	-	-	-----	LWD, LWD1, LWD1/A, QKE3/A
28	90008-ZE2-003	BOLT, FLANGE, 6X10	3	-	-	-----	QKE3, SKE1
	95701-06008-00	BOLT, FLANGE, 6X8	3	-	-	-----	ESS, ESS/A
29	16584-883-300	SPRING, CONTROL ADJUSTING	1	-	-	-----	

E-14

CARBURETOR(1)

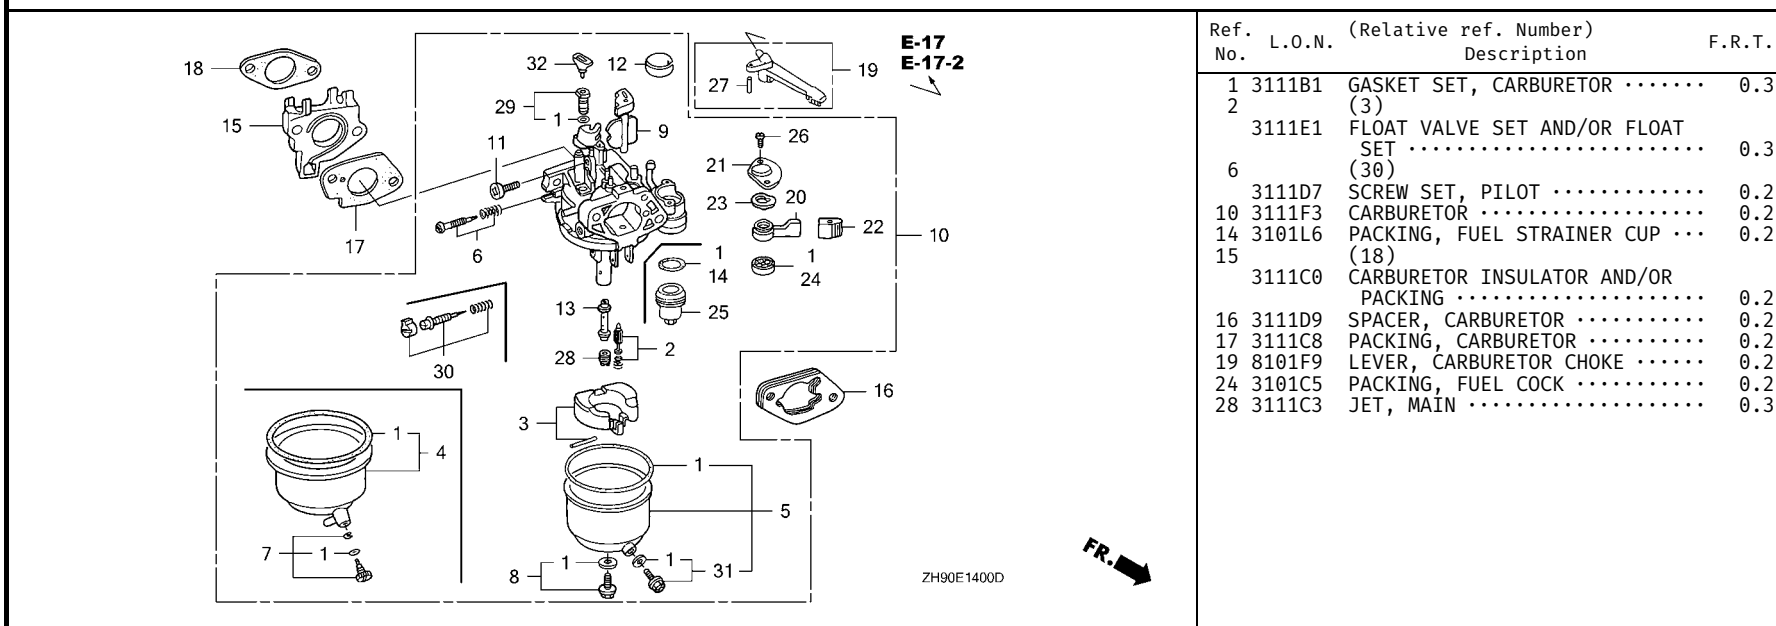


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	3111B1	GASKET SET, CARBURETOR	0.3
2	3111E1	FLOAT VALVE SET AND/OR FLOAT SET	0.3
6	3111D7	SCREW SET, PILOT	0.2
10	3111F3	CARBURETOR	0.2
14	3101L6	PACKING, FUEL STRAINER CUP ...	0.2
15	3111C0	CARBURETOR INSULATOR AND/OR PACKING	0.2
16	3111D9	SPACER, CARBURETOR	0.2
17	3111C8	PACKING, CARBURETOR	0.2
19	8101F9	LEVER, CARBURETOR CHOKE	0.2
24	3101C5	PACKING, FUEL COCK	0.2
28	3111C3	JET, MAIN	0.3

Ref. No.	Part No.	Description	Reqd. QTY	Serial No.	Parts catalogue code
			(1) (2) (3)		
1	16010-ZE2-015	GASKET SET..... (EXCEPT 16173-001-004)	1 - -	-----	ES1, HA, HEA, HH, LHB1, LHB3, LHQ4, LJ, LJC, LJG, LSS, LT, LTJ, LW, LWD1, LXZ, PA, QA, QAB1, QAE, QD, QD/A, QE, QHC, QHE, QKE3, QP, QSC, QT, QXC, QXC4, QXC4/A, QXEB, RA, RD, RD/A, RHE, SD, SD/A, SE, SHE, SHEZ, SJ, SJG, SJP, SK, SKE1, SMC4, SMC4/A, SME6, SN, SN/A, SW, SWE, VA, VAW, VAW1, VWA, VWT4, VXT1
	16010-ZE2-812		1 - -	-----	HA2, HA2/A, HAQ, HEA2, HEA2/A, HEA8, HEA8/A, HX/A, HX26, HX26/A, HX8/A, HXQ4/A, LH/A, LHB5, LHE/A, LX/A, LXE/A, LXE8/A, LXQ4/A, LXU/A, PA2, PA2/A, PAE2, PAE2/A, PX/A, PX26, PX26/A, PXE8, PXE8/A, PXU/A, QA2, QA2/A, QAB3/A, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAO, QAO4/A, QAR2, QAR2/A, QAW, QAW/A, QH/A, QH26, QH26/A, QHB5, QHE4/A, QHP1/A, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ/A, QKE4, QL2, QME2/A, QMH/A, QSC9, QSC9/A, QSE/A, QSE2, QSE8/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX/A, QX26, QX26/A, QXB/A, QXB6, QXB6/A, QXB7, QXB7/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE/A, QXE4/A, QXE6, QXE6/A, QXE8/A, QXE9, QXK, QXQ4/A, QXU/A, RA2, RA2/A, RA3, RH26, RH26/A, RHE4/A, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX/A, RXQ4/A, RXU/A, SH/A, SHQ4/A, SME1/A, SMX2, SWA4, SWC4/A, SX/A, SX2, SXB/A, SXB7, SXB7/A, SXE/A, SXE4/A, SXE8/A, SXEB/A, SXQ4/A, SXU/A, VA2, VA2/A, VAG2, VAG2/A, VDE2, VDE2/A, VKB2, VKB2/A, VM2, VM2/A, VMA4, VME2, VME2/A, VME4, VN17, VN17/A, VNG1/A, VNT2, VNT2/A, VSD/A, VSD7, VSD7/A, VSH7, VW12, VW12/A, VW22, VWA2, VWA2/A, VWN2, VWN2/A, VX/A, VX26, VXB/A, VXB2, VXB6, VXB7, VXB7/A, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8/A, VXX, VXQ4/A, VXU/A, VXU1/A, WMA4, WMT8/A, WXE8, WXE8/A
		(CARBURETOR NO.)	1 - -	-----	BE17B A LWD

2

E-14


CARBURETOR(1)

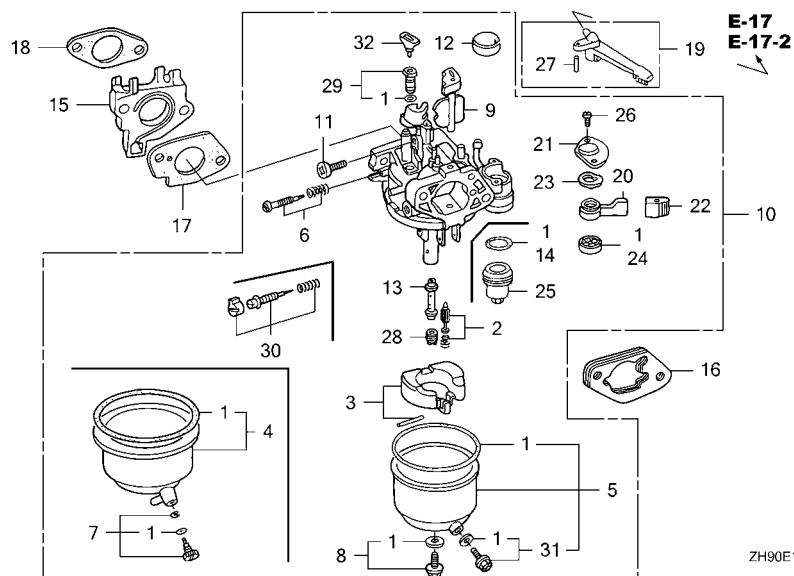

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
(1)	16010-ZE2-015	GASKET SET..... (EXCEPT16173-001-004) ,,	1	-	-	BE21A B LX16, VD16, VEB6	
			1	-	-	BE21A C ES1/A, HX, HX8, HXQ4, LH, LHE, LJ/A, LJC/A, LJG/A, LT/A, LW/A, LWD1/A, LX, LXE, LXE8, LXQ4, LXU, PX, PXU, QAB3, QAQ4, QE/A, QH, QHE4, QHP1, QHQ4, QHZ, QKE3/A, QME2, QMH, QP/A, QSE, QSE8, QT/A, QX, QXB, QXE, QXE4, QXE8, QXQ4, QXU, RH, RHE4, RHQ4, RX, RXQ4, RXU, SE/A, SH, SHQ4, SJ/A, SJG/A, SMD, SME1, SME6/A, SWC4, SX, SXB, SXE, SXE4, SXE8, SXEB, SXQ4, SXU, VDE, VH, VNG1, VSD, VWT4/A, VX, VXB, VXE, VXE4, VXEB, VXG, VXQ4, VXT1/A, VXTB, VXU, VXU1	
	16010-ZE2-A20	,,,..... (CARBURETOR NO.)	1	-	-	BE21B B WMT8	
	16010-ZE2-812	,,,..... (CARBURETOR NO.)	1	-	-	BE17B B ----- LWD	
			1	-	-	BE21A D ----- ES1/A, LJ/A, LJC/A, LJG/A, LT/A, LW/A, LWD1/A, QE/A, QKE3/A, QP/A, QT/A, SE/A, SJ/A, SJG/A, SME6/A, VWT4/A, VXT1/A	
			1	-	-	BE75B B ----- HX, HX8, HXQ4, LH, LHE, LX, LX16, LXE, LXE8, LXQ4, LXU, PX, PXU, QAB3, QAQ4, QH, QHE4, QHP1, QHQ4, QHZ, QME2, QMH, QSE, QSE8, QX, QXB, QXE, QXE4, QXE8, QXQ4, QXU, RH, RHE4, RHQ4, RX, RXQ4, RXU, SH, SHQ4, SMD, SME1, SWC4, SX, SXB, SXE, SXE4, SXE8, SXEB, SXQ4, SXU, VD16, VDE, VEB6, VH, VNG1, VSD, VX, VXB, VXE, VXE4, VXEB, VXG, VXQ4, VXTB, VXU, VXU1	
	16010-ZE2-015	,,,..... (EXCEPT16173-001-004)	1	-	-	BE76C A ----- WMT8	
			-	(1)	-	----- L1, Q1, Q2, R1, S1, V1, W1	
			-	(1)	-	BE21A C L1/A, Q1/A, R1/A, S1/A, W1/A	
			-	(1)	-	BE24B C L1/A, Q1/A, R1/A, S1/A, W1/A	
	16010-ZE2-812	,,,..... (CARBURETOR NO.)	-	(1)	-	BE21A D ----- L1/A, Q1/A, R1/A, S1/A, W1/A	
	16010-ZE2-015	,,,..... (EXCEPT16173-001-004)	-	(1)	-	BE21B B ----- L1/A, Q1/A, R1/A, S1/A, W1/A	

E-14

CARBURETOR(1)

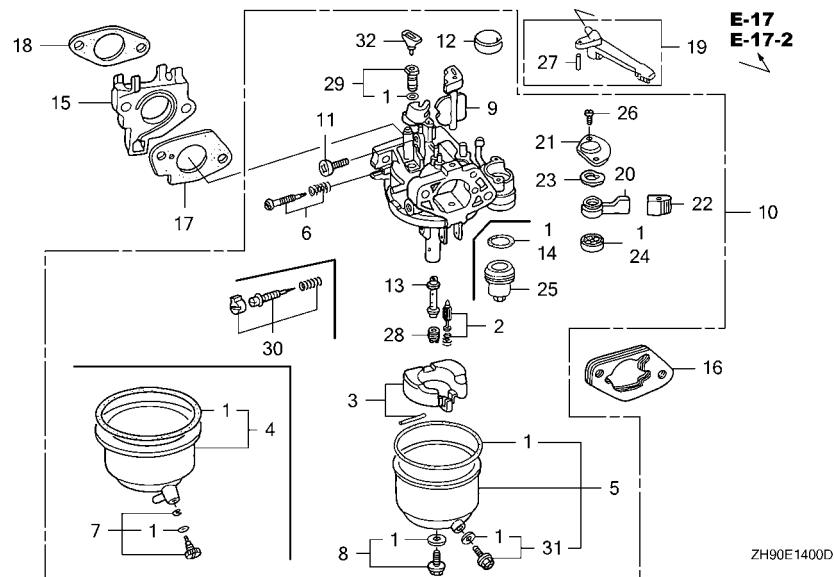

ZH90E1400D



Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
4	16015-ZE2-A20	CHAMBER SET, FLOAT..... (CARBURETOR NO.)	1	-	-	BE17B B ----- LWD	

CARBURETOR(1)

[illegible]




- (1) -

CARBURETOR(1)

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	GX270 (2)	(3)		
9	16044-ZE2-005	CHOKE SET	1	-	-	-----	ES1, ES1/A, HA, HA2, HA2/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, HH, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A, LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LT, LT/A, LTJ, LW, LW/A, LWD1, LWD1/A, LX, LX/A, LX16, LXE, LXE/A, LXE8, LXE8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ, PA, PA2, PA2/A, PAE2, PAE2/A, PX, PX/A, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, QA, QA2, QA2/A, QAB1, QAB3, QAB3/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAQ, QAQ4, QAQ4/A, QAR2, QAR2/A, QAW, QAW/A, QD, QD/A, QE, QE/A, QH, QH/A, QH26, QH26/A, QHB5, QHC, QHE, QHE4, QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A, QKE3, QKE3/A, QKE4, QL2, QME2, QME2/A, QMH, QMH/A, QP, QP/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QT, QT/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX, QX/A, QX26, QX26/A, QXB, QXB/A, QXB6, QXB6/A, QXB7, QXB7/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXEB, QXK, QXQ4, QXQ4/A, QXU, QXU/A, RA, RA2, RA2/A, RA3, RD, RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX, RX/A, RXQ4, RXQ4/A, RXU, RXU/A, SD, SD/A, SE, SE/A, SH, SH/A, SHE, SHEZ, SHQ4, SHQ4/A, SJ, SJ/A, SJG, SJG/A, SJP, SK, SKE1, SMC4, SMC4/A, SMD, SME1, SME1/A, SME6, SME6/A, SMX2, SN, SN/A, SW, SWA4, SWC4, SWC4/A, SWE, SX, SX/A, SX2, SXB, SXB/A, SXB7, SXB7/A, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4, SXQ4/A, SXU, SXU/A, VA, VA2, VA2/A, VAG2, VAG2/A, VAW, VAW1, VD16, VDE, VDE2, VDE2/A, VEB6, VH, VKB2, VKB2/A, VM2, VM2/A, VMA4, VME2, VME2/A, VME4, VN17, VN17/A, VNG1, VNG1/A, VNT2, VNT2/A, VSD, VSD/A, VSD7, VSD7/A, VSH7, VW12, VW12/A, VW22, VWA, VWA2, VWA2/A, VWN2, VWN2/A, VWT4, VWT4/A, VX, VX/A, VX26, VXB, VXB/A, VXB2, VXB2, VXB7, VXB7/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8, VXE8/A, VXG, VXK, VXQ4, VXQ4/A, VXT1, VXT1/A, VXTB, VXU, VXU/A, VXU1, VXU1/A, WMA4, WMT8, WMT8/A, WXE8, WXE8/A
10	16100-ZH9-821	CARBURETOR ASSY.(BE21A C)	1	-	-	-----	ES1, LHB1, LHB3, LJC, LT, LWD1, QAB1, QKE3, SKE1, VWT4, VXT1
	16100-ZH9-W21	CARBURETOR ASSY.(BE75B B/C) ..	1	-	-	-----	HA2/A, HEA2/A, HEA8, HEA8/A, HX/A, HX26/A, HX8/A, HXQ4, LH/A, LHB5, LHE/A, LX/A, LXE/A, LXE8/A, LXQ4/A, LXU/A, PA2/A, PAE2, PAE2/A, PX/A, PX26/A, PXE8, PXE8/A, PXU/A, QA2/A, QAB3/A, QAE2/A, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAQ4/A, QAR2/A, QAW, QAW/A, QH/A, QH26/A, QHB5, QHE4/A, QHP1/A, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ/A, QKE4, QL2, QME2/A, QMH/A, QSE/A, QSE2, QSE8/A, QX/A, QX26/A, QXB/A, QXB6, QXB6/A, QXB7, QXB7/A, QXE/A, QXE4/A, QXE6/A, QXE8/A, QXE9, QXQ4/A, QXU/A, RA2/A, RA3, RH26/A, RHE4/A, RHQ4/A, RSC2/A, RSS, RSS/A, RX/A, RXQ4/A, RXU/A, SH/A, SHQ4/A, SME1/A, SMX2, SWA4, SWC4/A, SX/A, SXB/A, SXB7, SXB7/A, SXE/A, SXE4/A, SXE8/A, SXEB/A, SXQ4/A, SXU/A, VA2/A, VAG2, VAG2/A, VDE2/A, VKB2, VKB2/A, VM2, VM2/A, VME2, VME2/A, VN17, VN17/A, VNG1/A, VNT2, VNT2/A, VSD, VSD7, VSD7/A, VSH7, VW12/A, VWA2/A, VWN2/A, VX/A, VXB/A, VXB7, VXB7/A, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8, VXE8/A, VXX, VXQ4/A, VXU/A, VXU1/A
	16100-ZH9-W01	CARBURETOR ASSY.(BE75A B/C) ..	1	-	-	-----	QSC9/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QXC6/A, QXC9/A, QXK, VMA4, VME4
	16100-ZK9-V21	CARBURETOR ASSY.(BE76C A)	1	-	-	-----	WMA4, WMT8/A, WXE8, WXE8/A
	16100-ZE2-P51	CARBURETOR ASSY.(BE17B A)	1	-	-	-----	LWD
	16100-ZH9-820	CARBURETOR ASSY.(BE21A B)	1	-	-	-----	1027933 1173689 HA, HEA, HH, HX, HXQ4, LH, LHE, LHQ4, LJ, LJG, LSS, LTJ, LW, LX, LX16, LXE, LXQ4, LXZ, PA, PX, QA, QAE, QAQ4, QE, QH, QHE, QHE4, QHQ4, QME2, QP, QT, QX, QXB, QXE, QXE4, QXEB, QXQ4, RA, RH, RHE, RHE4, RHQ4, RX, RXQ4, SE, SH, SHE, SHEZ, SHQ4, SJ, SJG, SJP, SK, SME1, SME6, SW, SWE, SX, SXB, SXE, SXE4, SXEB, SXQ4, VA, VAW, VAW1, VD16, VDE, VEB6, VNG1, VSD, VWA, VX, VXB, VXE, VXE4, VXE8, VXE8, VXE8/A, VXG, VXQ4, VXU
	16100-ZH9-800	CARBURETOR ASSY.(BE24B B)	1	-	-	-----	1173689 QXC4
	16100-ZH9-810	CARBURETOR ASSY.(BE21B A)	1	-	-	-----	1175033 QD, RD, SD, SMC4, SN
	16100-ZH9-800	CARBURETOR ASSY.(BE24B B)	1	-	-	-----	1175033 QHC, QXC
	16100-ZH9-W20	CARBURETOR ASSY.(BE75B A)	1	-	-	-----	1175523 HA2, HEA2, HX26, PA2, PE26, QA2, QAE2, QAE6, QAR2, QH26, QX26, QXE6, RA2, RH26, RSC2, SX2, VA2, VDE2, VW12, VW22, VWA2, VWN2, VX26, VXB2, VXB6
	16100-ZH9-800	CARBURETOR ASSY.(BE24B B)	1	-	-	-----	1175523 QSC
	16100-ZH9-820	CARBURETOR ASSY.(BE21A B)	1	-	-	-----	1175523 VH
	16100-ZH9-W00	CARBURETOR ASSY.(BE75A A)	1	-	-	-----	1175950 HQ, QAO, QSC9, QXC6, QXC9

E-14

CARBURETOR(1)

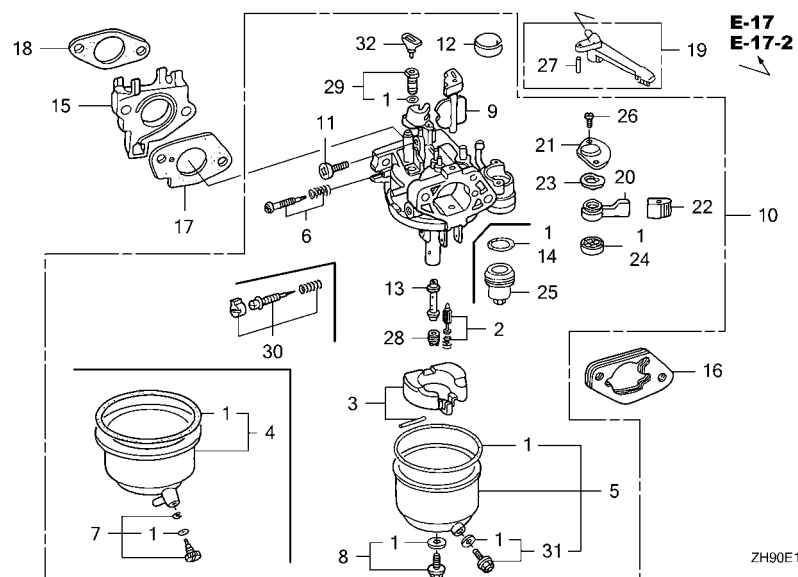

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
10)	16100-ZH9-811	CARBURETOR ASSY.(BE21B B)	(1)	-	-	1274336	SMD
	16100-ZH9-821	CARBURETOR ASSY.(BE21A C)	1	-	-	1340169	SWC4
	16100-ZH9-811	CARBURETOR ASSY.(BE21B B)	(1)	-	-	1445376	WMT8
	16100-ZH9-821	CARBURETOR ASSY.(BE21A C)	1	-	-	1471451	HX8, LXE8, LXU, PXU, QAB3, QHP1, QHZ, QMH, QSE, QSE8, QXE8, QXU, RXU, SXE8, SXU VXTB, VXU1
			1	-	-	2295156	ES1/A, LJ/A, LJC/A, LJG/A, LT/A, LW/A, LWD1/A, QE/A, QKE3/A, QP/A, QT/A SE/A, SJ/A, SJG/A, SME6/A, VWT4/A, VXT1/A
	16100-ZH9-811	CARBURETOR ASSY.(BE21B B)	1	-	-	2296345	QD/A, RD/A, SD/A, SMC4/A, SN/A
	16100-ZH9-801	CARBURETOR ASSY.(BE24B C)	1	-	-	2301831	QXC4/A
	16100-ZE2-P52	CARBURETOR ASSY.(BE17B B)	1	-	-	1027934	LWD
	16100-ZH9-821	CARBURETOR ASSY.(BE21A C)	1	-	-	1173690	HA, HEA, HH, LHQ4, LJ, LJG, LSS, LTJ, LW, LXZ, PA, QA, QAE, QE, QHE, QP, QT, QXEB RA, RHE, SE, SHE, SHEZ, SJ, SJG, SJP, SK, SME6, SW, SWE, VA, VAW, VAW1, VWA
	16100-ZH9-801	CARBURETOR ASSY.(BE24B C)	1	-	-	1173690	QXC4
	16100-ZH9-821	CARBURETOR ASSY.(BE21A C)	1	-	-	1173690	LX16, VD16, VEB6
			1	-	-	1471451	HX, HXQ4, LH, LHE, LX, LXE, LXQ4, PX, QAA4, QH, QHE4, QHQ4, QME2, QX, QXB, QXE QXE4, QXQ4, RH, RHE4, RHQ4, RX, RXQ4, SH, SHQ4, SME1, SX, SXB, SXE, SXE4, SXEB SXQ4, VDE, VNG1, VSD, VX, VXB, VXE, VXE4, VXE6, VXG, VXQ4, VXU
	16100-ZE2-P53	CARBURETOR ASSY.(BE17B C)	1	-	-	1174063	LWD
	16100-ZH9-811	CARBURETOR ASSY.(BE21B B)	(1)	-	-	1175034	QD, RD, SD, SMC4, SN
	16100-ZH9-801	CARBURETOR ASSY.(BE24B C)	1	-	-	1175034	QHC, QXC
	16100-ZH9-W21	CARBURETOR ASSY.(BE75B B/C) ..	1	-	-	1175524	HA2, HEA2, HX26, LX16, PA2, PX26, QA2, QAE2, QAE6, QAR2, QH26, QX26, QXE6, RA2 RH26, RSC2, SX2, VA2, VD16, VDE2, VEB6, VW12, VW22, VWA2, VWN2, VX26, VXB2 VXB6
	16100-ZH9-801	CARBURETOR ASSY.(BE24B C)	1	-	-	1175524	QSC
	16100-ZH9-821	CARBURETOR ASSY.(BE21A C)	1	-	-	1175524	1471451 VH
	16100-ZH9-W01	CARBURETOR ASSY.(BE75A B/C) ..	1	-	-	1175951	HAQ, QAA, QSC9, QXC6, QXC9
	16100-ZH9-821	CARBURETOR ASSY.(BE21A C)	1	-	-	1274337	1471451 SMD
	16100-ZH9-W21	CARBURETOR ASSY.(BE75B B/C) ..	1	-	-	1340170	SWC4
	16100-ZK9-V21	CARBURETOR ASSY.(BE76C A)	1	-	-	1445377	WMT8


E-14

CARBURETOR(1)

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	GX270 (2)	(3)		
10)	16100-ZH9-W21	CARBURETOR ASSY.(BE75B B/C) ..	1	-	-	1471452	----- HX, HX8, HXQ4, LH, LHE, LX, LXE, LXE8, LXQ4, LXU, PX, PXU, QAB3, QAQ4, QH, QHE4, QHP1, QHQ4, QHZ, QME2, QMH, QSE, QSE8, QX, QXB, QXE, QXE4, QXE8, QXQ4, QXU, RH, RHE4, RHQ4, RX, RXQ4, RXU, SH, SHQ4, SMD, SME1, SX, SXB, SXE, SXE4, SXE8, SXEB, SXQ4, SXU, VDE, VH, VNG1, VSD, VX, VXB, VXE, VXE4, VXE8, VXG, VXQ4, VXTB, VXU, VXU1
	16100-ZH9-822	CARBURETOR ASSY.(BE21A D/E) ..	1	-	-	2295157	----- ES1/A, LJ/A, LJC/A, LJG/A, LT/A, LW/A, LWD1/A, QE/A, QKE3/A, QP/A, QT/A, SE/A, SJ/A, SJG/A, SME6/A, VWT4/A, VXT1/A
	16100-ZH9-812	CARBURETOR ASSY.(BE21B C)	1	-	-	2296346	----- QD/A, RD/A, SD/A, SMC4/A, SN/A
	16100-ZH9-802	CARBURETOR ASSY.(BE24B D)	1	-	-	2301832	----- QXC4/A
	16100-ZH9-810	CARBURETOR ASSY.(BE21B A)	-	(1)	-	-----	----- Q2
	16100-ZH9-820	CARBURETOR ASSY.(BE21A B)	-	(1)	-	-----	----- Q2
	16100-ZH9-800	CARBURETOR ASSY.(BE24B B) (CYCLONE)	-	(1)	-	-----	1173689 L1, Q1, R1, S1, W1
	16100-ZH9-820	CARBURETOR ASSY.(BE21A B) (COCK&STRAINER)	-	(1)	-	-----	1173689 L1, Q1, R1, S1, W1
	16100-ZH9-810	CARBURETOR ASSY.(BE21B A) (STANDARD)	-	(1)	-	-----	1175034 L1, Q1, R1, S1, V1, W1
	16100-ZH9-800	CARBURETOR ASSY.(BE24B B)	-	(1)	-	-----	1175523 Q2
	16100-ZH9-821	CARBURETOR ASSY.(BE21A C) (COCK&STRAINER)	-	(1)	-	-----	2295156 L1/A, Q1/A, R1/A, S1/A, W1/A
	16100-ZH9-811	CARBURETOR ASSY.(BE21B B) (STANDARD)	-	(1)	-	-----	2296345 L1/A, Q1/A, R1/A, S1/A, W1/A
	16100-ZH9-801	CARBURETOR ASSY.(BE24B C) (CYCLONE)	-	(1)	-	-----	2301831 L1/A, Q1/A, R1/A, S1/A, W1/A
			-	(1)	-	1173690	----- L1, Q1, R1, S1, W1
	16100-ZH9-821	CARBURETOR ASSY.(BE21A C) (COCK&STRAINER)	-	(1)	-	1173690	----- L1, Q1, R1, S1, W1
	16100-ZH9-811	CARBURETOR ASSY.(BE21B B) (STANDARD)	-	(1)	-	1175035	----- L1, Q1, R1, S1, V1, W1
	16100-ZH9-801	CARBURETOR ASSY.(BE24B C)	-	(1)	-	1175524	----- Q2
	16100-ZH9-822	CARBURETOR ASSY.(BE21A D/E) .. (COCK&STRAINER)	-	(1)	-	2295157	----- L1/A, Q1/A, R1/A, S1/A, W1/A
	16100-ZH9-812	CARBURETOR ASSY.(BE21B C) (STANDARD)	-	(1)	-	2296346	----- L1/A, Q1/A, R1/A, S1/A, W1/A
	16100-ZH9-802	CARBURETOR ASSY.(BE24B D) (CYCLONE)	-	(1)	-	2301832	----- L1/A, Q1/A, R1/A, S1/A, W1/A

E-14

CARBURETOR(1)

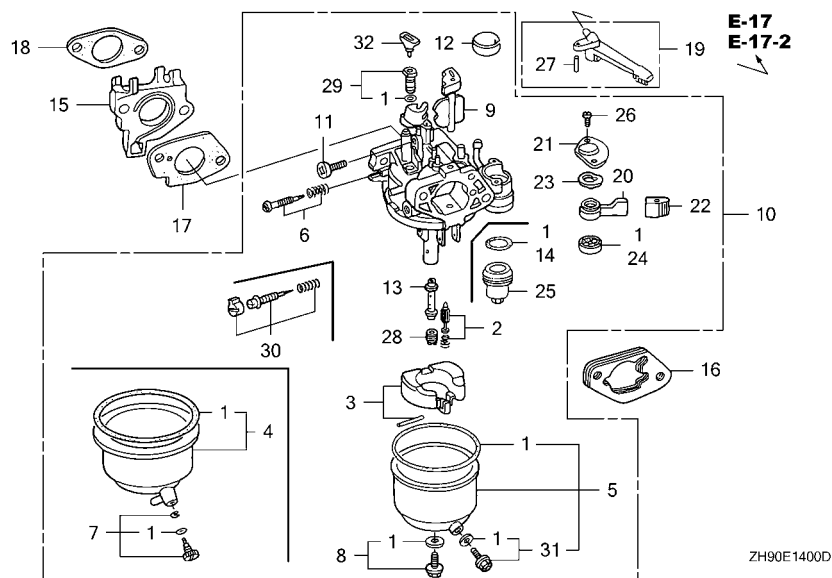


Ref. No.	Part No.	Description	Reqd. QTY	Serial No.	Parts catalogue code
			GX270 (1) (2) (3)		
11	16124-ZE0-005	SCREW, THROTTLE STOP.....	1 - -	-----	ES1, ES1/A, HA, HA2, HA2/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, HH, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A, LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LT, LT/A, LTJ, LW, LW/A, LWD, LWD1, LWD1/A, LX, LX/A, LX16, LXE, LXE/A, LXE8, LXE8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ, PA, PA2, PA2/A, PAE2, PAE2/A, PX, PX/A, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, QA, QA2, QA2/A, QAB1, QAB3, QAB3/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAQ, QAQ4, QAQ4/A, QAR2, QAR2/A, QAW, QAW/A, QD, QD/A, QE, QE/A, QH, QH/A, QH26, QH26/A, QHB5, QHC, QHE, QHE4, QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A, QKE3, QKE3/A, QKE4, QL2, QME2, QME2/A, QMH, QMH/A, QP, QP/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QT, QT/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX, QX/A, QX26, QX26/A, QXB, QXB/A, QXB6, QXB6/A, QXB7, QXB7/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXE9, QXK, QXQ4, QXQ4/A, QXU, QXU/A, RA, RA2, RA2/A, RA3, RD, RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX, RX/A, RXQ4, RXQ4/A, RXU, RXU/A, SD, SD/A, SE, SE/A, SH, SH/A, SHE, SHEZ, SHQ4, SHQ4/A, SJ, SJ/A, SJG, SJG/A, SJP, SK, SKE1, SMC4, SMC4/A, SMD, SME1, SME1/A, SME6, SME6/A, SMX2, SN, SN/A, SW, SWA4, SWC4, SWC4/A, SWE, SX, SX/A, SX2, SXB, SXB/A, SXB7, SXB7/A, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4, SXQ4/A, SXU, SXU/A, VA, VA2, VA2/A, VAG2, VAG2/A, VAW, VAW1, VD16, VDE, VDE2, VDE2/A, VEB6, VH, VKB2, VKB2/A, VM2, VM2/A, VMA4, VME2, VME2/A, VME4, VN17, VN17/A, VNG1, VNG1/A, VNT2, VNT2/A, VSD, VSD/A, VSD7, VSD7/A, VSH7, VW12, VW12/A, VW22, VWA, VWA2, VWA2/A, VWN2, VWN2/A, VWT4, VWT4/A, VX, VX/A, VX26, VXB, VXB/A, VXB2, VXB6, VXB7, VXB7/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8, VXE8/A, VXG, VXK, VXQ4, VXQ4/A, VXT1, VXT1/A, VXTB, VXU, VXU/A, VXU1, VXU1/A, WMA4, WMT8, WMT8/A, WXE8, WXE8/A
12	16148-141-881	CAP, CHOKE DUST.....	- (1) - 1 - -	-----	LWD

CARBURETOR(1)

2

E-14

CARBURETOR(1)

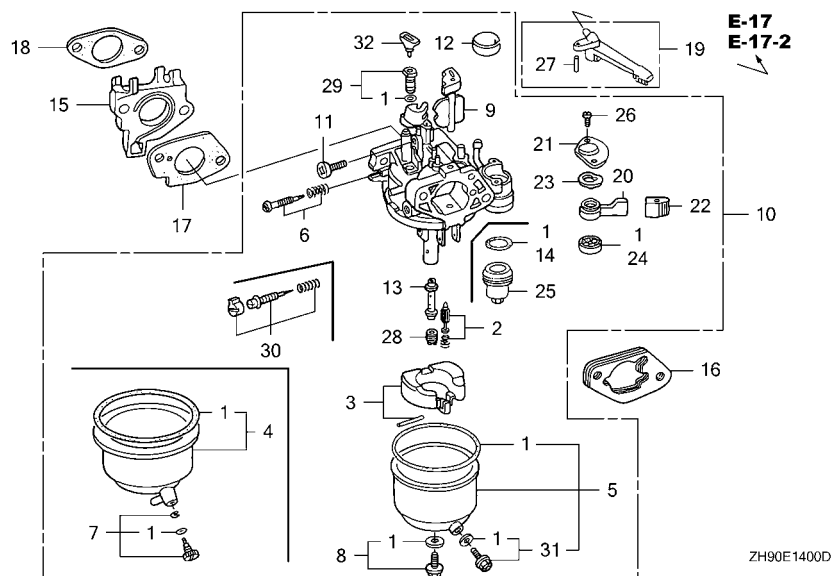

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	GX270 (2)	(3)		
14	16173-001-004	O-RING.....	1	-	-	-----	ES1, ES1/A, HA, HA2, HA2/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, HH, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A, LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LT, LT/A, LTJ, LW, LW/A, LWD, LWD1, LWD1/A, LX, LX/A, LX16, LXE, LXE/A, LXE8, LXE8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ, PA, PA2, PA2/A, PAE2, PAE2/A, PX, PX/A, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, QA, QA2, QA2/A, QAB1, QAB3, QAB3/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAQ, QAQ4, QAQ4/A, QAR2, QAR2/A, QAW, QAW/A, QE, QE/A, QH, QH/A, QH26, QH26/A, QHB5, QHC, QHE, QHE4, QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A, QKE3, QKE3/A, QKE4, QL2, QME2, QME2/A, QMH, QMH/A, QP, QP/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QT, QT/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX, QX/A, QX26, QX26/A, QXB, QXB/A, QXB6, QXB6/A, QXB7, QXB7/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXEB, QXK, QXQ4, QXQ4/A, QXU, QXU/A, RA, RA2, RA2/A, RA3, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX, RX/A, RXQ4, RXQ4/A, RXU, RXU/A, SE, SE/A, SH, SH/A, SHE, SHEZ, SHQ4, SHQ4/A, SJ, SJ/A, SJG, SJG/A, SJP, SK, SKE1, SME1, SME1/A, SME6, SME6/A, SMX2, SW, SWA4, SWC4, SWC4/A, SWE, SX, SX/A, SX2, SXB, SXB/A, SXB7, SXB7/A, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4, SXQ4/A, SXU, SXU/A, VA, VA2, VA2/A, VAG2, VAG2/A, VAW, VAW1, VD16, VDE, VDE2, VDE2/A, VEB6, VH, VKB2, VKB2/A, VM2, VM2/A, VMA4, VME2, VME2/A, VME4, VN17, VN17/A, VNG1, VNG1/A, VNT2, VNT2/A, VSD, VSD/A, VSD7, VSD7/A, VSH7, VW12, VW12/A, VW22, VWA, VWA2, VWA2/A, VWN2, VWN2/A, VWT4, VWT4/A, VX, VX/A, VX26, VXB, VXB/A, VXB2, VXB6, VXB7, VXB7/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8/A, VXE9, VXE9/A, VXG, VXX, VXQ4, VXQ4/A, VXT1, VXT1/A, VXTB, VXU, VXU/A, VXU1, VXU1/A
		(CARBURETOR NO.)	1	-	-	BE21A C -----	SMD
			-	(1)	-		


E-14

CARBURETOR(1)

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
15	16211-ZE2-000	INSULATOR, CARBURETOR	1	-	-	-----	ES1, HA, HA2, HA2/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, HH, HX, HX/A, HX26 HX26/A, HX8, HX8/A, HXQ4, HXQ4/A, LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A LHQ4, LJ, LJC, LJC/A, LJG, LSS, LT, LT/A, LTJ, LW, LWD, LWD1, LWD1/A, LX, LX/A LX16, LXE, LXE/A, LXE8, LXE8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ, PA, PA2, PA2/A PAE2, PAE2/A, PX, PX/A, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, QA, QA2 QA2/A, QAB1, QAB3, QAB3/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2 QAG2/A, QAG4, QAG4/A, QAR2, QAR2/A, QAW, QAW/A, QD, QD/A, QE, QE/A, QH QH/A, QH26, QH26/A, QHB5, QHC, QHE, QHE4, QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A, QKE3, QKE3/A, QL2, QME2, QME2/A, QMH QMH/A, QP, QP/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QT, QT/A QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX, QX/A, QX26, QX26/A, QXB, QXB/A, QXB6 QXB6/A, QXB7, QXB7/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXE9/A, QXK, QXQ4 QXQ4/A, QXU, QXU/A, RA, RA2, RA2/A, RA3, RD, RH, RH26, RH26/A, RHE, RHE4 RHE4/A, RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RX, RX/A, RXQ4, RXQ4/A, RXU, RXU/A SD, SD/A, SE, SE/A, SH, SH/A, SHE, SHEZ, SHQ4, SHQ4/A, SJ, SJG, SJP, SK, SKE1 SMC4, SMC4/A, SMD, SME1, SME1/A, SME6, SME6/A, SMX2, SN, SN/A, SW, SWA4, SWC4 SWC4/A, SWE, SX, SX/A, SX2, SXB, SXB/A, SXB7, SXB7/A, SXE, SXE/A, SXE4 SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4, SXQ4/A, SXU, SXU/A, VA, VA2, VA2/A VAG2, VAG2/A, VAW, VAW1, VD16, VDE, VDE2, VDE2/A, VEB6, VH, VKB2, VKB2/A, VM2 VM2/A, VMA4, VME2, VME2/A, VME4, VN17, VN17/A, VNG1, VNG1/A, VNT2, VNT2/A VSD, VSD/A, VSD7, VSD7/A, VSH7, VW12, VW12/A, VW22, VWA, VWA2, VWA2/A, VWN2 VWN2/A, VWT4, VWT4/A, VX, VX/A, VX26, VXB, VXB/A, VXB2, VXB6, VXB7, VXB7/A VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8/A, VXE9, VXE9/A, VXE VXQ4, VXQ4/A, VXT1, VXT1/A, VXTB, VXU, VXU/A, VXU1, VXU1/A, WMA4, WMT8 WMT8/A, WXE8, WXE8/A ES1/A, LJ/A, LJG/A, LW/A, RD/A, RSS/A, SJ/A, SJG/A ES1/A, LJ/A, LJG/A, LW/A, RD/A, RSS/A, SJ/A, SJG/A L1, Q1, Q2, R1, S1, V1, W1 L1/A, Q1/A, R1/A, S1/A, W1/A L1/A, Q1/A, R1/A, S1/A, W1/A
	16211-ZE2-010		1	-	-	-----	2493039
	16211-ZE2-000		1	-	-	-----	2493040
	16211-ZE2-000		-	(1)	-	-----	2493039
	16211-ZE2-010		-	(1)	-	-----	2493040

E-14

CARBURETOR(1)

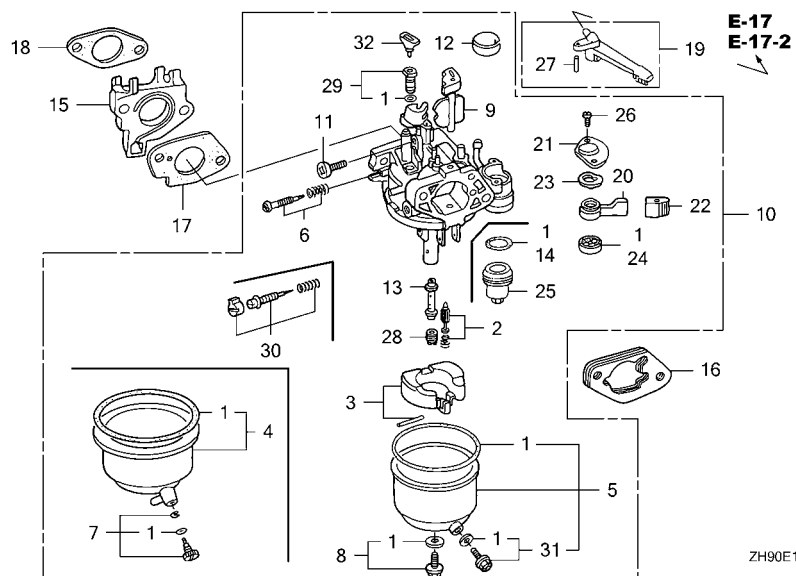


Ref. No.	Part No.	Description	Reqd. QTY	Serial No.	Parts catalogue code
			GX270 (1) (2) (3)		
16	16220-ZA0-702	SPACER COMP., CARBURETOR.....	1 - -	-----	ES1, ES1/A, HA, HA2, HA2/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, HH, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A, LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LT, LT/A, LW, LW/A, LWD, LX, LX/A, LX16, LX16/A, LX8, LX8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ, PA, PA2, PA2/A, PAE2, PAE2/A, PX, PX/A, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, QA, QA2, QA2/A, QAB1, QAB3, QAB3/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAQ, QAQ4, QAQ4/A, QAR2, QAR2/A, QAW, QAW/A, QD, QD/A, QE, QE/A, QH, QH/A, QH26, QH26/A, QHB5, QHC, QHE, QHE4, QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A, QL2, QMH, QMH/A, QP, QP/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QT, QT/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX, QX/A, QX26, QX26/A, QXB, QXB/A, QXB6, QXB6/A, QXB7, QXB7/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXE9, QXK, QXQ4, QXQ4/A, QXU, QXU/A, RA, RA2, RA2/A, RA3, RD, RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX, RX/A, RXQ4, RXQ4/A, RXU, RXU/A, SD, SD/A, SE, SE/A, SH, SH/A, SHE, SHEZ, SHQ4, SHQ4/A, SJ, SJ/A, SJG, SJG/A, SJP, SK, SMC4, SMC4/A, SMD, SME1, SME1/A, SME6, SME6/A, SMX2, SN, SN/A, SW, SWA4, SWC4, SWC4/A, SWE, SX, SX/A, SX2, SXB, SXB/A, SXB7, SXB7/A, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4, SXQ4/A, SXU, SXU/A, VA, VA2, VA2/A, VAG2, VAG2/A, VAW, VAW1, VD16, VDE, VDE2, VDE2/A, VEB6, VH, VKB2, VKB2/A, VM2, VM2/A, VMA4, VME2, VME2/A, VME4, VN17, VN17/A, VNG1, VNG1/A, VNT2, VNT2/A, VSD, VSD/A, VSD7, VSD7/A, VSH7, VW12, VW12/A, VW22, VWA, VWA2, VWA2/A, VWN2, VWN2/A, VWT4, VWT4/A, VX, VX/A, VX26, VXB, VXB/A, VXB2, VXB6, VXB7, VXB7/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8, VXE8/A, VXG, VXK, VXQ4, VXQ4/A, VXT1, VXT1/A, VXTB, VXU, VXU/A, VXU1, VXU1/A, WMA4, WMT8, WMT8/A, WXE8, WXE8/A

- (1) -

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
17	16221-ZA0-800	PACKING, CARBURETOR	1	-	-	-----	ES1, ES1/A, HA, HA2, HA2/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, HH, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A, LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LT, LT/A, LTJ, LW/A, LWD, LWD1, LWD1/A, LX, LX/A, LX16, LX16/A, LX8, LX8/A, LXQ4, LXQ4/A, LXU, LXU/A, PA, PA2, PA2/A, PAE2, PAE2/A, PX, PX/A, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, QA, QA2, QA2/A, QAB1, QAB3, QAB3/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAG, QAG4, QAG4/A, QAR2, QAR2/A, QAW, QAW/A, QD, QD/A, QE, QE/A, QH, QH/A, QH26, QH26/A, QHB5, QHC, QHE, QHE4, QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A, QKE3, QKE3/A, QKE4, QL2, QME2, QME2/A, QMH, QMH/A, QP, QP/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QT, QT/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX, QX/A, QX26, QX26/A, QXB, QXB/A, QXB6, QXB6/A, QXB7, QXB7/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXE9, QXK, QXQ4, QXQ4/A, QXU, QXU/A, RA, RA2, RA2/A, RA3, RD, RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX, RX/A, RXQ4, RXQ4/A, RXU, RXU/A, SD, SD/A, SE, SE/A, SH, SH/A, SHE, SHQ4, SHQ4/A, SJ/A, SJG, SJG/A, SKE1, SMC4, SMC4/A, SMD, SME1, SME1/A, SME6, SME6/A, SMX2, SN, SN/A, SWA4, SWC4, SWC4/A, SX, SX/A, SX2, SXB, SXB/A, SXB7, SXB7/A, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4, SXQ4/A, SXU, SXU/A, VA, VA2, VA2/A, VAG2, VAG2/A, VAW, VAW1, VD16, VDE, VDE2, VDE2/A, VEB6, VH, VKB2, VKB2/A, VM2, VM2/A, VMA4, VME2, VME2/A, VME4, VN17, VN17/A, VNG1, VNG1/A, VNT2, VNT2/A, VSD, VSD/A, VSD7, VSD7/A, VSH7, VW12, VW12/A, VW22, VWA, VWA2, VWA2/A, VWN2, VWN2/A, VWT4, VWT4/A, VX, VX/A, VX26, VXB, VXB/A, VXB2, VXB6, VXB7, VXB7/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8, VXE8/A, VXG, VXK, VXQ4, VXQ4/A, VXT1, VXT1/A, VXTB, VXU, VXU/A, VXU1, VXU1/A, WMA4, WMT8, WMT8/A, WXE8, WXE8/A
	16221-ZA0-700		1	-	-	-----	1047495
	16221-ZA0-800		1	-	-	-----	1047496
			-	(1)	-	-----	LJ, LW, LXZ, SHEZ, SJ, SJP, SK, SW, SWE
	16221-ZA0-700		-	(1)	-	-----	LJ, LW, LXZ, SHEZ, SJ, SJP, SK, SW, SWE
			-	(1)	-	-----	L1/A, Q1/A, Q2, R1/A, S1/A, W1/A
			-	(1)	-	-----	Q2
	16221-ZA0-800		-	(1)	-	-----	1047495
			-	(1)	-	-----	L1, Q1, R1, S1, V1, W1
18	16223-ZA0-800	PACKING, INSULATOR	1	-	-	-----	L1, Q1, R1, S1, V1, W1
						-----	ES1, ES1/A, HA, HA2, HA2/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, HH, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A, LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LT, LT/A, LTJ, LW/A, LWD, LWD1, LWD1/A, LX, LX/A, LX16, LX16/A, LX8, LX8/A, LXQ4, LXQ4/A, LXU, LXU/A, PA, PA2, PA2/A, PAE2, PAE2/A, PX, PX/A, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, QA, QA2, QA2/A, QAB1, QAB3, QAB3/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAG, QAG4, QAG4/A, QAR2, QAR2/A, QAW, QAW/A, QD, QD/A, QE, QE/A, QH, QH/A, QH26, QH26/A, QHB5, QHC, QHE, QHE4, QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A, QKE3, QKE3/A, QKE4, QL2, QME2, QME2/A, QMH, QMH/A, QP, QP/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QT, QT/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX, QX/A, QX26, QX26/A, QXB, QXB/A, QXB6, QXB6/A, QXB7, QXB7/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXE9, QXK, QXQ4, QXQ4/A, QXU, QXU/A, RA, RA2, RA2/A, RA3, RD, RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX, RX/A, RXQ4, RXQ4/A, RXU, RXU/A, SD, SD/A, SE, SE/A, SH, SH/A, SHE, SHQ4, SHQ4/A, SJ/A, SJG, SJG/A, SKE1, SMC4, SMC4/A, SMD, SME1, SME1/A, SME6, SME6/A, SMX2, SN, SN/A, SWA4, SWC4, SWC4/A, SX, SX/A, SX2, SXB, SXB/A, SXB7, SXB7/A, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4, SXQ4/A, SXU, SXU/A, VA, VA2, VA2/A, VAG2, VAG2/A, VAW, VAW1, VD16, VDE, VDE2, VDE2/A, VEB6, VH, VKB2, VKB2/A, VM2, VM2/A, VMA4, VME2, VME2/A, VME4, VN17, VN17/A, VNG1, VNG1/A, VNT2, VNT2/A, VSD, VSD/A, VSD7, VSD7/A, VSH7, VW12, VW12/A, VW22, VWA, VWA2, VWA2/A, VWN2, VWN2/A, VWT4, VWT4/A, VX, VX/A, VX26, VXB, VXB/A, VXB2, VXB6, VXB7, VXB7/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8, VXE8/A, VXG, VXK, VXQ4, VXQ4/A, VXT1, VXT1/A, VXTB, VXU, VXU/A, VXU1, VXU1/A, WMA4, WMT8, WMT8/A, WXE8, WXE8/A

E-14

CARBURETOR(1)

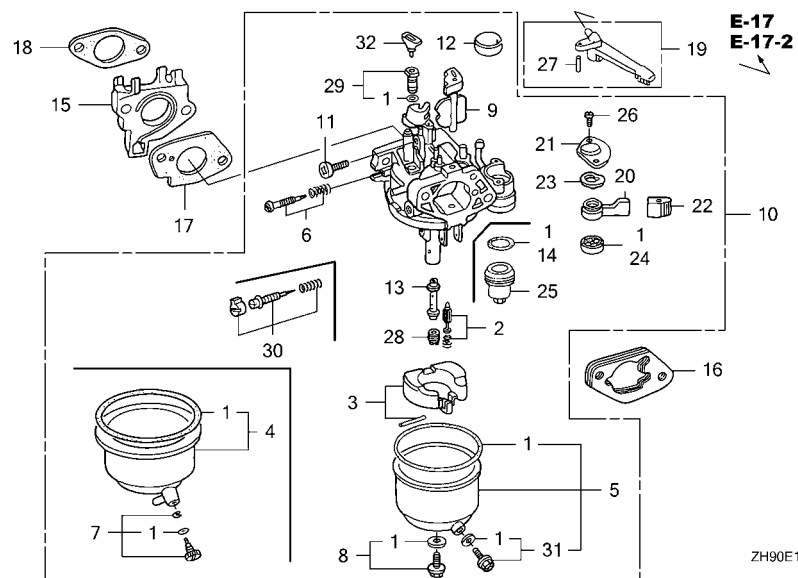

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
18)	16223-ZA0-700	PACKING, INSULATOR.....	1	-	-	1047495	LJ, LW, LXZ, SHEZ, SJ, SJP, SK, SW, SWE
	16223-ZA0-800		1	-	-	1047496	LJ, LW, LXZ, SHEZ, SJ, SJP, SK, SW, SWE
	16223-ZA0-700		-	(1)	-	-	L1/A, Q1/A, Q2, R1/A, S1/A, W1/A
	16223-ZA0-800		-	(1)	-	1047495	Q2
	16223-ZA0-800		-	(1)	-	1047496	L1, Q1, R1, S1, V1, W1
	16223-ZA0-800		-	(1)	-	1047496	L1, Q1, R1, S1, V1, W1

E-14


CARBURETOR(1)

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
19	16610-ZE1-000	LEVER COMP., CHOKE(STD.).....	1	-	-	-----	ES1, ES1/A, HA, HA2, HA2/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, HH, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A, LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LT, LT/A, LW, LW/A, LX, LX/A, LX16, LX16/A, LX8, LX8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ, PA, PA2, PA2/A, PAE2, PAE2/A, PX, PX/A, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, QA, QA2, QA2/A, QAB1, QAB3, QAB3/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAQ, QAQ4, QAQ4/A, QAR2, QAR2/A, QAW, QAW/A, QD, QD/A, QE, QE/A, QH, QH/A, QH26, QH26/A, QHB5, QHC, QHE, QHE4, QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A, QL2, QMH, QMH/A, QP, QP/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QT, QT/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX, QX/A, QX26, QX26/A, QXB, QXB/A, QXB6, QXB6/A, QXB7, QXB7/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXE9/A, QXK, QXK/A, QXQ4, QXQ4/A, QXU, QXU/A, RA, RA2, RA2/A, RA3, RD, RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX, RX/A, RXQ4, RXQ4/A, RXU, RXU/A, SD, SD/A, SE, SE/A, SH, SH/A, SHE, SHEZ, SHQ4, SHQ4/A, SJ, SJ/A, SJG, SJG/A, SJP, SK, SMC4, SMC4/A, SMD, SME1, SME1/A, SME6, SME6/A, SMX2, SN, SN/A, SW, SWA4, SWC4, SWC4/A, SWE, SX, SX/A, SX2, SXB, SXB/A, SXB7, SXB7/A, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4, SXQ4/A, SXU, SXU/A, VA, VA2, VA2/A, VAG2, VAG2/A, VAW, VAW1, VD16, VDE, VDE2, VDE2/A, VEB6, VH, VKB2, VKB2/A, VM2, VM2/A, VMA4, VME2, VME2/A, VME4, VN17, VN17/A, VNG1, VNG1/A, VNT2, VNT2/A, VSD, VSD/A, VSD7, VSD7/A, VSH7, VW12, VW12/A, VW22, VWA, VWA2, VWA2/A, VWN2, VWN2/A, VWT4, VWT4/A, VX, VX/A, VX26, VXB, VXB/A, VXB2, VXB6, VXB7, VXB7/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8/A, VXE9, VXE9/A, VXX, VXX/A, VXQ4, VXQ4/A, VXT1, VXT1/A, VXTB, VXU, VXU/A, VXU1, VXU1/A, WMA4, WMT8, WMT8/A, WXE8, WXE8/A
20	16953-ZE1-812	LEVER, COCK.....	1	(1)	-	-----	ES1, ES1/A, HEA8, HEA8/A, HX8, HX8/A, LHB1, LHB3, LHB5, LJC, LJC/A, LT, LT/A, LWD1, LWD1/A, LX8, LX8/A, LXU, LXU/A, PAE2, PAE2/A, PXE8, PXE8/A, PXU, PXU/A, QAB1, QAB3, QAB3/A, QAG, QAG/A, QAG2, QAG2/A, QAW, QAW/A, QHB5, QHP1, QHP1/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A, QKE3, QKE3/A, QKE4, QL2, QMH, QMH/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QXB6, QXB6/A, QXB7, QXB7/A, QXE8, QXE8/A, QXE9, QXE9/A, QXK, QXK/A, QXU, QXU/A, RA3, RSS, RSS/A, RXU, RXU/A, SKE1, SMD, SMX2, SWA4, SWC4, SWC4/A, SXB7, SXB7/A, SXE8, SXE8/A, SXU, SXU/A, VAG2, VAG2/A, VKB2, VKB2/A, VM2, VM2/A, VMA4, VME2, VME2/A, VME4, VN17, VN17/A, VNT2, VNT2/A, VSD7, VSD7/A, VSH7, VWT4, VWT4/A, VXB7, VXB7/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8/A, VXX, VXX/A, VXT1, VXT1/A, VXTB, VXU1, VXU1/A, WMA4, WMT8, WMT8/A, WXE8, WXE8/A
16953-ZE1-711		(CARBURETOR NO.)	1	-	-	-----	BE17B B LWD
16953-ZE1-811		(CARBURETOR NO.)	1	-	-	-----	BE21A B HA, HEA, HH, HX, HXQ4, LH, LHE, LHQ4, LW, LX, LX16, LX16/A, LX8, LX8/A, LXQ4, LXZ, PA, PX, QA, QAE, QAE4, QE, QH, QHE, QHE4, QHQ4, QME2, QP, QT, QX, QXB, QXE, QXE4, QXEB, QXQ4, RA, RH, RHE, RHE4, RHQ4, RX, RXQ4, SE, SH, SHE, SHEZ, SHQ4, SME1, SME6, SW, SWE, SX, SXB, SXE, SXE4, SXEB, SXQ4, VA, VAW, VAW1, VD16, VDE, VEB6, VH, VNG1, VSD, VWA, VX, VXB, VXE, VXE4, VXE8, VXE8/A, VXE9, VXE9/A, VXX, VXX/A, VXT1, VXT1/A, VXTB, VXU1, VXU1/A, WMA4, WMT8, WMT8/A, WXE8, WXE8/A
	,,		1	-	-	-----	BE21B A QD, RD, SD, SMC4, SN
	,,		1	-	-	-----	BE23A B LJ, LJG, LSS, LTJ, SJ, SJG, SJP, SK
	,,		1	-	-	-----	BE24B B QHC, QSC, QXC, QXC4
	,,		1	-	-	-----	BE75A A HAQ, QAQ, QSC9, QXC6, QXC9
	,,		1	-	-	-----	BE75B A HA2, HEA2, HX26, PA2, PX26, QA2, QAE2, QAE6, QAR2, QH26, QX26, QXE6, RA2, RH26, RSC2, SX2, VA2, VDE2, VW12, VW22, VWA2, VWN2, VX26, VXB2, VXB6
16953-ZE1-712		(CARBURETOR NO.)	1	-	-	-----	BE17B C LWD

2

E-14

CARBURETOR(1)

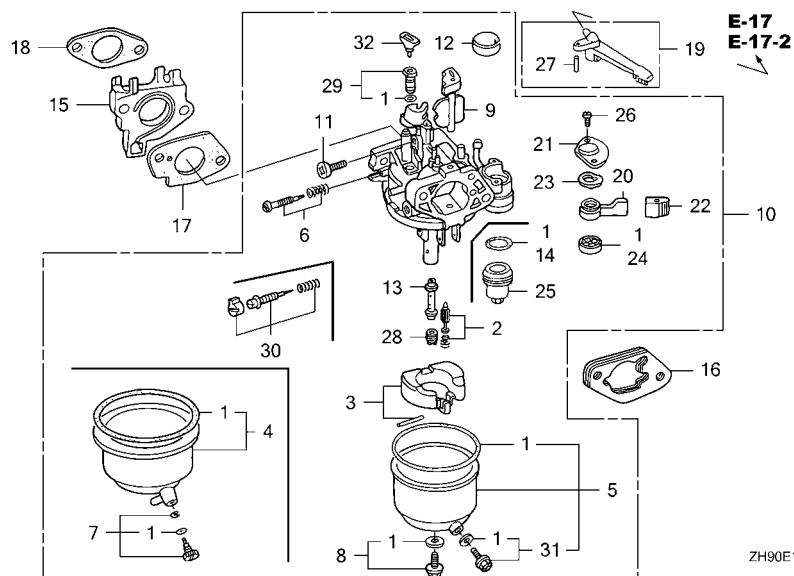

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
20)	16953-ZE1-812	LEVER, COCK..... (CARBURETOR NO.)	1	-	-	BE21A C	----- HA, HEA, HH, HX, HXQ4, LH, LHE, LHQ4, LW, LX, LX16, LXE, LXQ4, LXZ, PA, PX, QA, QAE, QAQ4, QE, QH, QHE, QHE4, QHQ4, QME2, QP, QT, QX, QXB, QXE, QXE4, QXEB, QXQ4, RA, RH, RHE, RHE4, RHQ4, RX, RXQ4, SE, SH, SHE, SHEZ, SHQ4, SME1, SME6, SW, SWE, SX, SXB, SXE, SXE4, SXEB, SXQ4, VA, VAW, VAW1, VD16, VDE, VEB6, VH, VNG1, VSD, VWA, VX, VXB, VXE, VXE4, VXEB, VXG, VXQ4, VXU
		,,	1	-	-	BE21B B	----- QD, RD, SD, SMC4, SN
		,,	1	-	-	BE23A C	----- LJ, LJG, LSS, LTJ, SJ, SJG, SJP, SK
		,,	1	-	-	BE24B C	----- QHC, QSC, QXC, QXC4
		,,	1	-	-	BE75A B	----- HAQ, QAQ, QSC9, QXC6, QXC9
		,,	1	-	-	BE75B B	----- HA2, HEA2, HX26, PA2, PX26, QA2, QAE2, QAE6, QAR2, QH26, QX26, QXE6, RA2, RH26, RSC2, SX2, VA2, VDE2, VW12, VW22, VWA2, VWN2, VX26, VXB2, VXB6
			-	(1)	-	-----	L1/A, Q1/A, R1/A, S1/A, W1/A
			-	(1)	-	-----	Q2
16953-ZE1-811		(CARBURETOR NO.)	-	(1)	-	BE24B B	L1, Q1, R1, S1, V1, W1
16953-ZE1-812		(CARBURETOR NO.)	-	(1)	-	BE24B C	----- L1, Q1, Q2, R1, S1, V1, W1

ZH90E1400D




CARBURETOR(1)

2

E-14

CARBURETOR(1)

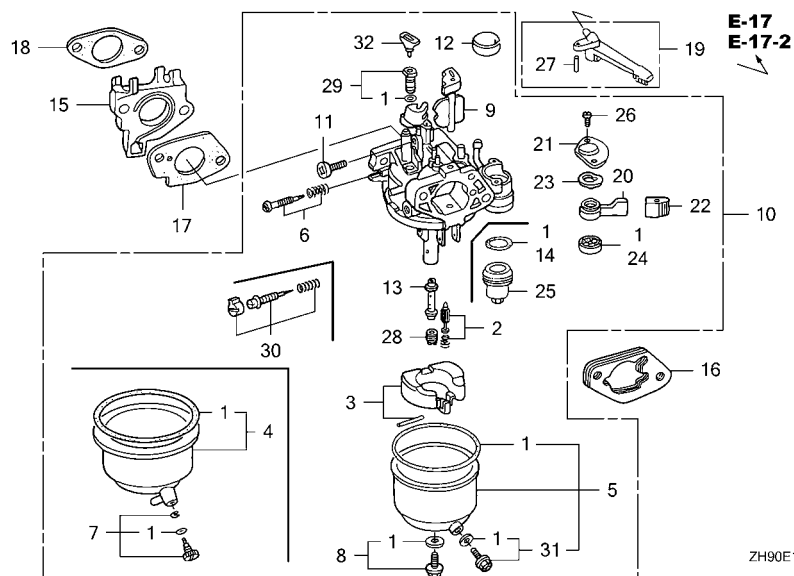


Ref. No.	Part No.	Description	Reqd. QTY	Serial No.	Parts catalogue code
			GX270		
			(1) (2) (3)		
24	16957-ZE1-812	PACKING, FUEL COCK.....	1 - -	-----	ES1, ES1/A, HA, HA2, HA2/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, HH, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A, LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LT, LT/A, LTJ, LW, LW/A, LWD, LWD1, LWD1/A, LX, LX/A, LX16, LXE, LXE/A, LXE8, LXE8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ, PA, PA2, PA2/A, PAE2, PAE2/A, PX, PX/A, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, QA, QA2, QA2/A, QAB1, QAB3, QAB3/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAQ, QAQ4, QAQ4/A, QAR2, QAR2/A, QAW, QAW/A, QD, QD/A, QE, QE/A, QH, QH/A, QH26, QH26/A, QHB5, QHC, QHE, QHE4, QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A, QKE3, QKE3/A, QKE4, QL2, QME2, QME2/A, QMH, QMH/A, QP, QP/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QT, QT/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX, QX/A, QX26, QX26/A, QXB, QXB/A, QXB6, QXB6/A, QXB7, QXB7/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXE9, QXK, QXQ4, QXQ4/A, QXU, QXU/A, RA, RA2, RA2/A, RA3, RD, RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX, RX/A, RXQ4, RXQ4/A, RXU, RXU/A, SD, SD/A, SE, SE/A, SH, SH/A, SHE, SHEZ, SHQ4, SHQ4/A, SJ, SJ/A, SJG, SJG/A, SJP, SK, SKE1, SMC4, SMC4/A, SMD, SME1, SME1/A, SME6, SME6/A, SMX2, SN, SN/A, SW, SWA4, SWC4, SWC4/A, SWE, SX, SX/A, SX2, SXB, SXB/A, SXB7, SXB7/A, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4, SXQ4/A, SXU, SXU/A, VA, VA2, VA2/A, VAG2, VAG2/A, VAW, VAW1, VD16, VDE, VDE2, VDE2/A, VEB6, VH, VKB2, VKB2/A, VM2, VM2/A, VMA4, VME2, VME2/A, VME4, VN17, VN17/A, VNG1, VNG1/A, VNT2, VNT2/A, VSD, VSD/A, VSD7, VSD7/A, VSH7, VW12, VW12/A, VW22, VWA, VWA2, VWA2/A, VWN2, VWN2/A, VWT4, VWT4/A, VX, VX/A, VX26, VXB, VXB/A, VXB2, VXB6, VXB7, VXB7/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXEB, VXEB/A, VXG, VXK, VXQ4, VXQ4/A, VXT1, VXT1/A, VXTB, VXU, VXU/A, VXU1, VXU1/A, WMA4, WMT8, WMT8/A, WXE8, WXE8/A

- (1) -

E-14

CARBURETOR(1)

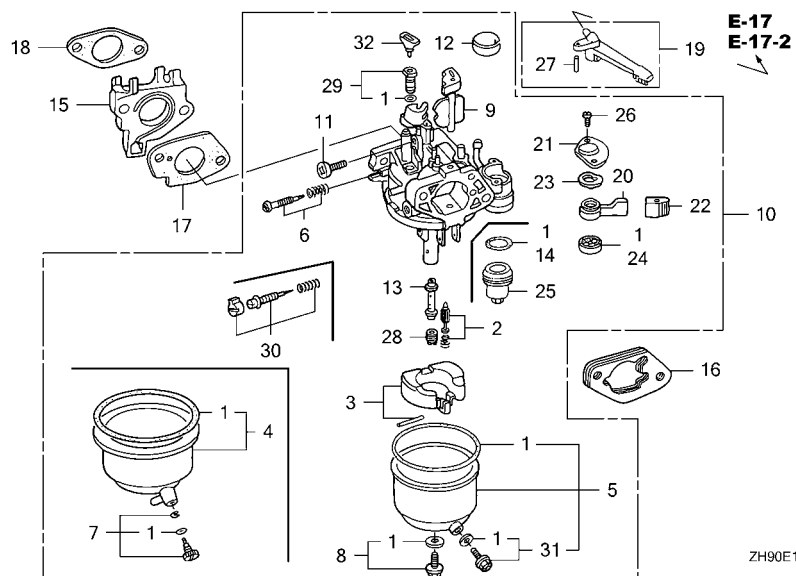


Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
26)	93500-03008-1G	SCREW, PAN, 3X8..... (CARBURETOR NO.)	2	-	-	BE17B B LWD	
		,,	2	-	-	BE21A B HA, HEA, HH, HX, HXQ4, LH, LHE, LHQ4, LJ, LJG, LSS, LTJ, LW, LX, LX16, LXE, LXQ4, LXZ, PA, PX, QA, QAE, QAQ4, QE, QH, QHE, QHE4, QHQ4, QME2, QP, QT, QX, QXB, QXE, QXE4, QXEB, QXQ4, RA, RH, RHE, RHE4, RHQ4, RX, RXQ4, SE, SH, SHE, SHEZ, SHQ4, SJ, SJG, SJP, SK, SME1, SME6, SW, SWE, SX, SXB, SXE, SXE4, SXEB, SXQ4, VA, VAW, VAW1, VD16, VDE, VEB6, VH, VNG1, VSD, VWA, VX, VXB, VXE, VXE4, VXEB, VXG, VXQ4, VXU	
		,,	2	-	-	BE21B A QD, RD, SD, SMC4, SN	
		,,	2	-	-	BE24B B QHC, QSC, QXC, QXC4	
		,,	2	-	-	BE75A A HAQ, QAQ, QSC9, QXC6, QXC9	
		,,	2	-	-	BE75B A HA2, HEA2, HX26, PA2, PX26, QA2, QAE2, QAE6, QAR2, QH26, QX26, QXE6, RA2, RH26, RSC2, SX2, VA2, VDE2, VW12, VW22, VWA2, VWN2, VX26, VXB2, VXB6	
	93500-03006-1H	SCREW, PAN, 3X6..... (CARBURETOR NO.)	2	-	-	BE17B C LWD	
		,,	2	-	-	BE21A C HA, HEA, HH, HX, HXQ4, LH, LHE, LHQ4, LJ, LJG, LSS, LTJ, LW, LX, LX16, LXE, LXQ4, LXZ, PA, PX, QA, QAE, QAQ4, QE, QH, QHE, QHE4, QHQ4, QME2, QP, QT, QX, QXB, QXE, QXE4, QXEB, QXQ4, RA, RH, RHE, RHE4, RHQ4, RX, RXQ4, SE, SH, SHE, SHEZ, SHQ4, SJ, SJG, SJP, SK, SME1, SME6, SW, SWE, SX, SXB, SXE, SXE4, SXEB, SXQ4, VA, VAW, VAW1, VD16, VDE, VEB6, VH, VNG1, VSD, VWA, VX, VXB, VXE, VXE4, VXEB, VXG, VXQ4, VXU	
		,,	2	-	-	BE21B B QD, RD, SD, SMC4, SN	
		,,	2	-	-	BE24B C QHC, QSC, QXC, QXC4	
		,,	2	-	-	BE75A B HAQ, QAQ, QSC9, QXC6, QXC9	
		,,	2	-	-	BE75B B HA2, HEA2, HX26, PA2, PX26, QA2, QAE2, QAE6, QAR2, QH26, QX26, QXE6, RA2, RH26, RSC2, SX2, VA2, VDE2, VW12, VW22, VWA2, VWN2, VX26, VXB2, VXB6	
			-	(2)	-	L1/A, Q1/A, R1/A, S1/A, W1/A	
	93500-03008-1G	SCREW, PAN, 3X8..... (CARBURETOR NO.)	-	(2)	-	BE24B B L1, Q1, Q2, R1, S1, W1	
	93500-03006-1H	SCREW, PAN, 3X6..... (CARBURETOR NO.)	-	(2)	-	BE24B C L1, Q1, Q2, R1, S1, W1	

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
27	94305-20122	PIN, SPRING, 2X12	1	-	-	-----	ES1, ES1/A, HA, HA2, HA2/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, HH, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A, LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LT, LT/A, LW, LW/A, LX, LX/A, LX16, LX16/A, LX8, LX8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ, PA, PA2, PA2/A, PAE2, PAE2/A, PX, PX/A, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, QA, QA2, QA2/A, QAB1, QAB3, QAB3/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAG, QAG4, QAG4/A, QAR2, QAR2/A, QAW, QAW/A, QD, QD/A, QE, QE/A, QH, QH/A, QH26, QH26/A, QHB5, QHC, QHE, QHE4, QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A, QL2, QMH, QMH/A, QP, QP/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QT, QT/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX, QX/A, QX26, QX26/A, QXB, QXB/A, QXB6, QXB6/A, QXB7, QXB7/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXEB, QXK, QXQ4, QXQ4/A, QXU, QXU/A, RA, RA2, RA2/A, RA3, RD, RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX, RX/A, RXQ4, RXQ4/A, RXU, RXU/A, SD, SD/A, SE, SE/A, SH, SH/A, SHE, SHEZ, SHQ4, SHQ4/A, SJ, SJ/A, SJG, SJG/A, SJP, SK, SMC4, SMC4/A, SMD, SME1, SME1/A, SME6, SME6/A, SMX2, SN, SN/A, SW, SWA4, SWC4, SWC4/A, SWE, SX, SX/A, SX2, SXB, SXB/A, SXB7, SXB7/A, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4, SXQ4/A, SXU, SXU/A, VA, VA2, VA2/A, VAG2, VAG2/A, VAW, VAW1, VD16, VDE, VDE2, VDE2/A, VEB6, VEH, VKB2, VKB2/A, VM2, VM2/A, VMA4, VME2, VME2/A, VME4, VN17, VN17/A, VNG1, VNG1/A, VNT2, VNT2/A, VSD, VSD/A, VSD7, VSD7/A, VSH7, VW12, VW12/A, VW22, VWA, VWA2, VWA2/A, VWN2, VWN2/A, VWT4, VWT4/A, VX, VX/A, VX26, VXB, VXB/A, VXB2, VXB6, VXB7, VXB7/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8/A, VXE9, VXE9/A, VXE, VXE4, VXE4/A, VXT1, VXT1/A, VXTB, VXU, VXU/A, VXU1, VXU1/A, WMA4, WMT8, WMT8/A, WXE8, WXE8/A
28	99101-ZH8-0820	JET, MAIN, #82	(1)	(1)	-	-----	ES1, ES1/A, HA2, HA2/A, HEA2, HEA2/A, HEA8, HEA8/A, LHB5, LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LT, LT/A, LTJ, LWD1, LWD1/A, PA2, PA2/A, PAE2, PAE2/A, PXE8, PXE8/A, QA2, QA2/A, QAE2, QAE2/A, QAG, QAG/A, QAG2, QAG2/A, QAR2, QAR2/A, QAW, QAW/A, QD, QD/A, QHB5, QHR, QHR/A, QHR4, QHR4/A, QKE3, QKE3/A, QKE4, QL2, QSE2, QXB7, QXB7/A, QXE9, RA2, RA2/A, RA3, RD, RD/A, RSC2, RSC2/A, RSS, RSS/A, S1, S1/A, SD, SD/A, SJ, SJ/A, SJG, SJG/A, SMC4, SMC4/A, SMX2, SN, SN/A, SWA4, SX2, SXB7, SXB7/A, VA2, VA2/A, VAG2, VAG2/A, VDE2, VDE2/A, VKB2, VKB2/A, VM2, VM2/A, VME2, VME2/A, VN17, VN17/A, VNT2, VNT2/A, VSD7, VSD7/A, VSH7, VW12, VW12/A, VW22, VWA2, VWA2/A, VWN2, VWN2/A, VWT4, VWT4/A, VXB7, VXB7/A, VXE7, VXE7/A, VXE8, VXE8/A, VXT1, VXT1/A, WMA4, WXE8, WXE8/A
	99101-ZH8-0880	JET, MAIN, #88	1	1	-	-----	ES1, ES1/A, LHB1, LHB3, LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LT, LT/A, LTJ, LWD1, LWD1/A, QAB1, QD, QD/A, QKE3, QKE3/A, RD, RD/A, S1, S1/A, SD, SD/A, SJ, SJ/A, SJG, SJG/A, SKE1, SMC4, SMC4/A, SN, SN/A, VWT4, VWT4/A, VXT1, VXT1/A
	99101-ZH8-0850	JET, MAIN, #85	(1)	(1)	-	-----	ES1, ES1/A, LHB1, LHB3, LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LT, LT/A, LTJ, LWD1, LWD1/A, QAB1, QD, QD/A, QKE3, QKE3/A, RD, RD/A, S1, S1/A, SD, SD/A, SJ, SJ/A, SJG, SJG/A, SKE1, SN, SN/A, VWT4, VWT4/A
	99101-ZH8-0800	JET, MAIN, #80	(1)	(1)	-	-----	HA2, HA2/A, HEA2, HEA2/A, HEA8, L1, L1/A, LHB1, LHB3, LHB5, PA2, PA2/A, PAE2, PAE2/A, PXE8, PXE8/A, Q1, Q1/A, QA2, QA2/A, QAB1, QAE2, QAE2/A, QAG, QAG/A, QAG2, QAG2/A, QAR2, QAR2/A, QAW, QAW/A, QHB5, QHR, QHR/A, QHR4, QHR4/A, QKE4, QL2, QSE2, QXB6, QXB6/A, QXB7, QXB7/A, QXE9, R1, R1/A, RA2, RA2/A, RA3, RSC2, RSC2/A, RSS, RSS/A, SKE1, SMX2, SWA4, SX2, SXB7, SXB7/A, VA2, VA2/A, VAG2, VAG2/A, VDE2, VDE2/A, VKB2, VKB2/A, VM2, VM2/A, VME2, VME2/A, VN17, VN17/A, VNT2, VNT2/A, VSD7, VSD7/A, VSH7, VW12, VW12/A, VW22, VWA2, VWA2/A, VWN2, VWN2/A, VXB7, VXB7/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8/A, VXE9, VXE9/A, WMA4, WXE8, WXE8/A
	99101-ZH8-0900	JET, MAIN, #90	(1)	(1)	-	-----	L1/A, LWD, Q1/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QXK, R1/A, VMA4, VME4, W1/A
	99101-ZH8-0920	JET, MAIN, #92	(1)	(1)	-	-----	L1/A, Q1/A, QXC4/A, R1/A, W1/A
	99101-ZH8-0950	JET, MAIN, #95	1	1	-	-----	L1/A, Q1/A, QXC4/A, R1/A, W1/A

E-14

CARBURETOR(1)

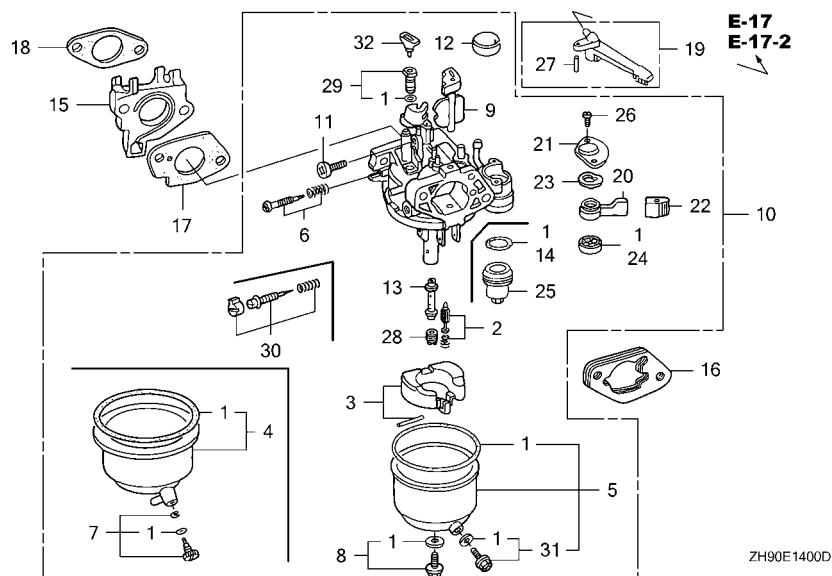

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
28)	99101-ZF5-0820	JET, MAIN, #82..... (CARBURETOR NO.)	(1)	(1)	-	BE21A B	HA, HEA, HH, HX, HXQ4, L1, LH, LHE, LHQ4, LW, LX, LX16, LXE, LXQ4, LXZ, PA, PX, Q1, QAE, QAQ4, QE, QH, QHE, QHE4, QHQ4, QME2, QP, QT, QX, QXB, QXE, QXE4, QXEB, QXQ4, R1, RA, RH, RHE, RHE4, RHQ4, RX, RXQ4, SE, SH, SHE, SHEZ, SHQ4, SJP, SK, SME1, SME6, SW, SWE, SX, SXB, SXE, SXE4, SXEB, SXQ4, V1, VA, VAW, VAW1, VD16, VEB6, VH, VNG1, VSD, VWA, VX, VXB, VXE, VXE4, VXEB, VXG, VXQ4, VXU, W1
	99101-ZF5-0850	JET, MAIN, #85..... (CARBURETOR NO.)	(1)	(1)	-	BE21A B	HA, HEA, HH, HX, HXQ4, LH, LHE, LHQ4, LW, LX, LX16, LXE, LXQ4, LXZ, PA, PX, QAE, QAQ4, QE, QH, QHE, QHE4, QHQ4, QME2, QP, QT, QX, QXB, QXE, QXE4, QXEB, QXQ4, RA, RH, RHE, RHE4, RHQ4, RX, RXQ4, SE, SH, SHE, SHEZ, SHQ4, SJP, SK, SME1, SME6, SW, SWE, SX, SXB, SXE, SXE4, SXEB, SXQ4, V1, VA, VAW, VAW1, VD16, VEB6, VH, VNG1, VSD, VWA, VX, VXB, VXE, VXE4, VXEB, VXG, VXQ4, VXU
	99101-ZF5-0880	JET, MAIN, #88..... (CARBURETOR NO.)	1	1	-	BE21A B	HA, HEA, HH, HX, HXQ4, LH, LHE, LHQ4, LW, LX, LX16, LXE, LXQ4, LXZ, PA, PX, QAE, QAQ4, QE, QH, QHE, QHE4, QHQ4, QME2, QP, QT, QX, QXB, QXE, QXE4, QXEB, QXQ4, RA, RH, RHE, RHE4, RHQ4, RX, RXQ4, SE, SH, SHE, SHEZ, SHQ4, SJP, SK, SME1, SME6, SW, SWE, SX, SXB, SXE, SXE4, SXEB, SXQ4, V1, VA, VAW, VAW1, VD16, VEB6, VH, VNG1, VSD, VWA, VX, VXB, VXE, VXE4, VXEB, VXG, VXQ4, VXU
	99101-ZF5-0900	JET, MAIN, #90..... (CARBURETOR NO.)	(1)	(1)	-	BE24B B	L1, Q1, Q2, QHC, QSC, QXC, QXC4, R1, V1, W1
	99101-ZF5-0920	JET, MAIN, #92..... (CARBURETOR NO.)	(1)	(1)	-	BE24B B	L1, Q1, Q2, QHC, QSC, QXC, QXC4, R1, V1, W1
	99101-ZF5-0950	JET, MAIN, #95..... (CARBURETOR NO.)	1	1	-	BE24B B	L1, Q1, Q2, QHC, QSC, QXC, QXC4, R1, V1, W1
	99101-ZH8-0820	JET, MAIN, #82..... (CARBURETOR NO.)	(1)	(1)	-	BE21A C	HA, HEA, HH, L1, LHQ4, LW, LXZ, PA, Q1, QAE, QE, QHE, QP, QT, QXEB, R1, RA, RHE, SE, SHE, SHEZ, SJP, SK, SME6, SW, SWE, V1, VA, VAW, VAW1, VWA, W1


E-14

CARBURETOR(1)

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
28)	99101-ZH8-0850	JET, MAIN, #85..... (CARBURETOR NO.)	(1)	(1)	-	BE21A C	HA, HEA, HH, L1, LHQ4, LW, LXZ, PA, Q1, QA, QAE, QE, QHE, QP, QT, QXEB, R1, RA, RHE SE, SHE, SHEZ, SJP, SK, SME6, SW, SWE, V1, VA, VAW, VAW1, VWA, W1
	99101-ZH8-0880	JET, MAIN, #88..... (CARBURETOR NO.)	1	1	-	BE21A C	HA, HEA, HH, L1, LHQ4, LW, LXZ, PA, Q1, QA, QAE, QE, QHE, QP, QT, QXEB, R1, RA, RHE SE, SHE, SHEZ, SJP, SK, SME6, SW, SWE, V1, VA, VAW, VAW1, VWA, W1
	99101-ZH8-0900	JET, MAIN, #90..... (CARBURETOR NO.)	(1)	(1)	-	BE24B C	L1, Q1, Q2, QHC, QSC, QXC, QXC4, R1, V1, W1
	99101-ZH8-0920	JET, MAIN, #92..... (CARBURETOR NO.)	(1)	(1)	-	BE24B C	L1, Q1, Q2, QHC, QSC, QXC, QXC4, R1, V1, W1
	99101-ZH8-0950	JET, MAIN, #95..... (CARBURETOR NO.)	1	1	-	BE24B C	L1, Q1, Q2, QHC, QSC, QXC, QXC4, R1, V1, W1
	99101-ZH8-0850	JET, MAIN, #85.....	1	-	-	-----	HA2, HA2/A, HEA2, HEA2/A, HEA8, HEA8/A, LHB5, PA2, PA2/A, PAE2, PAE2/A, PXE8 PXE8/A, QA2, QA2/A, QAE2, QAE2/A, QAG, QAG/A, QAG2, QAG2/A, QAR2, QAR2/A QAW, QAW/A, QHB5, QHR, QHR/A, QHR4, QHR4/A, QKE4, QL2, QSE2, QXB6, QXB6/A QXB7, QXB7/A, QXE9, RA2, RA2/A, RA3, RSC2, RSC2/A, RSS, RSS/A, SMC4, SMC4/A SMX2, SWA4, SX2, SXB7, SXB7/A, VA2, VA2/A, VAG2, VAG2/A, VDE2, VDE2/A, VKB2 VKB2/A, VM2, VM2/A, VME2, VME2/A, VN17, VN17/A, VNT2, VNT2/A, VSD7, VSD7/A VSH7, VW12, VW12/A, VW22, VWA2, VWA2/A, VWN2, VWN2/A, VXB7, VXB7/A, VXE6 VXE6/A, VXE7, VXE7/A, VXE8, VXE8, VXT1, VXT1/A, WMA4, WXE8, WXE8/A
	99101-ZH8-0880	JET, MAIN, #88.....	(1)	-	-	-----	LWD, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QXK, VMA4, VME4
	99101-ZH8-0920	JET, MAIN, #92.....	1	-	-	-----	LWD, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QXK, VMA4, VME4
	99101-ZH8-0850	JET, MAIN, #85..... (CARBURETOR NO.)	(1)	-	-	-----	BE21A C HX8, LXE8, LXU, PXU, QAB3, QHP1, QHZ, QMH, QSE, QSE8, QXE8, QXU, RXU, SMD, SWC4 SXE8, SXU, VDE, VXTB, VXU1
	99101-ZH8-0880	JET, MAIN, #88..... (CARBURETOR NO.)	1	-	-	-----	BE21A C HX8, LXE8, LXU, PXU, QAB3, QHP1, QHZ, QMH, QSE, QSE8, QXE8, QXU, RXU, SMD, SWC4 SXE8, SXU, VDE, VXTB, VXU1
	99101-ZH8-0800	JET, MAIN, #80..... (CARBURETOR NO.)	(1)	-	-	-----	BE21A C HX8, LXE8, LXU, PXU, QAB3, QHP1, QHZ, QMH, QSE, QSE8, QXE8, QXU, RXU, SWC4 SXE8, SXU, VXTB, VXU1
	99101-ZH8-0820	JET, MAIN, #82..... (CARBURETOR NO.)	(1)	-	-	-----	BE21A C SMD, VDE
	99101-ZH8-0800	JET, MAIN, #80..... (CARBURETOR NO.)	(1)	-	-	-----	BE21B B WMT8
	99101-ZH8-0850	JET, MAIN, #85..... (CARBURETOR NO.)	(1)	-	-	-----	BE21B B WMT8
	99101-ZH8-0880	JET, MAIN, #88..... (CARBURETOR NO.)	1	-	-	-----	BE21B B WMT8
	99101-ZH7-0880	 (CARBURETOR NO.)	(1)	-	-	-----	BE75A A HAQ, QAQ, QSC9, QXC6, QXC9
	99101-ZH7-0900	JET, MAIN, #90..... (CARBURETOR NO.)	(1)	-	-	-----	BE75A A HAQ, QAQ, QSC9, QXC6, QXC9
	99101-ZH7-0920	JET, MAIN, #92..... (CARBURETOR NO.)	1	-	-	-----	BE75A A HAQ, QAQ, QSC9, QXC6, QXC9
	99101-ZH7-0800	JET, MAIN, #80..... (CARBURETOR NO.)	(1)	-	-	-----	BE75B A HX26, PX26, QAE6, QH26, QX26, QXE6, RH26, VX26, VXB2, VXB6
	99101-ZH7-0820	JET, MAIN, #82..... (CARBURETOR NO.)	(1)	-	-	-----	BE75B A HX26, PX26, QAE6, QH26, QX26, QXE6, RH26, VX26, VXB2, VXB6
	99101-ZH7-0850	JET, MAIN, #85..... (CARBURETOR NO.)	1	-	-	-----	BE75B A HX26, PX26, QAE6, QH26, QX26, QXE6, RH26, VX26, VXB2, VXB6
	99101-ZH8-0800	JET, MAIN, #80..... (CARBURETOR NO.)	(1)	-	-	-----	BE21A C BE21A C HX, HXQ4, LH, LHE, LX, LX16, LXE, LXQ4, PX, QAQ4, QH, QHE4, QHQ4, QME2, QX, QXB QXE, QXE4, QXQ4, RH, RHE4, RHQ4, RX, RXQ4, SH, SHQ4, SME1, SX, SXB, SXE, SXE4 SXEB, SXQ4, VD16, VEB6, VH, VNG1, VSD, VX, VXB, VXE, VXE4, VXB6, VXG, VXQ4, VXU

E-14

CARBURETOR(1)

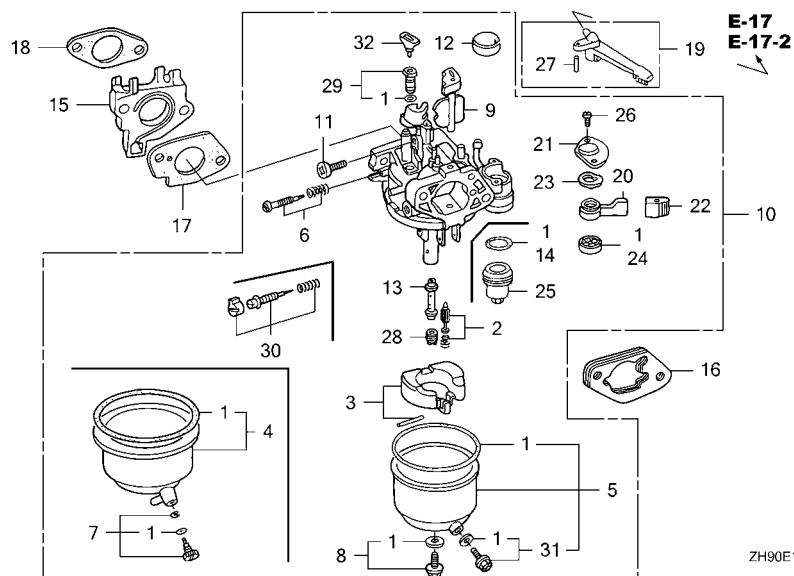

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
28)	99101-ZH8-0850	JET, MAIN, #85..... (CARBURETOR NO.)	(1)	-	-	BE21A C BE21A C	HX, HXQ4, LH, LHE, LX, LX16, LXE, LXQ4, PX, QAQ4, QH, QHE4, QHQ4, QME2, QX, QXB, QXE, QXE4, QXQ4, RH, RHE4, RHQ4, RX, RXQ4, SH, SHQ4, SME1, SX, SXB, SXE, SXE4, SXEB, SXQ4, VD16, VEB6, VH, VNG1, VSD, VX, VXB, VXE, VXE4, VXEB, VXG, VXQ4, VXU
	99101-ZH8-0880	JET, MAIN, #88..... (CARBURETOR NO.)	1	-	-	BE21A C BE21A C	HX, HXQ4, LH, LHE, LX, LX16, LXE, LXQ4, PX, QAQ4, QH, QHE4, QHQ4, QME2, QX, QXB, QXE, QXE4, QXQ4, RH, RHE4, RHQ4, RX, RXQ4, SH, SHQ4, SME1, SX, SXB, SXE, SXE4, SXEB, SXQ4, VD16, VEB6, VH, VNG1, VSD, VX, VXB, VXE, VXE4, VXEB, VXG, VXQ4, VXU
	99101-ZH8-0900	JET, MAIN, #90..... (CARBURETOR NO.)	(1)	-	-	BE75A B -----	HAQ, QAQ, QSC9, QXC6, QXC9
	99101-ZH8-0920	JET, MAIN, #92..... (CARBURETOR NO.)	(1)	-	-	BE75A B -----	HAQ, QAQ, QSC9, QXC6, QXC9
	99101-ZH8-0820	JET, MAIN, #82..... (CARBURETOR NO.)	1	-	-	BE75A B -----	HAQ, QAQ, QSC9, QXC6, QXC9
	99101-ZH8-0820	JET, MAIN, #82..... (CARBURETOR NO.)	(1)	-	-	BE75B B -----	HX, HX26, HX8, HXQ4, LH, LHE, LX, LX16, LXE, LXE8, LXQ4, LXU, PX, PX26, PXU, QAB3, QAE6, QAQ4, QH, QH26, QHE4, QHP1, QHQ4, QHZ, QME2, QMH, QSE, QSE8, QX, QX26, QXB, QXB6, QXE, QXE4, QXE6, QXE8, QXQ4, QXU, RH, RH26, RHE4, RHQ4, RX, RXQ4, RXU, SH, SHQ4, SMD, SME1, SWC4, SX, SXB, SXE, SXE4, SXE8, SXEB, SXQ4, SXU, VD16, VDE, VEB6, VH, VNG1, VSD, VX, VXB, VXE, VXE4, VXE6, VXEB, VXG, VXQ4, VXTB, VXU, VXU1
	99101-ZH8-0800	JET, MAIN, #80..... (CARBURETOR NO.)	(1)	-	-	BE75B B -----	HX, HX26, HX8, HXQ4, LH, LHE, LX, LX16, LXE, LXE8, LXQ4, LXU, PX, PX26, PXU, QAB3, QAE6, QAQ4, QH, QH26, QHE4, QHP1, QHQ4, QHZ, QME2, QMH, QSE, QSE8, QX, QX26, QXB, QXE, QXE4, QXE6, QXE8, QXQ4, QXU, RH, RH26, RHE4, RHQ4, RX, RXQ4, RXU, SH, SHQ4, SMD, SME1, SWC4, SX, SXB, SXE, SXE4, SXE8, SXEB, SXQ4, SXU, VD16, VDE, VEB6, VH, VNG1, VSD, VX, VX26, VXB, VXB2, VXB6, VXE, VXE4, VXEB, VXG, VXQ4, VXTB, VXU, VXU1

E-14


CARBURETOR(1)

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
28)	99101-ZH8-0850	JET, MAIN, #85..... (CARBURETOR NO.)	1	-	-	BE75B B	----- HX, HX26, HX8, HXQ4, LH, LHE, LX, LX16, LXE, LXE8, LXQ4, LXU, PX, PX26, PXU QAB3, QAE6, QAQ4, QH, QH26, QHE4, QHP1, QHQ4, QHZ, QME2, QMH, QSE, QSE8, QX QX26, QXB, QXE, QXE4, QXE6, QXE8, QXQ4, QXU, RH, RH26, RHE4, RHQ4, RX, RXQ4 RXU, SH, SHQ4, SMD, SME1, SWC4, SX, SXB, SXE, SXE4, SXE8, SXEB, SXQ4, SXU, VD16 VDE, VEB6, VH, VNG1, VSD, VX, VX26, VXB, VXB2, VXB6, VXE, VXE4, VXEB, VXG, VXQ4 VXTB, VXU, VXU1
	99101-ZH8-0800	JET, MAIN, #80..... (CARBURETOR NO.)	(1)	-	-	BE76C A	----- WMT8
	99101-ZH8-0820	JET, MAIN, #82..... (CARBURETOR NO.)	(1)	-	-	BE76C A	----- WMT8
	99101-ZH8-0850	JET, MAIN, #85..... (CARBURETOR NO.)	1	-	-	BE76C A	----- WMT8
	99101-ZF5-0900	JET, MAIN, #90.....	-	(1)	-	-----	L1/A, Q1/A, R1/A, S1, S1/A, W1/A
	99101-ZF5-0920	JET, MAIN, #92.....	-	(1)	-	-----	L1/A, Q1/A, R1/A, S1, S1/A, W1/A
	99101-ZF5-0950	JET, MAIN, #95.....	-	1	-	-----	L1/A, Q1/A, R1/A, S1, S1/A, W1/A
	99101-ZF5-0820	JET, MAIN, #82..... (CARBURETOR NO.)	-	(1)	-	-----	BE24B C L1/A, Q1/A, R1/A, S1/A, W1/A
	99101-ZF5-0850	JET, MAIN, #85..... (CARBURETOR NO.)	-	(1)	-	-----	BE24B C L1/A, Q1/A, R1/A, S1/A, W1/A
	99101-ZF5-0880	JET, MAIN, #88..... (CARBURETOR NO.)	-	1	-	-----	BE24B C L1/A, Q1/A, R1/A, S1/A, W1/A
29	99204-ZE0-0400	JET SET, PILOT, #40.....	1	-	-	-----	ES1, HH, LHB1, LHB3, LHQ4, LJC, LT, LW, LWD1, LX16, LXZ, QAB1, QD, QD/A, QHC QHE, QKE3, QP, QT, QXC4, QXC4/A, QXEB, RD, RD/A, RHE, SD, SD/A, SE, SHE, SHEZ SKE1, SME6, SW, SWE, VD16, VEB6, VWT4, VXT1
	99204-ZE2-0400		1	-	-	-----	HA2, HA2/A, HEA, HEA2, HEA2/A, HEA8, HEA8/A, HX26, HX26/A, LHB5, PA2, PA2/A PAE2, PAE2/A, PX26, PX26/A, PXE8, PXE8/A, QA2, QA2/A, QAE2, QAE2/A, QAE6 QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAR2, QAR2/A, QAW, QAW/A, QH26, QH26/A QHB5, QHR, QHR/A, QHR4, QHR4/A, QKE4, QL2, QSE2, QX26, QX26/A, QXB6, QXB6/A QXB7, QXB7/A, QXE6, QXE6/A, QXE9, RA2, RA2/A, RA3, RH26, RH26/A, RSC2 RSC2/A, RSS, RSS/A, SMX2, SWA4, SX2, SXB7, SXB7/A, VA2, VA2/A, VAG2, VAG2/A VAW1, VDE2, VDE2/A, VKB2, VKB2/A, VM2, VM2/A, VME2, VME2/A, VN17, VN17/A VNT2, VNT2/A, VSD7, VSD7/A, VSH7, VW12, VW12/A, VW22, VWA, VWA2, VWA2/A VWN2, VWN2/A, VX26, VXB2, VXB6, VXB7, VXB7/A, VXE6, VXE6/A, VXE7, VXE7/A VXE8, VXE8, WMA4, WXE8, WXE8/A LWD
	99204-ZE2-0380	JET SET, PILOT, #38.....	1	-	-	-----	-----
	99204-ZE2-0400	JET SET, PILOT, #40..... (CARBURETOR NO.)	1	-	-	-----	BE21A B LJG, LSS, LTJ, SJ, SJG, SJP, SK
	99204-ZE0-0400	 (CARBURETOR NO.)	1	-	-	-----	BE21A C ES1/A, HX, HX8, HXQ4, LH, LHE, LX, LXE, LXE8, LXQ4, LXU, PX, PXU, QAB3, QAQ4, QH QHE4, QHP1, QHQ4, QHZ, QKE3/A, QME2, QMH, QSE, QSE8, QX, QXB, QXE, QXE4, QXE8 QXQ4, QXU, RH, RHE4, RHQ4, RX, RXQ4, RXU, SH, SHQ4, SMD, SME1, SWC4, SX, SXB SXE, SXE4, SXE8, SXEB, SXQ4, SXU, VDE, VH, VNG1, VSD, VWT4/A, VX, VXB, VXE VXE4, VXEB, VXG, VXQ4, VXTB, VXU, VXU1
	99204-ZE2-0400	 (CARBURETOR NO.)	1	-	-	-----	BE21B A SMC4, SN
	99204-ZE0-0400	 (CARBURETOR NO.)	1	-	-	-----	BE21B B WMT8
	99204-ZE0-0350	JET SET, PILOT, #35..... (CARBURETOR NO.)	1	-	-	-----	BE75A B HAQ, QAQ, QSC9, QSC9/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QXC6, QXC6/A, QXC9 QXC9/A, QXK, VMA4, VME4
	99204-ZE0-0400	JET SET, PILOT, #40..... (CARBURETOR NO.)	1	-	-	-----	BE21A C HA, HEA, LJ, LJG, LSS, LTJ, PA, QA, QAE, RA, SJ, SJG, SJP, SK, VA, VAW, VAW1, VWA
	99204-ZE2-0400	 (CARBURETOR NO.)	1	-	-	-----	BE21A D ES1/A, LJ/A, LJC/A, LJG/A, LT/A, LW/A, LWD1/A, QE/A, QKE3/A, QP/A, QT/A SE/A, SJ/A, SJG/A, SME6/A, VWT4/A, VXT1/A

2

E-14

CARBURETOR(1)

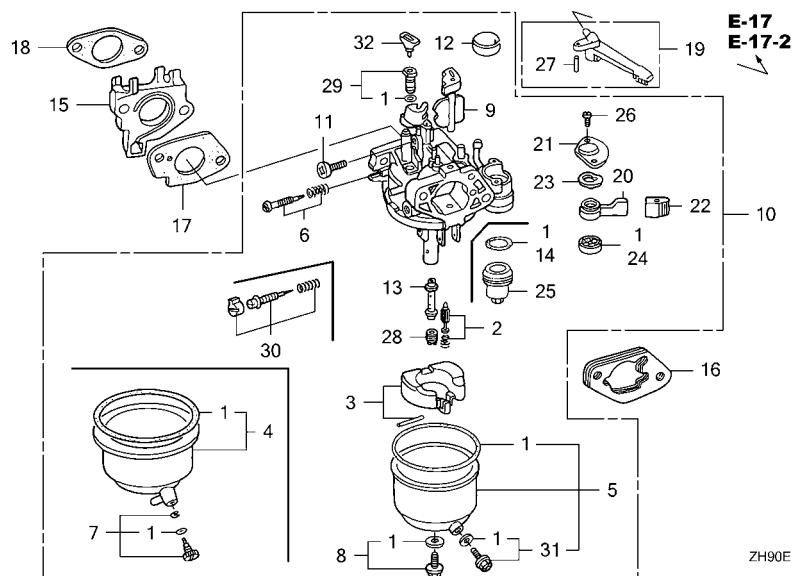

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
29)	99204-ZE0-0400	JET SET, PILOT, #40..... (CARBURETOR NO.)	1	-	-	BE21B B	SMC4, SN
	99204-ZE2-0400	,, (CARBURETOR NO.)	1	-	-	BE24B C	QSC, QXC
	99204-ZE0-0400	,, (CARBURETOR NO.)	1	-	-	BE75A C	HAQ, QAQ, QSC9, QSC9/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QXC6, QXC6/A, QXC9, QXC9/A, QXK, VMA4, VME4
	99204-ZE2-0400	,, (CARBURETOR NO.)	1	-	-	BE75B B	HX, HX8, HXQ4, LH, LHE, LX, LXE, LXE8, LXQ4, LXU, PX, PXU, QAB3, QAQ4, QH, QHE4, QHP1, QHQ4, QHZ, QME2, QMH, QSE, QSE8, QX, QXB, QXE, QXE4, QXE8, QXQ4, QXU, RH, RHE4, RHQ4, RX, RXQ4, RXU, SH, SHQ4, SMD, SME1, SWC4, SX, SXB, SXE, SXE4, SXE8, SXEB, SXQ4, SXU, VDE, VH, VNG1, VSD, VX, VXB, VXE, VXE4, VXEB, VXG, VXQ4, VXTB, VXU, VXU1
	99204-ZE0-0400	,, (CARBURETOR NO.)	1	-	-	BE76C A	WMT8
	99204-ZE2-0400	,, (CARBURETOR NO.)	-	(1)	-	-	L1, Q1, Q2, R1, S1, V1, W1
	99204-ZE0-0400	,, (CARBURETOR NO.)	-	(1)	-	BE21A B	Q2
	99204-ZE2-0400	,, (CARBURETOR NO.)	-	(1)	-	BE21A C	L1, Q1, R1, S1, V1, W1
	99204-ZE0-0400	,, (CARBURETOR NO.)	-	(1)	-	BE21B B	L1/A, Q1/A, R1/A, S1/A, W1/A
	99204-ZE2-0400	,, (CARBURETOR NO.)	-	(1)	-	BE24B C	L1/A, Q1/A, R1/A, S1/A, W1/A
	99204-ZE0-0400	,, (CARBURETOR NO.)	-	(1)	-	BE21A D	L1/A, Q1/A, R1/A, S1/A, W1/A
	99204-ZE2-0400	,, (CARBURETOR NO.)	-	(1)	-	BE21B C	L1/A, Q1/A, R1/A, S1/A, W1/A
	99204-ZE0-0400	,, (CARBURETOR NO.)	-	(1)	-	BE24B D	L1/A, Q1/A, R1/A, S1/A, W1/A


CARBURETOR(1)

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	GX270 (2)	(3)		
30	16016-ZH7-W01	SCREW SET, PILOT	1	-	-	-----	HA2, HA2/A, HAQ, HEA2, HEA2/A, HEA8, HEA8/A, HX/A, HX26, HX26/A, HX8/A, HXQ4/A, LH/A, LHB5, LHE/A, LX/A, LX16, LXE/A, LXE8/A, LXQ4/A, LXU/A, PA2, PA2/A, PAE2, PAE2/A, PX/A, PX26, PX26/A, PXE8, PXE8/A, PXU/A, QA2, QA2/A, QAB3/A, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAG, QAG4/A, QAR2, QAR2/A, QAW, QAW/A, QH/A, QH26, QH26/A, QHB5, QHE4/A, QHP1/A, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ/A, QKE4, QL2, QME2/A, QMH/A, QSC9, QSC9/A, QSE/A, QSE2, QSE8/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX/A, QX26, QX26/A, QXB/A, QXB6, QXB6/A, QXB7, QXB7/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE/A, QXE4/A, QXE6, QXE6/A, QXE8/A, QXE9, QXK, QXQ4/A, QXU/A, RA2, RA2/A, RA3, RH26, RH26/A, RHE4/A, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX/A, RXQ4/A, RXU/A, SH/A, SHQ4/A, SME1/A, SMX2, SWA4, SWC4, SWC4/A, SX/A, SX2, SXB/A, SXB7, SXB7/A, SXE/A, SXE4/A, SXE8/A, SXEB/A, SXQ4/A, SXU/A, VA2, VA2/A, VAG2, VAG2/A, VD16, VDE2, VDE2/A, VEB6, VKB2, VKB2/A, VM2, VM2/A, VMA4, VME2, VME2/A, VME4, VN17, VN17/A, VNG1/A, VNT2, VNT2/A, VSD/A, VSD7, VSD7/A, VSH7, VW12, VW12/A, VW22, VWA2, VWA2/A, VWN2, VWN2/A, VX/A, VX26, VXB/A, VXB2, VXB6, VXB7, VXB7/A, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8/A, VXX, VXQ4/A, VXU/A, VXU1/A, WMA4, WMT8/A, WXE8, WXE8/A
	16016-ZH8-W01	SCREW SET	1	-	-	BE21A D -----	ES1/A, LJ/A, LJC/A, LJG/A, LT/A, LW/A, LWD1/A, QE/A, QKE3/A, QP/A, QT/A
		(CARBURETOR NO.)	1	-	-	BE21B C -----	SE/A, SJ/A, SJG/A, SME6/A, VWT4/A, VXT1/A
	16016-ZH7-W01	SCREW SET, PILOT	1	-	-	BE24B D -----	QD/A, RD/A, SD/A, SMC4/A, SN/A
		(CARBURETOR NO.)	1	-	-	BE75B B -----	QXC4/A
		,,	1	-	-		HX, HX8, HXQ4, LH, LHE, LX, LXE, LXE8, LXQ4, LXU, PX, PXU, QAB3, QAQ4, QH, QHE4, QHP1, QHQ4, QHZ, QME2, QMH, QSE, QSE8, QX, QXB, QXE, QXE4, QXE8, QXQ4, QXU, RH, RHE4, RHQ4, RX, RXQ4, RXU, SH, SHQ4, SMD, SME1, SX, SXB, SXE, SXE4, SXE8, SXEB, SXQ4, SXU, VDE, VH, VNG1, VSD, VX, VXB, VXE, VXE4, VXEB, VXG, VXQ4, VXTB, VXU, VXU1
	16016-ZH8-W01	SCREW SET	1	-	-	BE76C A -----	WMT8
		(CARBURETOR NO.)	-	(1)	-	BE21A D -----	L1/A, Q1/A, R1/A, S1/A, W1/A
			-	(1)	-	BE21B C -----	L1/A, Q1/A, R1/A, S1/A, W1/A
	16016-ZH7-W01	SCREW SET, PILOT	-	(1)	-	BE24B D -----	L1/A, Q1/A, R1/A, S1/A, W1/A
		(CARBURETOR NO.)	-	(1)	-		
31	16024-ZE1-811	SCREW SET, DRAIN	1	-	-	-----	HA2, HA2/A, HAQ, HEA2, HEA2/A, HEA8, HEA8/A, HX26, HX26/A, LHB5, LX16, PA2, PA2/A, PAE2, PAE2/A, PX26, PX26/A, PXE8, PXE8/A, QA2, QA2/A, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAQ, QAR2, QAR2/A, QAW, QAW/A, QH26, QH26/A, QHB5, QHR, QHR/A, QHR4, QHR4/A, QKE4, QL2, QSC9, QSC9/A, QSE2, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX26, QX26/A, QXB6, QXB6/A, QXB7, QXB7/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE6, QXE6/A, QXE9, QXK, RA2, RA2/A, RA3, RH26, RH26/A, RSC2, RSC2/A, RSS, RSS/A, SMX2, SWA4, SWC4, SWC4/A, SX2, SXB7, SXB7/A, VA2, VA2/A, VAG2, VAG2/A, VD16, VDE2, VDE2/A, VEB6, VKB2, VKB2/A, VM2, VM2/A, VMA4, VME2, VME2/A, VME4, VN17, VN17/A, VNT2, VNT2/A, VSD7, VSD7/A, VSH7, VW12, VW12/A, VW22, VWA2, VWA2/A, VWN2, VWN2/A, VX26, VXB2, VXB6, VXB7, VXB7/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXX, WMA4, WXE8, WXE8/A
		(CARBURETOR NO.)	1	-	-	BE75B B -----	HX, HX8, HXQ4, LH, LHE, LX, LXE, LXE8, LXQ4, LXU, PX, PXU, QAB3, QAQ4, QH, QHE4, QHP1, QHQ4, QHZ, QME2, QMH, QSE, QSE8, QX, QXB, QXE, QXE4, QXE8, QXQ4, QXU, RH, RHE4, RHQ4, RX, RXQ4, RXU, SH, SHQ4, SMD, SME1, SX, SXB, SXE, SXE4, SXE8, SXEB, SXQ4, SXU, VDE, VH, VNG1, VSD, VX, VXB, VXE, VXE4, VXEB, VXG, VXQ4, VXTB, VXU, VXU1
		,,	1	-	-	BE76C A -----	WMT8

2

E-14-1

CARBURETOR(2)

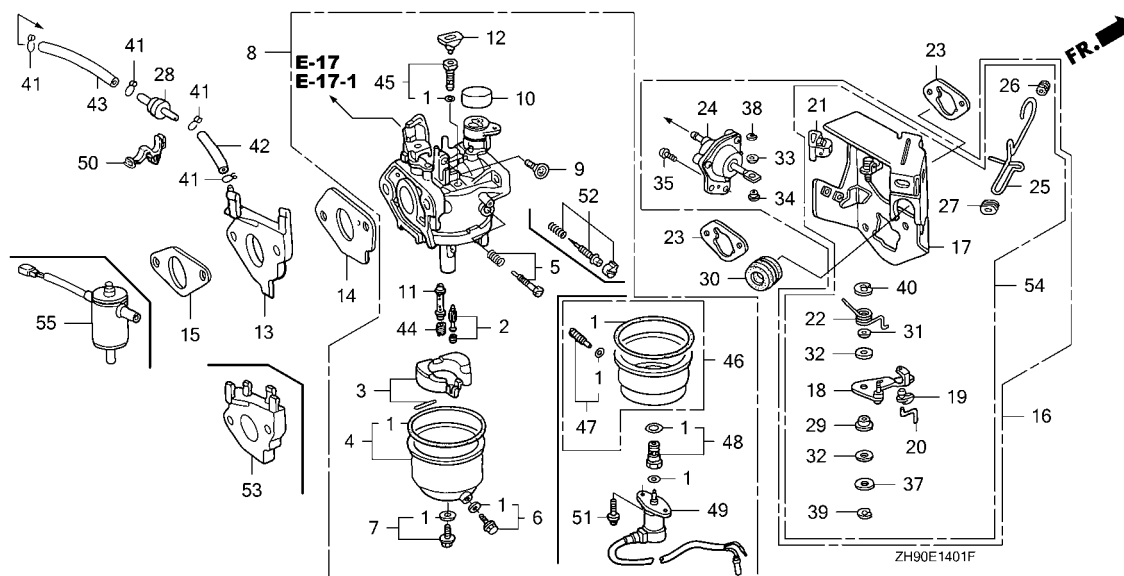


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	3111G1	GASKET SET, CARBURETOR(A)	0.4
2	3111G6	FLOAT VALVE SET AND/OR FLOAT SET(A)	0.4
5	3111D7	SCREW SET, PILOT	0.2
8	3111G7	CARBURETOR(A)	0.3
13	3111G2	CARBURETOR INSULATOR AND/OR PACKING(A)	0.3
14	3111G5	PACKING, CARBURETOR(A)	0.3
16	8101R1	STAY, MANUAL CHOKE	0.3
18	8101F9	LEVER, CARBURETOR CHOKE	0.2
20	8101J8	ROD, CARBURETOR CHOKE	0.2
23	3121D9	PACKING, AIR CLEANER	0.2
24	3111A7	DIAPHRAGM, CARBURETOR	0.3
28	311175	VALVE, DASHPOT CHECK	0.1
44	3111G4	JET, MAIN(A)	0.4
49	6211C0	VALVE, CARBURETOR SOLENOID ...	0.2

Ref. No.	Part No.	Description	Reqd. QTY	Serial No.	Parts catalogue code
			(1) (2) (3)		
1	16010-ZE3-701	GASKET SET	1	-	ES3, ES3/A, ES4, VKE4, VKK, VMS2, VMT, VMT/A, VMX2, VS3, VS4, VS5
	16010-ZF5-900		1	-	VKX4, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7
2	16011-ZA0-931	VALVE SET, FLOAT	1	-	VPX7/A, VS37, VS37/A, VSD3, VSD3/A
					ES3, ES3/A, ES4, VKE4, VKK, VKX4, VMS2, VMT, VMT/A, VMX2, VPE4, VPE4/A, VPE5
					VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4
3	16013-ZA0-931	FLOAT SET	1	-	VS5, VSD3, VSD3/A
					ES3, ES3/A, ES4, VKE4, VKK, VKX4, VMS2, VMT, VMT/A, VMX2, VPE4, VPE4/A, VPE5
					VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4
4	16015-ZE8-005	CHAMBER SET, FLOAT	1	-	VS5, VSD3, VSD3/A
					VKX4, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7
					VPX7/A, VS37, VS37/A, VSD3, VSD3/A
5	16016-ZA0-931	SCREW SET, PILOT	1	-	ES3, ES3/A, ES4, VMT, VMT/A, VPE4, VPE7, VPX4, VS3, VS4, VS5, VSD3
		(CARBURETOR NO.)	1	-	BE21D B VKX4, VPE4/A, VPE7/A, VPX4/A, VPX7/A, VS37/A, VSD3/A
		, ,	1	-	BE21E B VKE4
6	16024-ZE1-811	SCREW SET, DRAIN	1	-	VKX4, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7
					VPX7/A, VS37, VS37/A, VSD3, VSD3/A
7	16028-ZE0-005	SCREW SET	1	-	VKX4, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7
					VPX7/A, VS37, VS37/A, VSD3, VSD3/A
8	16100-ZH9-D41	CARBURETOR ASSY. (BE77M A)	1	-	ES3, ES3/A, ES4, VMT, VMT/A, VS3, VS4, VS5
	16100-ZK9-R41	CARBURETOR ASSY. (BE77Q A)	1	-	VMS2, VMX2
	16100-ZH9-V01	CARBURETOR ASSY. (BE21D B)	1	-	VPE4, VPE7, VPX4, VPX7, VS37
	16100-ZK9-R61	CARBURETOR ASSY. (BE77R A)	1	-	VPE5, VPX5
	16100-Z5H-V02	CARBURETOR ASSY. (BE21F B/C) ..	1	-	VPK
	16100-ZH9-V00	CARBURETOR ASSY. (BE21D A)	1	-	1183071 VSD3
	16100-ZH9-V01	CARBURETOR ASSY. (BE21D B)	1	-	2302737 VKX4, VPE4/A, VPE7/A, VPX4/A, VPX7/A, VS37/A, VSD3/A
	16100-ZH9-V11	CARBURETOR ASSY. (BE21E B)	1	-	2341615 VKE4
	16100-Z5J-V12	CARBURETOR ASSY. (BE21G B/C) ..	1	-	2440626 VKK
	16100-ZH9-V01	CARBURETOR ASSY. (BE21D B)	1	-	1183072 VSD3

2

E-14-1

CARBURETOR(2)

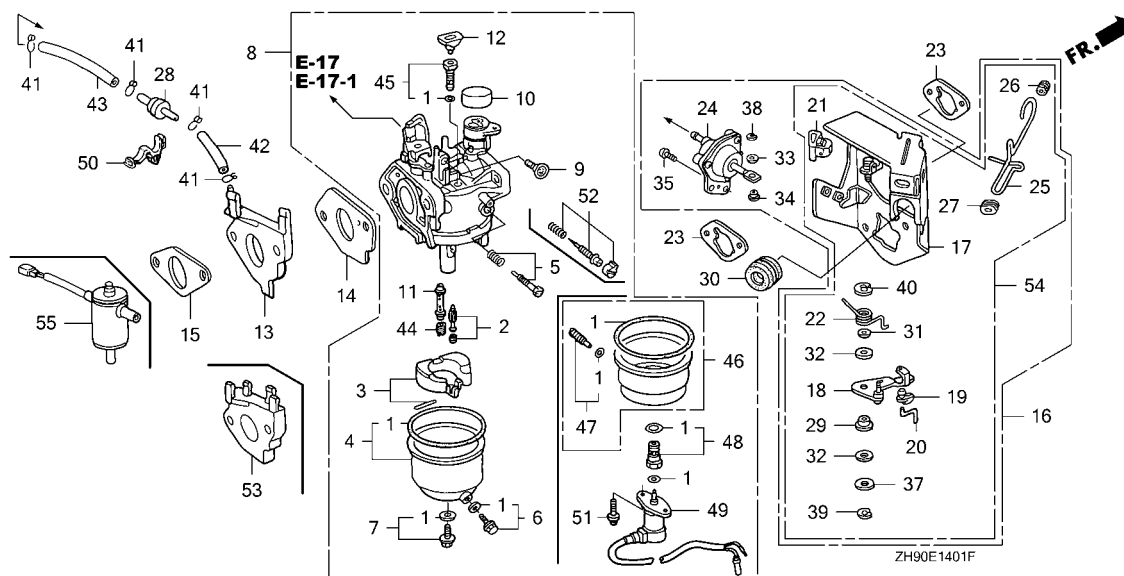

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	GX270 (2)	(3)		
(8)	16100-ZH9-V02	CARBURETOR ASSY.(BE21D C)	1	-	-	2302738	----- VKX4,VPE4/A,VPE7/A,VPX4/A,VPX7/A,VS37/A,VSD3/A
	16100-ZH9-V12	CARBURETOR ASSY.(BE21E C)	1	-	-	2341616	----- VKE4
	16100-Z5J-V13	CARBURETOR ASSY.(BE21G C)	1	-	-	2440627	----- VKK
9	16124-ZE0-005	SCREW, THROTTLE STOP	1	-	-		----- ES3, ES3/A, ES4, VKE4, VKK, VKX4, VMS2, VMT, VMT/A, VMX2, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4, VS5, VSD3, VSD3/A
10	16148-141-881	CAP, CHOKE DUST	1	-	-		----- ES3, ES3/A, ES4, VKE4, VKK, VKX4, VMS2, VMT, VMT/A, VMX2, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4, VS5, VSD3, VSD3/A
11	16166-ZH9-820	NOZZLE, MAIN	1	-	-		----- ES3, ES3/A, ES4, VKE4, VKK, VKX4, VMS2, VMT, VMT/A, VMX2, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4, VS5, VSD3, VSD3/A
12	16172-ZE3-W10	COLLAR, SETTING	1	-	-		----- ES3, ES3/A, ES4, VKE4, VKK, VKX4, VMS2, VMT, VMT/A, VMX2, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4, VS5, VSD3, VSD3/A
13	16211-ZE2-700	INSULATOR, CARBURETOR	1	-	-		----- ES3, ES4, VKE4, VKK, VKX4, VMT, VMT/A, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS37, VS37/A, VS4, VSD3, VSD3/A
	16211-ZE2-701		1	-	-	2494339	----- ES3/A, VS3, VS5
14	16221-ZA0-800	PACKING, CARBURETOR	1	-	-	2494340	----- ES3/A, VS3, VS5
			1	-	-		----- ES3, ES3/A, ES4, VKE4, VKK, VKX4, VMS2, VMT, VMT/A, VMX2, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4, VS5, VSD3, VSD3/A
15	16223-ZA0-800	PACKING, INSULATOR	1	-	-		----- ES3, ES3/A, ES4, VKE4, VKK, VKX4, VMS2, VMT, VMT/A, VMX2, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4, VS5, VSD3, VSD3/A
16	16260-ZE2-722	STAY ASSY., MANUAL CHOKE	1	-	-		----- ES3, VKE4, VMT, VPE4, VPE7, VPE7/A, VPX4, VPX7, VPX7/A, VS37, VSD3, VSD3/A
	16260-ZE2-723		1	-	-		----- ES4, VS5


E-14-1

CARBURETOR(2)

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
16)	16260-ZE2-722	STAY ASSY., MANUAL CHOKE.....	1	-	-	2207390	VKX4, VPE4/A, VPE5, VPX4/A, VPX5, VS37/A
	16260-ZE3-D21		1	-	-	2438529	VPK
	16260-ZE2-722		1	-	-	2440240	ES3/A, VKK, VMT/A, VS3, VS4
	16260-ZE2-730		1	-	-	2207391	2341615 VKX4, VPE4/A, VPE5, VPX4/A, VPX5, VS37/A
	16260-ZE3-D21		1	-	-	2341616	VKX4, VPE4/A, VPE5, VPX4/A, VPX5, VS37/A
	16260-ZE3-D22		1	-	-	2438530	VPK
	16260-ZE2-723		1	-	-	2440241	ES3/A, VKK, VMT/A, VS3, VS4
17	16261-ZE2-702	STAY COMP., SOLENOID.....	1	-	-	-----	ES3, ES3/A, ES4, VKE4, VKK, VKX4, VMS2, VMT, VMT/A, VMX2, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4, VS5, VSD3, VSD3/A
18	16262-ZE2-711	LEVER, CHOKE.....	1	-	-	-----	ES3, ES3/A, ES4, VKE4, VKK, VKX4, VMS2, VMT, VMT/A, VMX2, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4, VS5, VSD3, VSD3/A
19	16263-ZA0-000	JOINT, ROD.....	1	-	-	-----	ES3, ES3/A, ES4, VKE4, VKK, VKX4, VMS2, VMT, VMT/A, VMX2, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4, VS5, VSD3, VSD3/A
20	16264-ZE2-701	ROD, CHOKE.....	1	-	-	-----	ES3, ES3/A, ES4, VKE4, VKK, VKX4, VMS2, VMT, VMT/A, VMX2, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4, VS5, VSD3, VSD3/A
	16264-ZE2-700		1	-	-	-----	VSD3
21	16265-ZE2-721	STOPPER, CHOKE ROD.....	1	-	-	-----	ES3, ES3/A, ES4, VKE4, VKK, VKX4, VMS2, VMT, VMT/A, VMX2, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4, VS5, VSD3, VSD3/A
22	16268-ZE2-721	SPRING, MANUAL CHOKE.....	1	-	-	-----	ES3, ES3/A, ES4, VKE4, VKK, VKX4, VMS2, VMT, VMT/A, VMX2, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4, VS5, VSD3, VSD3/A
23	16269-ZA0-800	PACKING, AIR CLEANER.....	2	-	-	-----	ES3, ES3/A, ES4, VKE4, VKK, VKX4, VMS2, VMT, VMT/A, VMX2, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4, VS5, VSD3, VSD3/A
24	16400-ZE2-703	DIAPHRAGM ASSY.	1	-	-	-----	ES3, VKE4, VKX4, VMT, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS37, VS37/A, VSD3, VSD3/A
	16400-ZE2-704		1	-	-	-----	ES4, VS5
	16400-ZE2-703		1	-	-	2438529	VPK
			1	-	-	2440240	ES3/A, VKK, VMT/A, VS3, VS4
	16400-ZE2-704		1	-	-	2438530	VPK
			1	-	-	2440241	ES3/A, VKK, VMT/A, VS3, VS4
25	16611-ZE2-711	ROD, CHOKE CONTROL.....	1	-	-	-----	ES3, ES3/A, ES4, VKE4, VKK, VMS2, VMT, VMT/A, VMX2, VPE4, VPE7, VPE7/A, VPX4, VPX7, VPX7/A, VS3, VS37, VS4, VS5, VSD3, VSD3/A
	16611-ZE3-D21		1	-	-	-----	VPK
	16611-ZE2-711		1	-	-	2207390	VKX4, VPE4/A, VPE5, VPX4/A, VPX5, VS37/A
	16611-ZE3-D21		1	-	-	2207391	VKX4, VPE4/A, VPE5, VPX4/A, VPX5, VS37/A
26	16613-893-000	GROMMET, CHOKE ROD.....	1	-	-	-----	ES3, ES3/A, ES4, VKE4, VKK, VKX4, VMS2, VMT, VMT/A, VMX2, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4, VS5, VSD3, VSD3/A
27	16615-893-000	GUIDE, CHOKE ROD.....	1	-	-	-----	ES3, ES3/A, ES4, VKE4, VKK, VKX4, VMS2, VMT, VMT/A, VMX2, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4, VS5, VSD3, VSD3/A
28	36135-ZF6-D41	VALVE, DASHPOT CHECK.....	1	-	-	-----	ES3, ES3/A, ES4, VKE4, VKK, VKX4, VMT, VMT/A, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4, VS5, VSD3, VSD3/A
	36135-ZV1-003		1	-	-	1119302	VSD3
	36135-ZF6-D41		1	-	-	1119303	VSD3
29	53149-964-003	BUSH, ARM PIVOT.....	1	-	-	-----	ES3, ES3/A, ES4, VKE4, VKK, VKX4, VMS2, VMT, VMT/A, VMX2, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4, VS5, VSD3, VSD3/A

E-14-1

CARBURETOR(2)

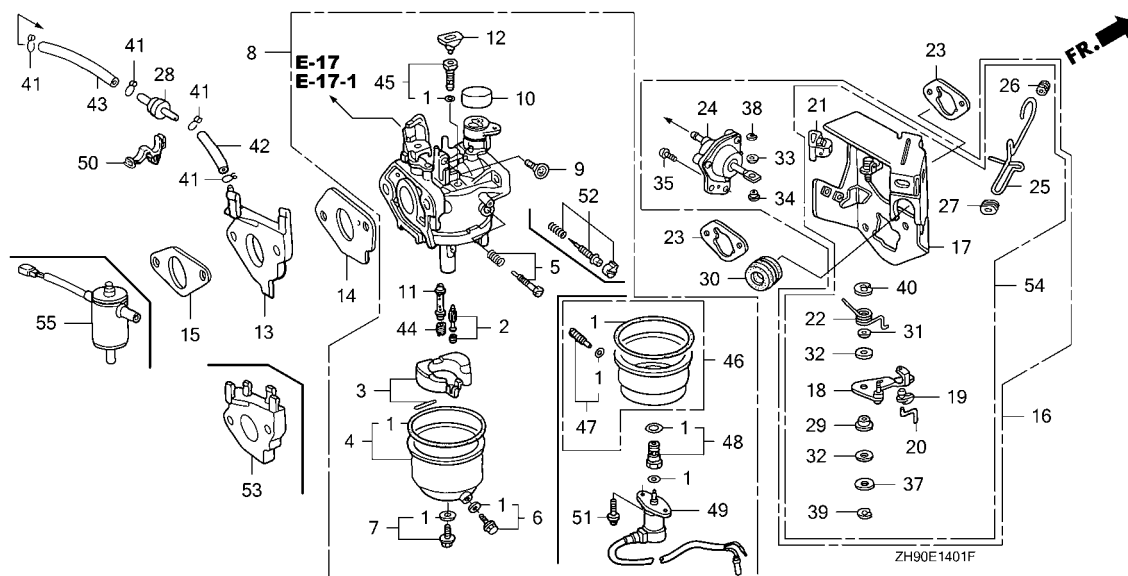

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
30	88911-MJ3-000	GROMMET, FENDER.....	1	-	-	-----	ES3, ES3/A, ES4, VKE4, VKK, VKX4, VMS2, VMT, VMT/A, VMX2, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4, VS5, VSD3, VSD3/A
31	90431-ZE2-700	WASHER, CHOKE LEVER.....	1	-	-	-----	ES3, ES3/A, ES4, VKE4, VKK, VKX4, VMS2, VMT, VMT/A, VMX2, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4, VS5, VSD3, VSD3/A
32	90432-ZE2-700	SEAL, CHOKE LEVER.....	2	-	-	-----	ES3, ES3/A, ES4, VKE4, VKK, VKX4, VMS2, VMT, VMT/A, VMX2, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4, VS5, VSD3, VSD3/A
33	90433-ZE2-700	WASHER, THRUST, 2.7X8.....	1	-	-	-----	ES3, ES3/A, ES4, VKE4, VKK, VKX4, VMT, VMT/A, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4, VS5, VSD3, VSD3/A
34	90434-ZE2-700	COLLAR, LEVER.....	1	-	-	-----	ES3, ES3/A, ES4, VKE4, VKK, VKX4, VMT, VMT/A, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4, VS5, VSD3, VSD3/A
35	93500-05012-0A	SCREW, PAN, 5X12.....	2	-	-	-----	ES3, ES3/A, ES4, VKE4, VKK, VKX4, VMT, VMT/A, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4, VS5, VSD3, VSD3/A
37	94103-05000	WASHER, PLAIN, 5MM.....	1	-	-	-----	ES3, ES3/A, ES4, VKE4, VKK, VKX4, VMS2, VMT, VMT/A, VMX2, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4, VS5, VSD3, VSD3/A
38	94540-02010	E-RING, 2MM.....	1	-	-	-----	ES3, ES3/A, ES4, VKE4, VKK, VKX4, VMT, VMT/A, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4, VS5, VSD3, VSD3/A
39	94540-04010	E-RING, 4MM.....	1	-	-	-----	ES3, ES3/A, ES4, VKE4, VKK, VKX4, VMS2, VMT, VMT/A, VMX2, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4, VS5, VSD3, VSD3/A


E-14-1

CARBURETOR(2)

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
40	94540-07010	E-RING, 7MM.....	1	-	-	-----	ES3, ES3/A, ES4, VKE4, VKK, VKX4, VMS2, VMT, VMT/A, VMX2, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4, VS5, VSD3, VSD3/A
41	95002-02070	CLIP, TUBE(B7).....	4	-	-	-----	ES3, ES3/A, ES4, VKE4, VKK, VKX4, VMT, VMT/A, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4, VS5, VSD3, VSD3/A
42	95005-35065-10	TUBE, 3.5X65(95005-35001-10M)	1	-	-	-----	ES3, ES3/A, ES4, VMT, VMT/A, VS3, VS4, VS5
	95005-35055-10	TUBE, 3.5X55(95005-35001-10M)	1	-	-	-----	VKE4, VKK, VKX4, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS37, VS37/A, VSD3/A
	95005-35040-10	TUBE, 3.5X40(95005-35001-10M)	1	-	-	-----	VSD3
	95005-35055-10	TUBE, 3.5X55(95005-35001-10M)	1	-	-	1056015	VSD3
43	95005-35130-10	TUBE, 3.5X130(95005-35001-10M)	1	-	-	-----	ES3, ES3/A, ES4, VMT, VMT/A, VS3, VS4, VS5
	95005-35075-10	TUBE, 3.5X75(95005-35001-10M)	1	-	-	-----	VKE4, VKK, VKX4, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS37, VS37/A, VSD3, VSD3/A
44	99101-ZH8-0880	JET, MAIN, #88.....	(1)	-	-	-----	ES3, ES3/A, ES4, VKE4, VKK, VKX4, VMS2, VMT, VMT/A, VMX2, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4, VS5, VSD3, VSD3/A
	99101-ZH8-0850	JET, MAIN, #85.....	(1)	-	-	-----	ES3, ES3/A, ES4, VMS2, VMT, VMT/A, VMX2, VS3, VS4, VS5
	99101-ZH8-0900	JET, MAIN, #90.....	1	-	-	-----	ES3, ES3/A, ES4, VMS2, VMT, VMT/A, VMX2, VS3, VS4, VS5
			(1)	-	-	-----	VKE4, VKK, VKX4, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS37, VS37/A, VSD3, VSD3/A
	99101-ZH8-0920	JET, MAIN, #92.....	1	-	-	-----	VKE4, VKK, VKX4, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS37, VS37/A, VSD3, VSD3/A
45	99204-ZE2-0400	JET SET, PILOT, #40.....	1	-	-	-----	ES3, ES3/A, ES4, VKE4, VKK, VMS2, VMT, VMT/A, VMX2, VPK, VS3, VS4, VS5
	99204-ZE0-0400		1	-	-	-----	VKX4, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS37, VS37/A, VSD3, VSD3/A
46	16015-ZA0-931	CHAMBER SET, FLOAT.....	1	-	-	-----	ES3, ES3/A, ES4, VKE4, VKK, VMS2, VMT, VMT/A, VMX2, VS3, VS4, VS5
47	16024-124-761	SCREW SET, DRAIN.....	1	-	-	-----	ES3, ES3/A, ES4, VMS2, VMT, VMT/A, VMX2, VS3, VS4, VS5
	16024-124-760		1	-	-	-----	VKK
	16024-124-761		1	-	-	-----	VKK
		(CARBURETOR NO.)	1	-	-	-----	BE21E B VKE4
	16024-124-760		1	-	-	-----	VKE4
		(CARBURETOR NO.)	1	-	-	-----	BE21E C
48	16028-ZA0-931	SCREW SET.....	1	-	-	-----	ES3, ES3/A, ES4, VKE4, VKK, VMS2, VMT, VMT/A, VMX2, VS3, VS4, VS5
49	16230-ZE3-701	VALVE ASSY., SOLENOID.....	1	-	-	-----	ES3, VKE4, VMS2, VMT, VMX2
	16230-ZE3-702		1	-	-	-----	ES4, VS5
	16230-ZE3-701		1	-	-	-----	ES3/A, VKK, VMT/A, VS3, VS4
	16230-ZE3-702		1	-	-	2440627	ES3/A, VKK, VMT/A, VS3, VS4
50	90650-SD9-003	CLIP, WIRE HARNESS.....	1	-	-	-----	ES3, ES3/A, ES4, VMT, VMT/A, VS3, VS4, VS5
51	93892-05012-18	SCREW-WASHER, 5X12.....	2	-	-	-----	ES3, ES3/A, ES4, VKE4, VKK, VMS2, VMT, VMT/A, VMX2, VS3, VS4, VS5
52	16016-ZH8-W01	SCREW SET.....	1	-	-	-----	VKK, VMS2, VMX2, VPE5, VPK, VPX5
		(CARBURETOR NO.)	1	-	-	-----	VKX4, VPE4/A, VPE7/A, VPX4/A, VPX7/A, VS37/A, VSD3/A
			1	-	-	-----	VKE4
			1	-	-	-----	VMS2, VMX2
53	16211-ZE2-000	INSULATOR, CARBURETOR.....	1	-	-	-----	VMS2, VMX2
54	16260-ZF6-U70	STAY ASSY., MANUAL CHOKE.....	1	-	-	-----	VMS2, VMX2
55	36170-ZB4-003	VALVE ASSY., SOLENOID.....	1	-	-	-----	VKE4
			1	-	-	-----	2440626 VKK
	36170-ZB4-013		1	-	-	2440627	VKK

E-14-2

CARBURETOR(3)

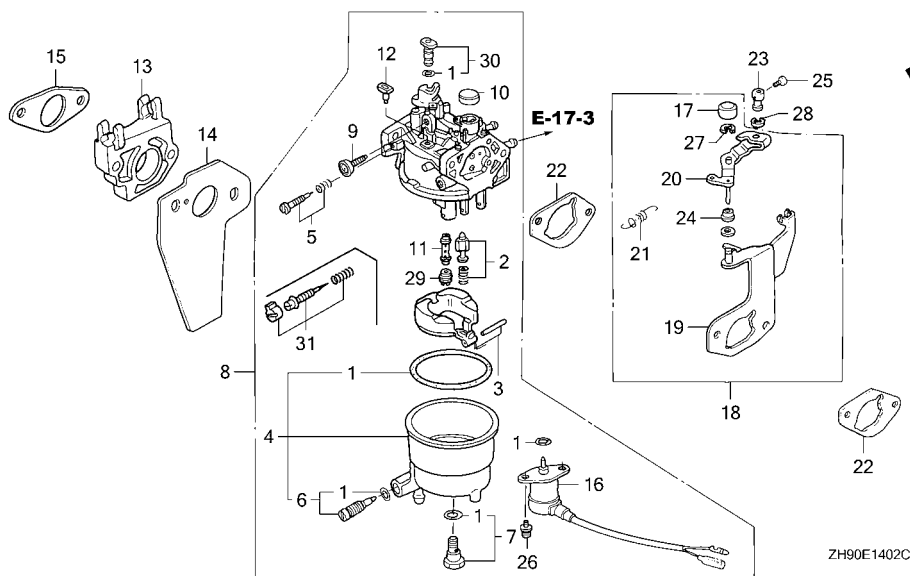


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	3111G1	GASKET SET, CARBURETOR(A)	0.4
2	3111G6	(3) FLOAT VALVE SET AND/OR FLOAT SET(A)	0.4
5	3111D7	(31) SCREW SET, PILOT	0.2
8	3111G7	CARBURETOR(A)	0.3
13	3111G2	(15) CARBURETOR INSULATOR AND/OR PACKING(A)	0.3
14	3111G5	PACKING, CARBURETOR(A)	0.3
16	6211C0	VALVE, CARBURETOR SOLENOID ..	0.2
19	3111G3	STAY, CHOKE CONTROL	0.2
22	3121D9	PACKING, AIR CLEANER	0.2
29	3111G4	.NOTE: Same time for two units JET, MAIN(A)	0.4

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
1	16010-ZE3-701	GASKET SET	1	-	-	ESS,ESS/A	
2	16011-ZA0-931	VALVE SET, FLOAT	1	-	-	ESS,ESS/A	
3	16013-ZA0-931	FLOAT SET	1	-	-	ESS,ESS/A	
4	16015-ZA0-931	CHAMBER SET, FLOAT	1	-	-	ESS,ESS/A	
5	16016-ZA0-931	SCREW SET, PILOT	1	-	-	ESS	
		(CARBURETOR NO.)	1	-	-	BE21E B ESS/A	
6	16024-124-761	SCREW SET, DRAIN	1	-	-	ESS	
		(CARBURETOR NO.)	1	-	-	BE21E B ESS/A	
	16024-124-760		1	-	-	BE21E C	ESS/A
7	16028-ZA0-931	SCREW SET	1	-	-	ESS,ESS/A	
8	16100-ZH9-V10	CARBURETOR ASSY.(BE21E A)	1	-	-	1175523 ESS	
	16100-ZH9-V11	CARBURETOR ASSY.(BE21E B)	1	-	-	2341615 ESS/A	
			1	-	-	1175524 ESS	
	16100-ZH9-V12	CARBURETOR ASSY.(BE21E C)	1	-	-	2341616 ESS/A	
9	16124-ZE0-005	SCREW, THROTTLE STOP	1	-	-	ESS,ESS/A	
10	16148-141-881	CAP, CHOKE DUST	1	-	-	ESS,ESS/A	
11	16166-ZH9-820	NOZZLE, MAIN	1	-	-	ESS,ESS/A	
12	16172-ZE3-W10	COLLAR, SETTING	1	-	-	ESS,ESS/A	
13	16211-ZB7-000	INSULATOR, CARBURETOR	1	-	-	ESS,ESS/A	
14	16221-ZB7-800	PACKING, CARBURETOR	1	-	-	ESS,ESS/A	
15	16223-ZA0-800	PACKING, INSULATOR	1	-	-	ESS,ESS/A	
16	16230-ZE3-701	VALVE ASSY., SOLENOID	1	-	-	ESS	
			1	-	-	2440626 ESS/A	
	16230-ZE3-702		1	-	-	2440627 ESS/A	
17	16252-ZA1-010	CAP, CHOKE LEVER	1	-	-	ESS,ESS/A	

E-14-2


CARBURETOR(3)

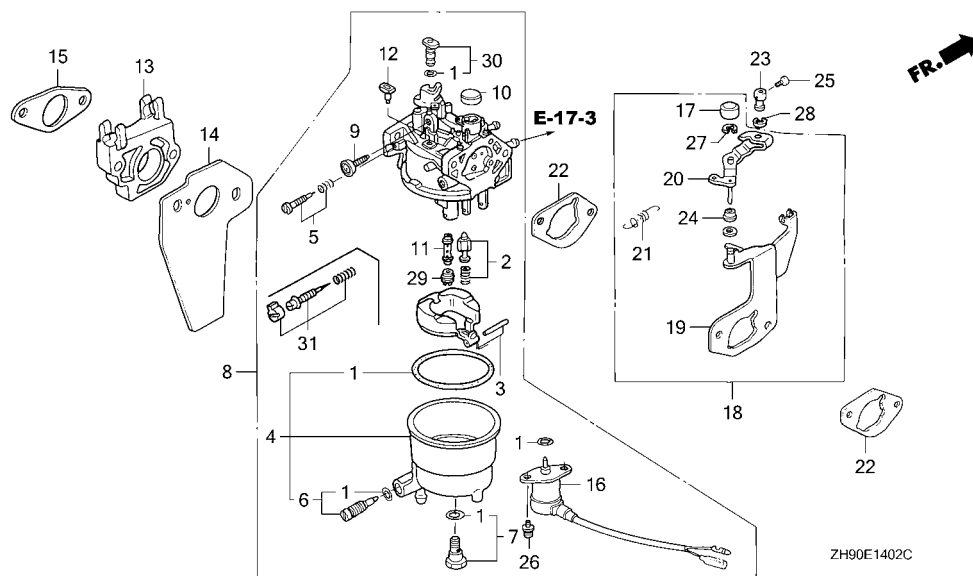

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	GX270 (2)	(3)		
18	16260-ZB7-702	STAY ASSY., REMOTE CHOKE.....	1	-	-	-----	ESS,ESS/A
19	16261-ZB7-700	STAY COMP., REMOTE CHOKE.....	1	-	-	-----	ESS,ESS/A
20	16263-ZB7-701	LEVER, REMOTE CHOKE.....	1	-	-	-----	ESS,ESS/A
21	16268-893-000	SPRING, CHOKE RETURN.....	1	-	-	-----	ESS,ESS/A
22	16269-ZA0-800	PACKING, AIR CLEANER.....	2	-	-	-----	ESS,ESS/A
23	16617-890-010	HOLDER, CABLE.....	1	-	-	-----	ESS,ESS/A
24	91502-ZB7-700	BUSH, CHOKE LEVER.....	1	-	-	-----	ESS,ESS/A
25	93500-04008-0A	SCREW, PAN, 4X8.....	1	-	-	-----	ESS,ESS/A
26	93892-05012-18	SCREW-WASHER, 5X12.....	2	-	-	-----	ESS,ESS/A
27	94540-04018	E-RING, 4MM.....	1	-	-	-----	ESS,ESS/A
28	94540-05010	E-RING, 5MM.....	1	-	-	-----	ESS,ESS/A
29	99101-ZH8-0880	JET, MAIN, #88.....	(1)	-	-	-----	ESS,ESS/A
	99101-ZH8-0900	JET, MAIN, #90.....	(1)	-	-	-----	ESS,ESS/A
	99101-ZH8-0920	JET, MAIN, #92.....	1	-	-	-----	ESS,ESS/A
30	99204-ZE2-0400	JET SET, PILOT, #40.....	1	-	-	-----	ESS,ESS/A
31	16016-ZH8-W01	SCREW SET..... (CARBURETOR NO.)	1	-	-	BE21E C -----	ESS/A

E-14-3


CARBURETOR(4)

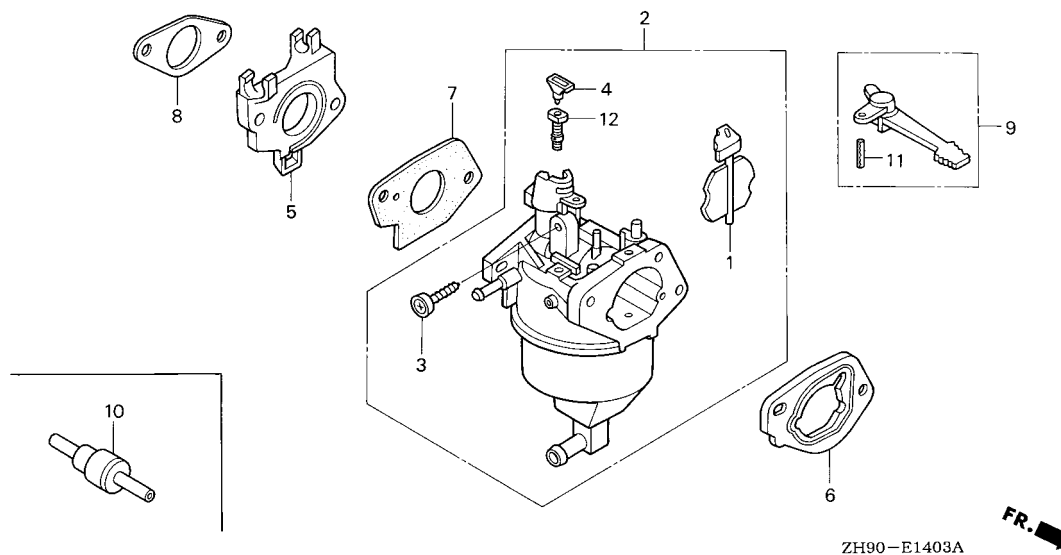

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	8101C5	CHOKE SET, CARBURETOR	0.2
2	3111F3	CARBURETOR	0.2
5	3111C0	(8) CARBURETOR INSULATOR AND/OR PACKING	0.2
6	3111D9	SPACER, CARBURETOR	0.2
7	3111C8	PACKING, CARBURETOR	0.2
9	8101F9	LEVER, CARBURETOR CHOKE	0.2
10	311175	VALVE, DASHPOT CHECK	0.1


Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
1	16044-ZH9-831	CHOKE SET	-	-	1		
2	16100-ZH9-831	CARBURETOR ASSY.(BEL3A A)....	-	-	1		
3	16124-ZE0-005	SCREW, THROTTLE STOP	-	-	1		
4	16172-ZE3-W10	COLLAR, SETTING	-	-	1		
5	16211-ZE2-000	INSULATOR, CARBURETOR	-	-	1		
6	16220-ZA0-702	SPACER COMP., CARBURETOR	-	-	1		
7	16221-ZA0-800	PACKING, CARBURETOR	-	-	1		
8	16223-ZA0-800	PACKING, INSULATOR	-	-	1		
9	16610-ZE1-000	LEVER COMP., CHOKE(STD.)	-	-	1		
10	36135-PH3-004	VALVE, DASHPOT CHECK	-	-	(1)	-----	HAP, HAP/A, VXP, VXP/A, VXQP
11	94305-20122	PIN, SPRING, 2X12	-	-	1		
12	99104-ZE0-0450	JET, PILOT, #45	-	-	1		

AIR CLEANER(1)

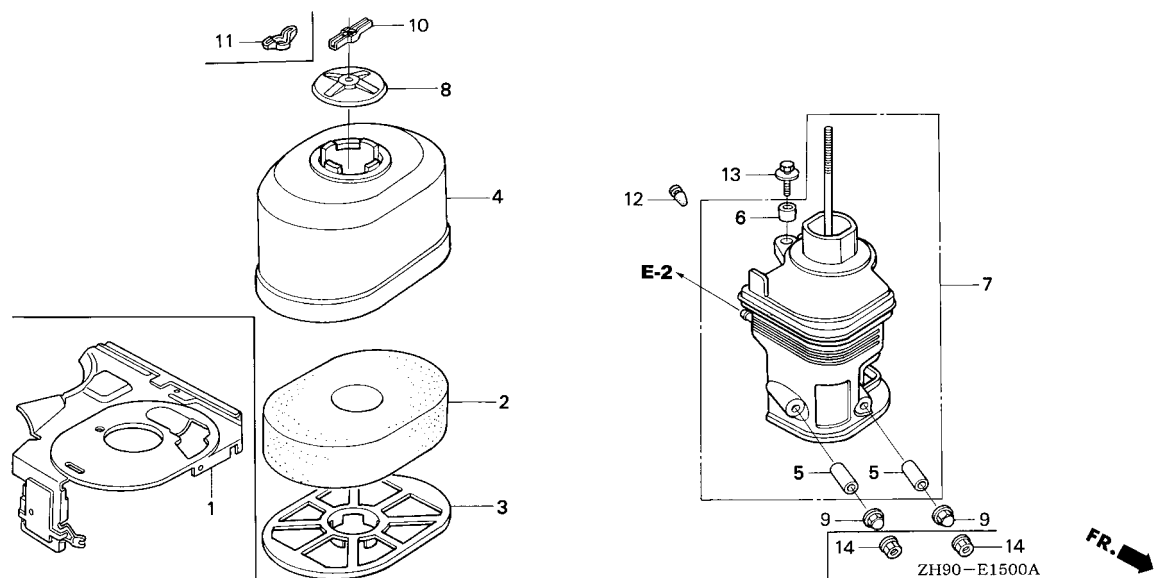

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	4141J6	COVER, AIR CLEANER CONTROL ...	0.1
2		(3)	
	3121B8	ELEMENT, AIR CLEANER	0.1
7	3121B4	ELBOW, AIR CLEANER	0.1


Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	GX270 (2)	(3)		
1	16591-ZE2-P51	COVER, CONTROL.....	1	-	-	LWD	
2	17211-ZE2-000	ELEMENT, AIR CLEANER(SEMI DRY)	1	-	-	LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, QD, QD/A, RD, RD/A, SD, SD/A, SJ, SJ/A, SJG	
			-	(1)	-	SJG/A, SJP, SK, SKE1, SN, SN/A	
3	17212-ZE2-000	GRID, AIR CLEANER.....	1	-	-	LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, QD, QD/A, RD, RD/A, SD, SD/A, SJ, SJ/A, SJG	
			-	(1)	-	SJG/A, SJP, SK, SKE1, SN, SN/A	
4	17231-ZE2-000	COVER, AIR CLEANER(SEMI DRY) .	1	-	-	LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, LWD, QD, QD/A, RD, RD/A, SD, SD/A, SJ, SJ/A	
			-	(1)	-	SJG, SJG/A, SJP, SK, SKE1, SN, SN/A	
5	17238-ZE2-310	COLLAR, AIR CLEANER.....	2	-	-	LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, LWD, QD, QD/A, RD, RD/A, SD, SD/A, SJ, SJ/A	
			-	(2)	-	SJG, SJG/A, SJP, SK, SKE1, SN, SN/A	
6	17239-ZE1-000	COLLAR B, AIR CLEANER.....	1	-	-	LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, LWD, QD, QD/A, RD, RD/A, SD, SD/A, SJ, SJ/A	
			-	(1)	-	SJG, SJG/A, SJP, SK, SKE1, SN, SN/A	
7	17410-ZE2-020	ELBOW COMP., AIR CLEANER.....	1	-	-	LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, LWD, QD, QD/A, RD, RD/A, SD, SD/A, SJ, SJ/A	
			-	(1)	-	SJG, SJG/A, SJP, SK, SKE1, SN, SN/A	
8	17420-ZE2-000	CAP COMP., AIR CLEANER.....	1	-	-	LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, QD, QD/A, RD, RD/A, SD, SD/A, SJ, SJ/A, SJG	
	17420-ZE2-P50		1	-	-	SJG/A, SJP, SK, SKE1, SN, SN/A	
	17420-ZE2-000		-	(1)	-	LWD	
9	90201-415-000	NUT, CAP, 6MM.....	2	-	-	1053526 LJ, QD, RD, SD, SJ, SJP, SK	
			2	-	-	1070319 LWD	
			-	(2)	-	1053526 L1, Q1, Q2, R1, S1, V1, W1	
10	90203-PB2-000	NUT, AIR CLEANER COVER (DACRO COATING)	1	-	-	1034589 LJ, QD, RD, SD, SJ, SJP, SK	

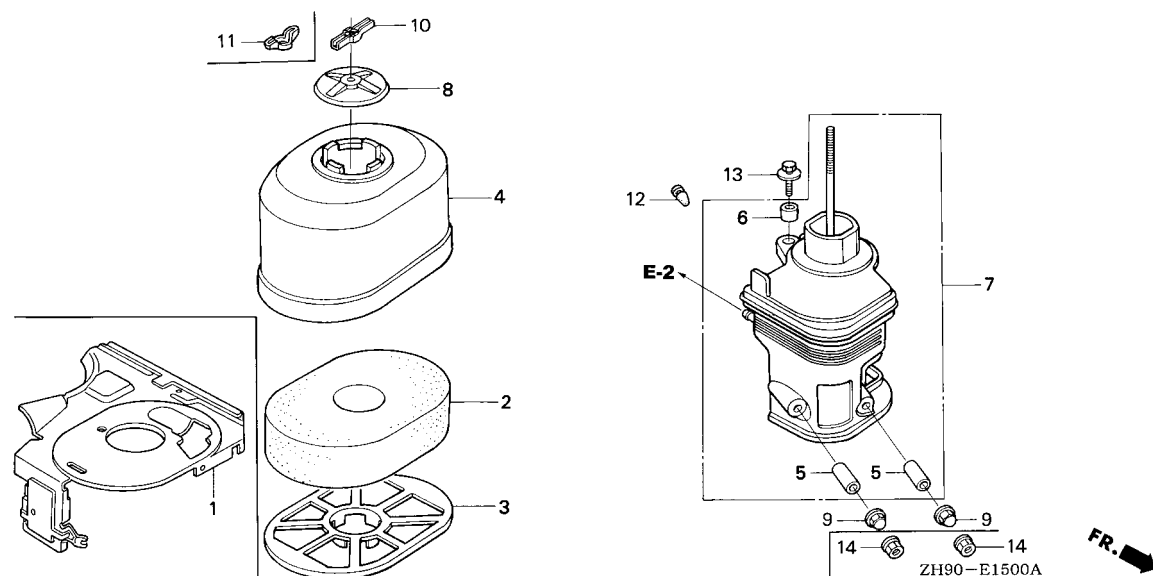

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
10)	90203-ZA0-800	NUT, WING, 6MM(BLACK)	1	-	-	1094660	SN
	90301-ZV0-000	NUT, WING	1	-	-	1097920	LWD
	90203-ZA0-800	NUT, WING, 6MM(BLACK)	1	-	-	1034590	1094660 LJ, QD, RD, SD, SJ, SJP, SK
	90203-PB2-000	NUT, AIR CLEANER COVER (DACRO COATING)	-	(1)	-	1034589	L1, Q1, R1, S1, V1, W1
	90203-ZA0-800	NUT, WING, 6MM(BLACK)	-	(1)	-	1094660	Q2
			-	(1)	-	1034590	1094660 L1, Q1, R1, S1, V1, W1
11	90325-044-000	NUT, TOOL BOX SETTING	1	-	-	-----	LJ/A, LJC, LJC/A, LJG, LJG/A, QD/A, RD/A, SD/A, SJ/A, SJG, SJG/A, SKE1, SN/A
			1	-	-	1094661	----- LJ, QD, RD, SD, SJ, SJP, SK, SN
			1	-	-	1097921	----- LWD
			-	(1)	-	-----	L1/A, Q1/A, R1/A, S1/A, W1/A
			-	(1)	-	1094661	----- L1, Q1, Q2, R1, S1, V1, W1
12	90899-422-610	PLUG, CONE TYPE	1	-	-	-----	LWD
13	90009-ZE2-003	BOLT-WASHER, 6X22	1	1	-	-----	L1, L1/A, LJ/A, LJC, LJC/A, LJG, LJG/A, Q1, Q1/A, QD/A, R1, R1/A, RD/A, S1
	93494-06020-08	BOLT-WASHER, 6X20	1	-	-	-----	S1/A, SD/A, SJ/A, SJG, SJG/A, SKE1, SN, SN/A, W1, W1/A
	95701-06035-08	BOLT, FLANGE, 6X35	1	-	-	-----	LJ, QD, RD, SD, SJ, SJP, SK
	93404-06020-08	BOLT-WASHER, 6X20	-	1	-	-----	LWD
	93494-06020-08		-	(1)	-	-----	Q2
			-	(1)	-	-----	V1
14	94050-06000	NUT, FLANGE, 6MM	2	-	-	-----	LJ/A, LJC, LJC/A, LJG, LJG/A, QD/A, RD/A, SD/A, SJ/A, SJG, SJG/A, SKE1, SN
			2	-	-	1053527	----- SN/A
			2	-	-	1070320	----- LJ, QD, RD, SD, SJ, SJP, SK
			-	(2)	-	-----	LWD
			-	(2)	-	-----	L1/A, Q1/A, R1/A, S1/A, W1/A
			-	(2)	-	1053527	----- L1, Q1, Q2, R1, S1, V1, W1

E-15-1

AIR CLEANER(2)

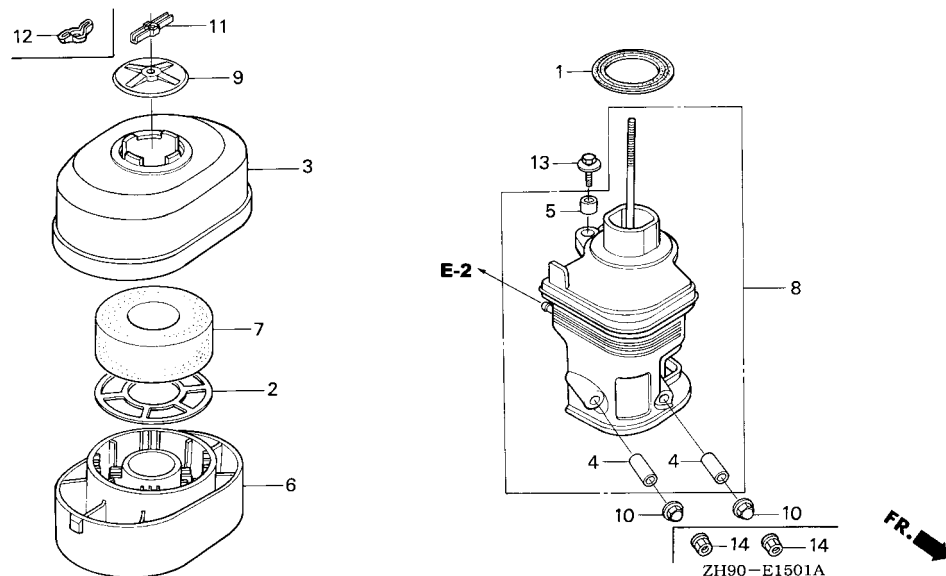


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
6	3121E5	PAN, AIR CLEANER OIL	0.1
7	3121B8	ELEMENT, AIR CLEANER	0.1
8	3121B4	ELBOW, AIR CLEANER	0.1

Ref. No.	Part No.	Description	Reqd. QTY	Serial No.	Parts catalogue code
			(1) (2) (3)		
1	16271-ZE2-000	PACKING, ELBOW.....	1	-	LT, LW, QP, QT, SW, SWE
	16271-ZE2-010		1	-	LT/A, LW/A, QP/A, QT/A
	16271-ZE2-000		1	-	1274336 SMD
	16271-ZE2-010		-	(1)	L1, Q1, Q2, R1, S1, V1, W1
	16271-ZE2-010		-	(1)	L1/A, Q1/A, R1/A, S1/A, W1/A
2	17212-ZE2-810	GRID, AIR CLEANER(OIL BATH) ..	1	-	LSS, LT, LT/A, LW, LW/A, QP, QP/A, QT, QT/A, SW, SWE
			1	-	1274336 SMD
			-	(1)	-
3	17231-ZE2-810	COVER, AIR CLEANER(OIL BATH) ..	1	-	LSS, LT, LT/A, LW, LW/A, QP, QP/A, QT, QT/A, SW, SWE
			1	-	1274336 SMD
			-	(1)	-
4	17238-ZE2-310	COLLAR, AIR CLEANER.....	2	-	LSS, LT, LT/A, LW, LW/A, QP, QP/A, QT, QT/A, SW, SWE
			2	-	1274336 SMD
			-	(2)	-
5	17239-ZE1-000	COLLAR B, AIR CLEANER.....	1	-	LSS, LT, LT/A, LW, LW/A, QP, QP/A, QT, QT/A, SW, SWE
			1	-	1274336 SMD
			-	(1)	-
6	17402-ZE2-810	PAN, CLEANER OIL(OIL BATH) ...	1	-	LSS, LT, LT/A, LW, LW/A, QP, QP/A, QT, QT/A, SW, SWE
			1	-	1274336 SMD
			-	(1)	-
7	17403-ZE2-810	ELEMENT, AIR CLEANER(OIL BATH)	1	-	LSS, LT, LT/A, LW, LW/A, QP, QP/A, QT, QT/A, SW, SWE
			1	-	1274336 SMD
			-	(1)	-
8	17410-ZE2-020	ELBOW COMP., AIR CLEANER.....	1	-	LSS, LT, LT/A, LW, LW/A, QP, QP/A, QT, QT/A, SW, SWE
			1	-	1274336 SMD
			-	(1)	-

2

E-15-1


AIR CLEANER(2)

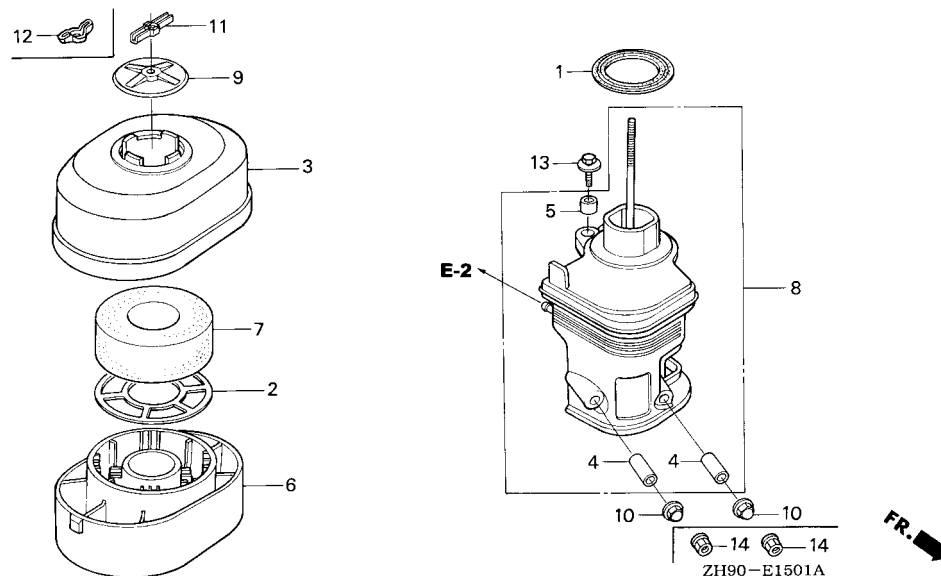

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
9	17420-ZE2-000	CAP COMP., AIR CLEANER.....	1	-	-	----- LSS,LT,LT/A,LW,LW/A,QP,QP/A,QT,QT/A,SW,SWE	
			1	-	-	1274336 SMD	
			-	(1)	-		
10	90201-415-000	NUT, CAP, 6MM.....	2	-	-	1053526 LW,QP,SW,SWE	
			-	(2)	-	1053526 L1,Q1,Q2,R1,S1,V1,W1	
11	90203-PB2-000	NUT, AIR CLEANER COVER (DACRO COATING)	1	-	-	1034589 LW,QP,SW,SWE	
	90203-ZA0-800	NUT, WING, 6MM(BLACK).....	1	-	-	1034590 1094660 LW,QP,SW,SWE	
	90203-PB2-000	NUT, AIR CLEANER COVER (DACRO COATING)	-	(1)	-	1034589 L1,Q1,R1,S1,V1,W1	
	90203-ZA0-800	NUT, WING, 6MM(BLACK).....	-	(1)	-	1094660 Q2	
			-	(1)	-	1034590 1094660 L1,Q1,R1,S1,V1,W1	
12	90325-044-000	NUT, TOOL BOX SETTING.....	1	-	-	----- LSS,LT,LT/A,LW/A,QP/A,QT,QT/A	
			1	-	-	1274336 SMD	
			1	-	-	1094661 LW,QP,SW,SWE	
			-	(1)	-	----- L1/A,Q1/A,R1/A,S1/A,W1/A	
			-	(1)	-	1094661 L1,Q1,Q2,R1,S1,V1,W1	
13	90009-ZE2-003	BOLT-WASHER, 6X22.....	1	1	-	----- L1,L1/A,LT,LT/A,LW/A,Q1,Q1/A,QP,QP/A,QT,QT/A,R1,R1/A,S1,S1/A,W1	
						W1/A	
	93404-06020-08	BOLT-WASHER, 6X20.....	1	1	-	----- LSS,Q2	
	93494-06020-08		1	-	-	----- LW,SW,SWE	
	93404-06020-08		1	-	-	1274336 SMD	
	93494-06020-08		-	(1)	-	----- V1	
14	94050-06000	NUT, FLANGE, 6MM.....	2	-	-	----- LSS,LT,LT/A,LW/A,QP/A,QT,QT/A	
			2	-	-	1274336 SMD	
			2	-	-	1053527 LW,QP,SW,SWE	
			-	(2)	-	----- L1/A,Q1/A,R1/A,S1/A,W1/A	
			-	(2)	-	1053527 L1,Q1,Q2,R1,S1,V1,W1	

E-15-2


AIR CLEANER(3)

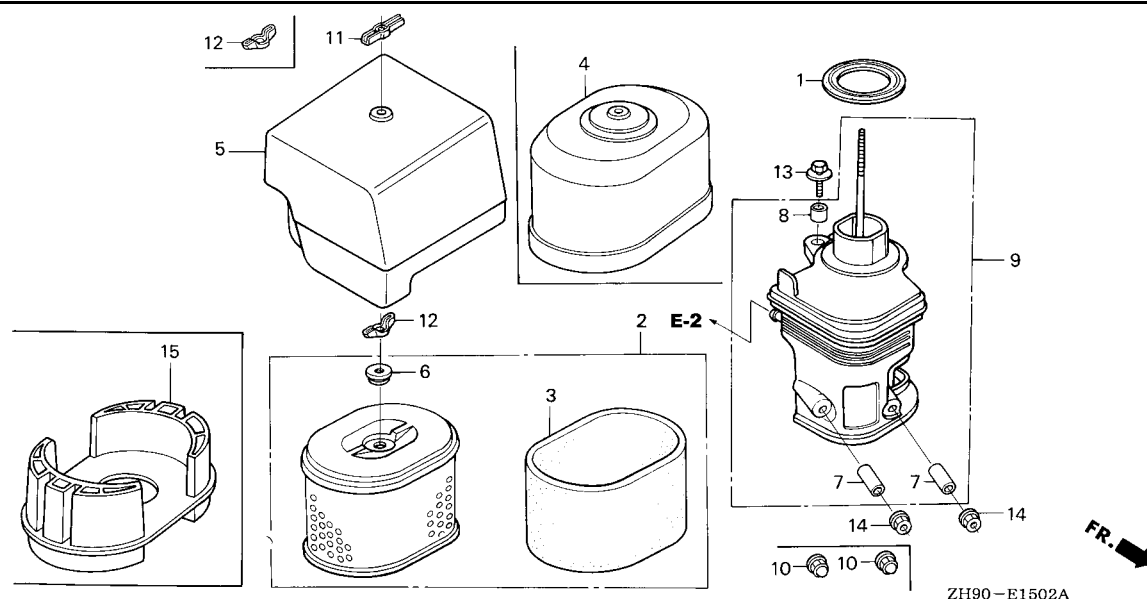

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	3121E1	PACKING, ELBOW	0.1
2	3121B8	ELEMENT, AIR CLEANER	0.1
3	3121C1	FILTER, OUTER	0.1
9	3121B4	ELBOW, AIR CLEANER	0.1
15	3121D6	NOSE, SILENCER	0.1

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
1	16271-ZE2-000	PACKING, ELBOW	(1)	(1)	-	-----	L1,Q1,Q2,QD,R1,RD,S1,SD,V1,W1
	16271-ZE2-010		(1)	(1)	-	-----	L1/A,Q1/A,QD/A,R1/A,RD/A,S1/A,SD/A,W1/A
	16271-ZE2-000		1	-	1	-----	ES1,HA,HA2,HAP,HAQ,HEA,HEA2,HEA8,HH,HX,HX26,HX8,HXQ4,LH,LHB1,LHB3 LHE,LHQ4,LWD1,LX,LX16,LXE,LXE8,LXQ4,LXU,LXZ,PA,PA2,PAE2,PX,PX26 PXE8,PXU,QA,QA2,QAB1,QAB3,QAE,QAE2,QAE6,QAG,QAG2,QAQ,QAQ4,QAR2 QAW,QE,QH,QH26,QHE,QHE4,QHP1,QHQ4,QHR,QHR4,QHZ,QKE3,QL2,QME2,QMH QSE,QSE8,QX,QX26,QXB6,QXE,QXE4,QXE6,QXE8,QXQ4,QXU,RA,RA2,RH,RH26 RHE,RHE4,RHQ4,RSC2,RSS,RX,RXP,RXQ4,RXU,SE,SH,SHE,SHEZ,SHQ4,SMC4 SME1,SME6,SWC4,SX,SX2,SXE,SXE4,SXE8,SXQ4,SXU,VA,VA2,VAG2,VAW,VAW1 VDE,VDE2,VH,VKB2,VM2,VME2,VNT2,VW12,VW22,VWA,VWA2,VWN2,VX,VX26 VXE,VXE4,VXE6,VXP,VXQ4,VXQP,VXT1,VXU,VXU1,WMT8,WXE8
	16271-ZE2-010		1	-	1	-----	ES1/A,HA2/A,HAP/A,HEA2/A,HEA8/A,HX/A,HX26/A,HX8/A,HXQ4/A,LH/A LHB5,LHE/A,LWD1/A,LX/A,LXE/A,LXE8/A,LXQ4/A,LXU/A,PA2/A,PAE2/A PX/A,PX26/A,PXE8/A,PXU/A,QA2/A,QAB3/A,QAE2/A,QAE6/A,QAG/A,QAG2/A QAQ4/A,QAR2/A,QAW/A,QE/A,QH/A,QH26/A,QHB5,QHE4/A,QHP1/A,QHQ4/A QHR/A,QHR4/A,QHZ/A,QKE3/A,QKE4,QME2/A,QMH/A,QSE/A,QSE2,QSE8/A QX/A,QX26/A,QXB6/A,QXE/A,QXE4/A,QXE6/A,QXE8/A,QXE9,QXQ4/A,QXU/A RA2/A,RA3,RH26/A,RHE4/A,RHQ4/A,RSC2/A,RSS/A,RX/A,RXP/A,RXQ4/A RXU/A,SE/A,SH/A,SHQ4/A,SMC4/A,SME1/A,SME6/A,SMX2,SWA4,SWC4/A,SX/A SXE/A,SXE4/A,SXE8/A,SXQ4/A,SXU/A,VA2/A,VAG2/A,VDE2/A,VKB2/A,VM2/A VME2/A,VNT2/A,VW12/A,VWA2/A,VWN2/A,VX/A,VXE4/A,VXE6/A,VXE8,VXK VXP/A,VXQ4/A,VXT1/A,VXU/A,VXU1/A,WMA4,WMT8/A,WXE8/A
	16271-ZE2-000		1	-	-	1274337	----- SMD

2

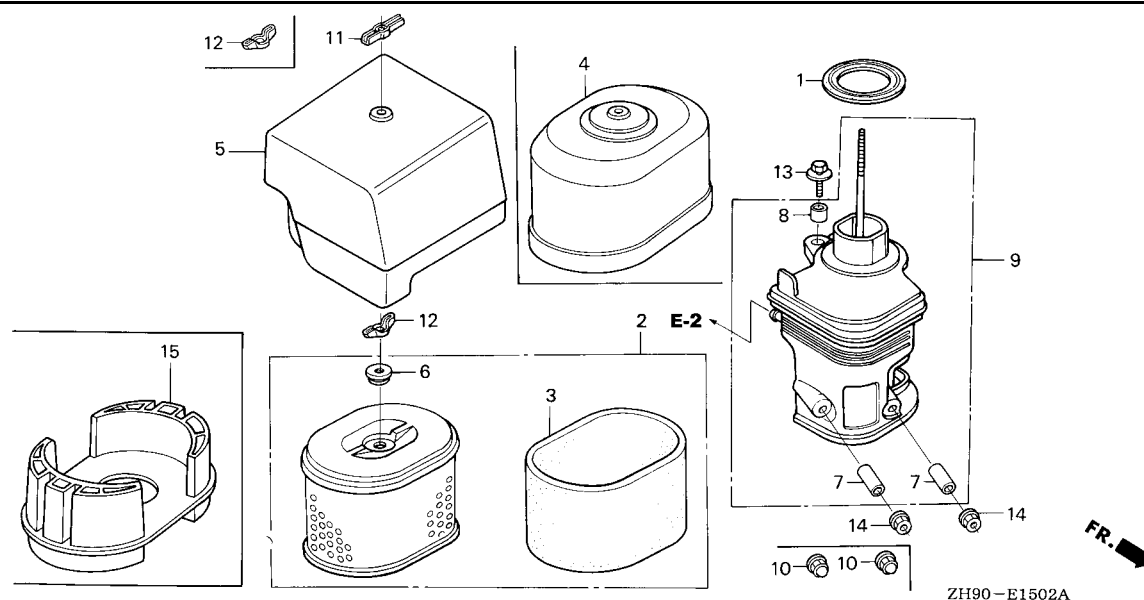


Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
2	17210-ZE2-822	ELEMENT, AIR CLEANER(DUAL)...	(1)	(1)	-	-----	L1, L1/A, Q1, Q1/A, Q2, QD, QD/A, R1, R1/A, RD, RD/A, S1, S1/A, SD, SD/A, V1, W1, W1/A
			1	-	1	-----	ES1, ES1/A, HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, HH, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HQX4, HQX4/A, LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LWD1, LWD1/A, LX, LX/A, LX16, LX6, LX/A, LX8, LX8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ, PA, PA2, PA2/A, PAE2, PAE2/A, PX, PX/A, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, QA, QA2, QA2/A, QAB1, QAB3, QAB3/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAG, QAG4, QAG4/A, QAR2, QAR2/A, QAW, QAW/A, QE, QE/A, QH, QH/A, QH26, QH26/A, QHB5, QHE, QHE4, QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A, QKE3, QKE3/A, QKE4, QL2, QME2, QME2/A, QMH, QMH/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QX, QX/A, QX26, QX26/A, QXB6, QXB6/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXQ4, QXQ4/A, QXU, QXU/A, RA, RA2, RA2/A, RA3, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A, SE, SE/A, SH, SH/A, SHE, SHEZ, SHQ4, SHQ4/A, SMC4, SMC4/A, SME1, SME1/A, SME6, SME6/A, SMX2, SWA4, SWC4, SWC4/A, SX, SX/A, SX2, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXQ4, SXQ4/A, SXU, SXU/A, VA, VA2, VA2/A, VAG2, VAG2/A, VAW, VAW1, VDE, VDE2, VDE2/A, VH, VKB2, VKB2/A, VM2, VM2/A, VME2, VME2/A, VNT2, VNT2/A, VW12, VW12/A, VW22, VWA, VWA2, VWA2/A, VWN2, VWN2/A, VX, VX/A, VX26, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE8, VXE8, VXP, VXP/A, VXQ4, VXQ4/A, VXQP, VXT1, VXT1/A, VXU, VXU/A, VXU1, VXU1/A, WMA4, WMT8, WMT8/A, WXE8, WXE8/A
			1	-	-	-----	SMD

E-15-2

AIR CLEANER(3)

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
3	17218-ZE2-821	FILTER, OUTER.....	1	-	1	-----	L1, L1/A, Q1, Q1/A, Q2, QD, QD/A, R1, R1/A, RD, RD/A, S1, S1/A, SD, SD/A, V1, W1 W1/A ES1, ES1/A, HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A HH, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A, LH, LH/A, LHB1, LHB3 LHB5, LHE, LHE/A, LHQ4, LWD1, LWD1/A, LX, LX/A, LX16, LXE, LXE/A, LXE8 LXE8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ, PA, PA2, PA2/A, PAE2, PAE2/A, PX, PX/A PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, QA, QA2, QA2/A, QAB1, QAB3, QAB3/A QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAQ, QAQ4, QAQ4/A QAR2, QAR2/A, QAW, QAW/A, QE, QE/A, QH, QH/A, QH26, QH26/A, QHB5, QHE, QHE4 QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A QKE3, QKE3/A, QKE4, QL2, QME2, QME2/A, QMH, QMH/A, QSE, QSE/A, QSE2, QSE8 QSE8/A, QX, QX/A, QX26, QX26/A, QXB6, QXB6/A, QXE, QXE/A, QXE4, QXE4/A, QXE6 QXE6/A, QXE8, QXE8/A, QXE9, QXQ4, QXQ4/A, QXU, QXU/A, RA, RA2, RA2/A, RA3, RH RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A, SE, SE/A, SH, SH/A, SHE, SHEZ SHQ4, SHQ4/A, SMC4, SMC4/A, SME1, SME1/A, SME6, SME6/A, SMX2, SWA4, SWC4 SWC4/A, SX, SX/A, SX2, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXQ4, SXQ4/A SXU, SXU/A, VA, VA2, VA2/A, VAG2, VAG2/A, VAW, VAW1, VDE, VDE2, VDE2/A, VH VKB2, VKB2/A, VM2, VM2/A, VME2, VME2/A, VNT2, VNT2/A, VW12, VW12/A, VW22 VWA, VWA2, VWA2/A, VWN2, VWN2/A, VX, VX/A, VX26, VXE, VXE4, VXE4/A, VXE6 VXE6/A, VXE8, VXX, VXP, VXP/A, VXQ4, VXQ4/A, VXQP, VXT1, VXT1/A, VXU, VXU/A VXU1, VXU1/A, WMA4, WMT8, WMT8/A, WXE8, WXE8/A SMD
4	17230-ZE2-820	COVER, AIR CLEANER(DUAL).....	1	-	-	1274337	-----
5	17231-ZH9-820	COVER, AIR CLEANER.....	1	-	1	-----	L1, L1/A, Q1, Q1/A, Q2, QD, QD/A, R1, R1/A, RD, RD/A, S1, S1/A, SD, SD/A, V1, W1 W1/A ES1, ES1/A, HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A HH, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A, LH, LH/A, LHB1, LHB3 LHB5, LHE, LHE/A, LHQ4, LWD1, LWD1/A, LX, LX/A, LX16, LXE, LXE/A, LXE8 LXE8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ, PA, PA2, PA2/A, PAE2, PAE2/A, PX, PX/A PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, QA, QA2, QA2/A, QAB1, QAB3, QAB3/A QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAQ, QAQ4, QAQ4/A QAR2, QAR2/A, QAW, QAW/A, QE, QE/A, QH, QH/A, QH26, QH26/A, QHB5, QHE, QHE4 QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A QL2, QME2, QME2/A, QMH, QMH/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QX, QX/A, QX26 QX26/A, QXB6, QXB6/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A QXE9, QXQ4, QXQ4/A, QXU, QXU/A, RA, RA2, RA2/A, RA3, RH, RH26, RH26/A, RHE RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX, RX/A, RXP, RXP/A RXQ4, RXQ4/A, RXU, RXU/A, SE, SE/A, SH, SH/A, SHE, SHEZ, SHQ4, SHQ4/A, SMC4 SMC4/A, SME1, SME1/A, SME6, SME6/A, SMX2, SWA4, SWC4, SWC4/A, SX, SX/A, SX2 SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXQ4, SXQ4/A, SXU, SXU/A, VA, VA2 VA2/A, VAG2, VAG2/A, VAW, VAW1, VDE, VDE2, VDE2/A, VH, VKB2, VKB2/A, VM2 VM2/A, VME2, VME2/A, VNT2, VNT2/A, VW12, VW12/A, VW22, VWA, VWA2, VWA2/A VWN2, VWN2/A, VX, VX/A, VX26, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE8, VXX, VXP VXP/A, VXQ4, VXQ4/A, VXQP, VXT1, VXT1/A, VXU, VXU/A, VXU1, VXU1/A, WMA4 WMT8, WMT8/A, WXE8, WXE8/A SMD
			1	-	-	1274337	-----
			-	(1)	-		

2

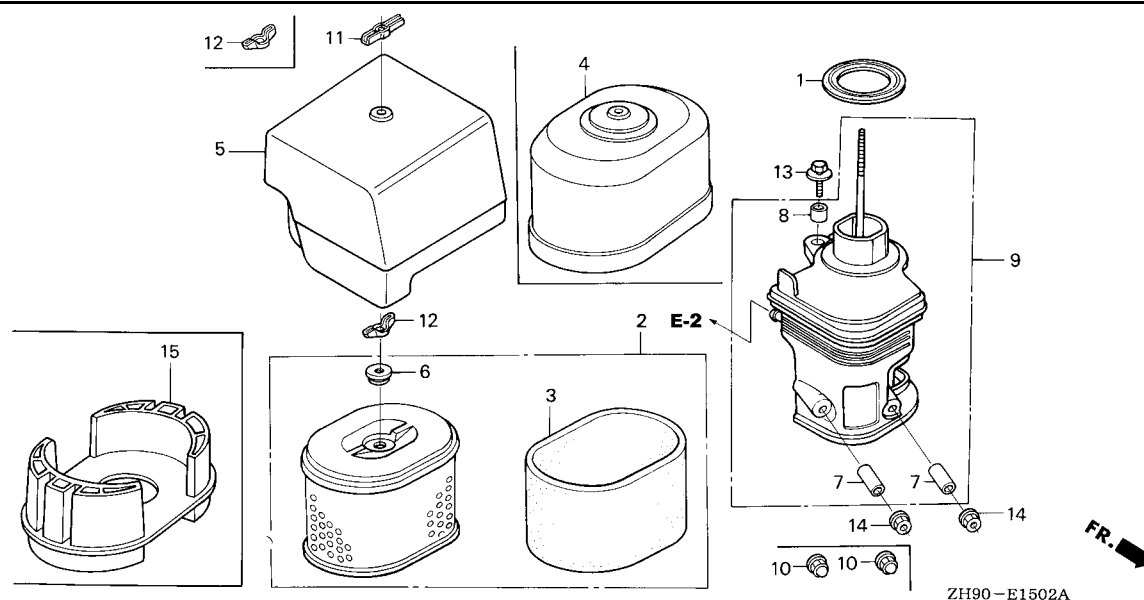


Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
6	17232-891-000	GROMMET, AIR CLEANER.....	(1)	(1)	-	-----	L1, L1/A, Q1, Q1/A, Q2, QD, QD/A, R1, R1/A, RD, RD/A, S1, S1/A, SD, SD/A, V1, W1, W1/A
			1	-	1	-----	ES1, ES1/A, HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, HH, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HQX4, HQX4/A, LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LWD1, LWD1/A, LX, LX/A, LX16, LX6, LX/A, LX16, LX16/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ, PA, PA2, PA2/A, PAE2, PAE2/A, PX, PX/A, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, QA, QA2, QA2/A, QAB1, QAB3, QAB3/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAG, QAG4, QAG4/A, QAR2, QAR2/A, QAW, QAW/A, QE, QE/A, QH, QH/A, QH26, QH26/A, QHB5, QHE, QHE4, QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A, QKE3, QKE3/A, QKE4, QL2, QME2, QME2/A, QMH, QMH/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QX, QX/A, QX26, QX26/A, QXB6, QXB6/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXQ4, QXQ4/A, QXU, QXU/A, RA, RA2, RA2/A, RA3, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A, SE, SE/A, SH, SH/A, SHE, SHEZ, SHQ4, SHQ4/A, SMC4, SMC4/A, SME1, SME1/A, SME6, SME6/A, SMX2, SWA4, SWC4, SWC4/A, SX, SX/A, SX2, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXQ4, SXQ4/A, SXU, SXU/A, VA, VA2, VA2/A, VAG2, VAG2/A, VAW, VAW1, VDE, VDE2, VDE2/A, VH, VKB2, VKB2/A, VM2, VM2/A, VME2, VME2/A, VNT2, VNT2/A, VW12, VW12/A, VW22, VWA, VWA2, VWA2/A, VWN2, VWN2/A, VX, VX/A, VX26, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE8, VXE8, VXP, VXP/A, VXQ4, VXQ4/A, VXQP, VXT1, VXT1/A, VXU, VXU/A, VXU1, VXU1/A, WMA4, WMT8, WMT8/A, WXE8, WXE8/A
			1	-	-	-----	SMD

E-15-2

AIR CLEANER(3)

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
7	17238-ZE2-310	COLLAR, AIR CLEANER.....	GX270				
			(2)	(2)	-		
			2	-	2		L1, L1/A, Q1, Q1/A, Q2, QD, QD/A, R1, R1/A, RD, RD/A, S1, S1/A, SD, SD/A, V1, W1 W1/A ES1, ES1/A, HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A HH, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A, LH, LH/A, LHB1, LHB3 LHB5, LHE, LHE/A, LHQ4, LWD1, LWD1/A, LX, LX/A, LX16, LX16/A, LX16, LX16/A, LX16 LXE8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ, PA, PA2, PA2/A, PAE2, PAE2/A, PX, PX/A PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, QA, QA2, QA2/A, QAB1, QAB3, QAB3/A QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAQ, QAQ4, QAQ4/A QAR2, QAR2/A, QAW, QAW/A, QE, QE/A, QH, QH/A, QH26, QH26/A, QHB5, QHE, QHE4 QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A QKE3, QKE3/A, QKE4, QL2, QME2, QME2/A, QMH, QMH/A, QSE, QSE/A, QSE2, QSE8 QSE8/A, QX, QX/A, QX26, QX26/A, QXB6, QXB6/A, QXE, QXE/A, QXE4, QXE4/A, QXE6 QXE6/A, QXE8, QXE8/A, QXE9, QXQ4, QXQ4/A, QXU, QXU/A, RA, RA2, RA2/A, RA3, RH RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A, SE, SE/A, SH, SH/A, SHE, SHEZ SHQ4, SHQ4/A, SMC4, SMC4/A, SME1, SME1/A, SME6, SME6/A, SMX2, SWA4, SWC4 SWC4/A, SX, SX/A, SX2, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXQ4, SXQ4/A SXU, SXU/A, VA, VA2, VA2/A, VAG2, VAG2/A, VAW, VAW1, VDE, VDE2, VDE2/A, VH VKB2, VKB2/A, VM2, VM2/A, VME2, VME2/A, VNT2, VNT2/A, VW12, VW12/A, VW22 VWA, VWA2, VWA2/A, VWN2, VWN2/A, VX, VX/A, VX26, VXE, VXE4, VXE4/A, VXE6 VXE6/A, VXE8, VXX, VXP, VXP/A, VXQ4, VXQ4/A, VXQP, VXT1, VXT1/A, VXU, VXU/A VXU1, VXU1/A, WMA4, WMT8, WMT8/A, WXE8, WXE8/A
8	17239-ZE1-000	COLLAR B, AIR CLEANER.....	2	-	-	1274337	SMD
			(1)	(1)	-		
			1	-	1		L1, L1/A, Q1, Q1/A, Q2, QD, QD/A, R1, R1/A, RD, RD/A, S1, S1/A, SD, SD/A, V1, W1 W1/A ES1, ES1/A, HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A HH, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A, LH, LH/A, LHB1, LHB3 LHB5, LHE, LHE/A, LHQ4, LWD1, LWD1/A, LX, LX/A, LX16, LX16/A, LX16, LX16/A, LX16 LXE8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ, PA, PA2, PA2/A, PAE2, PAE2/A, PX, PX/A PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, QA, QA2, QA2/A, QAB1, QAB3, QAB3/A QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAQ, QAQ4, QAQ4/A QAR2, QAR2/A, QAW, QAW/A, QE, QE/A, QH, QH/A, QH26, QH26/A, QHB5, QHE, QHE4 QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A QKE3, QKE3/A, QKE4, QL2, QME2, QME2/A, QMH, QMH/A, QSE, QSE/A, QSE2, QSE8 QSE8/A, QX, QX/A, QX26, QX26/A, QXB6, QXB6/A, QXE, QXE/A, QXE4, QXE4/A, QXE6 QXE6/A, QXE8, QXE8/A, QXE9, QXQ4, QXQ4/A, QXU, QXU/A, RA, RA2, RA2/A, RA3, RH RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A, SE, SE/A, SH, SH/A, SHE, SHEZ SHQ4, SHQ4/A, SMC4, SMC4/A, SME1, SME1/A, SME6, SME6/A, SMX2, SWA4, SWC4 SWC4/A, SX, SX/A, SX2, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXQ4, SXQ4/A SXU, SXU/A, VA, VA2, VA2/A, VAG2, VAG2/A, VAW, VAW1, VDE, VDE2, VDE2/A, VH VKB2, VKB2/A, VM2, VM2/A, VME2, VME2/A, VNT2, VNT2/A, VW12, VW12/A, VW22 VWA, VWA2, VWA2/A, VWN2, VWN2/A, VX, VX/A, VX26, VXE, VXE4, VXE4/A, VXE6 VXE6/A, VXE8, VXX, VXP, VXP/A, VXQ4, VXQ4/A, VXQP, VXT1, VXT1/A, VXU, VXU/A VXU1, VXU1/A, WMA4, WMT8, WMT8/A, WXE8, WXE8/A
			1	-	-	1274337	SMD

2

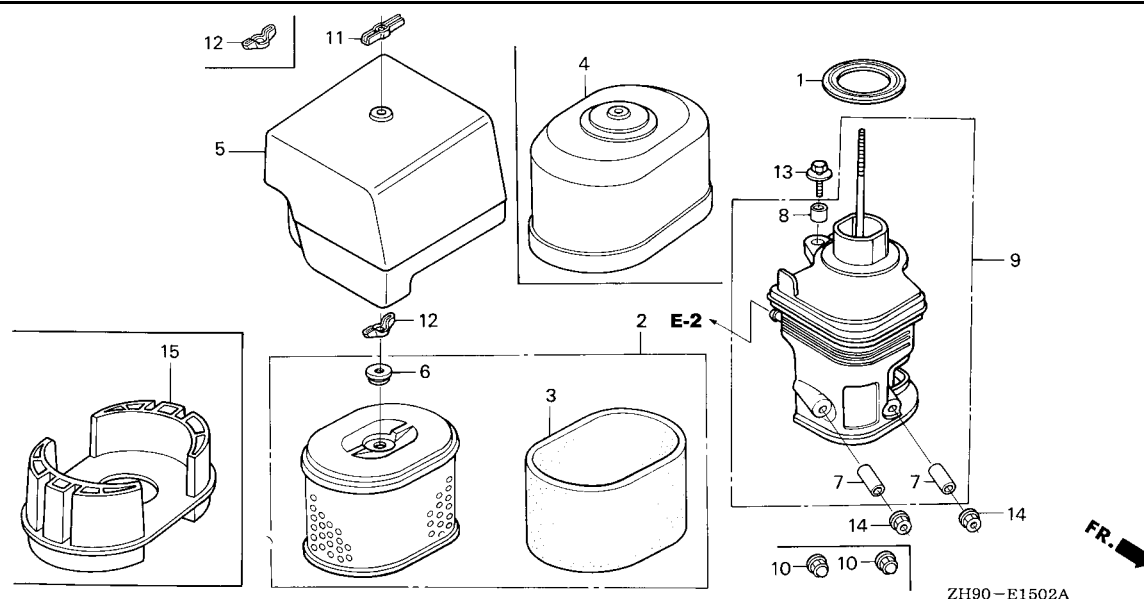

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
9	17410-ZE2-020	ELBOW COMP., AIR CLEANER.....	(1)	(1)	-	-----	L1, L1/A, Q1, Q1/A, Q2, QD, QD/A, R1, R1/A, RD, RD/A, S1, S1/A, SD, SD/A, V1, W1, W1/A
			1	-	1	-----	ES1, ES1/A, HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, HH, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A, LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LWD1, LWD1/A, LX, LX/A, LX16, LXE, LXE/A, LXE8, LXE8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ, PA, PA2, PA2/A, PAE2, PAE2/A, PX, PX/A, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, QA, QA2, QA2/A, QAB1, QAB3, QAB3/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAO, QAO/A, QAO4, QAO4/A, QAR2, QAR2/A, QAW, QAW/A, QE, QE/A, QH, QH/A, QH26, QH26/A, QHB5, QHE, QHE4, QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A, QKE3, QKE3/A, QKE4, QL2, QME2, QME2/A, QMH, QMH/A, QSE, QSE/A, QSE2, QSE2/A, QSE8, QSE8/A, QX, QX/A, QX26, QX26/A, QXB6, QXB6/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXQ4, QXQ4/A, QXU, QXU/A, RA, RA2, RA2/A, RA3, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A, SE, SE/A, SH, SH/A, SHE, SHEZ, SHQ4, SHQ4/A, SMC4, SMC4/A, SME1, SME1/A, SME6, SME6/A, SMX2, SWA4, SWC4, SWC4/A, SX, SX/A, SX2, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXQ4, SXQ4/A, SXU, SXU/A, VA, VA2, VA2/A, VAG2, VAG2/A, VAW, VAW1, VDE, VDE2, VDE2/A, VH, VKB2, VKB2/A, VM2, VM2/A, VME2, VME2/A, VNT2, VNT2/A, VW12, VW12/A, VW22, VVA, VVA2, VVA2/A, VWN2, VWN2/A, VX, VX/A, VX26, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE8, VXE8/A, VXP, VXP/A, VXQ4, VXQ4/A, VXQP, VXT1, VXT1/A, VXU, VXU/A, VXU1, VXU1/A, WMA4, WMT8, WMT8/A, WXE8, WXE8/A
			1	-	-	-----	1274337 SMD
10	90201-415-000	NUT, CAP, 6MM.....	(2)	(2)	-	-----	1053526 L1, Q1, Q2, QD, R1, RD, S1, SD, V1, W1
			2	-	-	-----	HA, HAQ, HEA, PA, QAQ, RA, VA, VAW, VWA
			2	-	-	-----	1053526 HH, HX, LH, LHE, LX, LXZ, PX, QA, QAE, QE, QH, QHE, QX, QXE, RH, RHE, RX, SE, SH, SHE, SHEZ, SX, SXE, VH, VX, VXE


E-15-2

AIR CLEANER(3)

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
11	90203-PB2-000	NUT, AIR CLEANER COVER (DACRO COATING)	(1)	(1)	-	1034589	L1, Q1, QD, R1, RD, S1, SD, V1, W1
			1	-	-	1034589	HA, HH, HX, LH, LHE, LX, LXZ, PA, PX, QA, QAE, QE, QH, QHE, QX, QXE, RA, RH, RHE, RX, SE, SH, SHE, SHEZ, SX, SXE, VA, VAW, VH, VX, VXE
	90203-ZA0-800	NUT, WING, 6MM(BLACK).....	1	-	-	1094660	HEA, VWA, VXU
			1	-	-	1096095	HA2, HAQ, PA2, QA2, QAE2, QAQ, RA2, VA2
			1	-	-	1034590	1094660 HA, HH, HX, LH, LHE, LX, LXZ, PA, PX, QA, QAE, QD, QE, QH, QHE, QX, QXE, RA, RD, RH, RHE, RX, SD, SE, SH, SHE, SHEZ, SX, SXE, VA, VAW, VH, VX, VXE
			-	(1)	-	1094660	Q2
			-	(1)	-	1034590	1094660 L1, Q1, R1, S1, V1, W1
12	90325-044-000	NUT, TOOL BOX SETTING.....	(2)	(2)	-	-----	L1/A, Q1/A, QD/A, R1/A, RD/A, S1/A, SD/A, W1/A
			(1)	(1)	-	1094660	L1, Q1, Q2, QD, R1, RD, S1, SD, V1, W1
			(2)	(2)	-	1094661	----- L1, Q1, Q2, QD, R1, RD, S1, SD, V1, W1
			2	-	-	-----	ES1, ES1/A, HA2/A, HEA2, HEA2/A, HEA8, HEA8/A, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A, LH/A, LHB1, LHB3, LHB5, LHE/A, LHQ4, LWD1, LWD1/A, LX/A, LX16, LXE, LXE/A, LXE8, LXE8/A, LXQ4, LXQ4/A, LXU, LXU/A, PA2/A, PAE2, PAE2/A, PX/A, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, QA2/A, QAB1, QAB3, QAB3/A, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAQ4, QAQ4/A, QAR2, QAR2/A, QAW, QAW/A, QE/A, QH/A, QH26, QH26/A, QHB5, QHE4, QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A, QL2, QME2, QME2/A, QMH, QMH/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QX/A, QX26, QX26/A, QXB6, QXB6/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXQ4, QXQ4/A, QXU, QXU/A, RA2/A, RA3, RH26, RH26/A, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX/A, RXQ4, RXQ4/A, RXU, RXU/A, SE/A, SH/A, SHQ4, SHQ4/A, SMC4, SMC4/A, SME1, SME1/A, SME6, SME6/A, SMX2, SWA4, SWC4, SWC4/A, SX/A, SX2, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXQ4, SXQ4/A, SXU, SXU/A, VA2/A, VAG2, VAG2/A, VAW1, VDE, VDE2, VDE2/A, VKB2, VKB2/A, VM2, VM2/A, VME2, VME2/A, VNT2, VNT2/A, VW12, VW12/A, VW22, VWA2, VWA2/A, VWN2, VWN2/A, VX/A, VX26, VXE4, VXE4/A, VXE6, VXE6/A, VXE8, VXE8/A, VXX, VXX/A, VXXQ4, VXXQ4/A, VXT1, VXT1/A, VXU/A, VXU1, VXU1/A, WMA4, WMT8, WMT8/A, WXE8, WXE8/A
			1	-	-	-----	QKE3, QKE3/A, QKE4
			1	-	-	1094660	HH, HX, LH, LHE, LX, LXZ, PX, QA, QAE, QE, QH, QHE, QX, QXE, RH, RHE, RX, SE, SH, SHE, SHEZ, SX, SXE, VA, VAW, VH, VX, VXE, VXU
			1	-	-	1096095	HA2, HAQ, PA2, QA2, QAE2, QAQ, RA2, VA2
			2	-	-	1094661	----- HA, HEA, HH, HX, LH, LHE, LX, LXZ, PA, PX, QA, QAE, QE, QH, QHE, QX, QXE, RA, RH, RHE, RX, SE, SH, SHE, SHEZ, SX, SXE, VA, VAW, VH, VWA, VX, VXE, VXU
			2	-	-	1096096	----- HA2, HAQ, PA2, QA2, QAE2, QAQ, RA2, VA2
			2	-	-	1274337	----- SMD
			-	-	2	-----	
13	90009-ZE2-003	BOLT-WASHER, 6X22.....	1	1	1	-----	----- ES1, ES1/A, HA2, HA2/A, HAP, HAP/A, HEA2, HEA2/A, HEA8, HEA8/A, HX/A, HX26, HX26/A, HX8/A, HXQ4, HXQ4/A, L1, L1/A, LH/A, LHB5, LHE/A, LWD1, LWD1/A, LX/A, LX16, LXE, LXE/A, LXE8, LXE8/A, LXQ4, LXQ4/A, LXU, LXU/A, PA2, PA2/A, PAE2, PAE2/A, PX, PX/A, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, Q1, Q1/A, QA2, QA2/A, QAB3, QAB3/A, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAQ4, QAQ4/A, QAR2, QAR2/A, QAW, QAW/A, QE/A, QH/A, QH26, QH26/A, QHB5, QHE4, QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A, QKE3, QKE3/A, QKE4, QL2, QME2, QME2/A, QMH, QMH/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QX/A, QX26, QX26/A, QXB6, QXB6/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXQ4, QXQ4/A, QXU/A, R1, R1/A, RA2, RA2/A, RA3, RH26, RH26/A, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU/A, S1, S1/A, SE/A, SH/A, SHQ4, SHQ4/A, SMC4, SMC4/A, SME1, SME1/A, SME6, SME6/A, SMX2, SWA4, SWC4, SWC4/A, SX/A, SXE/A, SXE4, SXE4/A, SXQ4, SXQ4/A, SXU/A, VA2, VA2/A, VAG2, VAG2/A, VDE2, VDE2/A, VKB2, VKB2/A, VM2, VM2/A, VME2, VME2/A, VNT2, VNT2/A, VW12, VW12/A, VWA2, VWA2/A, VWN2, VWN2/A, VX/A, VXE4, VXE4/A, VXE6, VXE6/A, VXE8, VXE8/A, VXP, VXP/A, VXXQ4, VXXQ4/A, VXPQ, VXPQ/A, VXT1, VXT1/A, VXU, VXU/A, VXU1, VXU1/A, W1, W1/A, WMA4, WMT8, WMT8/A, WXE8, WXE8/A

E-15-2

AIR CLEANER(3)

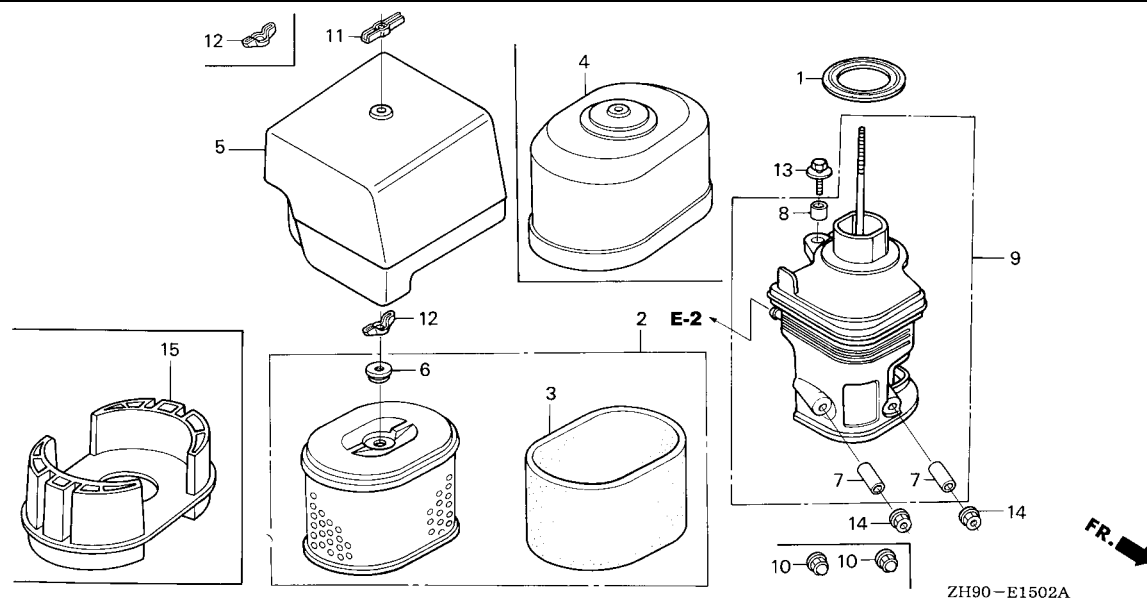

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
13)	93404-06020-08	BOLT-WASHER, 6X20	1	1	-	HAQ, HEA, LHB1, LHB3, LHQ4, LX16, Q2, QAB1, QAQ, SX2, VAW1, VDE, VW22, VWA	
	93494-06020-08		1	-	-	VX26 HA, HH, HX, HX8, LH, LHE, LX, LXU, LXZ, PA, QA, QAE, QE, QH, QHE, QX, QXE, QXE8 QXU, RA, RH, RHE, RX, RXU, SE, SH, SHE, SHEZ, SX, SXE, SXE8, SXU, VA, VAW, VH, VX	
	93404-06020-08		1	-	-	1274337	SMD
	93494-06020-08		-	(1)	-	-	V1

E-15-2

AIR CLEANER(3)

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
14	94050-06000	NUT, FLANGE, 6MM.....	(2)	(2)	-	-----	L1/A, Q1/A, QD/A, R1/A, RD/A, S1/A, SD/A, W1/A
			(2)	(2)	-	1053527	L1, Q1, Q2, QD, R1, RD, S1, SD, V1, W1
			2	-	2	-----	ES1, ES1/A, HA2, HA2/A, HAP, HAP/A, HEA2, HEA2/A, HEA8, HEA8/A, HX/A, HX26
							HX26/A, HX8, HX8/A, HXQ4, HXQ4/A, LH/A, LHB1, LHB3, LHB5, LHE/A, LHQ4, LWD1
							LWD1/A, LX/A, LX16, LXE, LXE/A, LXE8, LXE8/A, LXQ4, LXQ4/A, LXU, LXU/A, PA2
							PA2/A, PAE2, PAE2/A, PX/A, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, QA2
							QA2/A, QAB1, QAB3, QAB3/A, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2
							QAG2/A, QAQ4, QAQ4/A, QAR2, QAR2/A, QAW, QAW/A, QE/A, QH/A, QH26, QH26/A
							QHB5, QHE4, QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A
							QHZ, QHZ/A, QKE3, QKE3/A, QKE4, QL2, QME2, QME2/A, QMH, QMH/A, QSE, QSE/A
							QSE2, QSE8, QSE8/A, QX/A, QX26, QX26/A, QXB6, QXB6/A, QXE/A, QXE4, QXE4/A
							QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXQ4, QXQ4/A, QXU, QXU/A, RA2, RA2/A, RA3
							RH26, RH26/A, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX/A
							RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A, SE/A, SH/A, SHQ4, SHQ4/A, SMC4, SMC4/A
							SME1, SME1/A, SME6, SME6/A, SMX2, SWA4, SWC4, SWC4/A, SX/A, SX2, SXE/A, SXE4
							SXE4/A, SXE8, SXE8/A, SXQ4, SXQ4/A, SXU, SXU/A, VA2, VA2/A, VAG2, VAG2/A
							VAW1, VDE, VDE2, VDE2/A, VKB2, VKB2/A, VM2, VM2/A, VME2, VME2/A, VNT2
							VNT2/A, VW12, VW12/A, VW22, VWA2, VWA2/A, VWN2, VWN2/A, VX/A, VX26, VXE4
							VXE4/A, VXE6, VXE6/A, VXE8, VXX, VXP, VXP/A, VXQ4, VXQ4/A, VXQP, VXT1
							VXT1/A, VXU, VXU/A, VXU1, VXU1/A, WMA4, WMT8, WMT8/A, WXE8, WXE8/A
			2	-	-	1053527	HH, HX, LH, LHE, LX, LXZ, PX, QA, QAE, QE, QH, QHE, QX, QXE, RH, RHE, RX, SE, SH
			2	-	-	1274337	SHE, SHEZ, SX, SXE, VH, VX, VXE
			1	-	-	-----	SMD
			1	-	1	-----	HX, HX/A, HX26, HX26/A, HX8, HX8/A, LX, LX/A, LX16, LXE, LXE/A, LXE8, LXE8/A
15	17235-ZE2-820	NOSE, SILENCER.....					LXU, LXU/A, LXZ, PX, PX/A, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, QE, QE/A
							QKE3, QKE3/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QX, QX/A, QXB6, QXB6/A, QXE
							QXE/A, QXE8, QXE8/A, QXE9, QXQ4, QXQ4/A, QXU, QXU/A, RSC2, RSC2/A, RSS
							RSS/A, RX, RX/A, RXP, RXP/A, RXU, RXU/A, SE, SE/A, SMX2, SWA4, SX, SX/A, SX2
							SXE, SXE/A, SXE8, SXE8/A, SXU, SXU/A, VKB2, VKB2/A, VNT2, VNT2/A, VX, VX/A
							VX26, VXE, VXE6, VXE6/A, VXE8, VXX, VXP, VXP/A, VXQP, VXT1, VXT1/A, VXU
			1	-	-	-----	VXU/A, VXU1, VXU1/A
			-	(1)	-	-----	1340169 SWC4
							L1, L1/A, Q1, Q1/A, R1, R1/A, S1, S1/A, V1, W1, W1/A

2

AIR CLEANER(4)



Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	3121E1	PACKING, ELBOW	0.1
2	3121B8	ELEMENT, AIR CLEANER	0.1
3	3121C1	FILTER, OUTER	0.1
4	3121E0	PACKING, AIR CLEANER COVER ..	0.1
9	3121B4	ELBOW, AIR CLEANER	0.1
10	3121A6	CASE, PRE AIR CLEANER	0.1
11	3121A4	CAP, PRE AIR CLEANER	0.1
12	3121C8	GUIDE, PRE AIR CLEANER	0.1

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			GX270				
			(1)	(2)	(3)		
1	16271-ZE2-000	PACKING, ELBOW.....	1	-	-	-----	QHC, QSC, QSC9, QWA2, QWA4, QWH2, QXC, QXC4, QXC6, QXC9
	16271-ZE2-010		1	-	-	-----	QSC9/A, QWA4/A, QWH2/A, QXC4/A, QXC6/A, QXC9/A, QXK, VMA4, VME4
	16271-ZE2-000		-	(1)	-	-----	L1, Q1, Q2, R1, S1, V1, W1
	16271-ZE2-010		-	(1)	-	-----	L1/A, Q1/A, R1/A, S1/A, W1/A
2	17210-ZE3-010	ELEMENT, AIR CLEANER.....	1	-	-	-----	QHC, QSC, QSC9, QSC9/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QXC, QXC4, QXC4/A
			-	(1)	-		QXC6, QXC6/A, QXC9, QXC9/A, QXK, VMA4, VME4
3	17218-ZE3-000	FILTER, OUTER.....	1	-	-	-----	----- QHC, QSC, QSC9, QSC9/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QXC, QXC4, QXC4/A
			-	(1)	-		QXC6, QXC6/A, QXC9, QXC9/A, QXK, VMA4, VME4
4	17219-ZE3-840	PACKING, AIR CLEANER COVER...	1	-	-	-----	----- QHC, QSC, QSC9, QSC9/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QXC, QXC4, QXC4/A
			-	(1)	-		QXC6, QXC6/A, QXC9, QXC9/A, QXK, VMA4, VME4
5	17230-ZE3-841	COVER COMP., AIR CLEANER (CYCLONE)	1	-	-	-----	----- QHC, QSC, QSC9, QSC9/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QXC, QXC4, QXC4/A
			-	(1)	-		QXC6, QXC6/A, QXC9, QXC9/A, QXK, VMA4, VME4
6	17232-891-000	GROMMET, AIR CLEANER.....	1	-	-	-----	----- QHC, QSC, QSC9, QSC9/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QXC, QXC4, QXC4/A
			-	(1)	-		QXC6, QXC6/A, QXC9, QXC9/A, QXK, VMA4, VME4
7	17238-ZE2-310	COLLAR, AIR CLEANER.....	2	-	-	-----	----- QHC, QSC, QSC9, QSC9/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QXC, QXC4, QXC4/A
			-	(2)	-		QXC6, QXC6/A, QXC9, QXC9/A, QXK, VMA4, VME4
8	17239-ZE3-840	COLLAR B, AIR CLEANER.....	1	-	-	-----	----- QHC, QSC, QSC9, QSC9/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QXC, QXC4, QXC4/A
			-	(1)	-		QXC6, QXC6/A, QXC9, QXC9/A, QXK, VMA4, VME4


E-15-3

AIR CLEANER(4)

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
9	17410-ZE3-840	ELBOW COMP., AIR CLEANER.....	1	-	-	-----	QHC, QSC, QSC9, QSC9/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXK, VMA4, VME4
10	17470-ZE3-841	CASE COMP., PRE AIR CLEANER..	-	(1)	-	-----	QHC, QSC, QSC9, QWA2, QWA4, QWH2, QXC, QXC4, QXC6, QXC9
	17470-ZE3-842		1	-	-	-----	QSC9/A, QWA4/A, QWH2/A, QXC4/A, QXC6/A, QXC9/A, QXK, VMA4, VME4
	17470-ZE3-841		-	(1)	-	-----	L1, Q1, Q2, R1, S1, V1, W1
	17470-ZE3-842		-	(1)	-	-----	L1/A, Q1/A, R1/A, S1/A, W1/A
11	17475-ZE3-841	CAP, PRE AIR CLEANER.....	1	-	-	-----	QHC, QSC, QSC9, QSC9/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXK, VMA4, VME4
12	17476-ZE3-841	GUIDE, PRE AIR CLEANER.....	1	-	-	-----	QHC, QSC, QSC9, QSC9/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXK, VMA4, VME4
13	90142-MB0-000	SCREW, PAN, 5X16.5.....	5	-	-	-----	QHC, QSC, QSC9, QSC9/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXK, VMA4, VME4
14	90201-415-000	NUT, CAP, 6MM.....	2	-	-	-----	1053286 QXC
			2	-	-	-----	1053526 QHC
			-	(2)	-	-----	1053526 L1, Q1, Q2, R1, S1, V1, W1
15	90203-PB2-000	NUT, AIR CLEANER COVER (DACRO COATING)	1	-	-	-----	1034589 QXC
			1	-	-	-----	1094660 QHC
	90203-ZA0-800	NUT, WING, 6MM(BLACK).....	1	-	-	-----	1094660 QSC
			1	-	-	1034590	1094660 QXC
	90203-PB2-000	NUT, AIR CLEANER COVER (DACRO COATING)	-	(1)	-	-----	1034589 L1, Q1, R1, S1, V1, W1
	90203-ZA0-800	NUT, WING, 6MM(BLACK).....	-	(1)	-	-----	1094660 Q2
			-	(1)	-	1034590	1094660 L1, Q1, R1, S1, V1, W1
16	90325-044-000	NUT, TOOL BOX SETTING.....	2	-	-	-----	QSC9, QSC9/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXK, VMA4, VME4
			1	-	-	-----	1094660 QHC, QSC, QXC
			2	-	-	1094661	QHC, QSC, QXC
			-	(2)	-	-----	L1/A, Q1/A, R1/A, S1/A, W1/A
			-	(1)	-	-----	L1, Q1, Q2, R1, S1, V1, W1
			-	(2)	-	1094661	L1, Q1, Q2, R1, S1, V1, W1
17	90009-ZE2-003	BOLT-WASHER, 6X22.....	1	1	-	-----	L1, L1/A, Q1, Q1/A, QSC9, QSC9/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXK, R1, R1/A, S1, S1/A, VMA4, VME4, W1
	93404-06020-08	BOLT-WASHER, 6X20.....	1	1	-	-----	W1/A
	93494-06020-08		1	-	-	-----	Q2, QSC
			-	(1)	-	-----	QHC, QXC
			-	(1)	-	-----	V1
18	94050-06000	NUT, FLANGE, 6MM.....	2	-	-	-----	QSC, QSC9, QSC9/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXK, VMA4, VME4
			2	-	-	1053287	QXC
			2	-	-	1053527	QHC
			-	(2)	-	-----	L1/A, Q1/A, R1/A, S1/A, W1/A
			-	(2)	-	1053527	L1, Q1, Q2, R1, S1, V1, W1

E-15-4

AIR CLEANER(5)

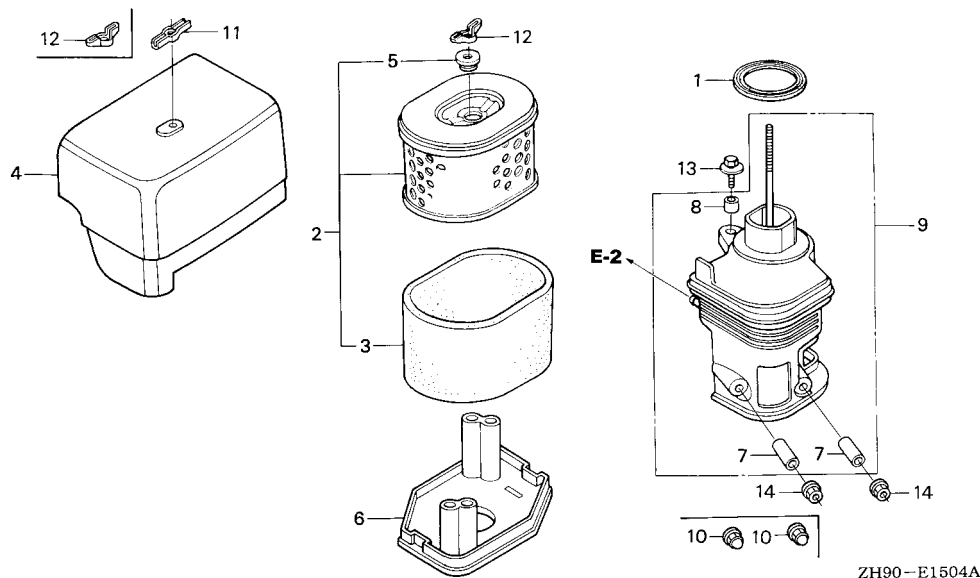

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
2	3121B8	ELEMENT, AIR CLEANER	0.1
3	3121C1	FILTER, OUTER	0.1
6	3121D6	NOSE, SILENCER	0.1
9	3121B4	ELBOW, AIR CLEANER	0.1


Ref. No.	Part No.	Description	Reqd. QTY	Serial No.	Parts catalogue code
			(1) (2) (3)		
1	16271-ZE2-000	PACKING, ELBOW	1 - -	-----	LTJ, QXB, QXB7, QXEB, SXB, SXB7, SXEB, VD16, VEB6, VN17, VNG1, VSD, VSD7, VWT4
	16271-ZE2-010		1 - -	-----	VXB, VXB2, VXB6, VXB7, VXE7, VXEB, VXG, VXTB
2	17210-ZE3-010	ELEMENT, AIR CLEANER	1 - -	-----	QXB/A, QXB7/A, SXB/A, SXB7/A, SXEB/A, VN17/A, VNG1/A, VSD/A, VSD7/A, VSH7
					VWT4/A, VXB/A, VXB7/A, VXE7/A, VXEB/A
3	17218-ZE3-000	FILTER, OUTER	1 - -	-----	LTJ, QXB, QXB/A, QXB7, QXB7/A, QXEB, SXB, SXB/A, SXB7, SXB7/A, SXEB, SXEB/A
					VD16, VEB6, VN17, VN17/A, VNG1, VNG1/A, VSD, VSD/A, VSD7, VSD7/A, VSH7, VWT4
					VWT4/A, VXB, VXB/A, VXB2, VXB6, VXB7, VXB7/A, VXE7, VXE7/A, VXEB, VXEB/A
					VXG, VXTB
4	17231-ZH9-N01	COVER, AIR CLEANER(100DB)	1 - -	-----	LTJ, QXB, QXB/A, QXB7, QXB7/A, QXEB, SXB, SXB/A, SXB7, SXB7/A, SXEB, SXEB/A
					VD16, VEB6, VN17, VN17/A, VNG1, VNG1/A, VSD, VSD/A, VSD7, VSD7/A, VSH7, VWT4
					VWT4/A, VXB, VXB/A, VXB2, VXB6, VXB7, VXB7/A, VXE7, VXE7/A, VXEB, VXEB/A
					VXG, VXTB
5	17232-891-000	GROMMET, AIR CLEANER	1 - -	-----	QXB, QXB/A, QXB7, QXB7/A, SXB, SXB/A, SXB7, SXB7/A, SXEB, SXEB/A, VN17
					VN17/A, VNG1, VNG1/A, VSD, VSD/A, VSD7, VSD7/A, VSH7, VWT4, VXB
					VXB/A, VXB7, VXB7/A, VXE7, VXE7/A, VXEB, VXEB/A
6	17235-ZH9-N00	NOSE, SILENCER	1 - -	-----	LTJ, QXB, QXB/A, QXB7, QXB7/A, QXEB, SXB, SXB/A, SXB7, SXB7/A, SXEB, SXEB/A
					VD16, VEB6, VN17, VN17/A, VNG1, VNG1/A, VSD, VSD/A, VSD7, VSD7/A, VSH7, VWT4
					VWT4/A, VXB, VXB/A, VXB2, VXB6, VXB7, VXB7/A, VXE7, VXE7/A, VXEB, VXEB/A
					VXG, VXTB
	17235-ZH9-N01		1 - -	2401096	LTJ, QXB, QXB7, QXEB, SXB, SXB7, SXEB, VD16, VEB6, VN17, VNG1, VSD, VSD7, VWT4
					VXB, VXB2, VXB6, VXB7, VXE7, VXEB, VXG, VXTB
					QXB/A, QXB7/A, SXB/A, SXB7/A, SXEB/A, VN17/A, VNG1/A, VSD/A, VSD7/A, VSH7
					VWT4/A, VXB/A, VXB7/A, VXE7/A, VXEB/A
				2401097	QXB/A, QXB7/A, SXB/A, SXB7/A, SXEB/A, VN17/A, VNG1/A, VSD/A, VSD7/A, VSH7
					VWT4/A, VXB/A, VXB7/A, VXE7/A, VXEB/A

AIR CLEANER(5)

2

E-15-5

AIR CLEANER(6)

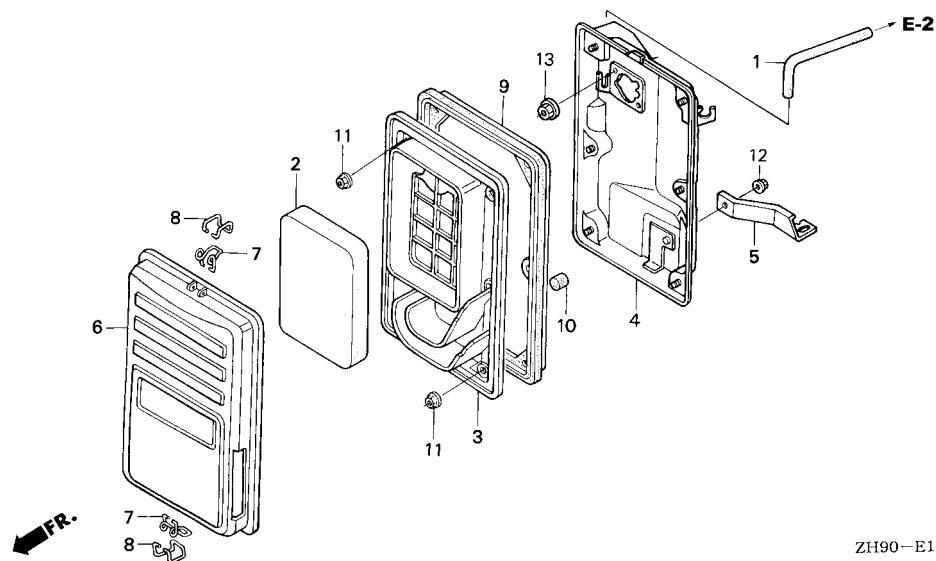


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	1111K5	TUBE, BREATHER	0.2
2	3121B8	ELEMENT, AIR CLEANER	0.1
3	3121F0	SEPARATOR, AIR CLEANER	0.1
4	3121A5	CASE, AIR CLEANER	0.2
9	3121E8	SEAL, AIR CLEANER CASE	0.1

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
1	15721-ZB4-000	TUBE, BREATHER	1	-	-	-----	ES3, ES3/A, ES4, VKE4, VKK, VKX4, VMS2, VMT, VMT/A, VMX2, VPE4, VPE4/A, VPE5 VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4 VS5, VSD3, VSD3/A
2	17211-899-000	ELEMENT, AIR CLEANER	1	-	-	-----	ES3, ES3/A, ES4, VKE4, VKK, VKX4, VMS2, VMT, VMT/A, VMX2, VPE4, VPE4/A, VPE5 VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4 VS5, VSD3, VSD3/A
3	17212-ZB4-003	SEPARATOR, AIR CLEANER	1	-	-	-----	ES3, ES3/A, ES4, VKE4, VKK, VKX4, VMS2, VMT, VMT/A, VMX2, VPE4, VPE4/A, VPE5 VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4 VS5, VSD3, VSD3/A
4	17220-ZB4-003	CASE COMP., AIR CLEANER	1	-	-	-----	ES3, ES3/A, ES4, VKE4, VKK, VKX4, VMS2, VMT, VMT/A, VMX2, VPE4, VPE4/A, VPE5 VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4 VS5, VSD3, VSD3/A
5	17222-ZB4-000	STAY, AIR CLEANER	1	-	-	-----	ES3, ES3/A, ES4, VKE4, VKK, VKX4, VMS2, VMT, VMT/A, VMX2, VPE4, VPE4/A, VPE5 VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4 VS5, VSD3, VSD3/A
6	17231-899-000	COVER COMP., AIR CLEANER	1	-	-	-----	ES3, ES3/A, ES4, VKE4, VKK, VKX4, VMS2, VMT, VMT/A, VMX2, VPE4, VPE4/A, VPE5 VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4 VS5, VSD3, VSD3/A
7	17235-899-000	CLIP A, AIR CLEANER WIRE	2	-	-	-----	ES3, ES3/A, ES4, VKE4, VKK, VKX4, VMS2, VMT, VMT/A, VMX2, VPE4, VPE4/A, VPE5 VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4 VS5, VSD3, VSD3/A
8	17236-899-000	CLIP B, AIR CLEANER WIRE	2	-	-	-----	ES3, ES3/A, ES4, VKE4, VKK, VKX4, VMS2, VMT, VMT/A, VMX2, VPE4, VPE4/A, VPE5 VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4 VS5, VSD3, VSD3/A
9	17252-899-000	SEAL, AIR CLEANER	1	-	-	-----	ES3, ES3/A, ES4, VKE4, VKK, VKX4, VMS2, VMT, VMT/A, VMX2, VPE4, VPE4/A, VPE5 VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4 VS5, VSD3, VSD3/A

E-15-5

AIR CLEANER(6)

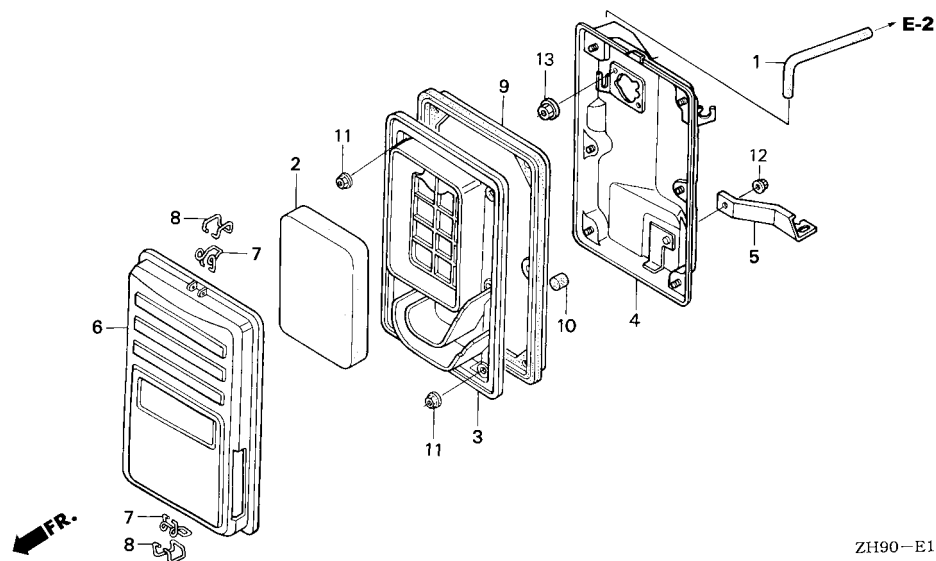


2

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
10	17367-413-690	FILTER, DRAIN TUBE.....	1	-	-	-----	ES3, ES3/A, ES4, VKE4, VKK, VKX4, VMS2, VMT, VMT/A, VMX2, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4, VS5, VSD3, VSD3/A
11	94050-05000	NUT, FLANGE, 5MM.....	6	-	-	-----	ES3, ES3/A, ES4, VKE4, VKK, VKX4, VMS2, VMT, VMT/A, VMX2, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4, VS5, VSD3, VSD3/A
12	94050-06080	NUT, FLANGE, 6MM.....	1	-	-	-----	ES3, ES3/A, VKE4, VKK, VKX4, VMS2, VMT, VMT/A, VMX2, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4, VSD3, VSD3/A
13	94050-06000	NUT, FLANGE, 6MM.....	2	-	-	-----	ES3, ES3/A, ES4, VKE4, VKK, VKX4, VMS2, VMT, VMT/A, VMX2, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4, VS5, VSD3, VSD3/A

E-15-6

AIR CLEANER(7)

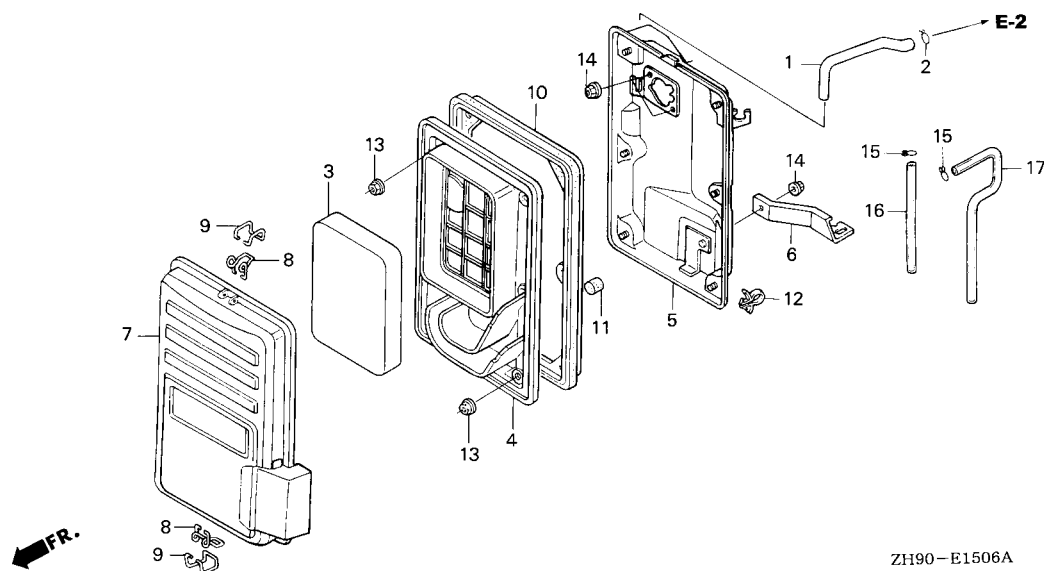


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	3121N4	TUBE, AIR CLEANER BREATHER ...	0.2
3	3121B8	ELEMENT, AIR CLEANER	0.1
4	3121F0	SEPARATOR, AIR CLEANER	0.1
5	3121A5	CASE, AIR CLEANER	0.2
10	3121E8	SEAL, AIR CLEANER CASE	0.1

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
1	15721-ZB7-000	TUBE, BREATHER	1	-	-	ESS,ESS/A	
2	15772-292-010	CLIP, BREATHER TUBE	1	-	-	ESS,ESS/A	
3	17211-899-000	ELEMENT, AIR CLEANER	1	-	-	ESS,ESS/A	
4	17212-ZB4-003	SEPARATOR, AIR CLEANER	1	-	-	ESS,ESS/A	
5	17220-ZB7-000	CASE COMP., AIR CLEANER	1	-	-	ESS,ESS/A	
6	17222-ZB7-000	STAY, AIR CLEANER	1	-	-	ESS,ESS/A	
7	17231-ZB7-000	COVER COMP., AIR CLEANER	1	-	-	ESS,ESS/A	
8	17235-899-000	CLIP A, AIR CLEANER WIRE	2	-	-	ESS,ESS/A	
9	17236-899-000	CLIP B, AIR CLEANER WIRE	2	-	-	ESS,ESS/A	
10	17252-899-000	SEAL, AIR CLEANER	1	-	-	ESS,ESS/A	
11	17367-413-690	FILTER, DRAIN TUBE	1	-	-	ESS,ESS/A	
12	90624-SB0-003	CLIP, WIRE HARNESS	1	-	-	ESS,ESS/A	
13	94050-05000	NUT, FLANGE, 5MM	6	-	-	ESS,ESS/A	
14	94050-06000	NUT, FLANGE, 6MM	3	-	-	ESS,ESS/A	
15	95002-45000	CLIP, TUBE(C8)	2	-	-	ESS,ESS/A	
16	95003-09023-31	TUBE, VINYL, 4.5X8X230 (95003-09001-60M)	1	-	-	ESS,ESS/A	
17	95003-09038-31	TUBE, VINYL, 4.5X8X380 (95003-09001-60M)	1	-	-	ESS,ESS/A	

E-16

MUFFLER(1)

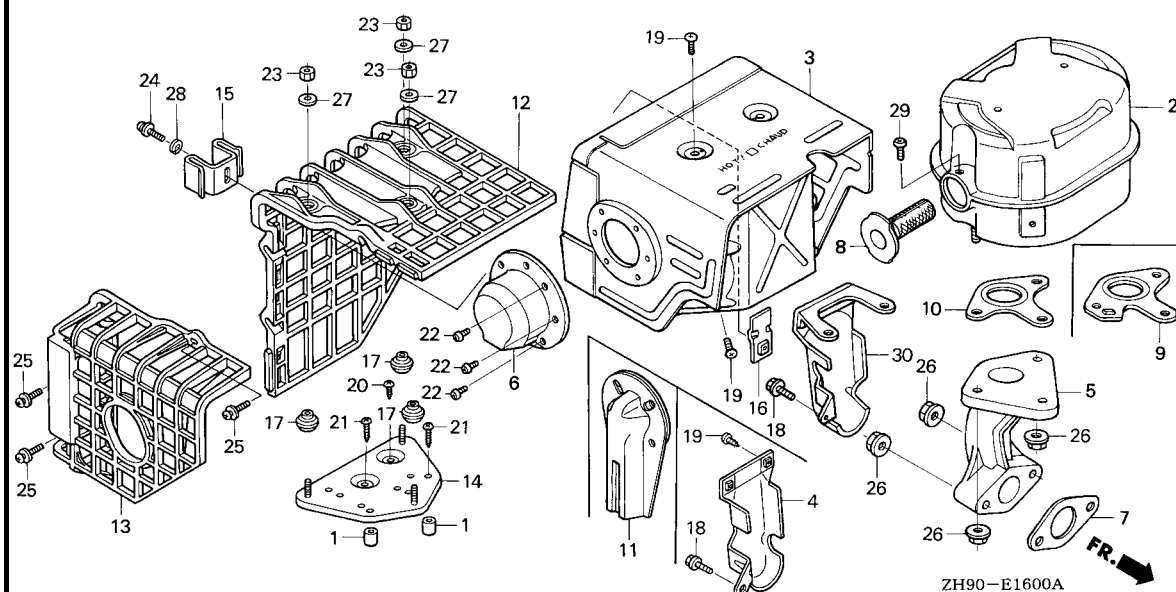


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
2	3131C5	MUFFLER, EXHAUST	0.2
3	3131D6	PROTECTOR, EXHAUST MUFFLER ...	0.2
5	3131C9	PIPE, EXHAUST	0.2
7	3131B5	GASKET, EXHAUST PIPE	0.2
8	3131A1	ARRESTER, SPARK	0.2
		.INCLUDES: Spark arrester check (9)	
10	3131B4	GASKET, EXHAUST MUFFLER	0.2
12	3131A7	COVER, EXHAUST MUFFLER	0.1
13	3131K6	COVER, EXHAUST MUFFLER :RIGHT	0.1
14	3131A2	BASE, EXHAUST MUFFLER COVER ..	0.2

Ref. No.	Part No.	Description	Reqd. QTY	Serial No.	Parts catalogue code
			(1) (2) (3)		
1	17233-896-701	COLLAR, AIR CLEANER CASE.....	(2) - -	-----	LHQ4, QAA4, QAA4/A, QHE4, QHE4/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, RHE4, RHE4/A, RHQ4, RHQ4/A, SHQ4, SHQ4/A, SKE1, SWC4, SWC4/A, VMA4, VME4, WMA4
2	18310-ZE2-W00	MUFFLER COMP.	1 - 1	-----	HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, HH, LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LT, LT/A, LW, LW/A, LWD, PA, PA2, PA2/A, PAE2, PAE2/A, QA, QA2, QA2/A, QAB1, QAB3, QAB3/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAA, QAA4, QAA4/A, QAR2, QAR2/A, QD, QD/A, QH, QH/A, QH26, QH26/A, QHB5, QHC, QHE, QHE4, QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A, QL2, QMH, QMH/A, QP, QP/A, QT, QT/A, QX26, QX26/A, RA, RA2, RA2/A, RA3, RD, RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSS, RSS/A, SD, SD/A, SH, SH/A, SHE, SHEZ, SHQ4, SHQ4/A, SJ, SJ/A, SJG, SJG/A, SK, SKE1, SMD, SMX2, SN, SN/A, SW, SWC4, SWC4/A, SWE, VA, VA2, VA2/A, VAG2, VAG2/A, VAW, VAW1, VDE, VDE2, VDE2/A, VH, VM2, VM2/A, VMA4, VME2, VME2/A, VME4, VW12, VW12/A, VW22, VWA, VWA2, VWA2/A, VWN2, VWN2/A, WMA4, WMT8, WMT8/A, WXE8, WXE8/A
3	18320-ZE2-W01	PROTECTOR COMP., MUFFLER(STD.)	1 (1) - 1	-----	HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, HH, LH, LHB1, LHB3, LHE, LHQ4, LJ, LJC, LJC/A, LJG, LSS, LT, LT/A, LW, LWD, PA, PA2, PA2/A, PAE2, PAE2/A, QA, QA2, QA2/A, QAB1, QAB3, QAB3/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAA, QAA4, QAA4/A, QAR2, QAR2/A, QD, QH, QH/A, QH26, QH26/A, QHC, QHE, QHE4, QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A, QL2, QMH, QMH/A, QP, QP/A, QT, QT/A, QX26, QX26/A, RA, RA2, RA2/A, RD, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSS, SD, SH, SHE, SHEZ, SHQ4, SHQ4/A, SJ, SJG, SK, SKE1, SMD, SMX2, SN, SN/A, SW, SWC4, SWC4/A, SWE, VA, VA2, VA2/A, VAG2, VAG2/A, VAW, VAW1, VDE, VDE2, VDE2/A, VH, VM2, VM2/A, VMA4, VME2, VME2/A, VME4, VW12, VW12/A, VW22, VWA, VWA2, VWA2/A, VWN2, VWN2/A, WMA4, WMT8, WMT8/A, WXE8, WXE8/A
			1 - -	2484724	LH/A, LHB5, LHE/A, LJ/A, LJG/A, LW/A, QD/A, QHB5, QHP1/A, RA3, RD/A, RSS/A, SD/A, SH/A, SJ/A, SJG/A

E-16

MUFFLER(1)

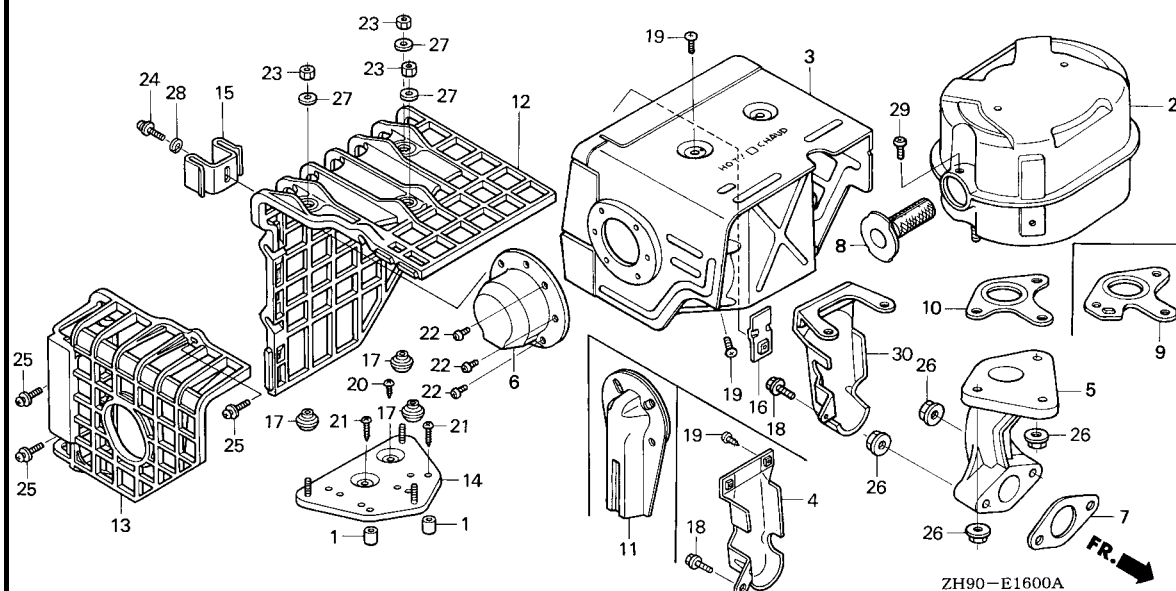

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
(3)	18320-ZE2-W02	PROTECTOR COMP., MUFFLER(STD.)	1	-	-	2484725	LH/A, LHB5, LHE/A, LJ/A, LJG/A, LW/A, QD/A, QHB5, QHP1/A, RA3, RD/A, RSS/A SD/A, SH/A, SJ/A, SJG/A L1, Q1, Q2, R1, S1, V1, W1, W1/A
	18320-ZE2-W01		-	(1)	-	2484724	L1/A, Q1/A, R1/A, S1/A
	18320-ZE2-W02		-	(1)	-	2484725	L1/A, Q1/A, R1/A, S1/A
4	18323-ZE2-W00	PROTECTOR, EX. PIPE.....	1	-	1	1283257	HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, LJ, LJ/A LJC, LJC/A, LJG, LJG/A, LSS, LT, LT/A, PA, PA2, PA2/A, PAE2, PAE2/A, QA, QA2 QA2/A, QAB1, QAB3, QAB3/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2 QAG2/A, QAQ, QAQ4, QAQ4/A, QAR2, QAR2/A, QL2, QX26, QX26/A, RA, RA2, RA2/A RA3, SJ, SJ/A, SJG, SJG/A, SK, SMX2, VA, VA2, VA2/A, VAG2, VAG2/A, VAW, VAW1 VDE, VDE2, VDE2/A, VM2, VM2/A, VMA4, VME2, VME2/A, VME4, VW12, VW12/A, VW22 VWA, VWA2, VWA2/A, VWN2, VWN2/A
			1	-	-	1283257	SWC4
5	18330-ZE2-W00	PIPE, EX.	1	-	1	1283257	HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, HH, LH, LH/A LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LT LT/A, LW, LW/A, LWD, PA, PA2, PA2/A, PAE2, PAE2/A, QA, QA2, QA2/A, QAB1, QAB3 QAB3/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAQ, QAQ4 QAQ4/A, QAR2, QAR2/A, QD, QD/A, QH, QH/A, QH26, QH26/A, QHB5, QHC, QHE, QHE4 QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A QL2, QMH, QMH/A, QP, QP/A, QT, QT/A, QX26, QX26/A, RA, RA2, RA2/A, RA3, RD RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSS, RSS/A, SD, SD/A SH, SH/A, SHE, SHEZ, SHQ4, SHQ4/A, SJ, SJ/A, SJG, SJG/A, SK, SKE1, SMD, SMX2 SN, SN/A, SW, SWE, VA, VA2, VA2/A, VAG2, VAG2/A, VAW, VAW1, VDE, VDE2, VDE2/A VH, VM2, VM2/A, VMA4, VME2, VME2/A, VME4, VW12, VW12/A, VW22, VWA, VWA2 VWA2/A, VWN2, VWN2/A, WMA4, WMT8, WMT8/A, WXE8, WXE8/A
	18330-ZH9-N00		1	-	-	1283257	SWC4/A
	18330-ZE2-W00		1	-	-	1283257	SWC4
	18330-ZH9-N00		1	-	-	1283258	SWC4


E-16

MUFFLER(1)

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
(5)	18330-ZE2-W00	PIPE, EX.	-	(1)	-		
6	18331-ZE2-810	CAP, MUFFLER	1	-	1	-----	HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, LSS, LT LT/A, LW, LW/A, PA, PA2, PA2/A, PAE2, PAE2/A, QA, QA2, QA2/A, QAB1, QAB3 QAB3/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAQ, QAQ4, QAQ4/A, QAR2 QAR2/A, QL2, QMH, QMH/A, QP, QP/A, QT, QT/A, QX26, QX26/A, RA, RA2, RA2/A, RA3 RSS, RSS/A, SMD, SW, SWE, VA, VA2, VA2/A, VAG2, VAG2/A, VAW, VDE, VDE2, VDE2/A VMA4, VME4, VW22, VWA, VWA2, VWA2/A, VWN2, VWN2/A
7	18333-ZE3-800	GASKET, EX. PIPE	-	(1)	-	-----	HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, HH, LH, LH/A LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LT LT/A, LW, LW/A, LWD, PA, PA2, PA2/A, PAE2, PAE2/A, QA, QA2, QA2/A, QAB1, QAB3 QAB3/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAQ, QAQ4 QAQ4/A, QAR2, QAR2/A, QD, QD/A, QH, QH/A, QH26, QH26/A, QHB5, QHC, QHE, QHE4 QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A QL2, QMH, QMH/A, QP, QP/A, QT, QT/A, QX26, QX26/A, RA, RA2, RA2/A, RA3, RD RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, SD, SD/A, SH, SH/A SHE, SHEZ, SHQ4, SHQ4/A, SJ, SJ/A, SJG, SJG/A, SK, SMD, SMX2, SN, SN/A, SW, SWE VA, VA2, VA2/A, VAG2, VAW, VAW1, VDE, VDE2, VDE2/A, VH, VM2, VM2/A, VMA4, VME2 VME2/A, VME4, VMS2, VMX2, VW12, VW12/A, VW22, VWA, VWA2, VWA2/A, VWN2 VWN2/A, WMA4, WMT8, WMT8/A, WXE8, WXE8/A
	18333-ZF6-W01		1	-	-	-----	RSS, RSS/A, SWC4/A
	18333-ZK6-Y00		1	-	-	-----	SKE1
			1	-	-	1457779	SWC4
	18333-ZF6-W01		1	-	-	1457780	SWC4
	18333-ZE3-800		-	(1)	-		
8	18355-ZE2-010	ARRESTER, SPARK	(1)	(1)	(1)	-----	HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, L1, L1/A, PA PA2, PA2/A, Q1, Q1/A, Q2, R1, R1/A, RA, RA2, RA2/A, RA3, S1, S1/A, V1, W1, W1/A QA, QA2, QA2/A, QAB1, QAB3, QAB3/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG QAG/A, QAQ, QAQ4, QAQ4/A, QAR2, QAR2/A, QL2, QX26, QX26/A, RSS, RSS/A, SMX2 SWC4/A, VA, VA2, VA2/A, VAG2, VAG2/A, VAW, VAW1, VDE, VDE2, VDE2/A, VM2 VM2/A, VMA4, VME2, VME2/A, VME4, VW12, VW12/A, VW22, VWA, VWA2, VWA2/A, VWN2 VWN2/A
			1	-	-	1340170	SWC4
9	18381-ZE2-W10	GASKET, MUFFLER (ARRESTER) (NIPPON LEAKLESS)	(1)	(1)	(1)	-----	HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, L1, L1/A, PA PA2, PA2/A, Q1, Q1/A, Q2, R1, R1/A, RA, RA2, RA2/A, RA3, S1, S1/A, V1, W1, W1/A QA, QA2, QA2/A, QAB1, QAB3, QAB3/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG QAG/A, QAQ, QAQ4, QAQ4/A, QAR2, QAR2/A, QL2, QX26, QX26/A, RSS, SMX2, SWC4/A VA, VA2, VA2/A, VAG2, VAG2/A, VAW, VAW1, VDE, VDE2, VDE2/A, VM2, VM2/A, VMA4 VME2, VME2/A, VME4, VW12, VW12/A, VW22, VWA, VWA2, VWA2/A, VWN2, VWN2/A
	18381-Z8S-801	GASKET, MUFFLER (ARRESTER) (THAI LEAKLESS)	1	-	-	-----	RSS/A
	18381-ZE2-W10	GASKET, MUFFLER (ARRESTER) (NIPPON LEAKLESS)	1	-	-	1340170	SWC4
	18381-Z8S-801	GASKET, MUFFLER (ARRESTER) (THAI LEAKLESS)	-	(1)	-	-----	L1/A, Q1/A, R1/A, S1/A
10	18381-ZE2-800	GASKET, MUFFLER (NIPPON LEAKLESS)	1	-	1	-----	HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, HH, LH, LH/A LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LJC, LJC/A, LSS, LT, LT/A, LWD, PA, PA2 PA2/A, PAE2, PAE2/A, QAG2, QAG2/A, QD, QD/A, QH, QH/A, QH26, QH26/A, QHB5 QHC, QHE, QHE4, QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A QHZ, QHZ/A, QMH, QMH/A, QP, QP/A, QT, QT/A, RA, RA2, RA2/A, RA3, RH, RH26 RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, SD, SD/A, SH, SH/A, SHE, SHEZ, SHQ4 SHQ4/A, SK, SKE1, SMD, SN, SN/A, SW, SWE, VH, WMA4, WMT8, WMT8/A, WXE8, WXE8/A LJ, LJ/A, LJG, LJG/A, LW, LW/A, RD, RD/A, SJ, SJ/A, SJG, SJG/A
	18381-ZE2-801		1	-	-	-----	SWC4
	18381-ZE2-800		1	-	-	1340169	SWC4
	18381-ZE2-801		-	(1)	-	-----	L1, L1/A, R1, R1/A, S1, S1/A

E-16

MUFFLER(1)

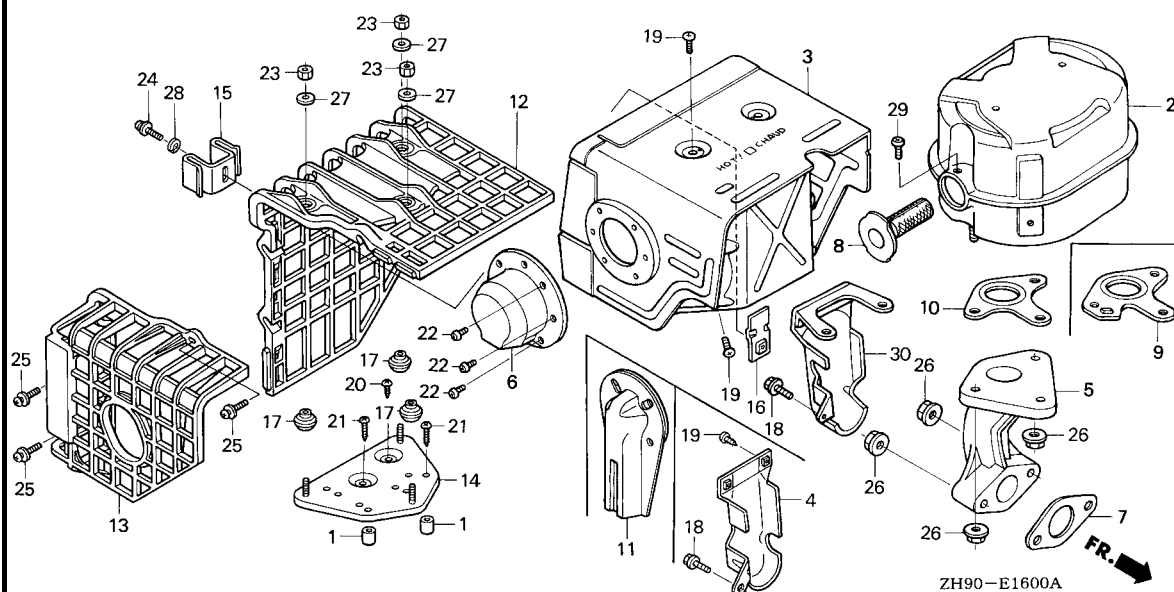

Ref. No.	Part No.	Description	Reqd. QTY (1) (2) (3)	Serial No.	Parts catalogue code
10)	18381-ZE2-800	GASKET, MUFFLER (NIPPON LEAKLESS)	(1)	-	Q1, Q1/A, Q2, V1, W1, W1/A
11	18430-ZK9-W50	DEFLECTOR COMP., MUFFLER.....	(1)	-	QAQ4, QAQ4/A
12	18433-ZK9-W40	COVER COMP., MUFFLER.....	(1)	-	LHQ4, QAQ4, QAQ4/A, QHE4, QHE4/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, RHE4, RHE4/A, RHQ4, RHQ4/A, SHQ4, SHQ4/A, WMA4
	18433-ZF6-W40		(1)	-	VMA4, VME4
13	18434-ZK9-W40	COVER COMP., RR. MUFFLER.....	(1)	-	LHQ4, QAQ4, QAQ4/A, QHE4, QHE4/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, RHE4, RHE4/A, RHQ4, RHQ4/A, SHQ4, SHQ4/A, WMA4
	18434-ZF6-W40		(1)	-	VMA4, VME4
14	18436-ZH8-W40	BASE COMP., MUFFLER COVER....	(1)	-	LHQ4, QAQ4, QAQ4/A, QHE4, QHE4/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, RHE4, RHE4/A, RHQ4, RHQ4/A, SHQ4, SHQ4/A, SKE1, SWC4, SWC4/A, VMA4, VME4, WMA4
15	18437-ZF6-W40	STAY, MUFFLER COVER.....	(1)	-	LHQ4, QAQ4, QAQ4/A, QHE4, QHE4/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, RHE4, RHE4/A, RHQ4, RHQ4/A, SHQ4, SHQ4/A, SKE1, SWC4, SWC4/A, VMA4, VME4, WMA4
16	18438-ZF6-W40	PLATE, SET.....	(1)	-	LHQ4, QAQ4, QAQ4/A, QHE4, QHE4/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, RHE4, RHE4/A, RHQ4, RHQ4/A, SHQ4, SHQ4/A, SKE1, SWC4, SWC4/A, VMA4, VME4, WMA4
17	18466-ZH8-W40	SPACER, MUFFLER COVER.....	(3)	-	LHQ4, QAQ4, QAQ4/A, QHE4, QHE4/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, RHE4, RHE4/A, RHQ4, RHQ4/A, SHQ4, SHQ4/A, SKE1, SWC4, SWC4/A, VMA4, VME4, WMA4


E-16

MUFFLER(1)

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
18	90013-883-000	BOLT, FLANGE, 6X12(CT200).....	1	-	1	-----	HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LT, LT/A, PA, PA2, PA2/A, PAE2, PAE2/A, QA, QA2, QA2/A, QAB1, QAB3, QAB3/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAQ, QAQ4, QAQ4/A, QAR2, QAR2/A, QL2, QX26, QX26/A, RA, RA2, RA2/A, RA3, SJ, SJ/A, SJG, SJG/A, SK, SMX2, SWC4, SWC4/A, VA, VA2, VA2/A, VAG2, VAG2/A, VAW, VAW1, VDE, VDE2, VDE2/A, VM2, VM2/A, VMA4, VME2, VME2/A, VME4, VW12, VW12/A, VW22, VWA, VWA2, VWA2/A, VWN2, VWN2/A
19	90050-ZE1-000	SCREW, TAPPING, 5X8.....	-	(1)	-	-----	HA, HA2, HA2/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, PA, PA2, PA2/A, PAE2, PAE2/A, QA, QA2, QA2/A, QAE, QAE2, QAE2/A, QAG, QAG/A, QAG2, QAG2/A, QAQ, QAR2, QAR2/A, QL2, RA, RA2, RA2/A, RA3, SJ, SJ/A, SJG, SJG/A, SK, SMX2, VA, VA2, VA2/A, VAW, VAW1, VDE, VDE2, VDE2/A, VM2, VM2/A, VMA4, VME2, VME2/A, VME4, VW12, VW12/A, VW22, VWA, VWA2, VWA2/A, VWN2, VWN2/A
			4	-	-	-----	HH, LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LT, LT/A, LW, LW/A, LWD, QD, QD/A, QH, QH/A, QH26, QH26/A, QHB5, QHC, QHE, QHE4, QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A, QMH, QMH/A, QP, QP/A, QT, QT/A, RD, RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSS, RSS/A, SD, SD/A, SH, SH/A, SHE, SHEZ, SHQ4, SHQ4/A, SKE1, SMD, SN, SN/A, SW, SWE, VH, WMA4, WMT8, WMT8/A, WXE8, WXE8/A
			7	-	-	-----	QAB1, QAB3, QAB3/A, QAE6, QAE6/A, QX26, QX26/A
			5	-	-	-----	QAQ4, QAQ4/A, SWC4/A
			6	-	-	-----	1283257 SWC4
			4	-	-	-----	1283258 1340169 SWC4
			5	-	-	-----	1340170 SWC4
			-	(6)	-	-----	L1, L1/A, Q1, Q1/A, R1, R1/A, S1, S1/A, V1, W1, W1/A
			-	(7)	-	-----	Q2
			-	-	6	-----	HAP, HAP/A
20	90050-ZE1-000	SCREW, TAPPING, 5X8.....	(1)	-	-	-----	LHQ4, QAQ4, QAQ4/A, QHE4, QHE4/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, RHE4, RHE4/A, RHQ4, RHQ4/A, SHQ4, SHQ4/A, SKE1, SWC4, SWC4/A, VMA4, VME4, WMA4
21	90050-ZH8-W40	SCREW, TAPPING, 5X25.....	(2)	-	-	-----	LHQ4, QAQ4, QAQ4/A, QHE4, QHE4/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, RHE4, RHE4/A, RHQ4, RHQ4/A, SHQ4, SHQ4/A, SKE1, SWC4, SWC4/A, VMA4, VME4, WMA4
22	90055-ZE1-000	SCREW, TAPPING, 4X6.....	3	-	3	-----	HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, LSS, LT, LT/A, LW, LW/A, PA, PA2, PA2/A, PAE2, PAE2/A, QA, QA2, QA2/A, QAB1, QAB3, QAB3/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAQ, QAQ4, QAQ4/A, QAR2, QAR2/A, QL2, QMH, QMH/A, QP, QP/A, QT, QT/A, QX26, QX26/A, RA, RA2, RA2/A, RA3, RSS, RSS/A, SMD, SW, SWE, VA, VA2, VA2/A, VAG2, VAG2/A, VAW, VDE, VDE2, VDE2/A, VMA4, VME4, VW22, VWA, VWA2, VWA2/A, VWN2, VWN2/A
23	90302-KF9-900	NUT, HEX., 5MM.....	-	(3)	-	-----	LHQ4, QAQ4, QAQ4/A, QHE4, QHE4/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, RHE4, RHE4/A, RHQ4, RHQ4/A, SHQ4, SHQ4/A, SKE1, SWC4, SWC4/A, VMA4, VME4, WMA4
24	93891-05012-00	SCREW-WASHER, 5X12.....	(1)	-	-	-----	LHQ4, QAQ4, QAQ4/A, QHE4, QHE4/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, RHE4, RHE4/A, RHQ4, RHQ4/A, SHQ4, SHQ4/A, SKE1, SWC4, SWC4/A, VMA4, VME4, WMA4
25	93891-06020-07	SCREW-WASHER, 6X20.....	(3)	-	-	-----	LHQ4, QAQ4, QAQ4/A, QHE4, QHE4/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, RHE4, RHE4/A, RHQ4, RHQ4/A, SHQ4, SHQ4/A, VMA4, VME4, WMA4

E-16

MUFFLER(1)

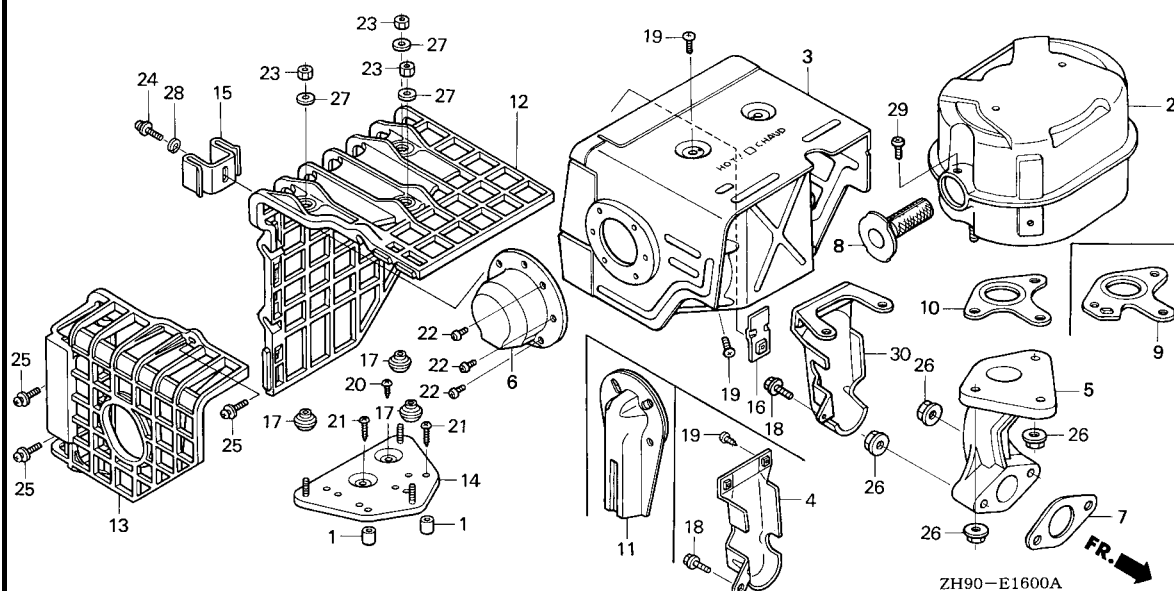


ZH90-E1600A

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code		
			(1)	GX270 (2)	(3)				
26	94050-08000	NUT, FLANGE, 8MM.....	5	-	-	HA, HA2, HA2/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, HH, LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LT, LT/A, LW, LW/A, LWD, PA, PA2, PA2/A, PAE2, PAE2/A, QA, QA2, QA2/A, QAB1, QAB3, QAB3/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAQ, QAQ4, QAQ4/A, QAR2, QAR2/A, QD, QD/A, QH, QH/A, QH26, QH26/A, QHB5, QHC, QHE, QHE4, QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A, QL2, QMH, QMH/A, QP, QP/A, QT, QT/A, QX26, QX26/A, RA, RA2, RA2/A, RA3, RD, RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSS, RSS/A, SD, SD/A, SH, SH/A, SHE, SHEZ, SHQ4, SHQ4/A, SJ, SJ/A, SJG, SJG/A, SK, SKE1, SMD, SMX2, SN, SN/A, SW, SWE, VA, VA2, VA2/A, VAG2, VAG2/A, VAW, VAW1, VDE, VDE2, VDE2/A, VH, VM2, VM2/A, VMA4, VME2, VME2/A, VME4, VW12, VW12/A, VW22, VWA, VWA2, VWA2/A, VWN2, VWN2/A, WMA4, WMT8, WMT8/A, WXE8, WXE8/A			
			3	-	-	SWC4/A			
			2	-	-	VMS2, VMX2			
			5	-	-	1283257 SWC4			
			3	-	-	1283258 SWC4			
			-	(5)	-	L1, L1/A, Q1, Q1/A, R1, R1/A, S1, S1/A, V1, W1, W1/A			
			-	(3)	-	Q2			
			-	-	5	HAP, HAP/A			
27	94103-05700	WASHER, PLAIN, 5MM.....	(3)	-	-	LHQ4, QAQ4, QAQ4/A, QHE4, QHE4/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, RHE4, RHE4/A, RHQ4, RHQ4/A, SHQ4, SHQ4/A, SKE1, SWC4, SWC4/A, VMA4, VME4, WMA4			
28	94111-05000	WASHER, SPRING, 5MM.....	(1)	-	-	LHQ4, QAQ4, QAQ4/A, QHE4, QHE4/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, RHE4, RHE4/A, RHQ4, RHQ4/A, SHQ4, SHQ4/A, SKE1, SWC4, SWC4/A, VMA4, VME4, WMA4			
29	90055-ZE1-000	SCREW, TAPPING, 4X6.....	(1)	(1)	(1)	HA2/A, HAP, HAP/A, HEA2, HEA2/A, HEA8, HEA8/A, L1, L1/A, PA2/A, Q1, Q1/A, Q2, QAB3/A, QAE2/A, QAE6/A, QAQ4/A, QAR2/A, QX26/A, R1, R1/A, RA2/A, RA3, RSS/A, V1, VA2/A, VWA2/A, VWN2/A, W1, W1/A			
	90050-ZE1-000	SCREW, TAPPING, 5X8.....	(1)	-	-	HA, HEA, PA, RA			

E-16

MUFFLER(1)

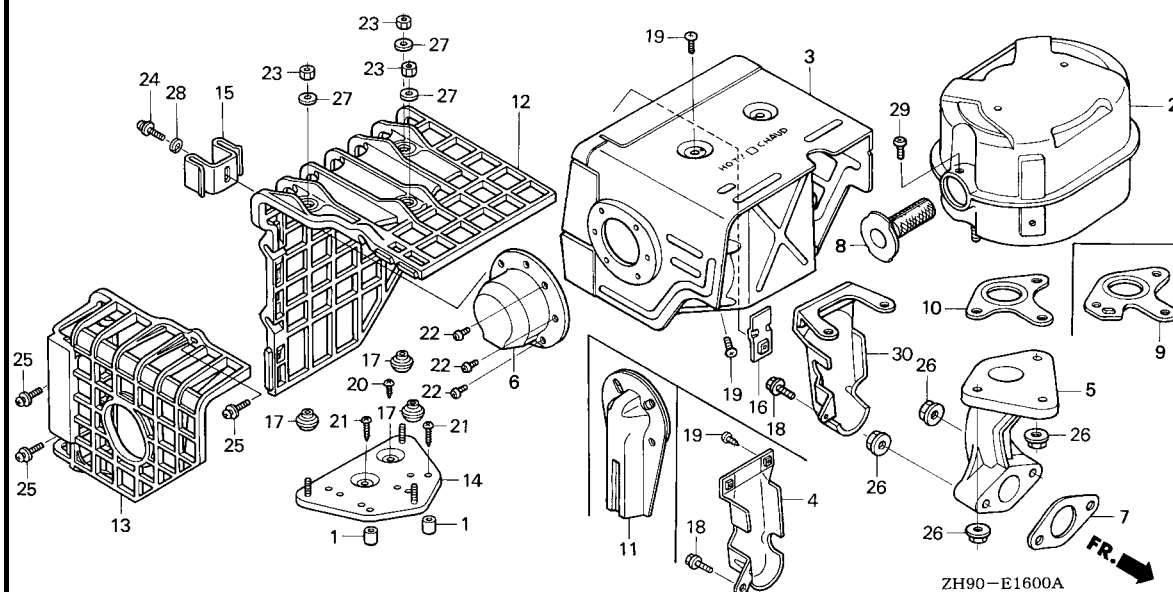


Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
29)	90055-ZE1-000	SCREW, TAPPING, 4X6.....	1	-	-	-----	HA2, HAQ, PA2, QA, QA2, QAB1, QAB3, QAE, QAE2, QAE6, QAQ, QAQ4, QAR2, QX26, RA2
	90050-ZE1-000	SCREW, TAPPING, 5X8.....	1	-	-	-----	RSS, SWC4/A, VA2, VW12, VW12/A, VW22, VWA2, VWN2
	90055-ZE1-000	SCREW, TAPPING, 4X6.....	1	-	-	1340170	QA, QA2/A, QAE, QAG, QAG/A, QL2, SMX2, VA, VAG2, VAG2/A, VAW, VAW1, VDE, VDE2
30	18323-ZE2-W60	PROTECTOR, EX. PIPE(100DB)...	1	-	-	-----	VDE2/A, VM2, VM2/A, VMA4, VME2, VME2/A, VME4, VWA
			1	-	-	1283258	SWC4
							SWC4/A

2

E-16-1

MUFFLER(2)

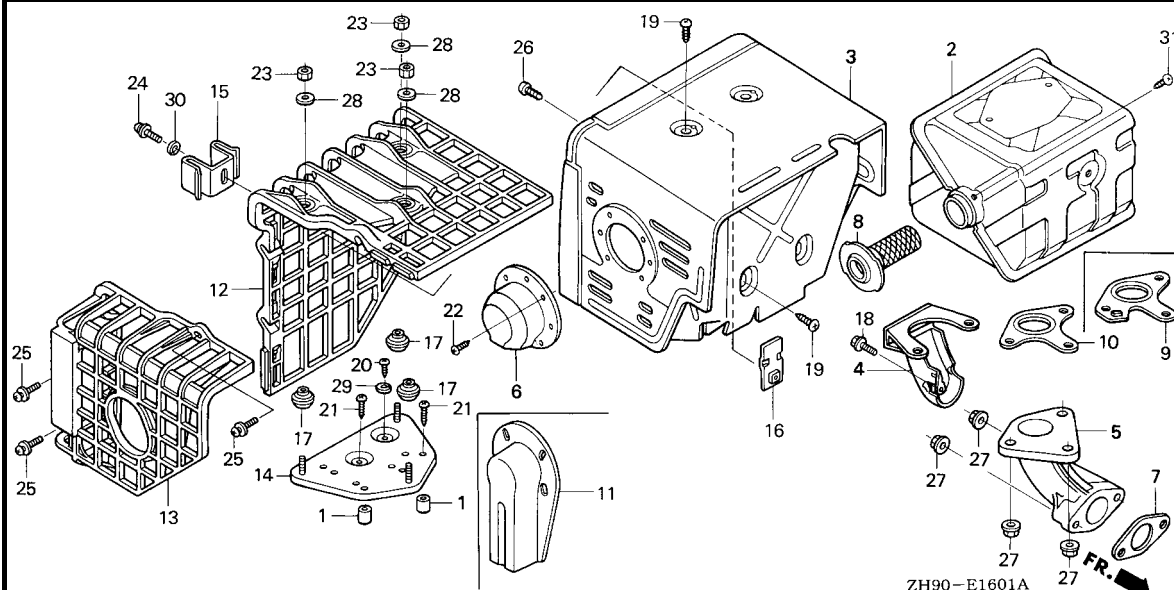

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
2	3131C5	MUFFLER, EXHAUST	0.2
3	3131D6	PROTECTOR, EXHAUST MUFFLER ...	0.2
5	3131C9	PIPE, EXHAUST	0.2
7	3131B5	GASKET, EXHAUST PIPE	0.2
8	3131A1	ARRESTER, SPARK	0.2
		.INCLUDES: Spark arrester check (9)	
10	3131B4	GASKET, EXHAUST MUFFLER	0.2
12	3131A7	COVER, EXHAUST MUFFLER	0.1
13	3131K6	COVER, EXHAUST MUFFLER :RIGHT	0.1
14	3131A2	BASE, EXHAUST MUFFLER COVER ..	0.2

Ref. No.	Part No.	Description	Reqd. QTY	Serial No.	Parts catalogue code
			(1) (2) (3)		
1	17233-896-701	COLLAR, AIR CLEANER CASE.....	2	-	-----
2	18310-ZE2-W61	MUFFLER COMP.(100DB).....	1	-	-----
					HXQ4/A, LXQ4/A, QKE3/A, QKE4, QME2/A, QWA4/A, QXC4/A, QXE4/A, QXQ4/A RXQ4/A, SMC4/A, SME1/A, SME6/A, SWA4, SXE4/A, SXQ4/A, VN17/A, VSH7, VWT4/A VXE4/A, VXQ4/A ES1, ES1/A, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A, LTJ, LWD1 LWD1/A, LX, LX/A, LX16, LX16/A, LX8, LX8/A, LXQ4, LXQ4/A, LXU, LXU/A LXZ, PX, PX/A, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, QE, QE/A, QKE3, QKE3/A QKE4, QME2, QME2/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QWA2 QWA4, QWA4/A, QWH2, QWH2/A, QX, QX/A, QXB, QXB/A, QXB6, QXB6/A, QXB7, QXB7/A QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE, QXE/A, QXE4, QXE4/A QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXE9, QXK, QXQ4, QXQ4/A, QXU, QXU/A, RSC2 RSC2/A, RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A, SE, SE/A, SMC4 SMC4/A, SME1, SME1/A, SME6, SME6/A, SWA4, SX, SX/A, SX2, SXB, SXB/A, SXB7 SXB7/A, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4, SXQ4/A SXU, SXU/A, VD16, VEB6, VKB2, VKB2/A, VN17, VN17/A, VNG1, VNG1/A, VNT2 VNT2/A, VSD, VSD/A, VSD7, VSD7/A, VSH7, VX, VX/A, VX26, VXB, VXB/A, VXB2 VXB6, VXB7, VXB7/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8 VXE8, VXE8/A, VXG, VXK, VXP, VXP/A, VXQ4, VXQ4/A, VXQP, VXT1, VXT1/A, VXTB VXU, VXU/A, VXU1, VXU1/A
			-	(1)	-


E-16-1

MUFFLER(2)

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
3	18320-ZE2-W61	PROTECTOR COMP., MUFFLER.....	1	-	1	-----	ES1, HX, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A, LTJ, LWD1, LX, LX16, LXE, LXE/A, LXE8, LXE8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ, PX, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, QE, QE/A, QME2, QME2/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX, QXB, QXB/A, QXB6, QXB6/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXEB, QXQ4, QXQ4/A, QXU, QXU/A, RSC2, RSC2/A, RX, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A, SE, SE/A, SMC4, SMC4/A, SME1, SME1/A, SME6, SME6/A, SWA4, SX, SX2, SXB, SXB/A, SXE, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4, SXQ4/A, SXU, SXU/A, VD16, VEB6, VKB2, VKB2/A, VNG1, VNG1/A, VNT2, VNT2/A, VSD, VSD/A, VX, VX26, VXB, VXB/A, VXB2, VXB6, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE8, VXE8/A, VXG, VXP, VXP/A, VXQ4, VXQ4/A, VXQP, VXT1, VXT1/A, VXTB, VXU, VXU1, VXU1/A
	18320-ZF6-W01	PROTECTOR COMP., MUFFLER (100DB)	1	-	-	-----	QXB7, QXB7/A, SXB7, SXB7/A, VN17, VN17/A, VSD7, VSD7/A, VSH7, VXB7, VXB7/A, VXE7, VXE7/A
	18320-ZE2-W61	PROTECTOR COMP., MUFFLER.....	1	-	-	-----	2484724 ES1/A, HX/A, LWD1/A, LX/A, PX/A, QX/A, QXE/A, QXE9, QXK, RX/A, SX/A, SXE/A, VX/A, VXE8, VXX, VXU/A
	18320-ZE2-W62		1	-	-	2484725	----- ES1/A, HX/A, LWD1/A, LX/A, PX/A, QX/A, QXE/A, QXE9, QXK, RX/A, SX/A, SXE/A, VX/A, VXE8, VXX, VXU/A
	18320-ZE2-W61		-	(1)	-	-----	L1, L1/A, Q1, Q2, R1, R1/A, S1, V1, W1, W1/A
	18320-ZE2-W62		-	(1)	-	2484724	----- Q1/A, S1/A
	18320-ZE2-W62		-	(1)	-	2484725	----- Q1/A, S1/A
4	18323-ZE2-W60	PROTECTOR, EX. PIPE(100DB)...	1	-	-	-----	LTJ, LWD1, LWD1/A, RSC2, RSC2/A, SWA4, VKB2, VKB2/A, VNT2, VNT2/A
	18330-ZH9-N00	PIPE, EX.	1	-	1	-----	ES1, ES1/A, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A, LTJ, LWD1, LWD1/A, LX, LX/A, LX16, LXE, LXE/A, LXE8, LXE8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ, PX, PX/A, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, QE, QE/A, QME2, QME2/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX, QX/A, QXB, QXB/A, QXB6, QXB6/A, QXB7, QXB7/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXE9/A, QXEB, QXK, QXQ4, QXQ4/A, QXU, QXU/A, RSC2, RSC2/A, RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A, SE, SE/A, SMC4, SMC4/A, SME1, SME1/A, SME6, SME6/A, SWA4, SX, SX/A, SX2, SXB, SXB/A, SXB7, SXB7/A, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4, SXQ4/A, SXU, SXU/A, VD16, VEB6, VKB2, VKB2/A, VN17, VN17/A, VNG1, VNG1/A, VNT2, VNT2/A, VSD, VSD/A, VSD7, VSD7/A, VSH7, VX, VX/A, VX26, VXB, VXB/A, VXB2, VXB6, VXB7, VXB7/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8/A, VXG, VXP, VXP/A, VXQ4, VXQ4/A, VXQP, VXT1, VXT1/A, VXTB, VXU, VXU/A, VXU1, VXU1/A
			-	(1)	-		
6	18331-ZE2-810	CAP, MUFFLER.....	1	-	-	-----	LTJ, QE, QE/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, SE, SE/A, VKB2, VKB2/A, VNT2, VNT2/A
			-	(1)	-	-----	L1, L1/A, Q1, Q1/A, Q2, R1, R1/A, V1, W1, W1/A
7	18333-ZF6-W01	GASKET, EX. PIPE.....	1	-	1	-----	ES1/A, HX/A, HX26/A, HX8/A, HXQ4/A, LWD1, LWD1/A, LX/A, LXE/A, LXE8/A, LXQ4/A, LXU/A, PX/A, PX26/A, PXE8, PXE8/A, PXU/A, QE/A, QME2/A, QSC9/A, QSE/A, QSE2, QSE8/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX/A, QXB/A, QXB6/A, QXB7, QXB7/A, QXC4/A, QXC6/A, QXC9/A, QXE/A, QXE4/A, QXE6/A, QXE8/A, QXE9, QXK, QXQ4/A, QXU/A, RSC2/A, RX/A, RXP, RXP/A, RXQ4/A, RXU/A, SE/A, SMC4/A, SME1/A, SME6/A, SWA4, SX/A, SXB/A, SXB7, SXB7/A, SXE/A, SXE4/A, SXE8/A, SXEB/A, SXQ4/A, SXU/A, VKB2/A, VN17, VN17/A, VNG1/A, VNT2/A, VSD/A, VSD7, VSD7/A, VSH7, VX/A, VXB/A, VXB7, VXB7/A, VXE4/A, VXE6/A, VXE7, VXE7/A, VXE8, VXE8/A, VXE9, VXE9/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8/A, VXG, VXP, VXP/A, VXQ4/A, VXQ4/A, VXQP, VXT1, VXT1/A, VXTB, VXU, VXU/A, VXU1, VXU1/A
	18333-ZK6-Y00		1	-	-	-----	QKE3, QKE3/A, QKE4
	18333-ZE3-800		1	-	-	-----	VPE5, VPX5, VWT4, VWT4/A
	18333-ZE3-000		1	-	-	1031041	LXZ

E-16-1

MUFFLER(2)

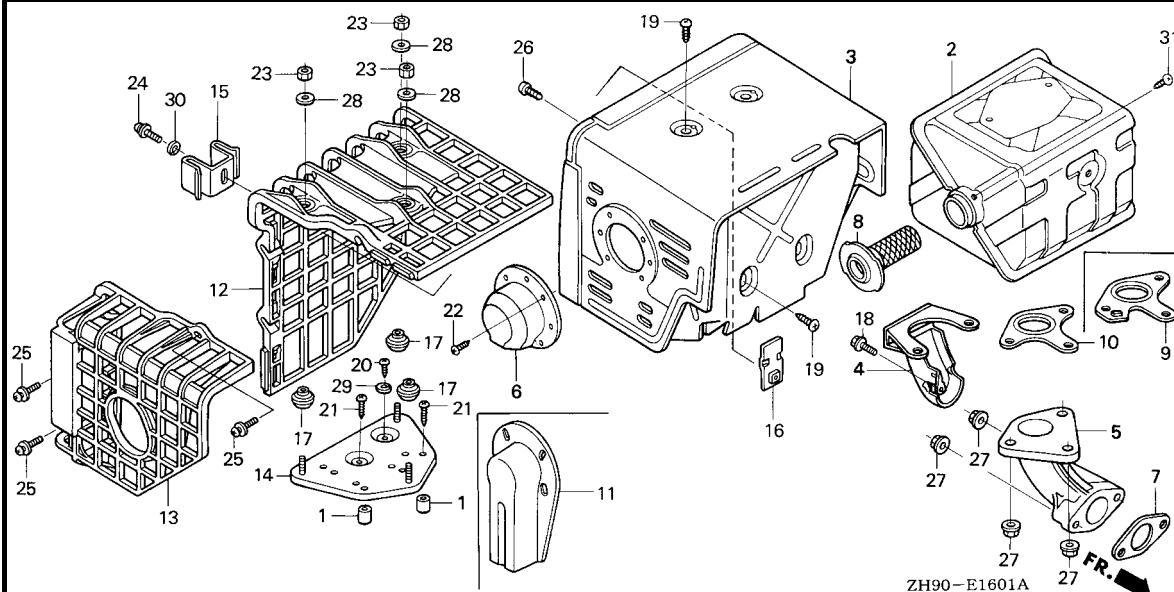


Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
(7)	18333-ZE3-800	GASKET, EX. PIPE.....	1	-	-	1187115	HX, HX26, HXQ4, LTJ, LX, LX16, LXE, LXQ4, PX, PX26, QE, QME2, QSC, QSC9, QX, QXB, QXC, QXC4, QXC6, QXC9, QXE, QXE4, QXE6, QXEB, QXQ4, RSC2, RX, RXQ4, SE, SMC4, SME1, SME6, SX, SX2, SXB, SXE, SXE4, SXEB, SXQ4, VD16, VEB6, VNG1, VSD, VX, VX26, VXB, VXB2, VXB6, VXE, VXE4, VXE6, VXG, VXQ4, VXU
	18333-ZK6-Y00		1	-	-	1457779	ES1, HX8, LX8, LXU, PXU, QSE, QSE8, QXB6, QXE8, QXU, RXU, SXE8, SXU, VKB2, VNT2, VXE6, VXT1, VXTB, VXU1
	18333-ZE3-800		1	-	-	1031042	LXZ
	18333-ZK6-Y00		1	-	-	1187116	LXZ, QSC, QXC, QXEB, SX2, VEB6, VXB6
			1	-	-	1187116	HX, HX26, HXQ4, LTJ, LX, LX16, LXE, LXQ4, PX, PX26, QE, QME2, QSC9, QX, QXB, QXC4, QXC6, QXC9, QXE, QXE4, QXE6, QXQ4, RSC2, RX, RXQ4, SE, SMC4, SME1, SME6, SX, SXB, SXE, SXE4, SXEB, SXQ4, VD16, VNG1, VSD, VX, VX26, VXB, VXB2, VXE, VXE4, VXE6, VXG, VXQ4, VXU
	18333-ZF6-W01		1	-	-	1457780	ES1, HX, HX26, HX8, HXQ4, LTJ, LX, LX16, LXE, LX8, LXQ4, LXU, PX, PX26, PXU, QE, QME2, QSC9, QSE, QSE8, QX, QXB, QXB6, QXC4, QXC6, QXC9, QXE, QXE4, QXE6, QXE8, QXQ4, QXU, RSC2, RX, RXQ4, RXU, SE, SMC4, SME1, SME6, SX, SXB, SXE, SXE4, SXE8, SXEB, SXQ4, SXU, VD16, VKB2, VNG1, VNT2, VSD, VX, VX26, VXB, VXB2, VXE, VXE4, VXE6, VXE8, VXG, VXQ4, VXT1, VXTB, VXU, VXU1
	18333-ZE3-800		-	(1)	-		
	18333-ZK6-Y00		-	(1)	-		
	18333-ZE3-000		-	(1)	-		
	18333-ZE3-800		-	-	1	1031041	L1, Q1, R1, S1, V1, W1
	18333-ZK6-Y00		-	-	1	1000009	VXP, VXQP
	18333-ZF6-W01		-	-	1	1000010	VXP, VXQP
			-	-	1	1000085	VXP, VXQP
			-	-	1	1000086	VXP, VXQP

MUFFLER(2)

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	GX270 (2)	(3)		
8	18355-ZE2-W00	ARRESTER, SPARK	(1)	(1)	-	-----	HX26, HX26/A, HXQ4, HXQ4/A, L1, L1/A, Q1, Q1/A, Q2, QSC, QSC9, QSC9/A, QSE2, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXK, R1, R1/A, S1, S1/A, V1, VXE8, W1, W1/A
			1	-	-	-----	QE, QE/A, QXB, QXB/A, QXB7, QXB7/A, QXEB, SE, SE/A, SMC4, SMC4/A, SXB, SXB/A, SXB7, SXB7/A, SXEB, SXEB/A, VD16, VEB6, VKB2, VKB2/A, VN17, VN17/A, VNG1, VNG1/A, VNT2, VNT2/A, VPE5, VPX5, VSD, VSD/A, VSD7, VSD7/A, VSH7, VXB, VXB/A, VXB2, VXB6, VXB7, VXB7/A, VXE7, VXE7/A, VXEB, VXEB/A, VXG, VXTB
	18355-ZE2-010		(1)	-	-	-----	RSC2, RSC2/A
9	18381-ZE2-W10	GASKET, MUFFLER (ARRESTER) (NIPPON LEAKLESS)	(1)	(1)	-	-----	HX26, HX26/A, HXQ4, HXQ4/A, L1, Q1, Q2, QSC, QSC9, QSC9/A, QSE2, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXK, R1, S1, V1, VXE8, W1, W1/A
			1	-	-	-----	LTJ, LWD1, QE, QE/A, QXB, QXB/A, QXB7, QXB7/A, QXEB, RSC2, RSC2/A, SE, SE/A, SMC4, SMC4/A, SWA4, SXB, SXB/A, SXB7, SXB7/A, SXEB, SXEB/A, VD16, VEB6, VKB2, VKB2/A, VN17, VN17/A, VNG1, VNG1/A, VNT2, VNT2/A, VSD, VSD/A, VSD7, VSD7/A, VSH7, VXB, VXB/A, VXB2, VXB6, VXB7, VXB7/A, VXE7, VXE7/A, VXEB, VXEB/A, VXG, VXTB
	18381-Z8S-801	GASKET, MUFFLER (ARRESTER) (THAI LEAKLESS)	1	-	-	-----	LWD1/A
			-	(1)	-	-----	L1/A, Q1/A, R1/A, S1/A
10	18381-ZE2-800	GASKET, MUFFLER (NIPPON LEAKLESS)	1	-	1	-----	HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A, LX, LX/A, LX16, LXE, LXE/A, LXE8, LXE8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ, PX, PX/A, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, QKE3, QKE3/A, QKE4, QKE4/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX, QX/A, QXB6, QXB6/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXQ4, QXQ4/A, QXU, QXU/A, RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A, SME1, SME1/A, SME6, SME6/A, SX, SX/A, SX2, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXQ4, SXQ4/A, SXU, SXU/A, VX, VX/A, VX26, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXP, VXP/A, VXQ4, VXQ4/A, VXQP, VXT1, VXT1/A, VXU, VXU/A, VXU1, VXU1/A
	18381-ZE2-801		1	-	-	-----	ES1, ES1/A
	18381-Z1C-801	GASKET, MUFFLER (THAI LEAKLESS)	1	-	-	-----	QXE9, QXK, VXE8, VXK
	18381-ZE2-800	GASKET, MUFFLER (NIPPON LEAKLESS)	-	(1)	-	-----	L1, L1/A, Q2, R1, R1/A, V1, W1, W1/A
	18381-ZE2-801		-	(1)	-	-----	Q1, Q1/A, S1, S1/A
11	18430-ZF6-W50	DEFLECTOR COMP., MUFFLER	(1)	-	-	-----	QE, QE/A, SE, SE/A
12	18433-ZF6-W40	COVER COMP., MUFFLER	(1)	-	(1)	-----	HXQ4, HXQ4/A, LXQ4, LXQ4/A, QE, QE/A, QKE3, QKE3/A, QKE4, QME2, QME2/A, QWA4, QWA4/A, QXB, QXB/A, QXB7, QXB7/A, QXC4, QXC4/A, QXE4, QXE4/A, QXQ4, QXQ4/A, RXQ4, RXQ4/A, SE, SE/A, SMC4, SMC4/A, SME1, SME1/A, SME6, SME6/A, SWA4, SXB, SXB/A, SXB7, SXB7/A, SXE4, SXE4/A, SXEB, SXEB/A, SXQ4, SXQ4/A, VD16, VEB6, VN17, VN17/A, VNG1, VNG1/A, VSD, VSD/A, VSD7, VSD7/A, VSH7, VWT4, VWT4/A, VXB, VXB/A, VXB7, VXB7/A, VXE4, VXE4/A, VXE7, VXE7/A, VXE8, VXEB, VXEB/A, VXG, VXQ4, VXQ4/A, VXQP, VXTB
13	18434-ZF6-W40	COVER COMP., RR. MUFFLER	(1)	-	(1)	-----	HXQ4, HXQ4/A, LXQ4, LXQ4/A, QE, QE/A, QKE3, QKE3/A, QKE4, QME2, QME2/A, QWA4, QWA4/A, QXB, QXB/A, QXB7, QXB7/A, QXC4, QXC4/A, QXE4, QXE4/A, QXQ4, QXQ4/A, RXQ4, RXQ4/A, SE, SE/A, SMC4, SMC4/A, SME1, SME1/A, SME6, SME6/A, SWA4, SXB, SXB/A, SXB7, SXB7/A, SXE4, SXE4/A, SXEB, SXEB/A, SXQ4, SXQ4/A, VD16, VEB6, VN17, VN17/A, VNG1, VNG1/A, VSD, VSD/A, VSD7, VSD7/A, VSH7, VWT4, VWT4/A, VXB, VXB/A, VXB7, VXB7/A, VXE4, VXE4/A, VXE7, VXE7/A, VXE8, VXEB, VXEB/A, VXG, VXQ4, VXQ4/A, VXQP, VXTB

E-16-1

MUFFLER(2)

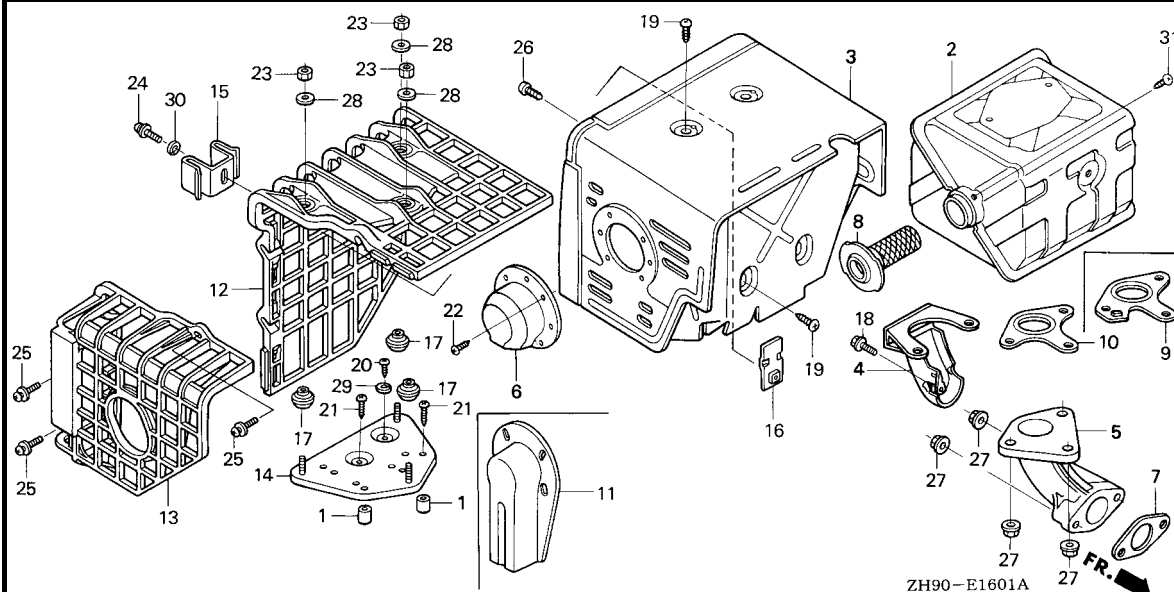

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
14	18436-ZH8-W40	BASE COMP., MUFFLER COVER.....	(1)	-	(1)	-----	HXQ4, HXQ4/A, LXQ4, LXQ4/A, QE, QE/A, QKE3, QKE3/A, QKE4, QME2, QME2/A, QWA4, QWA4/A, QXB, QXB/A, QXB7, QXB7/A, QXC4, QXC4/A, QXE4, QXE4/A, QXQ4, QXQ4/A, RXQ4, RXQ4/A, SE, SE/A, SMC4, SMC4/A, SME1, SME1/A, SME6, SME6/A, SWA4, SXB, SXB/A, SXB7, SXB7/A, SXE4, SXE4/A, SXEB, SXEB/A, SXQ4, SXQ4/A, VD16, VEB6, VN17, VN17/A, VNG1, VNG1/A, VSD, VSD/A, VSD7, VSD7/A, VSH7, VWT4, VWT4/A, VXB, VXB/A, VXB7, VXB7/A, VXE4, VXE4/A, VXE7, VXE7/A, VXE8, VXE8, VXE8/A, VXG, VXQ4, VXQ4/A, VXQP, VXTB
15	18437-ZF6-W40	STAY, MUFFLER COVER.....	(1)	-	(1)	-----	HXQ4, HXQ4/A, LXQ4, LXQ4/A, QE, QE/A, QKE3, QKE3/A, QKE4, QME2, QME2/A, QWA4, QWA4/A, QXB, QXB/A, QXB7, QXB7/A, QXC4, QXC4/A, QXE4, QXE4/A, QXQ4, QXQ4/A, RXQ4, RXQ4/A, SE, SE/A, SMC4, SMC4/A, SME1, SME1/A, SME6, SME6/A, SWA4, SXB, SXB/A, SXB7, SXB7/A, SXE4, SXE4/A, SXEB, SXEB/A, SXQ4, SXQ4/A, VD16, VEB6, VN17, VN17/A, VNG1, VNG1/A, VSD, VSD/A, VSD7, VSD7/A, VSH7, VWT4, VWT4/A, VXB, VXB/A, VXB7, VXB7/A, VXE4, VXE4/A, VXE7, VXE7/A, VXE8, VXE8, VXE8/A, VXG, VXQ4, VXQ4/A, VXQP, VXTB
16	18438-ZF6-W40	PLATE, SET.....	(1)	-	(1)	-----	HXQ4, HXQ4/A, LXQ4, LXQ4/A, QE, QE/A, QKE3, QKE3/A, QKE4, QME2, QME2/A, QWA4, QWA4/A, QXB, QXB/A, QXB7, QXB7/A, QXC4, QXC4/A, QXE4, QXE4/A, QXQ4, QXQ4/A, RXQ4, RXQ4/A, SE, SE/A, SMC4, SMC4/A, SME1, SME1/A, SME6, SME6/A, SWA4, SXB, SXB/A, SXB7, SXB7/A, SXE4, SXE4/A, SXEB, SXEB/A, SXQ4, SXQ4/A, VD16, VEB6, VN17, VN17/A, VNG1, VNG1/A, VSD, VSD/A, VSD7, VSD7/A, VSH7, VWT4, VWT4/A, VXB, VXB/A, VXB7, VXB7/A, VXE4, VXE4/A, VXE7, VXE7/A, VXE8, VXE8, VXE8/A, VXG, VXQ4, VXQ4/A, VXQP, VXTB
17	18466-ZH8-W40	SPACER, MUFFLER COVER.....	(3)	-	(3)	-----	HXQ4, HXQ4/A, LXQ4, LXQ4/A, QE, QE/A, QKE3, QKE3/A, QKE4, QME2, QME2/A, QWA4, QWA4/A, QXB, QXB/A, QXB7, QXB7/A, QXC4, QXC4/A, QXE4, QXE4/A, QXQ4, QXQ4/A, RXQ4, RXQ4/A, SE, SE/A, SMC4, SMC4/A, SME1, SME1/A, SME6, SME6/A, SWA4, SXB, SXB/A, SXB7, SXB7/A, SXE4, SXE4/A, SXEB, SXEB/A, SXQ4, SXQ4/A, VD16, VEB6, VN17, VN17/A, VNG1, VNG1/A, VSD, VSD/A, VSD7, VSD7/A, VSH7, VWT4, VWT4/A, VXB, VXB/A, VXB7, VXB7/A, VXE4, VXE4/A, VXE7, VXE7/A, VXE8, VXE8, VXE8/A, VXG, VXQ4, VXQ4/A, VXQP, VXTB


E-16-1

MUFFLER(2)

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	6X270 (2)	(3)		
18	90013-883-000	BOLT, FLANGE, 6X12(CT200).....	1	-	-	-----	LTJ, LWD1, LWD1/A, RSC2, RSC2/A, SWA4, VKB2, VKB2/A, VNT2, VNT2/A
19	90050-ZE1-000	SCREW, TAPPING, 5X8.....	4	-	-	-----	ES1, ES1/A, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A, LTJ, LWD1, LWD1/A, LX, LX/A, LX16, LX16/A, LX8, LX8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ, PX, PX/A, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, QME2, QME2/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE2/A, QSE8, QSE8/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX, QX/A, QXB6, QXB6/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXE9/A, QXK, QXK4, QXK4/A, QXU, QXU/A, RSC2, RSC2/A, RX, RX/A, RXQ4, RXQ4/A, RXU, RXU/A, SME1, SME1/A, SME6, SME6/A, SWA4, SX, SX/A, SX2, SX2/A, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXQ4, SXQ4/A, SXU, SXU/A, VKB2, VKB2/A, VNT2, VNT2/A, VX, VX/A, VX26, VX26/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE8, VXE8/A, VXG, VXG/A, VXK, VXK4, VXK4/A, VXT1, VXT1/A, VXU, VXU/A, VXU1, VXU1/A
			5	-	-	-----	QE, QE/A, QXB, QXB/A, QXB7, QXB7/A, QXEB, SE, SE/A, SMC4, SMC4/A, SXB, SXB/A, SXB7, SXB7/A, SXEB, SXEB/A, VD16, VEB6, VN17, VN17/A, VNG1, VNG1/A, VSD, VSD/A, VSD7, VSD7/A, VSH7, VSH7/A, VSB, VSB/A, VSB2, VSB2/A, VSB6, VSB6/A, VSB7, VSB7/A, VXE7, VXE7/A, VXE8, VXE8/A, VXTB, VXTB/A, VXTB1, VXTB1/A
			-	(4)	-	-----	L1, L1/A, Q1, Q1/A, R1, R1/A, S1, S1/A, V1, W1, W1/A
			-	(5)	-	-----	Q2
			-	-	4	-----	RXP, RXP/A, VXP, VXP/A, VXQP
20	90050-ZE1-000	SCREW, TAPPING, 5X8.....	(1)	-	(1)	-----	HXQ4, HXQ4/A, LXQ4, LXQ4/A, QE, QE/A, QKE3, QKE3/A, QKE4, QKE4/A, QWA4, QWA4/A, QXB, QXB/A, QXB7, QXB7/A, QXC4, QXC4/A, QXE4, QXE4/A, QXQ4, QXQ4/A, RXQ4, RXQ4/A, SE, SE/A, SMC4, SMC4/A, SME1, SME1/A, SME6, SME6/A, SWA4, SXB, SXB/A, SXB7, SXB7/A, SXE4, SXE4/A, SXEB, SXEB/A, SXQ4, SXQ4/A, VD16, VEB6, VN17, VN17/A, VNG1, VNG1/A, VSD, VSD/A, VSD7, VSD7/A, VSH7, VSH7/A, VWT4, VWT4/A, VXB, VXB/A, VXB7, VXB7/A, VXE4, VXE4/A, VXE7, VXE7/A, VXE8, VXE8/A, VXG, VXG/A, VXQ4, VXQ4/A, VXQP, VXQP/A
21	90050-ZH8-W40	SCREW, TAPPING, 5X25.....	(2)	-	(2)	-----	HXQ4, HXQ4/A, LXQ4, LXQ4/A, QE, QE/A, QKE3, QKE3/A, QKE4, QKE4/A, QWA4, QWA4/A, QXB, QXB/A, QXB7, QXB7/A, QXC4, QXC4/A, QXE4, QXE4/A, QXQ4, QXQ4/A, RXQ4, RXQ4/A, SE, SE/A, SMC4, SMC4/A, SME1, SME1/A, SME6, SME6/A, SWA4, SXB, SXB/A, SXB7, SXB7/A, SXE4, SXE4/A, SXEB, SXEB/A, SXQ4, SXQ4/A, VD16, VEB6, VN17, VN17/A, VNG1, VNG1/A, VSD, VSD/A, VSD7, VSD7/A, VSH7, VSH7/A, VWT4, VWT4/A, VXB, VXB/A, VXB7, VXB7/A, VXE4, VXE4/A, VXE7, VXE7/A, VXE8, VXE8/A, VXG, VXG/A, VXQ4, VXQ4/A, VXQP, VXQP/A
22	90055-ZE1-000	SCREW, TAPPING, 4X6.....	3	-	-	-----	LTJ, QE, QE/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, SE, SE/A, VKB2, VKB2/A, VNT2, VNT2/A
23	90302-KF9-900	NUT, HEX., 5MM.....	-	(3)	-	-----	L1, L1/A, Q1, Q1/A, Q2, R1, R1/A, V1, W1, W1/A
			(3)	-	(3)	-----	HXQ4, HXQ4/A, LXQ4, LXQ4/A, QE, QE/A, QKE3, QKE3/A, QKE4, QKE4/A, QWA4, QWA4/A, QXB, QXB/A, QXB7, QXB7/A, QXC4, QXC4/A, QXE4, QXE4/A, QXQ4, QXQ4/A, RXQ4, RXQ4/A, SE, SE/A, SMC4, SMC4/A, SME1, SME1/A, SME6, SME6/A, SWA4, SXB, SXB/A, SXB7, SXB7/A, SXE4, SXE4/A, SXEB, SXEB/A, SXQ4, SXQ4/A, VD16, VEB6, VN17, VN17/A, VNG1, VNG1/A, VSD, VSD/A, VSD7, VSD7/A, VSH7, VSH7/A, VWT4, VWT4/A, VXB, VXB/A, VXB7, VXB7/A, VXE4, VXE4/A, VXE7, VXE7/A, VXE8, VXE8/A, VXG, VXG/A, VXQ4, VXQ4/A, VXQP, VXQP/A
24	93891-05012-00	SCREW-WASHER, 5X12.....	(1)	-	(1)	-----	HXQ4, HXQ4/A, LXQ4, LXQ4/A, QE, QE/A, QKE3, QKE3/A, QKE4, QKE4/A, QWA4, QWA4/A, QXB, QXB/A, QXB7, QXB7/A, QXC4, QXC4/A, QXE4, QXE4/A, QXQ4, QXQ4/A, RXQ4, RXQ4/A, SE, SE/A, SMC4, SMC4/A, SME1, SME1/A, SME6, SME6/A, SWA4, SXB, SXB/A, SXB7, SXB7/A, SXE4, SXE4/A, SXEB, SXEB/A, SXQ4, SXQ4/A, VD16, VEB6, VN17, VN17/A, VNG1, VNG1/A, VSD, VSD/A, VSD7, VSD7/A, VSH7, VSH7/A, VWT4, VWT4/A, VXB, VXB/A, VXB7, VXB7/A, VXE4, VXE4/A, VXE7, VXE7/A, VXE8, VXE8/A, VXG, VXG/A, VXQ4, VXQ4/A, VXQP, VXQP/A

E-16-1

MUFFLER(2)

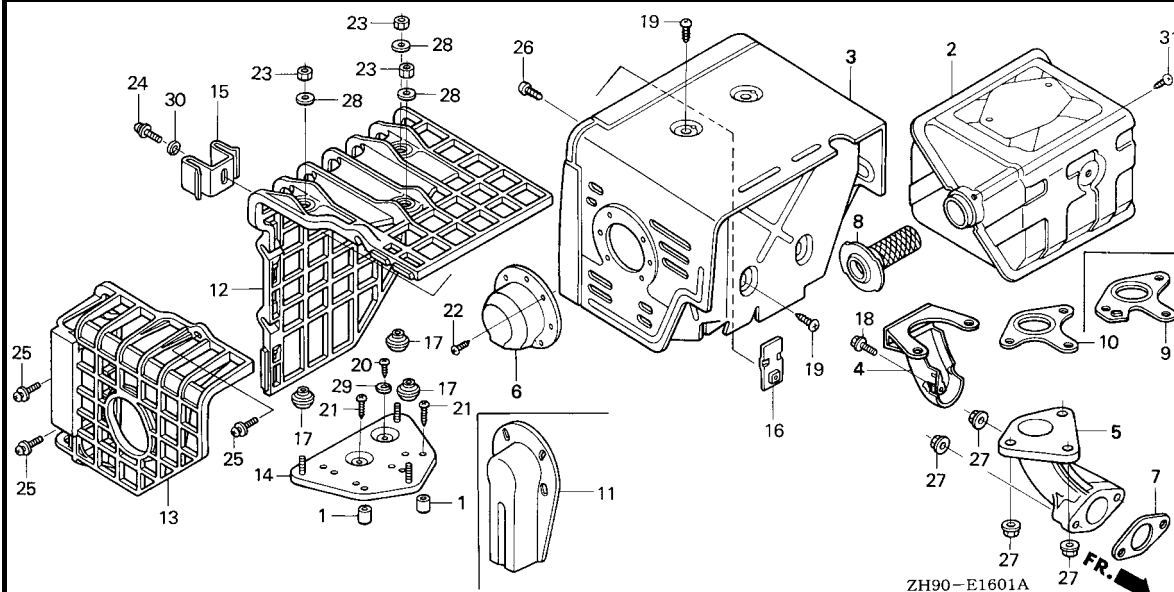

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
25	93891-06020-07	SCREW-WASHER, 6X20	(3)	-	(3)	-----	GX270 HXQ4, HXQ4/A, LXQ4, LXQ4/A, QE, QE/A, QKE3, QKE3/A, QKE4, QME2, QME2/A, QWA4, QWA4/A, QXB, QXB/A, QXB7, QXB7/A, QXC4, QXC4/A, QXE4, QXE4/A, QXQ4, QXQ4/A, RXQ4, RXQ4/A, SE, SE/A, SMC4, SMC4/A, SME1, SME1/A, SME6, SME6/A, SWA4, SXB, SXB/A, SXB7, SXB7/A, SXE4, SXE4/A, SXEB, SXEB/A, SXQ4, SXQ4/A, VD16, VEB6, VN17, VN17/A, VNG1, VNG1/A, VSD, VSD/A, VSD7, VSD7/A, VSH7, VWT4, VWT4/A, VXB, VXB/A, VXB7, VXB7/A, VXE4, VXE4/A, VXE7, VXE7/A, VXE8, VXE8/A, VXE9, VXE9/A, VXG, VXQ4, VXQ4/A, VXQP, VXTB
26	90006-ZE2-000	SCREW, TAPPING, 6X10	1	-	1	-----	ES1, ES1/A, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A, LTJ, LWD1, LWD1/A, LX/A, LX16, LX16/A, LX8, LX8/A, LXQ4, LXQ4/A, LXU, LXU/A, PX/A, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, QE/A, QME2, QME2/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX/A, QXB/A, QXB6, QXB6/A, QXB7, QXB7/A, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXE9/A, QXQ4, QXQ4/A, QXU, QXU/A, RSC2, RSC2/A, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A, SE/A, SMC4, SMC4/A, SME1, SME1/A, SME6, SME6/A, SWA4, SX/A, SX2, SXB/A, SXB7, SXB7/A, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB/A, SXQ4, SXQ4/A, SXU, SXU/A, VD16, VEB6, VEB6, VEB6/A, VN17, VN17/A, VNG1/A, VNT2, VNT2/A, VSD/A, VSD7, VSD7/A, VSH7, VX/A, VX26, VXB/A, VXB2, VXB6, VXB7, VXB7/A, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8/A, VXG, VXK, VXP, VXP/A, VXQ4, VXQ4/A, VXQP, VXT1, VXT1/A, VXTB, VXU, VXU/A, VXU1, VXU1/A
	93901-360J0		1	-	-	-----	1047505 HX, LX, LXZ, PX, QE, QX, QXB, QXC, QXE, QXEB, RX, SE, SX, SXB, SXE, SXEB, VNG1, VSD, VX, VXB, VXE, VXE8
	90006-ZE2-000		1	-	-	-----	1047506 HX, LX, LXZ, PX, QE, QX, QXB, QXC, QXE, QXEB, RX, SE, SX, SXB, SXE, SXEB, VNG1, VSD, VX, VXB, VXE, VXE8
	93901-360J0		-	(1)	-	-----	L1/A, Q1/A, R1/A, S1/A, W1/A
	93901-360J0		-	(1)	-	-----	Q2
	90006-ZE2-000		-	(1)	-	-----	1047505 L1, Q1, R1, S1, V1, W1
	90006-ZE2-000		-	(1)	-	-----	1047506 L1, Q1, R1, S1, V1, W1

E-16-1


MUFFLER(2)

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
27	94050-08000	NUT, FLANGE, 8MM.....	5	-	-	-----	ES1, ES1/A, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A, LTJ, LWD1 LWD1/A, LX, LX/A, LX16, LX16/A, LX16, LX16/A, LXQ4, LXQ4/A, LXU, LXU/A LXZ, PX, PX/A, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, QE, QE/A, QKE3, QKE3/A QKE4, QME2, QME2/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QWA2 QWA4, QWA4/A, QWH2, QWH2/A, QX, QX/A, QXB, QXB/A, QXB6, QXB6/A, QXB7, QXB7/A QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE, QXE/A, QXE4, QXE4/A QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXE9, QXK, QXQ4, QXQ4/A, QXU, QXU/A, RSC2 RSC2/A, RX, RX/A, RXQ4, RXQ4/A, RXU, RXU/A, SE, SE/A, SMC4, SMC4/A, SME1 SME1/A, SME6, SME6/A, SWA4, SX, SX/A, SX2, SXB, SXB/A, SXB7, SXB7/A, SXE SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4, SXQ4/A, SXU, SXU/A VD16, VEB6, VKB2, VKB2/A, VN17, VN17/A, VNG1, VNG1/A, VNT2, VNT2/A, VSD VSD/A, VSD7, VSD7/A, VSH7, VX, VX/A, VX26, VXB, VXB/A, VXB7, VXB7/A, VXE VXB7/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8, VXE8/A VVG, VVG4, VVG4/A, VXT1, VXT1/A, VXTB, VXU, VXU/A, VXU1, VXU1/A VPE5, VPE5
			2	-	-	-----	
			-	(5)	-	-----	
			-	-	5	-----	RXP, RXP/A, VXP, VXP/A, VXQP
28	94103-05700	WASHER, PLAIN, 5MM.....	(3)	-	(3)	-----	HXQ4, HXQ4/A, LXQ4, LXQ4/A, QE, QE/A, QKE3, QKE3/A, QKE4, QME2, QME2/A, QWA4 QWA4/A, QXB, QXB/A, QXB7, QXB7/A, QXC4, QXC4/A, QXE4, QXE4/A, QXQ4, QXQ4/A RXQ4, RXQ4/A, SE, SE/A, SMC4, SMC4/A, SME1, SME1/A, SME6, SME6/A, SWA4, SXB SXB/A, SXB7, SXB7/A, SXE4, SXE4/A, SXEB, SXEB/A, SXQ4, SXQ4/A, VD16, VEB6 VN17, VN17/A, VNG1, VNG1/A, VSD, VSD/A, VSD7, VSD7/A, VSH7, VWT4, VWT4/A VXB, VXB/A, VXB7, VXB7/A, VXE4, VXE4/A, VXE7, VXE7/A, VXE8, VXE8, VXE8/A VVG, VVG4, VVG4/A, VXP, VXP/A, VXTB
29	94111-05000	WASHER, SPRING, 5MM.....	(1)	-	(1)	-----	HXQ4, HXQ4/A, LXQ4, LXQ4/A, QE, QE/A, QKE3, QKE3/A, QKE4, QME2, QME2/A, QWA4 QWA4/A, QXB, QXB/A, QXB7, QXB7/A, QXC4, QXC4/A, QXE4, QXE4/A, QXQ4, QXQ4/A RXQ4, RXQ4/A, SE, SE/A, SMC4, SMC4/A, SME1, SME1/A, SME6, SME6/A, SWA4, SXB SXB/A, SXB7, SXB7/A, SXE4, SXE4/A, SXEB, SXEB/A, SXQ4, SXQ4/A, VD16, VEB6 VN17, VN17/A, VNG1, VNG1/A, VSD, VSD/A, VSD7, VSD7/A, VSH7, VWT4, VWT4/A VXB, VXB/A, VXB7, VXB7/A, VXE4, VXE4/A, VXE7, VXE7/A, VXE8, VXE8, VXE8/A VVG, VVG4, VVG4/A, VXP, VXP/A, VXTB
30	94111-05000	WASHER, SPRING, 5MM.....	(1)	-	(1)	-----	HXQ4, HXQ4/A, LXQ4, LXQ4/A, QE, QE/A, QKE3, QKE3/A, QKE4, QME2, QME2/A, QWA4 QWA4/A, QXB, QXB/A, QXB7, QXB7/A, QXC4, QXC4/A, QXE4, QXE4/A, QXQ4, QXQ4/A RXQ4, RXQ4/A, SE, SE/A, SMC4, SMC4/A, SME1, SME1/A, SME6, SME6/A, SWA4, SXB SXB/A, SXB7, SXB7/A, SXE4, SXE4/A, SXEB, SXEB/A, SXQ4, SXQ4/A, VD16, VEB6 VN17, VN17/A, VNG1, VNG1/A, VSD, VSD/A, VSD7, VSD7/A, VSH7, VWT4, VWT4/A VXB, VXB/A, VXB7, VXB7/A, VXE4, VXE4/A, VXE7, VXE7/A, VXE8, VXE8, VXE8/A VVG, VVG4, VVG4/A, VXP, VXP/A, VXTB
31	90055-ZE1-000	SCREW, TAPPING, 4X6.....	(1)	(1)	-	-----	HX26, HX26/A, HXQ4, HXQ4/A, L1, L1/A, Q1, Q1/A, Q2, QSC, QSC9, QSC9/A, QSE2 QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9 QXC9/A, QXK, R1, R1/A, RSC2, RSC2/A, V1, VXE8, W1, W1/A
	90050-ZE1-000	SCREW, TAPPING, 5X8.....	(1)	(1)	-	-----	L1, L1/A, Q1, Q1/A, QSC, QXC, R1, R1/A, S1, S1/A, V1, W1, W1/A
	90055-ZE1-000	SCREW, TAPPING, 4X6.....	1	-	-	-----	QE, QE/A, QXB, QXB/A, QXE8, SE, SE/A, SMC4, SMC4/A, SXB, SXB/A, SXEB, SXEB/A VD16, VEB6, VKB2, VKB2/A, VNG1, VNG1/A, VNT2, VNT2/A, VSD, VSD/A, VXB, VXB/A VXB2, VXB6, VXB6, VXB6/A, VVG, VXTB
	90050-ZE1-000	SCREW, TAPPING, 5X8.....	1	-	-	-----	QXB7, QXB7/A, SXB7, SXB7/A, VSD7, VSD7/A, VSH7, VXB7, VXB7/A, VXE7, VXE7/A

2

E-16-2

MUFFLER(3)

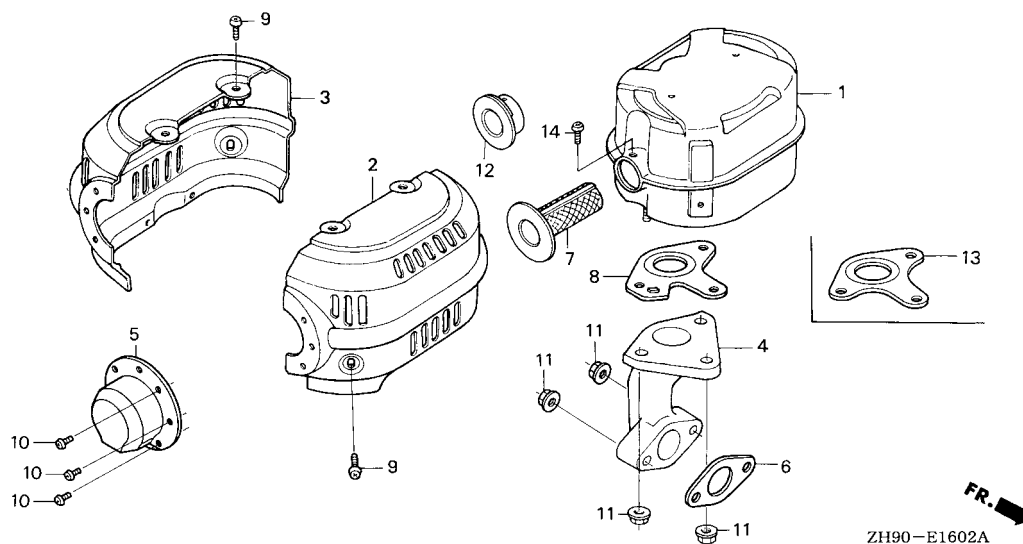


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	3131C5	MUFFLER, EXHAUST	0.2
2	3131H0	PROTECTOR, EXHAUST MUFFLER :FRONT	0.2
3	3131D3	PROTECTOR, EXHAUST MUFFLER :REAR	0.2
4	3131C9	PIPE, EXHAUST	0.2
6	3131B5	GASKET, EXHAUST PIPE	0.2
7	3131A1	ARRESTER, SPARK	0.2
		.INCLUDES: Spark arrester check (13)	
8	3131B4	GASKET, EXHAUST MUFFLER	0.2

Ref. No.	Part No.	Description	Reqd. QTY	Serial No.	Parts catalogue code
			(1) (2) (3)		
1	18310-ZE2-013	MUFFLER COMP.	(1) (1) -	-----	L1, L1/A, Q1, Q1/A, Q2, QD, QD/A, R1, R1/A, RD, RD/A, S1, S1/A, SD, SD/A, V1, W1
	18310-ZE2-822	MUFFLER COMP.(SILENT)	(1) (1) -	-----	W1/A
	18310-ZE2-013	MUFFLER COMP.	1 -	-----	L1, L1/A, Q1, Q1/A, Q2, QD, QD/A, R1, R1/A, RD, RD/A, S1, S1/A, SD, SD/A, V1, W1
2	18320-ZE2-003	PROTECTOR, R. MUFFLER	(1) (1) -	-----	W1/A
	18320-ZE2-P50	PROTECTOR, R. MUFFLER(SILENT)	(1) (1) -	-----	QAW, QAW/A
	18320-ZE2-821		(1) (1) -	1075941	L1, L1/A, Q1, Q1/A, Q2, QD, QD/A, R1, R1/A, RD, RD/A, S1, S1/A, SD, SD/A, V1, W1
	18320-ZE2-P50		(1) (1) -	1075942	W1/A
	18320-ZE2-P30	PROTECTOR, R. MUFFLER(STD.) ..	1 -	-----	L1/A, Q1/A, QD/A, R1/A, RD/A, S1/A, SD/A, W1/A
3	18325-ZE2-003	PROTECTOR, L. MUFFLER	(1) (1) -	-----	L1, Q1, Q2, QD, R1, RD, S1, SD, V1, W1
	18325-ZE2-P50	PROTECTOR, L. MUFFLER(SILENT)	(1) (1) -	-----	L1, Q1, Q2, QD, R1, RD, S1, SD, V1, W1
	18325-ZE2-821		(1) (1) -	1075941	QAW, QAW/A
	18325-ZE2-P50		(1) (1) -	1075942	L1, L1/A, Q1, Q1/A, Q2, QD, QD/A, R1, R1/A, RD, RD/A, S1, S1/A, SD, SD/A, V1, W1
	18325-ZE2-P30	PROTECTOR, L. MUFFLER(STD.) ..	1 -	-----	W1/A
4	18330-ZE2-000	PIPE, EX.	(1) (1) -	-----	L1/A, Q1/A, QD/A, R1/A, RD/A, S1/A, SD/A, W1/A
			1 -	-----	L1, Q1, Q2, QD, R1, RD, S1, SD, V1, W1
			1 -	-----	QAW, QAW/A
5	18331-ZE2-810	CAP, MUFFLER	1 -	-----	QAW, QAW/A
			1 -	-----	QAW, QAW/A
6	18333-ZE3-800	GASKET, EX. PIPE	1 -	-----	QAW, QAW/A
7	18355-ZE2-010	ARRESTER, SPARK	(1) (1) -	-----	L1, L1/A, Q1, Q1/A, Q2, QD, QD/A, R1, R1/A, RD, RD/A, S1, S1/A, SD, SD/A, V1, W1
			1 -	-----	W1/A
			1 -	-----	QAW, QAW/A
8	18381-ZE2-W10	GASKET, MUFFLER(ARRESTER) (NIPPON LEAKLESS)	(1) (1) -	-----	L1/A, Q1/A, QD/A, R1/A, RD/A, S1/A, SD/A, W1/A
	18381-ZE2-820	GASKET, MUFFLER(ARRESTER)	(1) (1) -	1053817	L1, Q1, Q2, QD, R1, RD, S1, SD, V1, W1

E-16-2


MUFFLER(3)

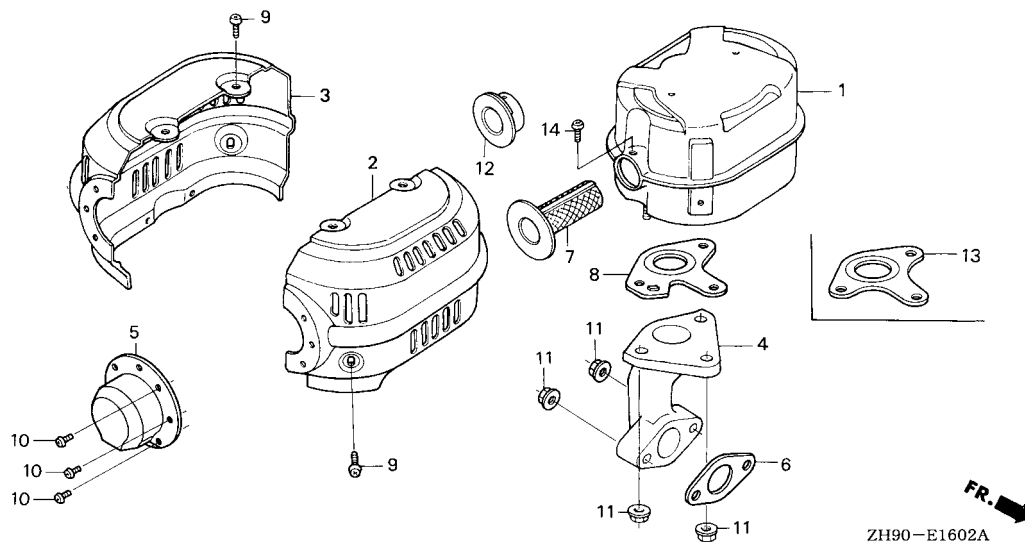

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
(8)	18381-ZE2-W10	GASKET, MUFFLER(ARRESTER) (NIPPON LEAKLESS)	(1)	(1)	-	1053818	L1,Q1,Q2,QD,R1,RD,S1,SD,V1,W1 QAW,QAW/A
	18381-Z8S-801	GASKET, MUFFLER(ARRESTER) (THAI LEAKLESS)	-	(1)	-		L1/A,Q1/A,R1/A,S1/A
9	90050-ZE3-H00	SCREW, TAPPING, 5X8	(6)	(6)	-		L1/A,Q1/A,Q2,QD/A,R1/A,RD/A,S1/A,SD/A,W1/A
	90050-ZE1-000		(6)	(6)	-	1075941	L1,Q1,QD,R1,RD,S1,SD,V1,W1
	90050-ZE3-H00		(6)	(6)	-	1075942	L1,Q1,QD,R1,RD,S1,SD,V1,W1
	90050-ZE1-000		6	-	-		QAW,QAW/A
10	90055-ZE1-000	SCREW, TAPPING, 4X6	3	-	-		QAW,QAW/A
11	94050-08000	NUT, FLANGE, 8MM	(3)	(3)	-		L1,L1/A,Q1,Q1/A,Q2,QD,QD/A,R1,R1/A,RD,RD/A,S1,S1/A,SD,SD/A,V1,W1 W1/A
			5	-	-		QAW,QAW/A
12	18336-ZE2-000	FLANGE COMP., BAFFLE	(1)	(1)	-		L1,L1/A,Q1,Q1/A,Q2,QD,QD/A,R1,R1/A,RD,RD/A,S1,S1/A,SD,SD/A,V1,W1 W1/A
13	18381-ZE2-800	GASKET, MUFFLER (NIPPON LEAKLESS)	(1)	(1)	-		L1,L1/A,Q1,Q1/A,Q2,QD,QD/A,R1,R1/A,RD,RD/A,S1,S1/A,SD,SD/A,V1,W1 W1/A
14	90055-ZE1-000	SCREW, TAPPING, 4X6	(1)	(1)	-		L1,L1/A,Q1,Q1/A,Q2,QD,QD/A,R1,R1/A,RD,RD/A,S1,S1/A,SD,SD/A,V1,W1 W1/A
	90050-ZE1-000	SCREW, TAPPING, 5X8	1	-	-		QAW,QAW/A

E-16-3

MUFFLER(4)

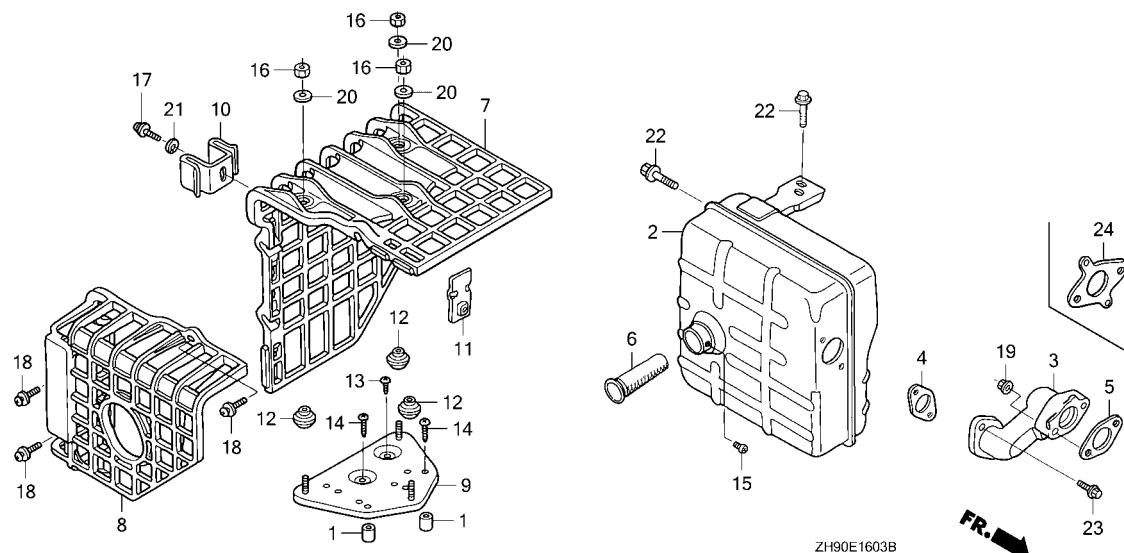

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
2	3131C5	MUFFLER, EXHAUST	0.2
3	3131C9	PIPE, EXHAUST	0.2
4		(5,24)	
	3131B5	GASKET, EXHAUST PIPE	0.2
6	3131A1	ARRESTER, SPARK	0.2
		.INCLUDES: Spark arrester check	
7	3131A7	COVER, EXHAUST MUFFLER	0.1
8	3131K6	COVER, EXHAUST MUFFLER :RIGHT	0.1
9	3131A2	BASE, EXHAUST MUFFLER COVER ..	0.2

Ref. No.	Part No.	Description	Reqd. QTY	Serial No.	Parts catalogue code
			(1) (2) (3)		
1	17233-896-701	COLLAR, AIR CLEANER CASE	(2) - -	-----	VPE4,VPE4/A,VPE7,VPE7/A,VPK,VPX4,VPX4/A,VPX7,VPX7/A,VS37,VS37/A VSD3/A
2	18310-ZH9-V01	MUFFLER COMP.(SDMO)	(2) - -	1106096	----- VSD3
	18310-ZH9-V02		1 - -	-----	VPE4,VPE4/A,VPE7,VPE7/A,VPX4,VPX4/A,VPX7,VPX7/A,VS37,VS37/A VSD3/A
	18310-ZD1-E31	MUFFLER COMP.(SANKEI)	1 - -	1085396	----- VPK
	18310-ZH9-V01	MUFFLER COMP.(SDMO)	1 - -	-----	VSD3
3	18330-ZE2-700	PIPE, EX.	1 - -	-----	VSD3
					VPE4,VPE4/A,VPE7,VPE7/A,VPK,VPX4,VPX4/A,VPX7,VPX7/A,VS37,VS37/A VSD3,VSD3/A
4	18333-ZB4-800	GASKET, EX. PIPE	1 - -	-----	VPE4,VPE4/A,VPE7,VPE7/A,VPK,VPX4,VPX4/A,VPX7,VPX7/A,VS37,VS37/A VSD3,VSD3/A
5	18333-ZE3-800	GASKET, EX. PIPE	1 - -	-----	VPE4,VPE4/A,VPE7,VPE7/A,VPX4,VPX4/A,VPX7,VPX7/A,VS37,VS37/A,VSD3 VSD3/A
			1 - -	2425148	VPK
6	18355-ZB4-630	ARRESTER, SPARK	1 - -	-----	VPE4,VPE4/A,VPE7,VPE7/A,VPK,VPX4,VPX4/A,VPX7,VPX7/A,VS37,VS37/A VSD3,VSD3/A
7	18433-ZF6-W40	COVER COMP., MUFFLER	(1) - -	-----	VPE4,VPE4/A,VPE7,VPE7/A,VPK,VPX4,VPX4/A,VPX7,VPX7/A,VS37,VS37/A VSD3/A
			(1) - -	1106096	----- VSD3
8	18434-ZF6-W40	COVER COMP., RR. MUFFLER	(1) - -	-----	VPE4,VPE4/A,VPE7,VPE7/A,VPK,VPX4,VPX4/A,VPX7,VPX7/A,VS37,VS37/A VSD3/A
			(1) - -	1106096	----- VSD3
9	18436-ZH8-W40	BASE COMP., MUFFLER COVER	(1) - -	-----	VPE4,VPE4/A,VPE7,VPE7/A,VPK,VPX4,VPX4/A,VPX7,VPX7/A,VS37,VS37/A VSD3/A
			(1) - -	1106096	----- VSD3

E-16-3


MUFFLER(4)

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
10	18437-ZF6-W40	STAY, MUFFLER COVER.....	(1)	-	-	-----	VPE4, VPE4/A, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX7, VPX7/A, VS37, VS37/A VSD3/A
			(1)	-	-	1106096	----- VSD3
11	18438-ZF6-W40	PLATE, SET.....	(1)	-	-	-----	VPE4, VPE4/A, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX7, VPX7/A, VS37, VS37/A VSD3/A
			(1)	-	-	1106096	----- VSD3
12	18466-ZH8-W40	SPACER, MUFFLER COVER.....	(3)	-	-	-----	VPE4, VPE4/A, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX7, VPX7/A, VS37, VS37/A VSD3/A
			(3)	-	-	1106096	----- VSD3
13	90050-ZE1-000	SCREW, TAPPING, 5X8.....	(1)	-	-	-----	VPE4, VPE4/A, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX7, VPX7/A, VS37, VS37/A VSD3/A
			(1)	-	-	1106096	----- VSD3
14	90050-ZH8-W40	SCREW, TAPPING, 5X25.....	(2)	-	-	-----	VPE4, VPE4/A, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX7, VPX7/A, VS37, VS37/A VSD3/A
			(2)	-	-	1106096	----- VSD3
15	90002-ZE2-U91	SCREW, TAPPING, 4X8.....	1	-	-	-----	VPE4, VPE4/A, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX7, VPX7/A, VS37, VS37/A VSD3, VSD3/A
16	90302-KF9-900	NUT, HEX., 5MM.....	(3)	-	-	-----	VPE4, VPE4/A, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX7, VPX7/A, VS37, VS37/A VSD3/A
			(3)	-	-	1106096	----- VSD3
17	93891-05012-00	SCREW-WASHER, 5X12.....	(1)	-	-	-----	VPE4, VPE4/A, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX7, VPX7/A, VS37, VS37/A VSD3/A
			(1)	-	-	1106096	----- VSD3
18	93891-06020-07	SCREW-WASHER, 6X20.....	(3)	-	-	-----	VPE4, VPE4/A, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX7, VPX7/A, VS37, VS37/A VSD3/A
			(3)	-	-	1106096	----- VSD3
19	94050-08000	NUT, FLANGE, 8MM.....	2	-	-	-----	VPE4, VPE4/A, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX7, VPX7/A, VS37, VS37/A VSD3, VSD3/A
20	94103-05700	WASHER, PLAIN, 5MM.....	(3)	-	-	-----	VPE4, VPE4/A, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX7, VPX7/A, VS37, VS37/A VSD3/A
			(3)	-	-	1106096	----- VSD3
21	94111-05000	WASHER, SPRING, 5MM.....	(1)	-	-	-----	VPE4, VPE4/A, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX7, VPX7/A, VS37, VS37/A VSD3/A
			(1)	-	-	1106096	----- VSD3
22	95701-08016-08	BOLT, FLANGE, 8X16.....	2	-	-	-----	VPE4, VPE4/A, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX7, VPX7/A, VS37, VS37/A VSD3/A
	95701-08016-00		2	-	-	-----	VSD3
23	95701-08020-08	BOLT, FLANGE, 8X20.....	2	-	-	-----	VPE4, VPE4/A, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX7, VPX7/A
	95701-08020-00		2	-	-	-----	VS37, VS37/A, VSD3, VSD3/A
24	18333-ZF6-W01	GASKET, EX. PIPE.....	1	-	-	2425149	----- VPK

2

E-16-4

MUFFLER(5)

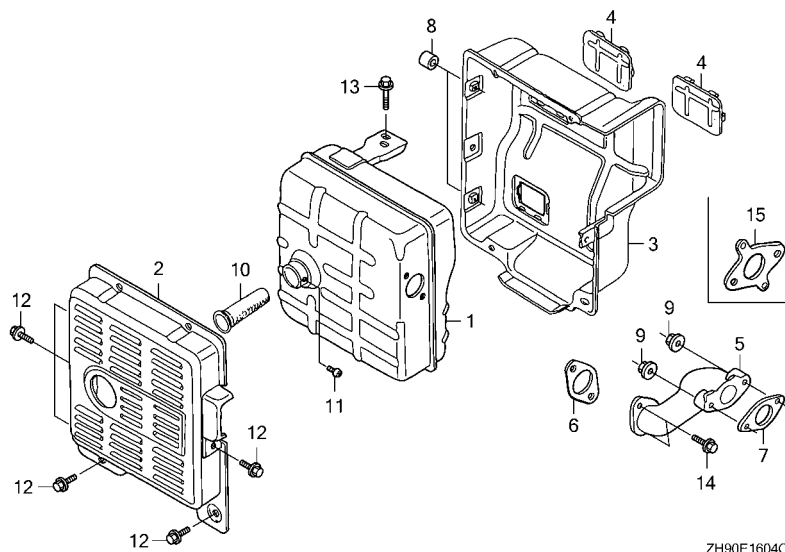


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	3131C5	MUFFLER, EXHAUST	0.2
2	3131D9	PROTECTOR, EXHAUST MUFFLER :OUTER	0.1
3	3131D8	PROTECTOR, EXHAUST MUFFLER :INNER	0.3
4	3131G6	SEAL, MUFFLER PROTECTOR	0.3
5	3131C9	PIPE, EXHAUST	0.2
6	3131B5	GASKET, EXHAUST PIPE	0.2
10	3131A1	ARRESTER, SPARK	0.2
		.INCLUDES: Spark arrester check	

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
1	18310-ZD1-E31	MUFFLER COMP.(SANKEI)	1	-	-	ES3,VMT	
	18310-ZE2-V60	MUFFLER COMP.(TSURUMI)	1	-	-	VKE4,VKX4	
	18310-ZD1-E31	MUFFLER COMP.(SANKEI)	1	-	-	2464914 ES3/A, ES4,VMT/A	
	18310-ZE2-V60	MUFFLER COMP.(TSURUMI)	1	-	-	2465165 VKK,VS3,VS4,VS5	
	18310-ZD1-E32	MUFFLER COMP.(SANKEI)	1	-	-	2464915 ES3/A, ES4,VMT/A	
	18310-ZE2-V61	MUFFLER COMP.(TSURUMI)	1	-	-	2465166 VKK,VS3,VS4,VS5	
2	18320-ZB4-000	PROTECTOR, MUFFLER OUTER	1	-	-	ES3,ES3/A,ES4,VKE4,VKK,VKX4,VMT,VMT/A,VS3,VS4,VS5	
3	18325-ZB4-000	PROTECTOR, MUFFLER INNER	1	-	-	ES3,ES3/A,ES4,VKE4,VKK,VKX4,VMT,VMT/A,VS3,VS4,VS5	
4	18329-ZB4-000	SEAL, MUFFLER PROTECTOR	2	-	-	ES3,ES3/A,ES4,VKE4,VKK,VKX4,VMT,VMT/A,VS3,VS4,VS5	
5	18330-ZH9-D40	PIPE, EX.	1	-	-	ES3,ES3/A,ES4,VS3,VS4,VS5	
	18330-ZE2-700		1	-	-	VKE4,VKK,VKX4,VMT,VMT/A	
6	18333-ZB4-800	GASKET, EX. PIPE	1	-	-	ES3,ES3/A,ES4,VKE4,VKK,VKX4,VMT,VMT/A,VS3,VS4,VS5	
7	18333-ZE3-800	GASKET, EX. PIPE	1	-	-	ES3,VKE4,VKX4,VMT	
			1	-	-	2425148 ES3/A,VMT/A,VS3,VS4	
			1	-	-	2435064 VKK	
8	91552-ZT1-000	COLLAR, 6.9X9	2	-	-	ES3,ES3/A,ES4	
9	94050-08000	NUT, FLANGE, 8MM	2	-	-	ES3,ES3/A,ES4,VKE4,VKK,VKX4,VMT,VMT/A,VS3,VS4,VS5	
10	18355-ZB4-630	ARRESTER, SPARK	1	-	-	VKK	
11	90002-ZE2-U91	SCREW, TAPPING, 4X8	1	-	-	VKK	
12	95701-06012-00	BOLT, FLANGE, 6X12	8	-	-	VKK	
13	95701-08016-08	BOLT, FLANGE, 8X16	2	-	-	VKK	
14	95701-08020-08	BOLT, FLANGE, 8X20	2	-	-	VKK	
15	18333-ZF6-W01	GASKET, EX. PIPE	1	-	-	ES4,VS5	
			1	-	-	2425149 ES3/A,VMT/A,VS3,VS4	
			1	-	-	2435065 VKK	

E-16-5

MUFFLER(6)

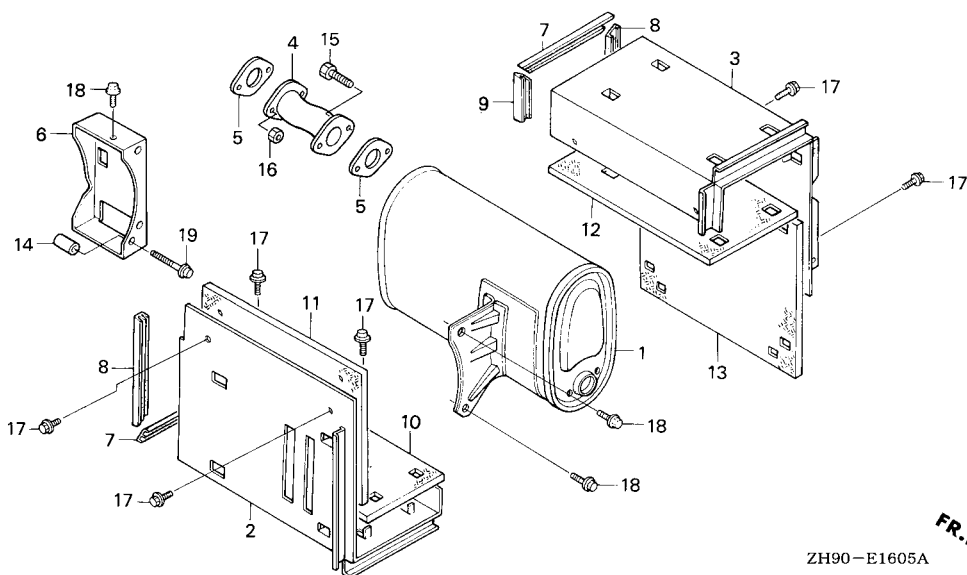


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	3131F7	MUFFLER, EXHAUST(A)	0.3
2	3131L3	DUCT, EXHAUST MUFFLER :RIGHT ..	0.2
3	3131L2	DUCT, EXHAUST MUFFLER :LEFT ..	0.2
4	3131G1	PIPE, EXHAUST(A)	0.3
5	3131H9	GASKET, EXHAUST PIPE(A)	0.3
10	3131L5	INSULATOR A, MUFFLER DUCT :RIGHT	0.2
11	3131L7	INSULATOR B, MUFFLER DUCT :RIGHT	0.2
12	3131L4	INSULATOR A, MUFFLER DUCT :LEFT	0.2
13	3131L6	INSULATOR B, MUFFLER DUCT :LEFT	0.2

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
1	18310-ZB7-003	MUFFLER COMP.	1	-	-	ESS,ESS/A,SJP	
2	18321-ZB7-000	DUCT, LOWER MUFFLER	1	-	-	ESS,ESS/A	
3	18325-ZB7-000	DUCT, UPPER MUFFLER	1	-	-	ESS,ESS/A	
4	18330-ZB7-003	PIPE COMP., EX.	1	-	-	ESS,ESS/A,SJP	
5	18333-ZB7-800	GASKET, EX. PIPE	2	-	-	ESS,ESS/A,SJP	
6	18338-ZB7-000	STAY COMP., MUFFLER	1	-	-	ESS,ESS/A	
7	18412-ZB7-000	SEAL, MUFFLER DUCT(A)	2	-	-	ESS,ESS/A	
8	18413-ZB7-000	SEAL, MUFFLER DUCT(B)	2	-	-	ESS,ESS/A	
9	18414-ZB7-000	SEAL, MUFFLER DUCT(C)	2	-	-	ESS,ESS/A	
10	64181-ZB7-000	INSULATOR A, LOWER MUFFLER DUCT	1	-	-	ESS,ESS/A	
11	64182-ZB7-000	INSULATOR B, LOWER MUFFLER DUCT	1	-	-	ESS,ESS/A	
12	64185-ZB7-000	INSULATOR A, UPPER MUFFLER DUCT	1	-	-	ESS,ESS/A	
13	64186-ZB7-000	INSULATOR B, UPPER MUFFLER DUCT	1	-	-	ESS,ESS/A	
14	91551-ZB7-000	COLLAR, MUFFLER STAY	1	-	-	ESS,ESS/A	
15	92101-08028-0A	BOLT, HEX., 8X28	2	-	-	ESS,ESS/A	
16	94001-08000-0S	NUT, HEX., 8MM	2	-	-	ESS,ESS/A	
17	95701-06012-00	BOLT, FLANGE, 6X12	8	-	-	ESS,ESS/A	
18	95701-08016-00	BOLT, FLANGE, 8X16	3	-	-	ESS,ESS/A	
19	95701-08040-00	BOLT, FLANGE, 8X40	1	-	-	ESS,ESS/A	

E-17

FUEL TANK(1)

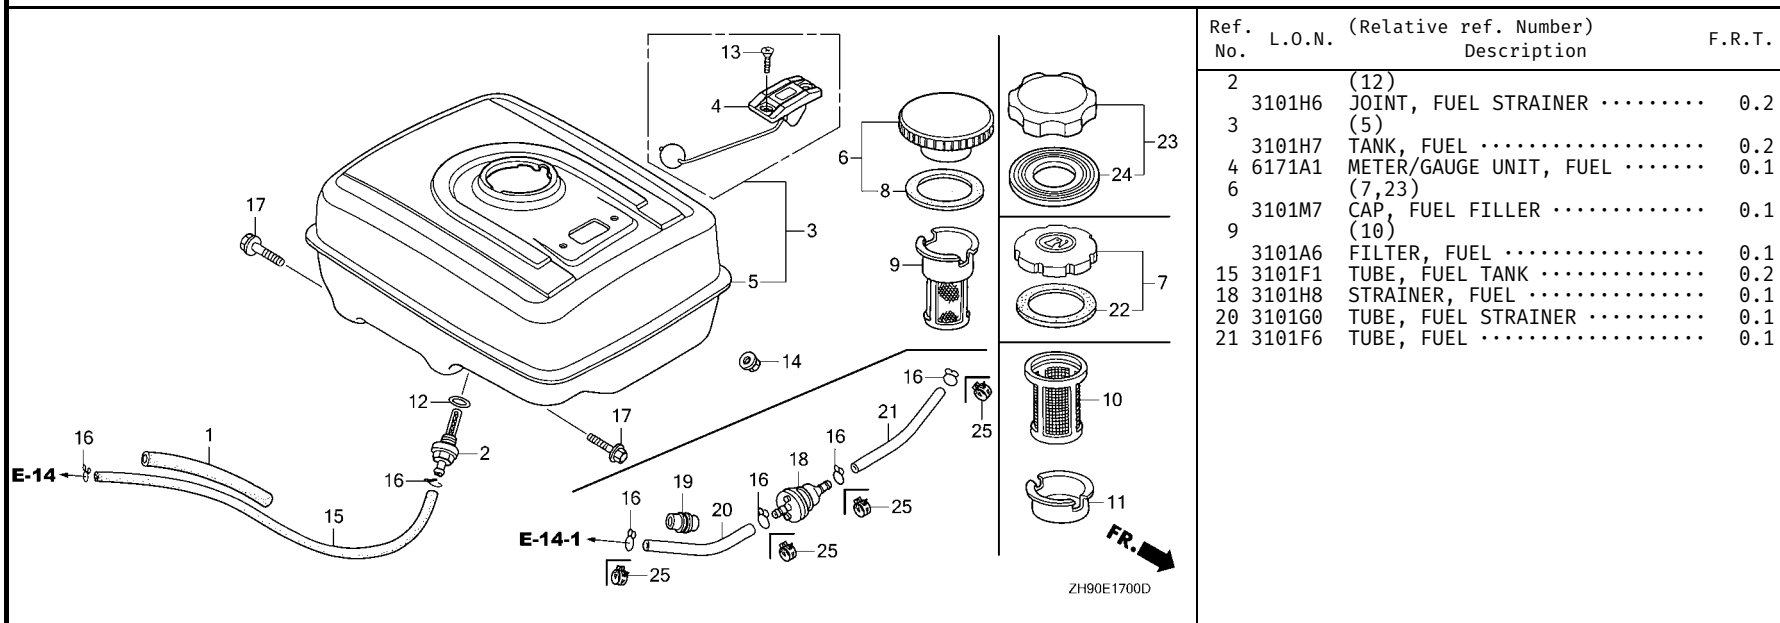

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
2	3101H6	(12) JOINT, FUEL STRAINER	0.2
3	3101H7	(5) TANK, FUEL	0.2
4	6171A1	METER/GAUGE UNIT, FUEL	0.1
6	3101M7	(7,23) CAP, FUEL FILLER	0.1
9	3101A6	(10) FILTER, FUEL	0.1
15	3101F1	TUBE, FUEL TANK	0.2
18	3101H8	STRAINER, FUEL	0.1
20	3101G0	TUBE, FUEL STRAINER	0.1
21	3101F6	TUBE, FUEL	0.1

Ref. No.	Part No.	Description	Reqd. QTY	Serial No.	Parts catalogue code
			(1) (2) (3)		
1	16854-ZH8-000	RUBBER, SUPPORTER(107MM).....	1 - -	-----	ES1, ES1/A, HA2, HA2/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A, LH/A, LHB1, LHB3, LHB5, LHE/A, LHQ4, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LT, LT/A, LTJ, LW/A, LWD, LWD1, LWD1/A, LX/A, LX16, LX6, LX6/A, LX8, LX8/A, LXQ4, LXQ4/A, LXU, LXU/A, PA2, PA2/A, PAE2, PAE2/A, PX/A, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, QA2, QA2/A, QAB1, QAB3, QAB3/A, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAG, QAG/A, QAR2, QAR2/A, QAW, QAW/A, QD/A, QE/A, QH/A, QH26, QH26/A, QHB5, QHE4, QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A, QKE3, QKE3/A, QKE4, QL2, QME2, QME2/A, QMH, QMH/A, QP, QP/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QT, QT/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX/A, QX26, QX26/A, QXB/A, QXB6, QXB6/A, QXB7, QXB7/A, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXK, QXQ4, QXQ4/A, QXU, QXU/A, RA2, RA2/A, RA3, RD/A, RH26, RH26/A, RHE4, RHE4/A, RHQ4, RHQ4/A, RSS, RSS/A, RX/A, RXQ4, RXQ4/A, RXU, RXU/A, SD/A, SE/A, SH/A, SHQ4, SHQ4/A, SJ/A, SJG, SJG/A, SMC4, SMC4/A, SMD, SME1, SME1/A, SME6, SME6/A, SMX2, SN, SN/A, SWA4, SWC4, SWC4/A, SX/A, SX2, SXB/A, SXB7, SXB7/A, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB/A, SXQ4, SXQ4/A, SXU, SXU/A, VA2, VA2/A, VAG2, VAG2/A, VAW1, VD16, VDE, VDE2, VDE2/A, VEB6, VEB6/A, VEB2, VEB2/A, VM2, VM2/A, VMA4, VME2, VME2/A, VME4, VMS2, VMX2, VN17, VN17/A, VNG1, VNG1/A, VNT2, VNT2/A, VS37, VS37/A, VSD, VSD/A, VSD3, VSD3/A, VSD7, VSD7/A, VW12, VW12/A, VWN2, VWN2/A, VX/A, VX26, VXB/A, VXB2, VXB2/A, VXB7, VXB7/A, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8/A, VXG, VXK, VXQ4, VXQ4/A, VXTB, VXU, VXU/A, VXU1, VXU1/A, WMA4, WMT8, WMT8/A, WXE8, WXE8/A, HA, LJ, PA, RA, SJ, SK, VA
	16854-ZE1-000		1 - -	-----	HH, HX, LH, LHE, LW, LX, LXZ, PX, QA, QAE, QD, QE, QH, QHC, QHE, QX, QXB, QXC, QXE, QXB, RD, RH, RHE, RX, SD, SE, SH, SHE, SHEZ, SW, SWE, SX, SXB, SXE, SXEB, VH, VX, VXB, VXE, VXE8

E-17


FUEL TANK(1)

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
(1)	16854-ZH8-000	RUBBER, SUPPORTER(107MM).....	1	-	-	1012865	----- HH, HX, LH, LHE, LW, LX, LXZ, PX, QA, QAE, QD, QE, QH, QHC, QHE, QX, QXB, QXC, QXE, QXEB, RD, RH, RHE, RX, SD, SE, SH, SHE, SHEZ, SW, SWE, SX, SXB, SXE, SXEB, VH, VV, VXB, VXE, VXEB
	16854-ZE1-000		-	(1)	-	-----	L1/A, Q1/A, Q2, R1/A, S1/A, W1/A
	16854-ZH8-000		-	(1)	-	1044603	----- L1, Q1, R1, S1, V1, W1
	16955-ZE1-000	JOINT, FUEL TANK.....	1	-	-	-----	L1, Q1, R1, S1, V1, W1
							ES1, HA, HA2, HA2/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, HH, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A, LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LJ, LJC, LJC/A, LJG, LSS, LT, LT/A, LTJ, LW, LWD, LWD1, LWD1/A, LX, LX/A, LX16, LXE, LXE/A, LXE8, LXE8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ, PA, PA2, PA2/A, PAE2, PAE2/A, PX, PX/A, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, QA, QA2, QA2/A, QAB1, QAB3, QAB3/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAG, QAG4, QAG4/A, QAR2, QAR2/A, QAW, QAW/A, QD, QD/A, QE, QE/A, QH, QH/A, QH26, QH26/A, QHB5, QHC, QHE, QHE4, QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A, QKE3, QKE3/A, QKE4, QL2, QME2, QME2/A, QMH, QMH/A, QP, QP/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QT, QT/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX, QX/A, QX26, QX26/A, QXB, QXB/A, QXB6, QXB6/A, QXB7, QXB7/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXE9/A, QXQ4, QXQ4/A, QXU, QXU/A, RA, RA2, RA2/A, RA3, RD, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSS, RX, RX/A, RXQ4, RXQ4/A, RXU, RXU/A, SD, SD/A, SE, SE/A, SH, SH/A, SHE, SHEZ, SHQ4, SHQ4/A, SJ, SJG, SK, SMC4, SMC4/A, SMD, SME1, SME1/A, SME6, SME6/A, SMX2, SN, SN/A, SW, SWA4, SWC4, SWC4/A, SWE, SX, SX/A, SX2, SXB, SXB/A, SXB7, SXB7/A, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4, SXQ4/A, SXU, SXU/A, VA, VA2, VA2/A, VD16, VEB6, VH, VM2, VM2/A, VMA4, VME2, VME2/A, VME4, VSD, VSD/A, VSD7, VSD7/A, VW22, VX, VX/A, VX26, VXB, VXB/A, VXB2, VXB6, VXB7, VXB7/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8, VXE8/A, VXG, VXK, VXQ4, VXQ4/A, VXTB, VXU, VXU/A, VXU1, VXU1/A, WMA4, WMT8, WMT8/A, WXE8, WXE8/A
			1	-	-	2495470	----- LJ/A, LJG/A, LW/A, RD/A, SJ/A, SJG/A
			1	-	-	2495569	----- ES1/A, RSS/A
	16955-ZE1-010		1	-	-	2495471	----- LJ/A, LJG/A, LW/A, RD/A, SJ/A, SJG/A
	16955-ZE1-000		1	-	-	2495570	----- ES1/A, RSS/A
			-	(1)	-	-----	L1, Q1, Q2, R1, S1, V1, W1, W1/A
			-	(1)	-	2495470	----- L1/A, Q1/A, R1/A, S1/A
	16955-ZE1-010		-	(1)	-	2495471	----- L1/A, Q1/A, R1/A, S1/A
3	17500-ZE2-811ZA	TANK ASSY., FUEL(GAUGE) *NH31*.....MCKINLEY WHITE	1	-	-	-----	LJG, LSS, LTJ, LWD, LWD1, QKE3, QSC, QSC9, SJG, VXG
	17500-ZE2-812ZA	*NH31*.....MCKINLEY WHITE	1	-	-	2205487	----- LJG/A, LWD1/A, QKE3/A, QKE4, QSC9/A, SJG/A
	17500-ZE2-813ZA	*NH31*.....MCKINLEY WHITE	1	-	-	2399494	----- LJG/A, LWD1/A, QKE3/A, QKE4, QSC9/A, SJG/A
	17500-ZE2-811ZA	*NH31*.....MCKINLEY WHITE	1	-	-	2399495	----- LJG/A, LWD1/A, QKE3/A, QKE4, QSC9/A, SJG/A
			-	(1)	-	-----	L1, Q1, Q2, R1, S1, V1, W1
			-	(1)	-	2205487	----- L1/A, Q1/A, R1/A, S1/A, W1/A
	17500-ZE2-812ZA	*NH31*.....MCKINLEY WHITE	-	(1)	-	2205488	----- L1/A, Q1/A, R1/A, S1/A, W1/A
	17500-ZE2-813ZA	*NH31*.....MCKINLEY WHITE	-	(1)	-	2399494	----- L1/A, Q1/A, R1/A, S1/A, W1/A
4	17505-ZE2-013	GAUGE ASSY., FUEL.....	1	-	-	-----	LJG, LJG/A, LSS, LTJ, LWD, LWD1, LWD1/A, QKE3, QKE3/A, QKE4, QSC, QSC9, QSC9/A, SJG, SJG/A, VXG
			-	(1)	-	-----	
5	17510-ZE2-010ZB	TANK COMP., FUEL					
	R8.....BRIGHT RED		1	-	-	-----	ES1
	17510-ZE2-010ZG	*T77*.....SEC WINE RED	1	-	-	-----	ES1

E-17

FUEL TANK(1)

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
(5)	17510-ZE2-010ZA	TANK COMP., FUEL *NH31*.....MCKINLEY WHITE	1	-	-	2205579	ES1/A, HA2/A, HEA2/A, HEA8/A, HX/A, HX26/A, HX8/A, HXQ4/A, LH/A, LHB5 LHE/A, LJ/A, LJC/A, LT/A, LW/A, LX/A, LX8/A, LXQ4/A, LXU/A, PA2/A PAE2/A, PX/A, PX26/A, PXE8/A, PXU/A, QA2/A, QAB3/A, QAE2/A, QAE6/A, QAG/A QAG2/A, QAQ4/A, QAR2/A, QAW/A, QD/A, QE/A, QH/A, QH26/A, QHB5, QHE4/A QHP1/A, QHQ4/A, QHR/A, QHR4/A, QHZ/A, QME2/A, QMH/A, QP/A, QSE/A, QSE2 QSE8/A, QT/A, QWA4/A, QX/A, QX26/A, QXB/A, QXB6/A, QXB7/A, QXC4/A, QXC6/A QXC9/A, QXE/A, QXE4/A, QXE6/A, QXE8/A, QXQ4/A, QXU/A, RA2/A, RD/A, RH26/A RHE4/A, RHQ4/A, RX/A, RXQ4/A, RXU/A, SD/A, SE/A, SH/A, SHQ4/A, SJ/A, SMC4/A SME1/A, SME6/A, SN/A, SWC4/A, SX/A, SXB/A, SXB7/A, SXE/A, SXE4/A, SXE8/A SXEB/A, SXQ4/A, SXU/A, VA2/A, VM2/A, VME2/A, VSD/A, VSD7/A, VX/A, VXB/A VXB7/A, VXE4/A, VXE6/A, VXE7/A, VXE8/A, VXE9/A, VXQ4/A, VXU/A, VXU1/A, WMT8/A WXE8/A
	17510-ZE2-010ZD	*NH1*.....BLACK	1	-	-	2205579	HA2/A, PA2/A, PX/A, PXU/A, QA2/A, QAE2/A, QAQ4/A, QAR2/A, QWA4/A, QWH2/A QXB/A, QXC9/A, RA2/A, SWC4/A, VA2/A, VM2/A, VME2/A, VXE4/A, VXE7/A, VXU/A
	17510-ZE2-010ZE	*NH105*....MAT BLACK(#15-#20)	1	-	-	2205579	VM2/A, VME2/A
	17510-ZE2-020ZD	*NH1*.....BLACK	1	-	-	2400587	SMX2, VMA4, VME4
	17510-ZE2-020ZA	*NH31*.....MCKINLEY WHITE	1	-	-	2400587	SWA4, WMA4
	17510-ZE3-020ZA	*NH31*.....MCKINLEY WHITE	1	-	-	2423431	RSS/A
	17510-ZE2-800ZC	*NH31*.....MCKINLEY WHITE	1	-	-	2437508	QXE9, QXK, VXE8, VXX
	17510-ZE2-800ZA	*NH1*.....BLACK	1	-	-	2437508	QXK, VXE8
	17510-ZE2-010ZD	*NH1*.....BLACK	1	-	-	1041914	HA, QA
	17510-ZE2-010ZE	*NH105*....MAT BLACK(#15-#20)	1	-	-	1041914	VA
	17510-ZE2-010ZA	*NH31*.....MCKINLEY WHITE	1	-	-	1061100	HAQ, QAQ
	17510-ZE2-010ZH	*R280*.....POWER RED	1	-	-	2096865	2205579 ES1/A
	17510-ZE2-020ZG	*T77*.....SEC WINE RED	1	-	-	2205580	ES1/A
	17510-ZE2-020ZH	*R280*.....POWER RED	1	-	-	2205580	2400587 ES1/A
	17510-ZE2-020ZA	*NH31*.....MCKINLEY WHITE	1	-	-	2205580	2400587 ES1/A, HA2/A, HEA2/A, HEA8/A, HX/A, HX26/A, HX8/A, HXQ4/A, LH/A, LHB5 LHE/A, LJ/A, LJC/A, LT/A, LW/A, LX/A, LX8/A, LXQ4/A, LXU/A, PA2/A PAE2/A, PX/A, PX26/A, PXE8/A, PXU/A, QA2/A, QAB3/A, QAE2/A, QAE6/A, QAG/A QAG2/A, QAQ4/A, QAR2/A, QAW/A, QD/A, QE/A, QH/A, QH26/A, QHB5, QHE4/A QHP1/A, QHQ4/A, QHR/A, QHR4/A, QHZ/A, QME2/A, QMH/A, QP/A, QSE/A, QSE2 QSE8/A, QT/A, QWA4/A, QX/A, QX26/A, QXB/A, QXB6/A, QXB7/A, QXC4/A, QXC6/A QXC9/A, QXE/A, QXE4/A, QXE6/A, QXE8/A, QXQ4/A, QXU/A, RA2/A, RD/A, RH26/A RHE4/A, RHQ4/A, RX/A, RXQ4/A, RXU/A, SD/A, SE/A, SH/A, SHQ4/A, SJ/A, SMC4/A SME1/A, SME6/A, SN/A, SWC4/A, SX/A, SXB/A, SXB7/A, SXE/A, SXE4/A, SXE8/A SXEB/A, SXQ4/A, SXU/A, VA2/A, VM2/A, VME2/A, VSD/A, VSD7/A, VX/A, VXB/A VXB7/A, VXE4/A, VXE6/A, VXE7/A, VXE8/A, VXE9/A, VXQ4/A, VXU/A, VXU1/A, WMT8/A WXE8/A
	17510-ZE2-020ZD	*NH1*.....BLACK	1	-	-	2205580	2400587 HA2/A, PA2/A, PX/A, PXU/A, QA2/A, QAE2/A, QAQ4/A, QAR2/A, QWA4/A, QWH2/A QXB/A, QXC9/A, RA2/A, SWC4/A, VA2/A, VM2/A, VME2/A, VXE4/A, VXE7/A, VXU/A
	17510-ZE2-020ZE	*NH105*....MAT BLACK(#15-#20)	1	-	-	2205580	2400587 VM2/A, VME2/A
	17510-ZE2-800ZC	*NH31*.....MCKINLEY WHITE	1	-	-	2400588	HA2/A, HEA2/A, HEA8/A, HX26/A, HX8/A, HXQ4/A, LJC/A, LX8/A, LXQ4/A, LXU/A PA2/A, PAE2/A, PX26/A, PXE8/A, PXU/A, QA2/A, QAE2/A, QAE6/A, QAG/A, QAG2/A QAQ4/A, QAR2/A, QAW/A, QE/A, QH26/A, QHE4/A, QHQ4/A, QHR/A, QHR4/A, QME2/A QSE2, QSE8/A, QWA4/A, QX26/A, QXB/A, QXB6/A, QXB7/A, QXC4/A, QXC6/A QXC9/A, QXE4/A, QXE6/A, QXE8/A, QXQ4/A, QXU/A, RA2/A, RH26/A, RHE4/A RHQ4/A, RXQ4/A, RXU/A, SE/A, SHQ4/A, SMC4/A, SME1/A, SME6/A, SWA4, SWC4/A SXB/A, SXB7/A, SXE4/A, SXE8/A, SXEB/A, SXQ4/A, SXU/A, VA2/A, VM2/A, VME2/A VSD/A, VSD7/A, VXB/A, VXB7/A, VXE4/A, VXE6/A, VXE7/A, VXE8/A, VXE9/A, VXQ4/A VXU1/A, WMA4
	17510-ZE2-800ZA	*NH1*.....BLACK	1	-	-	2400588	HA2/A, PA2/A, PXU/A, QA2/A, QAE2/A, QAQ4/A, QAR2/A, QWA4/A, QWH2/A, QXB/A QXC9/A, RA2/A, SMX2, SWC4/A, VA2/A, VM2/A, VMA4, VME2/A, VME4, VXE4/A VXE7/A
	17510-ZE2-800ZB	*NH105*....MAT BLACK(#15-#20)	1	-	-	2400588	VM2/A, VME2/A
	17510-ZE2-800ZD	*R280*.....POWER RED	1	-	-	2400588	2437508 ES1/A

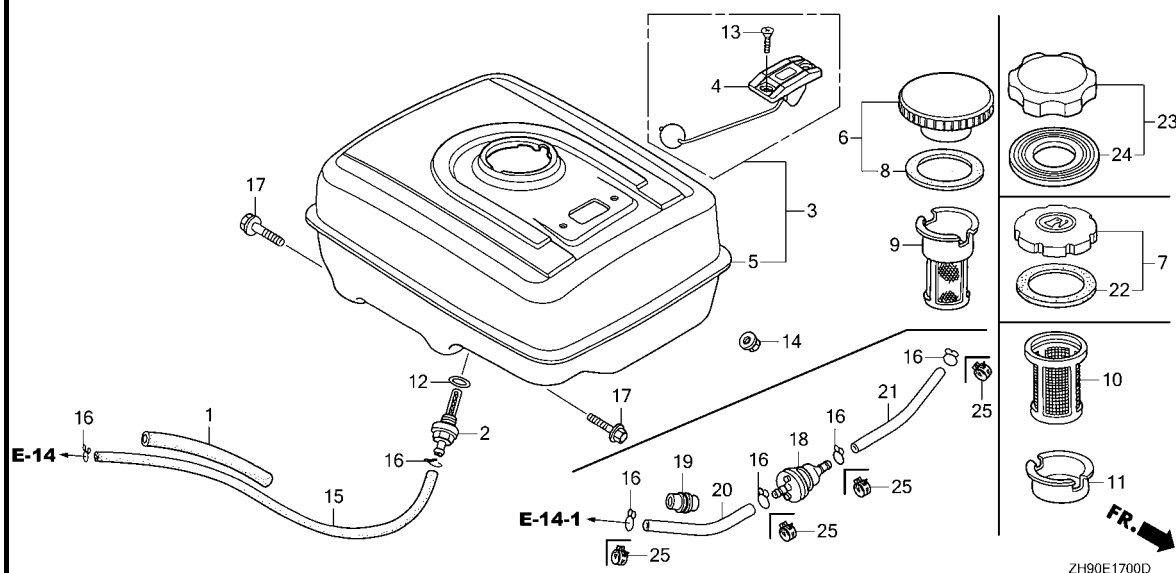

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	GX270 (2)	(3)		
(5)	17510-ZE2-800ZC	TANK COMP., FUEL					
		NH31.....MCKINLEY WHITE	1	-	-	2400588 2437508	ES1/A, HX/A, LH/A, LHB5, LHE/A, LJ/A, LT/A, LW/A, LX/A, LXE/A, PX/A, QAB3/A, QD/A, QH/A, QHB5, QHP1/A, QHZ/A, QMH/A, QP/A, QSE/A, QT/A, QX/A, QXE/A, RD/A, RX/A, SD/A, SH/A, SJ/A, SN/A, SX/A, SXE/A, VX/A, VXU/A, WMT8/A, WXE8/A
	17510-ZE2-800ZA	*NH1*.....BLACK	1	-	-	2400588 2437508	PX/A, VXU/A
	17510-ZE3-800ZC	*NH31*.....MCKINLEY WHITE	1	-	-	2423432	----- RSS/A
	17510-ZE2-801ZD	*R280*.....POWER RED	1	-	-	2437509	----- ES1/A
	17510-ZE2-801ZC	*NH31*.....MCKINLEY WHITE	1	-	-	2437509	----- ES1/A, HX/A, LH/A, LHB5, LHE/A, LJ/A, LT/A, LW/A, LX/A, LXE/A, PX/A, QAB3/A, QD/A, QH/A, QHB5, QHP1/A, QHZ/A, QMH/A, QP/A, QSE/A, QT/A, QX/A, QXE/A, QXE9, QXK, RD/A, RX/A, SD/A, SH/A, SJ/A, SN/A, SX/A, SXE/A, VX/A, VXE8, VXX, VXU/A, WMT8/A, WXE8/A
	17510-ZE2-801ZA	*NH1*.....BLACK	1	-	-	2437509	----- PX/A, QXK, VXE8, VXU/A
	17510-ZE2-010ZA	*NH31*.....MCKINLEY WHITE	-	(1)	-	-----	----- L1, Q1, Q2, R1, S1, V1, W1
			-	(1)	-	2205579	----- L1/A, Q1/A, R1/A, S1/A, W1/A
	17510-ZE2-020ZA	*NH31*.....MCKINLEY WHITE	-	(1)	-	2205580	2400587 L1/A, Q1/A, R1/A, S1/A, W1/A
	17510-ZE2-800ZC	*NH31*.....MCKINLEY WHITE	-	(1)	-	2400588	2437508 L1/A, Q1/A, R1/A, S1/A, W1/A
	17510-ZE2-801ZC	*NH31*.....MCKINLEY WHITE	-	(1)	-	2437509	----- L1/A, Q1/A, R1/A, S1/A, W1/A
6	17620-ZE2-W00	CAP COMP., FUEL FILLER (CHROME PLATED)	1	-	-	-----	----- LHB1, LHB3, LT, QAB1, QAB3, QHZ, QT
			1	-	-	1090815	HA, HA2, HAQ, HEA, HH, HX, LH, LHE, LJ, LTJ, LW, LWD, LX, LXZ, PA, PA2, PX, QA, QA2, QAE, QAE2, QAQ, QD, QE, QH, QHC, QHE, QP, QSC, QX, QXB, QXC, QXE, QXEB, RA, RA2, RD, RH, RHE, RX, SD, SE, SH, SHE, SHEZ, SJ, SK, SN, SW, SWE, SX, SXB, SXE, SXEB, VA, VA2, VH, VSD, VX, VXB, VXE, VXEB, VXU
			1	-	-	2118570	LT/A, QAB3/A, QHZ/A, QT/A
			-	(1)	-	1090815	L1, Q1, Q2, R1, S1, V1, W1
7	17620-ZH7-023	CAP COMP., FUEL FILLER(BLACK)	1	-	-	-----	----- ES1, HEA8, HX8, LJC, LWD1, LXE8, LXU, PAE2, PXE8, PXU, QAG, QAG2, QAW, QHR, QHR4, QKE3, QL2, QMH, QSE8, QWA2, QWA4, QWH2, QXB6, QXB7, QXE8, QXU, RSS, RXU, SXB7, SXE8, SXU, VM2, VME2, VSD7, VXB7, VXE6, VXE7, VXTB, VXU1, WMT8, WXE8


E-17

FUEL TANK(1)

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
(7)	17620-ZH7-013	CAP COMP., FUEL FILLER.....	1	-	-	-----	1227142 HEA2, HX26, HXQ4, LHQ4, LJG, LSS, LX16, LXE, LXQ4, PX26, QAE6, QAQ4, QAR2, QH26, QHE4, QHP1, QHQ4, QME2, QSC9, QSE, QX26, QXC4, QXC6, QXC9, QXE4, QXE6, QXQ4, RH26, RHE4, RHQ4, RXQ4, SHQ4, SJG, SMC4, SMD, SME1, SME6, SWC4, SX2, SXE4, SXQ4, VD16, VEB6, VW22, VX26, VXB2, VXB6, VXE4, VXG, VXQ4
	17620-ZH7-023	CAP COMP., FUEL FILLER(BLACK)	1	-	-	-----	2118570 ES1/A, HA2/A, HEA2/A, HEA8/A, HX/A, HX26/A, HX8/A, HXQ4/A, LH/A, LHB5, LHE/A, LJ/A, LJC/A, LJG/A, LW/A, LWD1/A, LX/A, LXE/A, LXE8/A, LXQ4/A, LXU/A, PA2/A, PAE2/A, PX/A, PX26/A, PXE8/A, PXU/A, QA2/A, QAE2/A, QAE6/A, QAG/A, QAG2/A, QAQ4/A, QAR2/A, QAW/A, QD/A, QE/A, QH/A, QH26/A, QHB5, QHE4/A, QHP1/A, QHQ4/A, QHR/A, QHR4/A, QKE3/A, QKE4, QME2/A, QMH/A, QP/A, QSC9/A, QSE/A, QSE2, QSE8/A, QWA4/A, QWH2/A, QX/A, QX26/A, QXB/A, QXB6/A, QXB7/A, QXC4/A, QXC6/A, QXC9/A, QXE/A, QXE4/A, QXE6/A, QXE8/A, QXQ4/A, QXU/A, RA2/A, RD/A, RH26/A, RHE4/A, RHQ4/A, RSS/A, RX/A, RXQ4/A, RXU/A, SD/A, SE/A, SH/A, SHQ4/A, SJ/A, SJG/A, SMC4/A, SME1/A, SME6/A, SN/A, SWC4/A, SX/A, SXB/A, SXB7/A, SXE/A, SXE4/A, SXE8/A, SXEB/A, SXQ4/A, SXU/A, VA2/A, VM2/A, VME2/A, VSD/A, VSD7/A, VX/A, VXB/A, VXB7/A, VXE4/A, VXE6/A, VXE7/A, VXE8/A, VXQ4/A, VXU/A, VXU1/A, WMT8/A, WXE8/A
	17620-ZH7-013	CAP COMP., FUEL FILLER.....	1	-	-	1090816	1227142 HA, HA2, HAQ, HEA, HH, HX, LH, LHE, LJ, LTJ, LW, LWD, LX, LXZ, PA, PA2, PX, QA, QA2, QAE, QAE2, QAQ, QD, QE, QH, QHC, QHE, QP, QSC, QX, QXB, QXC, QXE, QXEB, RA, RA2, RD, RH, RHE, RX, SD, SE, SH, SHE, SHEZ, SJ, SK, SN, SW, SWE, SX, SXB, SXE, SXEB, VA, VA2, VH, VSD, VX, VXB, VXE, VXE8, VXU
	17620-ZH7-023	CAP COMP., FUEL FILLER(BLACK)	1	-	-	1227143	----- HA, HA2, HAQ, HEA, HEA2, HH, HX, HX26, HXQ4, LH, LHE, LHQ4, LJ, LJG, LSS, LTJ, LW, LWD, LX, LX16, LXE, LXQ4, LXZ, PA, PA2, PX, PX26, QA, QA2, QAE, QAE2, QAE6, QAQ, QAQ4, QAR2, QD, QE, QH, QH26, QHC, QHE, QHE4, QHP1, QHQ4, QME2, QP, QSC, QSC9, QSE, QX, QX26, QXB, QXC, QXC4, QXC6, QXC9, QXE, QXE4, QXE6, QXEB, QXQ4, RA, RA2, RD, RH, RH26, RHE, RHE4, RHQ4, RX, RXQ4, SD, SE, SH, SHE, SHEZ, SHQ4, SJ, SJG, SK, SMC4, SMD, SME1, SME6, SN, SW, SWC4, SWE, SX, SX2, SXB, SXE, SXE4, SXEB, SXQ4, VA, VA2, VD16, VEB6, VH, VSD, VW22, VX, VX26, VXB, VXB2, VXB6, VXE, VXE4, VXE8, VXG, VXQ4, VXU
	17620-ZH7-013	CAP COMP., FUEL FILLER.....	-	(1)	-	-----	2118570 L1/A, Q1/A, R1/A, S1/A, W1/A
	17620-ZH7-023	CAP COMP., FUEL FILLER(BLACK)	-	(1)	-	1090816	----- V1
	17620-ZH7-023	CAP COMP., FUEL FILLER(BLACK)	-	(1)	-	1090816	1227142 L1, Q1, Q2, R1, S1, W1
8	17631-329-003	PACKING, FUEL FILLER CAP (39X58X3)	-	(1)	-	1227143	----- L1, Q1, Q2, R1, S1, W1
			1	-	-	-----	LHB1, LHB3, LT, QAB1, QAB3, QHZ, QT
			1	-	-	-----	1010815 HH, HX, LH, LHE, LW, LX, LXZ, PX, QD, QE, QH, QHC, QHE, QP, QX, QXB, QXE, QXEB, RD, RH, RHE, RX, SD, SE, SH, SHE, SHEZ, SN, SW, SWE, SX, SXB, SXE, SXEB, VH, VSD, VX, VXB, VXE, VXE8, VXU
			1	-	-	-----	1090815 HA, HA2, HAQ, HEA, LJ, LTJ, LWD, PA, PA2, QA, QA2, QAE, QAE2, QAQ, QSC, QXC, RA, RA2, SJ, SK, VA, VA2
			1	-	-	-----	2118570 LT/A, QAB3/A, QHZ/A, QT/A
			-	(1)	-	-----	1010815 Q2
			-	(1)	-	-----	1090815 L1, Q1, R1, S1, V1, W1
9	17672-ZE2-W01	FILTER, FUEL.....	1	-	-	-----	----- ES1, ES1/A, HA2/A, HEA2, HEA2/A, HEA8, HEA8/A, LHB3, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LT, LT/A, LTJ, LW/A, LWD1, LWD1/A, PA2/A, PAE2, PAE2/A, QA2/A, QAB1, QAB3, QAB3/A, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAQ4, QAQ4/A, QAR2, QAR2/A, QAW, QAW/A, QE/A, QKE3, QKE3/A, QKE4, QL2, QME2, QME2/A, QP/A, QT, QT/A, QX26, QX26/A, RA2/A, RA3, RSS, RSS/A, SE/A, SJ/A, SJG, SJG/A, SMC4, SMC4/A, SMD, SMX2, VA2/A, VM2, VM2/A, VME2, VME2/A, VW22, WMA4, WMT8, WMT8/A, WXE8, WXE8/A
	17672-ZE2-W00		1	-	-	-----	1033679 LJ, LW, QE, QP, SE, SJ, SK, SW, SWE
	17672-ZE2-W01		1	-	-	-----	1241083 QSC9
			1	-	-	1065525	----- HA, HA2, HAQ, HEA, LJ, LW, PA, PA2, QA, QA2, QAE, QAE2, QAQ, QE, QP, QSC, RA, RA2, SE, SJ, SK, SW, SWE, VA, VA2
			-	(1)	-	-----	L1/A, Q1/A, R1/A, S1/A, W1/A
	17672-ZE2-W00		-	(1)	-	-----	1033679 L1, Q1, R1, S1, V1, W1
	17672-ZE2-W01		-	(1)	-	1065525	----- L1, Q1, Q2, R1, S1, V1, W1

FR.

ZH90E1700D

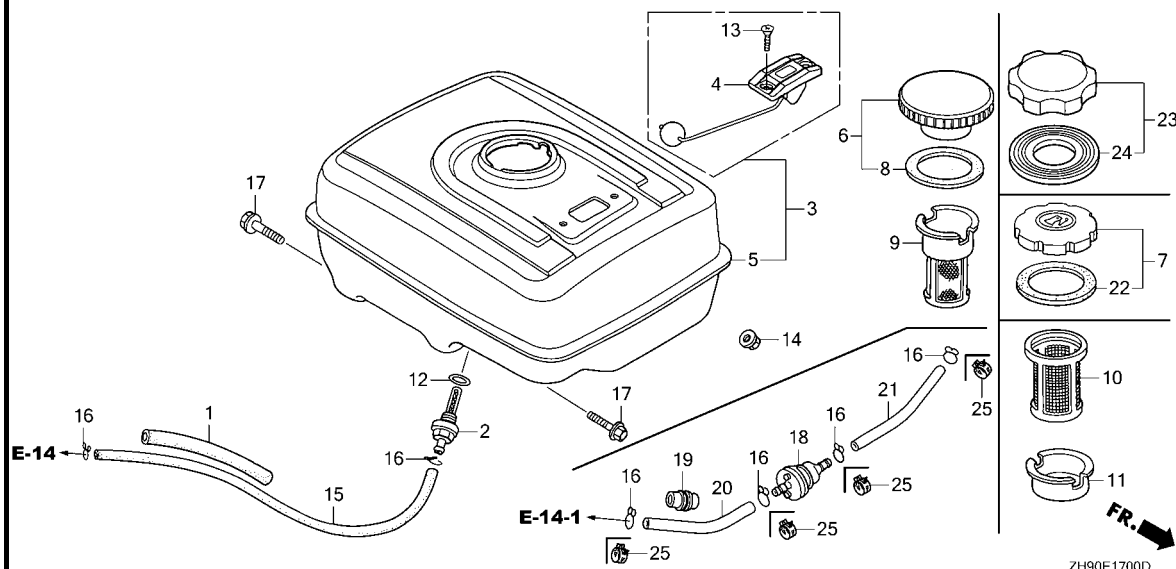


Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code	
			(1)	(2)	(3)			
10	17672-880-000	FILTER, FUEL	1	-	-	-----	-----	QSC9/A
			1	-	-	-----	1065524	HA, HA2, HAQ, HEA, LJ, PA, PA2, QA, QA2, QAE, QAE2, QAQ, QSC, RA, RA2, SJ, SK, VA
								VA2
			1	-	-	1033680	1065524	LW, QE, QP, SE, SW, SWE
			1	-	-	1241084	-----	QSC9
			-	(1)	-	-----	1065524	Q2
			-	(1)	-	1033680	1065524	L1, Q1, R1, S1, V1, W1
11	17673-893-000	HOLDER, FUEL FILTER	1	-	-	-----	-----	QSC9/A
			1	-	-	-----	1065524	HA, HA2, HAQ, HEA, LJ, PA, PA2, QA, QA2, QAE, QAE2, QAQ, QSC, RA, RA2, SJ, SK, VA
								VA2
			1	-	-	1033680	1065524	LW, QE, QP, SE, SW, SWE
			1	-	-	1241084	-----	QSC9
			-	(1)	-	-----	1065524	Q2
			-	(1)	-	1033680	1065524	L1, Q1, R1, S1, V1, W1

FUEL TANK(1)

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	GX270 (2)	(3)		
12	91353-671-004	O-RING, 14MM(NOK)	1	-	-	-----	ES1, ES1/A, HA, HA2, HA2/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, HH, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A, LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LT, LT/A, LTJ, LW, LW/A, LWD, LWD1, LWD1/A, LX, LX/A, LX16, LXE, LXE/A, LXE8, LXE8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ, PA, PA2, PA2/A, PAE2, PAE2/A, PX, PX/A, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, QA, QA2, QA2/A, QAB1, QAB3, QAB3/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAQ, QAQ4, QAQ4/A, QAR2, QAR2/A, QAW, QAW/A, QD, QD/A, QE, QE/A, QH, QH/A, QH26, QH26/A, QHB5, QHC, QHE, QHE4, QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A, QKE3, QKE3/A, QKE4, QL2, QME2, QME2/A, QMH, QMH/A, QP, QP/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QT, QT/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX, QX/A, QX26, QX26/A, QXB, QXB/A, QXB6, QXB6/A, QXB7, QXB7/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXEB, QXK, QXQ4, QXQ4/A, QXU, QXU/A, RA, RA2, RA2/A, RA3, RD, RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSS, RSS/A, RX, RX/A, RXQ4, RXQ4/A, RXU, RXU/A, SD, SD/A, SE, SE/A, SH, SH/A, SHE, SHEZ, SHQ4, SHQ4/A, SJ, SJ/A, SJG, SJG/A, SK, SMC4, SMC4/A, SMD, SME1, SME1/A, SME6, SME6/A, SMX2, SN, SN/A, SW, SWA4, SWC4, SWC4/A, SWE, SX, SX/A, SX2, SXB, SXB/A, SXB7, SXB7/A, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4, SXQ4/A, SXU, SXU/A, VA, VA2, VA2/A, VD16, VEB6, VH, VM2, VM2/A, VMA4, VME2, VME2/A, VME4, VMS2, VMX2, VSD, VSD/A, VSD7, VSD7/A, VW22, VX, VX/A, VX26, VXB, VXB/A, VXB2, VXB6, VXB7, VXB7/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8, VXE8/A, VXG, VXX, VXQ4, VXQ4/A, VXTB, VXU, VXU/A, VXU1, VXU1/A, WMA4, WMT8, WMT8/A, WXE8, WXE8/A
13	93600-05010-0A	SCREW, FLAT, 5X10	2	(1) -	-	-----	LJG, LJG/A, LSS, LTJ, LWD, LWD1, LWD1/A, QKE3, QKE3/A, QKE4, QSC, QSC9, QSC9/A, SJG, SJG/A, VXG
14	94050-08000	NUT, FLANGE, 8MM	2	(2) -	-	-----	ES1, ES1/A, HA, HA2, HA2/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, HH, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A, LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LT, LT/A, LTJ, LW, LW/A, LWD, LWD1, LWD1/A, LX, LX/A, LX16, LXE, LXE/A, LXE8, LXE8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ, PA, PA2, PA2/A, PAE2, PAE2/A, PX, PX/A, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, QA, QA2, QA2/A, QAB1, QAB3, QAB3/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAQ, QAQ4, QAQ4/A, QAR2, QAR2/A, QAW, QAW/A, QD, QD/A, QE, QE/A, QH, QH/A, QH26, QH26/A, QHB5, QHC, QHE, QHE4, QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A, QKE3, QKE3/A, QKE4, QL2, QME2, QME2/A, QMH, QMH/A, QP, QP/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QT, QT/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX, QX/A, QX26, QX26/A, QXB, QXB/A, QXB6, QXB6/A, QXB7, QXB7/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXEB, QXK, QXQ4, QXQ4/A, QXU, QXU/A, RA, RA2, RA2/A, RA3, RD, RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSS, RSS/A, RX, RX/A, RXQ4, RXQ4/A, RXU, RXU/A, SD, SD/A, SE, SE/A, SH, SH/A, SHE, SHEZ, SHQ4, SHQ4/A, SJ, SJ/A, SJG, SJG/A, SK, SKE1, SMC4, SMC4/A, SMD, SME1, SME1/A, SME6, SME6/A, SMX2, SN, SN/A, SW, SWA4, SWC4, SWC4/A, SWE, SX, SX/A, SX2, SXB, SXB/A, SXB7, SXB7/A, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4, SXQ4/A, SXU, SXU/A, VA, VA2, VA2/A, VD16, VDE, VEB6, VH, VM2, VM2/A, VMA4, VME2, VME2/A, VME4, VMS2, VMX2, VPX7, VPX7/A, VS37, VS37/A, VSD, VSD/A, VSD7, VSD7/A, VW22, VX, VX/A, VX26, VXB, VXB/A, VXB2, VXB6, VXB7, VXB7/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8, VXE8/A, VXG, VXX, VXQ4, VXQ4/A, VXTB, VXU, VXU/A, VXU1, VXU1/A, WMA4, WMT8, WMT8/A, WXE8, WXE8/A

FUEL TANK(1)

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	GX270 (2)	(3)		
15)	95001-45222-40	TUBE, FUEL, 4.5X222 (95001-45001-60M)	-	(1)	-		
16	95002-02080	CLIP, TUBE(B8).....	2	-	-	-----	ES1, ES1/A, HA, HA2, HA2/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, HH, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A, LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LT, LT/A, LTJ, LW, LW/A, LWD, LWD1, LWD1/A, LX, LX/A, LX16, LXE, LXE/A, LXE8, LXE8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ, PA, PA2, PA2/A, PAE2, PAE2/A, PX, PX/A, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, QA, QA2, QA2/A, QAB1, QAB3, QAB3/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAQ, QAQ4, QAQ4/A, QAR2, QAR2/A, QAW, QAW/A, QD, QD/A, QE, QE/A, QH, QH/A, QH26, QH26/A, QHB5, QHC, QHE, QHE4, QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A, QKE3, QKE3/A, QKE4, QL2, QME2, QME2/A, QMH, QMH/A, QP, QP/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QT, QT/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX, QX/A, QX26, QX26/A, QXB, QXB/A, QXB6, QXB6/A, QXB7, QXB7/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXE9, QXK, QXQ4, QXQ4/A, QXU, QXU/A, RA, RA2, RA2/A, RA3, RD, RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSS, RSS/A, RX, RX/A, RXQ4, RXQ4/A, RXU, RXU/A, SD, SD/A, SE, SE/A, SH, SH/A, SHE, SHEZ, SHQ4, SHQ4/A, SJ, SJ/A, SJG, SJG/A, SK, SMC4, SMC4/A, SMD, SME1, SME1/A, SME6, SME6/A, SMX2, SN, SN/A, SW, SWA4, SWC4, SWC4/A, SWE, SX, SX/A, SX2, SXB, SXB/A, SXB7, SXB7/A, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4, SXQ4/A, SXU, SXU/A, VA, VA2, VA2/A, VAG2, VAG2/A, VAW, VAW1, VD16, VDE, VDE2, VDE2/A, VEB6, VH, VKB2, VKB2/A, VM2, VM2/A, VMA4, VME2, VME2/A, VME4, VMS2, VMT, VMT/A, VMX2, VN17, VN17/A, VNG1, VNG1/A, VNT2, VNT2/A, VS37, VS37/A, VSD, VSD/A, VSD3, VSD3/A, VSD7, VSD7/A, VSH7, VW12, VW12/A, VW22, VWN2, VWN2/A, VX, VX/A, VX26, VXB, VXB/A, VXB2, VXB2, VXB7, VXB7/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8, VXE8/A, VXE9, VXE9, VXX, VXXQ4, VXXQ4/A, VXTB, VXU, VXU/A, VXU1, VXU1/A, WMA4, WMT8, WMT8/A, WXE8, WXE8/A, VKE4, VKX4, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A
			4	-	-	-----	
			-	(2)	-		
17	95701-08025-00	BOLT, FLANGE, 8X25.....	2	-	-	-----	ES1, ES1/A, HA2, HA2/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, HX/A, HX26, HX26/A, HX8/A, HXQ4, HXQ4/A, LH/A, LHB1, LHB3, LHB5, LHE/A, LHQ4, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LT, LT/A, LTJ, LW/A, LWD, LWD1, LWD1/A, LX/A, LX16, LXE, LXE/A, LXE8, LXE8/A, LXQ4, LXQ4/A, LXU/A, PA2, PA2/A, PAE2, PAE2/A, PX, PX/A, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, QA2, QA2/A, QAB1, QAB3, QAB3/A, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAQ, QAQ4, QAQ4/A, QAR2, QAR2/A, QAW, QAW/A, QD/A, QE/A, QH/A, QH26, QH26/A, QHB5, QHE4, QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A, QKE3, QKE3/A, QKE4, QL2, QME2, QME2/A, QMH, QMH/A, QP/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QT, QT/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX/A, QX26, QX26/A, QXB/A, QXB6, QXB6/A, QXB7, QXB7/A, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8/A, QXE9, QXK, QXQ4, QXQ4/A, QXU/A, RA2, RA2/A, RA3, RD/A, RH26, RH26/A, RHE4, RHE4/A, RHQ4, RHQ4/A, RSS, RSS/A, RX/A, RXQ4, RXQ4/A, RXU/A, SD/A, SE/A, SH/A, SHQ4, SHQ4/A, SJ/A, SJG, SJG/A, SMC4, SMC4/A, SMD, SME1, SME1/A, SME6, SME6/A, SMX2, SN, SN/A, SWA4, SWC4, SWC4/A, SX/A, SX2, SXB/A, SXB7, SXB7/A, SXE/A, SXE4, SXE4/A, SXE8/A, SXEB/A, SXQ4, SXQ4/A, SXU/A, VA2, VA2/A, VD16, VEB6, VM2, VM2/A, VMA4, VME2, VME2/A, VME4, VSD, VSD/A, VSD7, VSD7/A, VW22, VX/A, VX26, VXB/A, VXB2, VXB6, VXB7, VXB7/A, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8, VXE8/A, VXE9, VXE9, VXX, VXXQ4, VXXQ4/A, VXTB, VXU, VXU1, VXU1/A, WMA4, WMT8, WMT8/A, WXE8, WXE8/A
	95900-08025-00		2	-	-	-----	HA, HH, HX, HX8, LH, LHE, LJ, LW, LX, LXU, LXZ, PA, QA, QAE, QD, QE, QH, QHC, QHE, QP, QX, QXB, QXC, QXE, QXE8, QXB, QXU, RA, RD, RHE, RX, RXU, SD, SE, SH, SHE, SHEZ, SJ, SK, SW, SWE, SX, SXB, SXE, SXE8, SXEB, SXU, VA, VH, VX, VXB, VXE, VXE8
			-	(2)	-	-----	L1, Q1, Q2, R1, S1, V1, W1
	95701-08025-00		-	(2)	-	-----	L1/A, Q1/A, R1/A, S1/A, W1/A

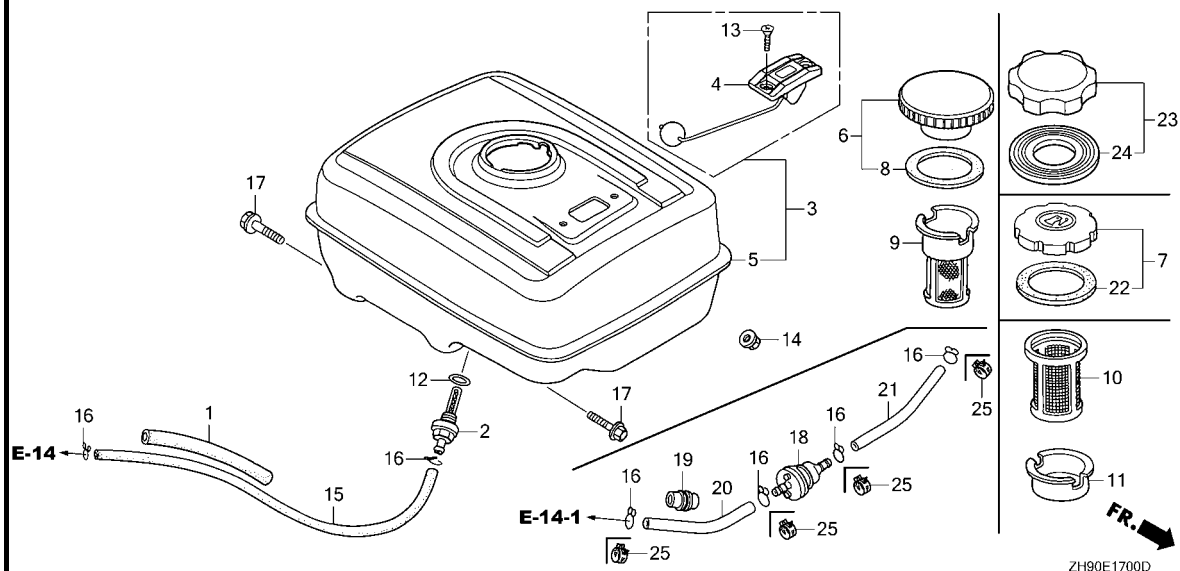

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
18	16910-GB2-005	STRAINER COMP., FUEL	1	-	-	-----	VKE4,VKK,VKX4,VPE4,VPE4/A,VPE5,VPE7,VPE7/A,VPK,VPX4,VPX4/A,VPX5
19	90854-ZB3-000	RUBBER, FUEL(9X15X20)	1	-	-	-----	VPX7,VPX7/A
20	95001-45120-40	TUBE, FUEL, 4.5X120 (95001-45001-60M)	1	-	-	-----	VKE4,VKK,VKX4,VPE4,VPE4/A,VPE5,VPE7,VPE7/A,VPK,VPX4,VPX4/A,VPX5
	91424-Z5J-801	TUBE, FUEL, 4.5X120(FKM)	1	-	-	-----	VPX7,VPX7/A
	91424-Z5J-802		1	-	-	2466575	VKK
21	95001-45150-40	TUBE, FUEL, 4.5X150 (95001-45001-60M)	1	-	-	-----	VKE4,VKK,VKX4,VPE4,VPE4/A,VPE5,VPE7,VPE7/A,VPK,VPX4,VPX4/A,VPX5,VPX7
	91424-Z4J-801	TUBE, FUEL, 4.5X150(FKM)	1	-	-	-----	VPX7/A
	91424-Z4J-802		1	-	-	2466575	VKK


E-17

FUEL TANK(1)

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
22	17631-ZH7-003	PACKING, FUEL FILLER CAP (39X58X3)	1	-	-	-----	ES1, HEA2, HEA8, HX26, HX8, HXQ4, LHQ4, LJC, LJG, LSS, LWD1, LX16, LXE, LXE8, LXQ4, LXU, PAE2, PX26, PXE8, PXU, QAE6, QAG, QAG2, QAQ4, QAR2, QAW, QH26, QHE4, QHP1, QHQ4, QHR, QHR4, QKE3, QL2, QME2, QMH, QSC9, QSE, QSE8, QWA2, QWA4, QWH2, QX26, QXB6, QXB7, QXC4, QXC6, QXC9, QXE4, QXE6, QXE8, QXQ4, QXU, RH26, RHE4, RHQ4, RSS, RXQ4, RXU, SHQ4, SJG, SMC4, SMD, SME1, SME6, SWC4, SX2, SXB7, SXE4, SXE8, SXQ4, SXU, VD16, VEB6, VM2, VME2, VSD7, VW22, VX26, VXB2, VXB6, VXB7, VXE4, VXE6, VXE7, VXG, VXQ4, VXTB, VXU1, WMT8, WXE8
			1	-	-	2118570	ES1/A, HA2/A, HEA2/A, HEA8/A, HX/A, HX26/A, HX8/A, HXQ4/A, LH/A, LHB5, LHE/A, LJ/A, LJC/A, LJG/A, LW/A, LWD1/A, LX/A, LXE/A, LXE8/A, LXQ4/A, LXU/A, PA2/A, PAE2/A, PX/A, PX26/A, PXE8/A, PXU/A, QA2/A, QAE2/A, QAE6/A, QAG/A, QAG2/A, QAQ4/A, QAR2/A, QAW/A, QD/A, QE/A, QH/A, QH26/A, QHB5, QHE4/A, QHP1/A, QHQ4/A, QHR/A, QHR4/A, QKE3/A, QKE4, QME2/A, QMH/A, QP/A, QSC9/A, QSE/A, QSE2, QSE8/A, QWA4/A, QWH2/A, QX/A, QX26/A, QXB/A, QXB6/A, QXB7/A, QXC4/A, QXC6/A, QXC9/A, QXE/A, QXE4/A, QXE6/A, QXE8/A, QXQ4/A, QXU/A, RA2/A, RD/A, RH26/A, RHE4/A, RHQ4/A, RSS/A, RX/A, RXQ4/A, RXU/A, SD/A, SE/A, SH/A, SHQ4/A, SJ/A, SJG/A, SMC4/A, SME1/A, SME6/A, SN/A, SWC4/A, SX/A, SXB/A, SXB7/A, SXE/A, SXE4/A, SXE8/A, SXEB/A, SXQ4/A, SXU/A, VA2/A, VM2/A, VME2/A, VSD/A, VSD7/A, VX/A, VXB/A, VXB7/A, VXE4/A, VXE6/A, VXE7/A, VXE8/A, VXQ4/A, VXU/A, VXU1/A, WMT8/A, WXE8/A
			1	-	-	1010816	HH, HX, LH, LHE, LW, LX, LXZ, PX, QD, QE, QH, QHC, QHE, QP, QX, QXB, QXE, QXEB, RD, RH, RHE, RX, SD, SE, SH, SHE, SHEZ, SN, SW, SWE, SX, SXB, SXE, SXEB, VH, VSD, VX, VXB, VXE, VXEB, VXU
			1	-	-	1090816	HA, HA2, HAQ, HEA, LJ, LTJ, LWD, PA, PA2, QA, QA2, QAE, QAE2, QAQ, QSC, QXC, RA, RA2, SJ, SK, VA, VA2
			-	(1)	-	2118570	L1/A, Q1/A, R1/A, S1/A, W1/A
			-	(1)	-	1010816	Q2
			-	(1)	-	1090816	L1, Q1, R1, S1, V1, W1
23	17620-Z0T-305	CAP COMP., FUEL FILLER (CHROME PLATED)(TOYOSHA)	1	-	-	-----	QXE9, QXK, RA3, SMX2, SWA4, VMA4, VME4, VXE8, VXX, WMA4
			1	-	-	2118571	ES1/A, HA2/A, HEA2/A, HEA8/A, HX/A, HX26/A, HX8/A, HXQ4/A, LH/A, LHB5, LHE/A, LJ/A, LJC/A, LJG/A, LT/A, LW/A, LWD1/A, LX/A, LXE/A, LXE8/A, LXQ4/A, LXU/A, PA2/A, PAE2/A, PX/A, PX26/A, PXE8/A, PXU/A, QA2/A, QAB3/A, QAE2/A, QAE6/A, QAG/A, QAG2/A, QAQ4/A, QAR2/A, QAW/A, QD/A, QE/A, QH/A, QH26/A, QHB5, QHE4/A, QHP1/A, QHQ4/A, QHR/A, QHR4/A, QHZ/A, QKE3/A, QKE4, QME2/A, QMH/A, QP/A, QSC9/A, QSE/A, QSE2, QSE8/A, QT/A, QWA4/A, QWH2/A, QX/A, QX26/A, QXB/A, QXB6/A, QXB7/A, QXC4/A, QXC6/A, QXC9/A, QXE/A, QXE4/A, QXE6/A, QXE8/A, QXQ4/A, QXU/A, RA2/A, RD/A, RH26/A, RHE4/A, RHQ4/A, RSS/A, RX/A, RXQ4/A, RXU/A, SD/A, SE/A, SH/A, SHQ4/A, SJ/A, SJG/A, SMC4/A, SME1/A, SME6/A, SN/A, SWC4/A, SX/A, SXB/A, SXB7/A, SXE/A, SXE4/A, SXE8/A, SXEB/A, SXQ4/A, SXU/A, VA2/A, VM2/A, VME2/A, VSD/A, VSD7/A, VX/A, VXB/A, VXB7/A, VXE4/A, VXE6/A, VXE7/A, VXEB/A, VXQ4/A, VXU/A, VXU1/A, WMT8/A, WXE8/A, L1/A, Q1/A, R1/A, S1/A, W1/A
24	17631-Z0T-812	PACKING, FUEL FILLER CAP (39X62X3)(TOYOSHA)	1	-	-	-----	QXE9, QXK, RA3, SMX2, SWA4, VMA4, VME4, VXE8, VXX, WMA4
			1	-	-	2118571	ES1/A, HA2/A, HEA2/A, HEA8/A, HX/A, HX26/A, HX8/A, HXQ4/A, LH/A, LHB5, LHE/A, LJ/A, LJC/A, LJG/A, LT/A, LW/A, LWD1/A, LX/A, LXE/A, LXE8/A, LXQ4/A, LXU/A, PA2/A, PAE2/A, PX/A, PX26/A, PXE8/A, PXU/A, QA2/A, QAB3/A, QAE2/A, QAE6/A, QAG/A, QAG2/A, QAQ4/A, QAR2/A, QAW/A, QD/A, QE/A, QH/A, QH26/A, QHB5, QHE4/A, QHP1/A, QHQ4/A, QHR/A, QHR4/A, QHZ/A, QKE3/A, QKE4, QME2/A, QMH/A, QP/A, QSC9/A, QSE/A, QSE2, QSE8/A, QT/A, QWA4/A, QWH2/A, QX/A, QX26/A, QXB/A, QXB6/A, QXB7/A, QXC4/A, QXC6/A, QXC9/A, QXE/A, QXE4/A, QXE6/A, QXE8/A, QXQ4/A, QXU/A, RA2/A, RD/A, RH26/A, RHE4/A, RHQ4/A, RSS/A, RX/A, RXQ4/A, RXU/A, SD/A, SE/A, SH/A, SHQ4/A, SJ/A, SJG/A, SMC4/A, SME1/A, SME6/A, SN/A, SWC4/A, SX/A, SXB/A, SXB7/A, SXE/A, SXE4/A, SXE8/A, SXEB/A, SXQ4/A, SXU/A, VA2/A, VM2/A, VME2/A, VSD/A, VSD7/A, VX/A, VXB/A, VXB7/A, VXE4/A, VXE6/A, VXE7/A, VXEB/A, VXQ4/A, VXU/A, VXU1/A, WMT8/A, WXE8/A, L1/A, Q1/A, R1/A, S1/A, W1/A
25	95002-40800-08	CLAMP, TUBE(D8).....	4	-	-	-----	VKK

E-17-1	FUEL TANK(2)

E-17-1	FUEL TANK(2)

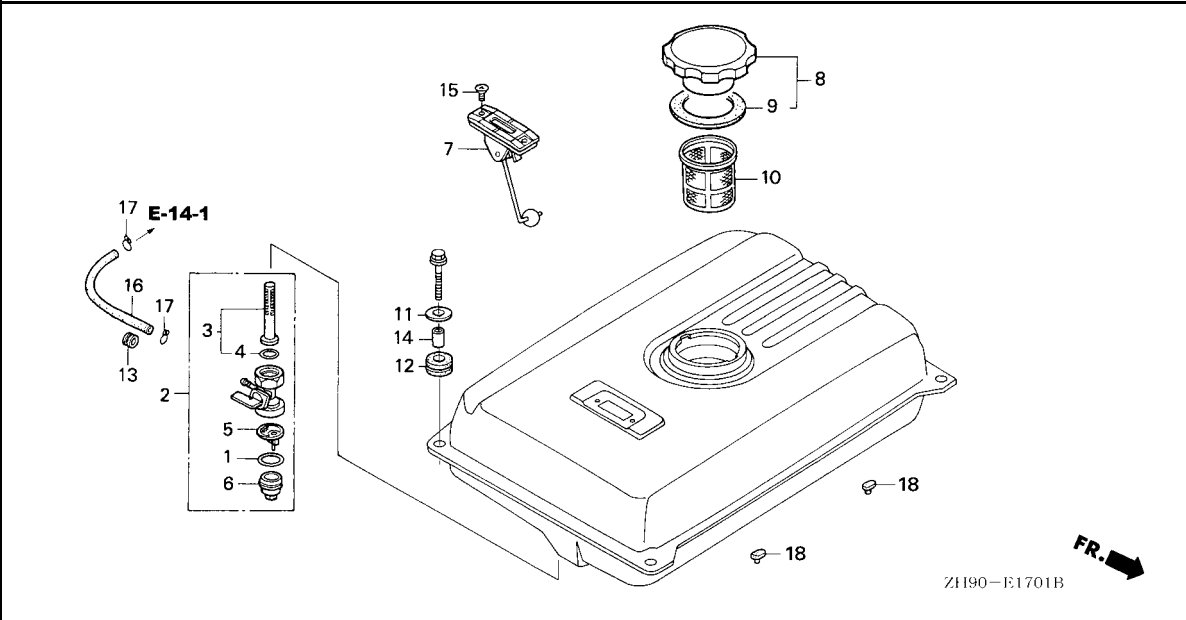


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
3	3101D5	SCREEN, FUEL STRAINER	0.2
5	3101A7	FILTER, FUEL TANK CUP	0.2
7	6171A1	METER/GAUGE UNIT, FUEL	0.1
8	3101M7	CAP, FUEL FILLER	0.1
10	3101A6	FILTER, FUEL	0.1
16	3101F2	TUBE, FUEL COCK	0.2

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			GX270				
			(1)	(2)	(3)		
1	16173-001-004	O-RING	1	-	-	-----	ES3, ES3/A, ES4, VS3, VS4, VS5
2	16950-ZB4-015	COCK ASSY., FUEL	1	-	-	-----	ES3, ES3/A, ES4, VS3, VS4, VS5
3	16952-ZB4-005	SCREEN SET, FUEL STRAINER	1	-	-	-----	ES3, ES3/A, ES4, VS3, VS4, VS5
4	16958-397-771	O-RING, 9.0X1.3	1	-	-	-----	ES3, ES3/A, ES4, VS3, VS4, VS5
5	16959-471-831	FILTER, CUP	1	-	-	-----	ES3, ES3/A, ES4, VS3, VS4, VS5
6	16967-GA6-671	CUP, FUEL STRAINER	1	-	-	-----	ES3, ES3/A, ES4, VS3, VS4, VS5
7	17505-ZB2-003	METER ASSY., FUEL	1	-	-	-----	ES3, ES3/A, ES4, VS3, VS4, VS5
8	17620-899-013	CAP COMP., FUEL FILLER	1	-	-	-----	ES3, ES3/A, ES4, VS3, VS4, VS5
9	17631-899-000	PACKING, FUEL FILLER CAP	1	-	-	-----	ES3, ES3/A, ES4, VS3, VS4, VS5
10	17670-899-000	FILTER COMP., FUEL	1	-	-	-----	ES3, ES3/A, ES4, VS3, VS4, VS5
11	90503-898-000	WASHER, TANK CUSHION	4	-	-	-----	ES3, ES3/A, ES4, VS3, VS4, VS5
12	90851-898-000	RUBBER, TANK CUSHION	4	-	-	-----	ES3, ES3/A, ES4, VS3, VS4, VS5
13	90854-ZB2-000	RUBBER, FUEL(9X15X10)	1	-	-	-----	ES3, ES3/A, ES4, VS3, VS4, VS5
14	91551-898-000	COLLAR, TANK CUSHION	4	-	-	-----	ES3, ES3/A, ES4, VS3, VS4, VS5
15	93600-05010-0A	SCREW, FLAT, 5X10	2	-	-	-----	ES3, ES3/A, ES4
16	95001-45150-40	TUBE, FUEL, 4.5X150 (95001-45001-60M)	1	-	-	-----	ES3, ES3/A, ES4, VS3, VS4, VS5
17	95002-02080	CLIP, TUBE(B8)	2	-	-	-----	ES3, ES3/A, ES4, VS3, VS4, VS5
18	76122-952-000	STOPPER, DISCHARGE GUARD	4	-	-	-----	VS3, VS4, VS5

E-17-2

FUEL TANK(3)

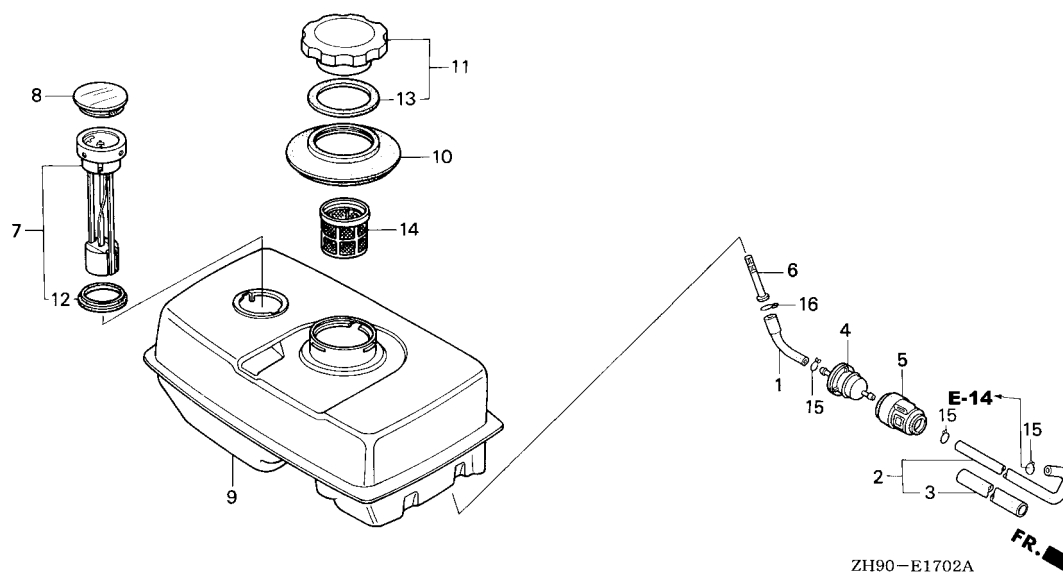


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	3101F1	TUBE, FUEL TANK	0.2
2	3101Q7	TUBE, FUEL STRAINER(A)	0.2
4	3101K6	STRAINER, FUEL(A)	0.2
6	3101H6	JOINT, FUEL STRAINER	0.2
7	6171A1	METER/GAUGE UNIT, FUEL	0.1
9	3101H7	TANK, FUEL	0.2
11	3101M7	CAP, FUEL FILLER	0.1
14	3101A6	FILTER, FUEL	0.1

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
1	16852-ZB6-000	TUBE, FUEL TANK.....	1	-	-	-----	SJP
2	16854-ZB6-000	TUBE ASSY., COCK-CARBURETOR..	1	-	-	-----	SJP
3	16857-ZB6-000	RUBBER, SUPPORTER.....	1	-	-	-----	SJP
4	16910-GB2-005	STRAINER COMP., FUEL.....	1	-	-	-----	SJP
5	16915-GB2-000	SUSPENSION, STRAINER.....	1	-	-	-----	SJP
6	16952-ZB6-000	BUSH, FUEL PURGE.....	1	-	-	-----	SJP
7	17505-898-023	METER COMP., FUEL.....	1	-	-	-----	SJP
8	17507-ZA0-800	CAP, FUEL METER.....	1	-	-	-----	SJP
9	17510-ZB6-010	TANK COMP., FUEL.....	1	-	-	-----	SJP
10	17520-ZA0-800	SEAL, FUEL FILLER NECK.....	1	-	-	-----	SJP
11	17620-899-013	CAP COMP., FUEL FILLER.....	1	-	-	-----	SJP
12	17624-187-020	PACKING C, FUEL METER.....	1	-	-	-----	SJP
13	17631-899-000	PACKING, FUEL FILLER CAP.....	1	-	-	-----	SJP
14	17670-ZB6-000	FILTER COMP., FUEL.....	1	-	-	-----	SJP
15	95002-02080	CLIP, TUBE(B8).....	3	-	-	-----	SJP
16	95002-02100	CLIP, TUBE(B10).....	1	-	-	-----	SJP

E-17-3

FUEL TANK(4)

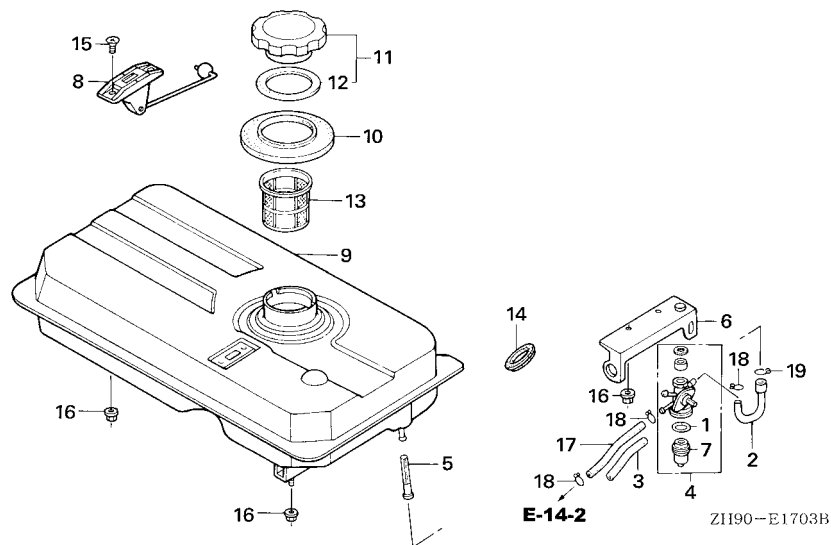


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	3101L6	PACKING, FUEL STRAINER CUP ...	0.2
2	3101F1	TUBE, FUEL TANK	0.2
4	3101A3	COCK, FUEL	0.2
5	3101K6	STRAINER, FUEL(A)	0.2
8	6171A1	METER/GAUGE UNIT, FUEL	0.1
9	3101D0	TANK, FUEL(A)	0.3
11	3101M7	CAP, FUEL FILLER	0.1
13	3101A6	FILTER, FUEL	0.1
17	3101F2	TUBE, FUEL COCK	0.2

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
1	16173-001-004	O-RING	1	-	-	ESS,ESS/A	
2	16851-ZB7-700	TUBE, FUEL(TANK-COCK)	1	-	-	ESS,ESS/A	
3	16857-ZB7-000	TUBE, FUEL SUPPORTER	1	-	-	ESS,ESS/A	
4	16950-ZA0-803	COCK ASSY., FUEL	1	-	-	ESS,ESS/A	
5	16952-ZB7-000	STRAINER, FUEL	1	-	-	ESS,ESS/A	
6	16956-ZB7-700	BRACKET, FUEL COCK	1	-	-	ESS,ESS/A	
7	16967-MA2-771	CUP, FUEL STRAINER	1	-	-	ESS,ESS/A	
8	17505-ZB2-003	METER ASSY., FUEL	1	-	-	ESS,ESS/A	
9	17510-ZB7-000	TANK COMP., FUEL	1	-	-	ESS,ESS/A	
10	17520-ZA0-800	SEAL, FUEL FILLER NECK	1	-	-	ESS,ESS/A	
11	17620-899-013	CAP COMP., FUEL FILLER	1	-	-	ESS,ESS/A	
12	17631-899-000	PACKING, FUEL FILLER CAP	1	-	-	ESS,ESS/A	
13	17670-899-000	FILTER COMP., FUEL	1	-	-	ESS,ESS/A	
14	32112-611-000	GROMMET, WIRE CORD	1	-	-	ESS,ESS/A	
15	93600-05010-0A	SCREW, FLAT, 5X10	2	-	-	ESS,ESS/A	
16	94050-06000	NUT, FLANGE, 6MM	6	-	-	ESS,ESS/A	
17	95001-45250-40	TUBE, FUEL, 4.5X250 (95001-45001-60M)	1	-	-	ESS,ESS/A	
18	95002-02080	CLIP, TUBE(B8)	3	-	-	ESS,ESS/A	
19	95002-02100	CLIP, TUBE(B10)	1	-	-	ESS,ESS/A	

E-19

FLYWHEEL

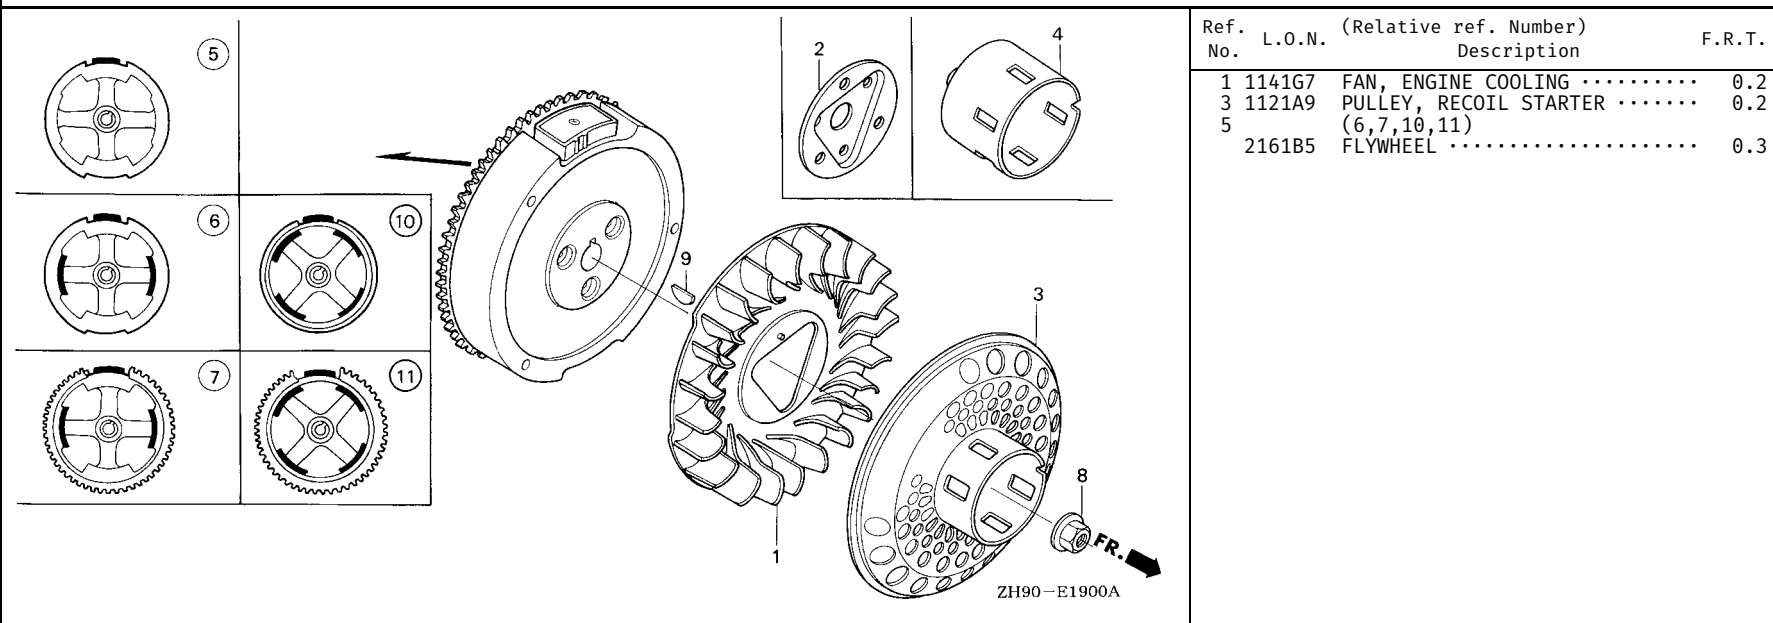


Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
1	19511-ZE2-000	FAN, COOLING.....	1	1	1		
2	19512-ZE2-000	PLATE, COOLING FAN SETTING...	1	-	-	-----	LWD, LWD1, LWD1/A, QKE3, QKE3/A, QKE4, SKE1
3	28450-ZE2-W11	PULLEY COMP., STARTER (SCREEN GRID)	1	-	-	-----	HA, HA2, HA2/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, HH, HX, HX/A, HX26 HX26/A, HX8, HX8/A, HXQ4, HXQ4/A, LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A LHQ4, LSS, LT, LT/A, LTJ, LW, LW/A, LX, LX/A, LX16, LXE, LXE/A, LXE8, LXE8/A LXQ4, LXQ4/A, LXU, LXU/A, LXZ, PA, PA2, PA2/A, PAE2, PAE2/A, PX, PX/A, PX26 PX26/A, PXE8, PXE8/A, PXU, PXU/A, QA, QA2, QA2/A, QAB1, QAB3, QAB3/A, QAE QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAO, QAO4, QAO4/A, QAR2, QAR2/A, QAW QAW/A, QE, QE/A, QH, QH/A, QH26, QH26/A, QHB5, QHC, QHE, QHE4, QHE4/A, QHP1 QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A, QL2, QME2 QME2/A, QMH, QMH/A, QP, QP/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8 QSE8/A, QWA2, QWH2, QWH2/A, QX, QX/A, QX26, QX26/A, QXB, QXB/A, QXB6, QXB6/A QXB7, QXB7/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE, QXE/A QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXE9/A, QXQ4, QXQ4/A, QXU QXU/A, RA, RA2, RA2/A, RA3, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A RSC2, RSC2/A, RSS, RSS/A, RX, RX/A, RXQ4, RXQ4/A, RXU, RXU/A, SE, SE/A, SH SH/A, SHE, SHEZ, SHQ4, SHQ4/A, SME1, SME1/A, SME6, SME6/A, SW, SWA4, SWC4 SWC4/A, SWE, SX, SX/A, SX2, SXB, SXB/A, SXB7, SXB7/A, SXE, SXE/A, SXE4 SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4, SXQ4/A, SXU, SXU/A, VA, VA2, VA2/A VAW, VD16, VDE, VDE2, VDE2/A, VEB6, VH, VKB2, VKB2/A, VKE4, VKE4/A, VM2 VM2/A, VME2, VME2/A, VMS2, VMX2, VN17, VN17/A, VNG1, VNG1/A, VPE4, VPE4/A VPE5, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS37, VS37/A, VSD VSD/A, VSD3, VSD3/A, VSD7, VSD7/A, VSH7, VW22, VWA, VWA2, VWA2/A, VWN2 VWN2/A, VWT4, VWT4/A, VX, VX/A, VX26, VXB, VXB/A, VXB2, VXB6, VXB7, VXB7/A VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8/A, VXG, VXK VXQ4, VXQ4/A, VXT1, VXT1/A, VXTB, VXU, VXU/A, VXU1, VXU1/A

- (1) -

2

021.03.20 E


232

FLYWHEEL

2

E-19


FLYWHEEL

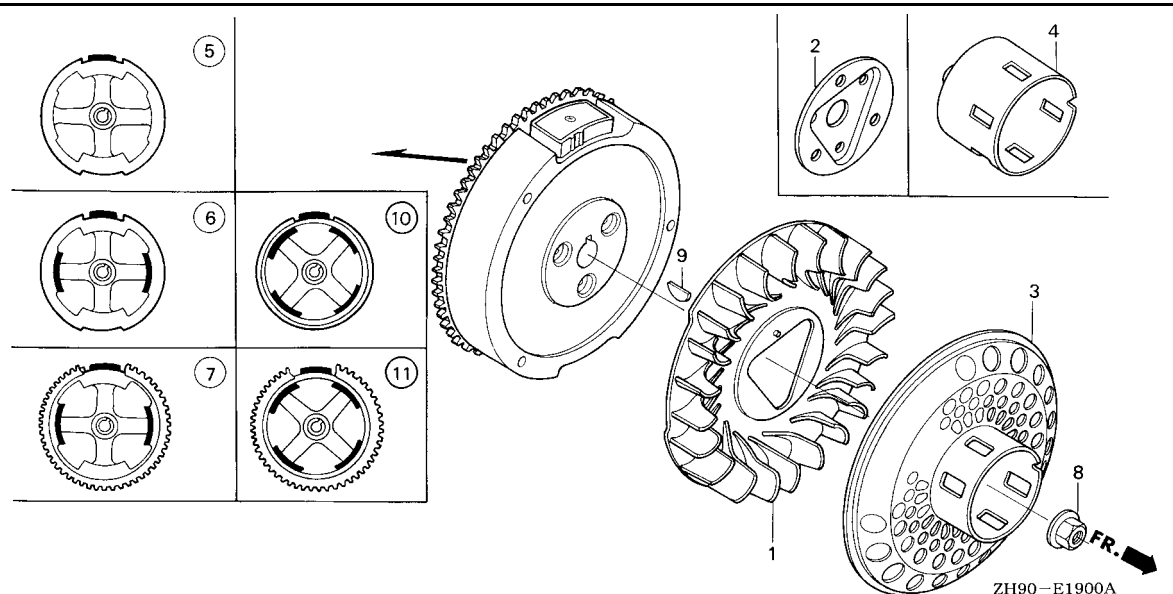

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
11	31100-ZE2-832	FLYWHEEL COMP.(4POLE).....	1	-	-	-----	HEA, HEA2, HEA2/A, HEA8, HEA8/A, LWD1, LWD1/A, PAE2, PAE2/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QHR4, QHR4/A, QKE3, QKE3/A, QKE4, QME2, QME2/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QXB6, QXB6/A, RSS, RSS/A, SKE1, SME1, SME1/A, SME6, SME6/A, VDE, VDE2, VDE2/A, VKB2, VKB2/A, VKE4, VKK, VME2, VME2/A
	31100-ZE2-W11	FLYWHEEL COMP.(SEL-18A).....	-	(1)	-		
			-	(1)	-		

E-20

IGNITION COIL

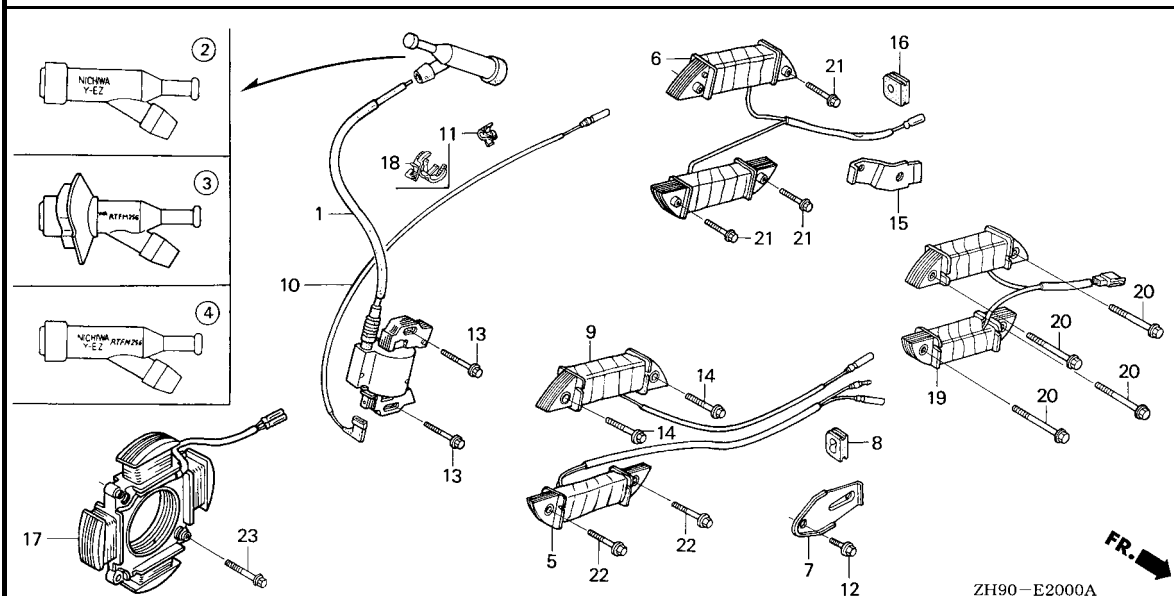


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	6141A5	COIL, IGNITION(ONE)	0.3
2	6141B8	TERMINAL, HIGH TENSION	0.1
6	6141A6	COIL, LAMP	0.3
9	6131C3	COIL, CHARGE	0.3
10	6111B3	CORD, STOP SWITCH	0.3

Ref. No.	Part No.	Description	Reqd. QTY (1) (2) (3)	Serial No.	Parts catalogue code
1	30500-ZF6-W02	COIL ASSY., IGNITION	1 - 1	-----	ES1, ES3, ESS, HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8 HEA8/A, HH, HX, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A, LH, LHB1, LHB3, LHE LHQ4, LJ, LJC, LJC/A, LJG, LSS, LT, LTJ, LW, LWD, LWD1, LX, LX16, LXE, LXE8 LXE8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ, PA, PA2, PA2/A, PAE2, PAE2/A, PX, PX26 PX26/A, PXE8, PXE8/A, PXU, PXU/A, QA, QA2, QA2/A, QAB1, QAB3, QAE, QAE2 QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAQ, QAQ4, QAQ4/A, QAR2 QAR2/A, QAW, QAW/A, QD, QE, QE/A, QH, QH26, QH26/A, QHC, QHE, QHE4, QHE4/A QHP1, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QKE3, QKE3/A, QKE4, QL2 QME2, QME2/A, QMH, QP, QSC, QSC9, QSC9/A, QSE, QSE2, QSE8, QSE8/A, QT, QWA2 QWA4, QWA4/A, QWH2, QWH2/A, QX, QX26, QX26/A, QXB, QXB/A, QXB6, QXB6/A, QXB7 QXB7/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE, QXE4, QXE4/A QXE6, QXE6/A, QXE8, QXE8/A, QXEB, QXQ4, QXQ4/A, QXU, QXU/A, RA, RA2, RA2/A RD, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RX RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A, SD, SE, SE/A, SH, SHE, SHEZ, SHQ4 SHQ4/A, SJ, SJG, SJP, SK, SKE1, SMC4, SMC4/A, SMD, SME1, SME1/A, SME6, SME6/A SMX2, SN, SW, SWA4, SWC4, SWC4/A, SWE, SX, SX2, SXB, SXB/A, SXB7, SXB7/A, SXE SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4, SXQ4/A, SXU, SXU/A, VA, VA2 VA2/A, VAG2, VAG2/A, VAW, VAW1, VD16, VDE, VDE2, VDE2/A, VEB6, VH, VKB2 VKB2/A, VKE4, VKX4, VM2, VM2/A, VMA4, VME2, VME2/A, VME4, VMS2, VMT, VMX2 VN17, VN17/A, VNG1, VNG1/A, VNT2, VNT2/A, VPE4, VPE4/A, VPE5, VPE7, VPE7/A VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS37, VS37/A, VSD, VSD/A, VSD3, VSD3/A VSD7, VSD7/A, VSH7, VW12, VW12/A, VW22, VWA, VWA2, VWA2/A, VWN2, VWN2/A VWT4, VWT4/A, VX, VX26, VXB, VXB/A, VXB2, VXB6, VXB7, VXB7/A, VXE, VXE4 VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXEB, VXEB/A, VXG, VXP, VXP/A, VXQ4 VXQ4/A, VXQP, VXT1, VXTB, VXU, VXU1, VXU1/A, WMA4, WMT8, WXE8 ES4, RA3
	30500-ZF6-W03		1 - -	-----	

2

E-20

IGNITION COIL

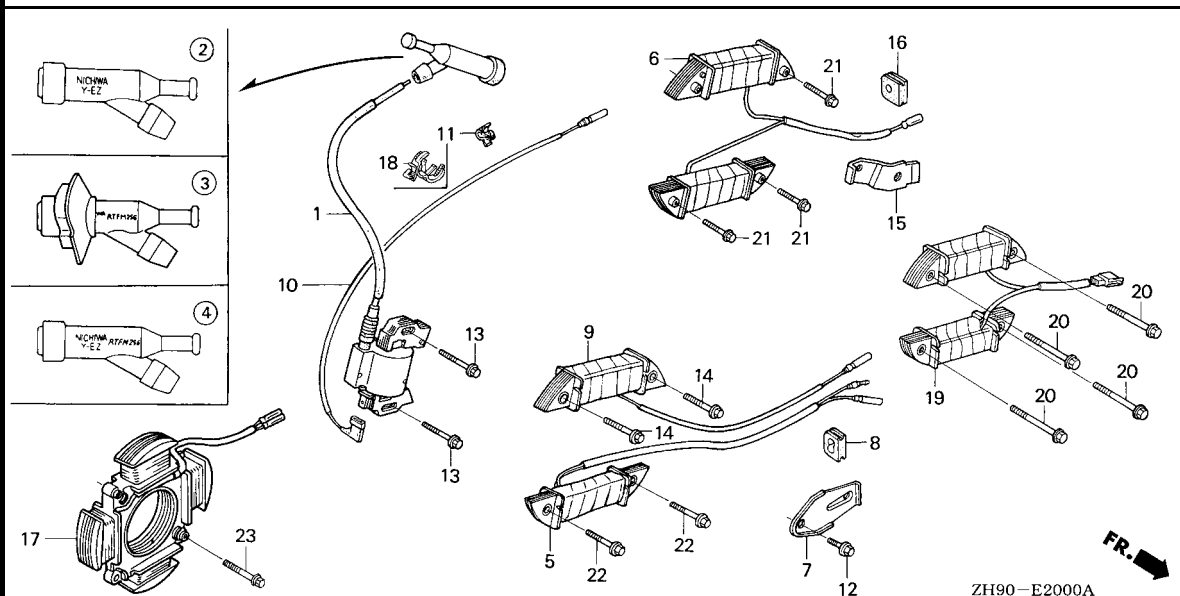


ZH90-E2000A

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
(1)	30500-ZF6-W02	COIL ASSY., IGNITION.....	1	-	-	2437805	ES1/A, ES3/A, ESS/A, HX/A, LH/A, LHB5, LHE/A, LJ/A, LJG/A, LT/A, LW/A, LWD1/A, LX/A, LXE/A, PX/A, QAB3/A, QD/A, QH/A, QHB5, QHP1/A, QHZ/A, QMH/A, QP/A, QSE/A, QT/A, QX/A, QXE/A, QXE9, QXK, RD/A, RSS/A, RX/A, SD/A, SH/A, SJ/A, SJG/A, SN/A, SX/A, SXE/A, VKK, VMT/A, VPK, VS3, VS4, VX/A, VXE8, VXX, VXT1/A, VXU/A, WMT8/A, WXE8/A
	30500-ZF6-W03		1	-	-	2505889	VS5
			1	-	-	2437806	ESS/A, HX/A, LH/A, LHB5, LHE/A, LT/A, LWD1/A, LX/A, LXE/A, PX/A, QAB3/A, QD/A, QH/A, QHB5, QHP1/A, QHZ/A, QMH/A, QP/A, QSE/A, QT/A, QX/A, QXE/A, QXE9, QXK, RX/A, SD/A, SH/A, SN/A, SX/A, SXE/A, VKK, VMT/A, VPK, VS4, VX/A, VXE8, VXX, VXT1/A, VXU/A, WMT8/A, WXE8/A
	30500-ZF6-H31		1	-	-	2437806	2505889
	30500-ZF6-W02		1	-	-	2505890	ES1/A, ES3/A, LJ/A, LJG/A, LW/A, RD/A, RSS/A, SJ/A, SJG/A, VS3
	30500-ZF6-W03		-	(1)	-	-	L1, Q1, Q2, R1, S1, V1, W1
	30600-ZE1-013	TERMINAL ASSY., HIGH TENSION (NACHIWA Y-EZ)	-	(1)	-	2437805	L1/A, Q1/A, R1/A, S1/A, W1/A
			-	(1)	-	2437806	L1/A, Q1/A, R1/A, S1/A, W1/A
	30700-ZB7-013	CAP ASSY., NOISE SUPPRESSOR (NACHIWA Y-EZ RTFM256)	1	-	-	-	ES1, ES1/A, ES3, ES3/A, ES4, LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LT, LT/A, LTJ, LWD1, LWD1/A, QD, QD/A, QT, QT/A, RD, RD/A, SD, SD/A, SJ, SJ/A, SJG, SJG/A, SJP, SK, SN, SN/A, VS3, VS4, VS5
			1	-	-	-	ESS, ESS/A

IGNITION COIL

2



FR. 


E-20

IGNITION COIL

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
(8)	31512-ZE2-000	GROMMET, CORD	-	(1)	-		
9	31630-ZE2-841	COIL ASSY., CHARGE(3A)	1	-	-	-----	HEA, HEA2, HEA2/A, HEA8, HEA8/A, PAE2, PAE2/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, VDE, VDE2, VDE2/A, VKB2, VKB2/A, VKE4, VME2, VME2/A, VMS2
	31630-ZE1-003	COIL ASSY., CHARGE(1A)	1	-	-	-----	LHE, LTJ, LWD, LX, LX8, LX8/A, PXE8, PXE8/A, QHE, QHE4, QHE4/A, QXE, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXEB, RHE, RHE4, RHE4/A, SHE, SHEZ, SWE, SXE, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, VEB6, VME4, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXEB, VXEB/A, WMA4, WXE8
	31630-ZE2-841	COIL ASSY., CHARGE(3A)	1	-	-	-----	2437763 VKK
	31630-ZE1-003	COIL ASSY., CHARGE(1A)	1	-	-	-----	2437805 LHE/A, LX, LX8/A, QXE/A, QXE9, SXE/A, VPK, VXE8, WXE8/A
	31630-ZE2-842	COIL ASSY., CHARGE(3A)	1	-	-	-----	2437764 VKK
	31630-ZE1-013	COIL ASSY., CHARGE(1A)	1	-	-	-----	2437806 LHE/A, LX, LX8/A, QXE/A, QXE9, SXE/A, VPK, VXE8, WXE8/A
	31630-ZE2-841	COIL ASSY., CHARGE(3A)	-	(1)	-	-----	L1, L1/A, Q1, Q1/A, Q2, R1, R1/A, V1, W1, W1/A
	31630-ZE1-003	COIL ASSY., CHARGE(1A)	-	(1)	-	-----	L1, Q1, Q1/A, Q2, R1, S1, V1, W1, W1/A
	31630-ZE1-013		-	(1)	-	-----	L1/A, R1/A, S1/A
10	36101-ZE1-010	CORD, STOP SWITCH(370MM)	1	-	1	-----	L1/A, R1/A, S1/A ES1, ES1/A, ESS, ESS/A, HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, HH, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A, LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LT, LT/A, LTJ, LW, LW/A, LWD, LWD1, LWD1/A, LX, LX/A, LX16, LX, LX8/A, LX8, LX8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ, PA, PA2, PA2/A, PAE2, PAE2/A, PX, PX/A, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, QA, QA2, QA2/A, QAB1, QAB3, QAB3/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAQ, QAQ4, QAQ4/A, QAR2, QAR2/A, QAW, QAW/A, QD, QD/A, QE, QE/A, QH, QH/A, QH26, QH26/A, QHB5, QHC, QHE, QHE4, QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A, QKE3, QKE3/A, QKE4, QL2, QME2, QME2/A, QMH, QMH/A, QP, QP/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QT, QT/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX, QX/A, QX26, QX26/A, QXB, QXB/A, QXB6, QXB6/A, QXB7, QXB7/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXEB, QXK, QXQ4, QXQ4/A, QXU, QXU/A, RA, RA2, RA2/A, RA3, RD, RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A, SD, SD/A, SE, SE/A, SH, SH/A, SHE, SHEZ, SHQ4, SHQ4/A, SJ, SJ/A, SJG, SJG/A, SJP, SK, SKE1, SMC4, SMC4/A, SMD, SME1, SME1/A, SME6, SME6/A, SMX2, SN, SN/A, SW, SWA4, SWC4, SWC4/A, SWE, SX, SX/A, SX2, SXB, SXB/A, SXB7, SXB7/A, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4, SXQ4/A, SXU, SXU/A, VA, VA2, VA2/A, VAG2, VAG2/A, VAW, VAW1, VD16, VDE, VDE2, VDE2/A, VEB6, VH, VKB2, VKB2/A, VKE4, VKK, VKX4, VM2, VM2/A, VMA4, VME2, VME2/A, VME4, VMS2, VMX2, VN17, VN17/A, VNG1, VNG1/A, VNT2, VNT2/A, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS37, VS37/A, VSD, VSD/A, VSD3, VSD3/A, VSD7, VSD7/A, VSH7, VW12, VW12/A, VW22, VWA, VWA2, VWA2/A, VWN2, VWN2/A, VWT4, VWT4/A, VX, VX/A, VX26, VXB, VXB/A, VXB2, VXB6, VXB7, VXB7/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8/A, VXE9, VXE9/A, VXP, VXP/A, VXQ4, VXQ4/A, VXQP, VXT1, VXT1/A, VXTB, VXU, VXU/A, VXU1, VXU1/A, WMA4, WMT8, WMT8/A, WXE8, WXE8/A
	36101-ZE2-701	CORD, STOP SWITCH(430MM)	1	-	-	-----	ES3, ES3/A, ES4, VMT, VMT/A, VS3, VS4, VS5
	36101-ZE1-010	CORD, STOP SWITCH(370MM)	-	(1)	-	-----	
11	36103-ZE1-000	HOLDER, STOP SWITCH CORD	1	-	-	-----	ES3, ES3/A, ES4, ESS, ESS/A, HEA, HEA2, HEA2/A, HH, LH, LH/A, LHB1, LHB3, LHB5, LHQ4, LJ, LJ/A, LJG, LJG/A, LSS, LT, LT/A, LTJ, LW, LW/A, LWD, LX, LX8/A, LX8, LX8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ, PA, PA2, PA2/A, PAE2, PAE2/A, PX, PX/A, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, QA, QA2, QA2/A, QAB1, QAB3, QAB3/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAQ, QAQ4, QAQ4/A, QAR2, QAR2/A, QAW, QAW/A, QD, QD/A, QE, QE/A, QH, QH/A, QH26, QH26/A, QHB5, QHC, QHE, QHE4, QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A, QKE3, QKE3/A, QKE4, QL2, QME2, QME2/A, QMH, QMH/A, QP, QP/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QT, QT/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX, QX/A, QX26, QX26/A, QXB, QXB/A, QXB6, QXB6/A, QXB7, QXB7/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXEB, QXK, QXQ4, QXQ4/A, QXU, QXU/A, RA, RA2, RA2/A, RA3, RD, RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A, SD, SD/A, SE, SE/A, SH, SH/A, SHE, SHEZ, SHQ4, SHQ4/A, SJ, SJ/A, SJG, SJG/A, SJP, SK, SKE1, SMC4, SMC4/A, SMD, SME1, SME1/A, SME6, SME6/A, SMX2, SN, SN/A, SW, SWA4, SWC4, SWC4/A, SWE, SX, SX/A, SX2, SXB, SXB/A, SXB7, SXB7/A, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4, SXQ4/A, SXU, SXU/A, VA, VA2, VA2/A, VAG2, VAG2/A, VAW, VAW1, VD16, VDE, VDE2, VDE2/A, VEB6, VH, VKB2, VKB2/A, VKE4, VKK, VKX4, VM2, VM2/A, VMA4, VME2, VME2/A, VME4, VMS2, VMX2, VN17, VN17/A, VNG1, VNG1/A, VNT2, VNT2/A, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS37, VS37/A, VSD, VSD/A, VSD3, VSD3/A, VSD7, VSD7/A, VSH7, VW12, VW12/A, VW22, VWA, VWA2, VWA2/A, VWN2, VWN2/A, VWT4, VWT4/A, VX, VX/A, VX26, VXB, VXB/A, VXB2, VXB6, VXB7, VXB7/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8/A, VXE9, VXE9/A, VXP, VXP/A, VXQ4, VXQ4/A, VXQP, VXT1, VXT1/A, VXTB, VXU, VXU/A, VXU1, VXU1/A, WMA4, WMT8, WMT8/A, WXE8, WXE8/A
			2	-	-	-----	HA, PA, QA, QAE, QXC, RA, VA, VAW, VDE
			1	-	-	-----	RSS
			-	1	-	-----	L1, L1/A, Q1, Q1/A, R1, R1/A, S1, S1/A, V1, W1, W1/A
			-	(1)	-	-----	Q2

E-20


IGNITION COIL

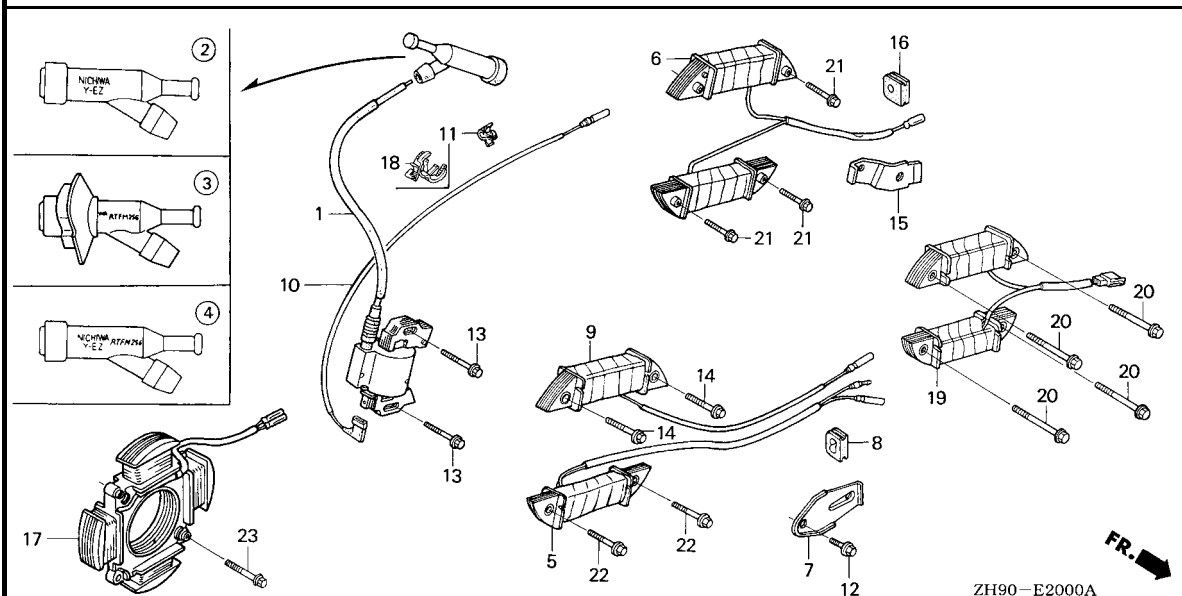

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
12	90013-883-000	BOLT, FLANGE, 6X12(CT200)....	1	-	-	-----	HEA, HEA2, HEA2/A, HEA8, HEA8/A, LHE, LHE/A, LT, LT/A, LTJ, LW, LW/A, LWD, LWD1, LWD1/A, LX, LX/A, LX8, LX8/A, PAE2, PAE2/A, PXE8, PXE8/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QHE, QHE4, QHE4/A, QHR, QHR/A, QHR4, QHR4/A, QKE3, QKE3/A, QKE4, QME2, QME2/A, QP, QP/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QXB6, QXB6/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXE9, RHE, RHE4, RHE4/A, RSC2, RSC2/A, RSS, RSS/A, SHE, SHEZ, SKE1, SMC4, SMC4/A, SME1, SME1/A, SME6, SME6/A, SW, SWE, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, VDE, VDE2, VDE2/A, VEB6, VEB6, VKB2, VKB2/A, VKE4, VKE4, VME2, VME2/A, VME4, VMS2, VMX2, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8/A, VXE8/A, WMA4, WXE8, WXE8/A
13	90015-883-000	BOLT, FLANGE, 6X28(CT200)....	-	(1)	-	-----	
14	90017-883-000	BOLT, FLANGE, 6X32(CT200)....	2	-	-	-----	HEA, HEA2, HEA2/A, HEA8, HEA8/A, PAE2, PAE2/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, VDE, VDE2, VDE2/A, VKB2, VKB2/A, VKE4, VKE4, VME2, VME2/A, VMS2, LHE, LHE/A, LTJ, LWD, LX, LX/A, LX8, LX8/A, PXE8, PXE8/A, QHE, QHE4, QHE4/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXE9, RHE, RHE4, RHE4/A, SHE, SHEZ, SWE, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, VDE, VDE2, VDE2/A, VEB6, VEB6, VME4, VME4, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8/A, VXE8/A, WMA4, WXE8, WXE8/A
	90015-883-000	BOLT, FLANGE, 6X28(CT200)....	2	-	-	-----	
15	31511-ZE2-W00	CLAMPER, CORD	1	(2)	-	-----	QAR2, QAR2/A, QL2
			-	(1)	-	1120970	L1, Q1, R1, S1, V1, W1
			-	(1)	-	1069840	Q2
16	31512-ZG3-000	GROMMET, CORD	-	(1)	-	1120970	L1, Q1, Q2, R1, S1, V1, W1
17	31630-ZE2-W01	COIL ASSY., CHARGE(12V/18A) ..	1	-	-	-----	QAR2, QAR2/A, QL2
			-	(1)	-	1120970	L1, Q1, R1, S1, V1, W1

E-20


IGNITION COIL

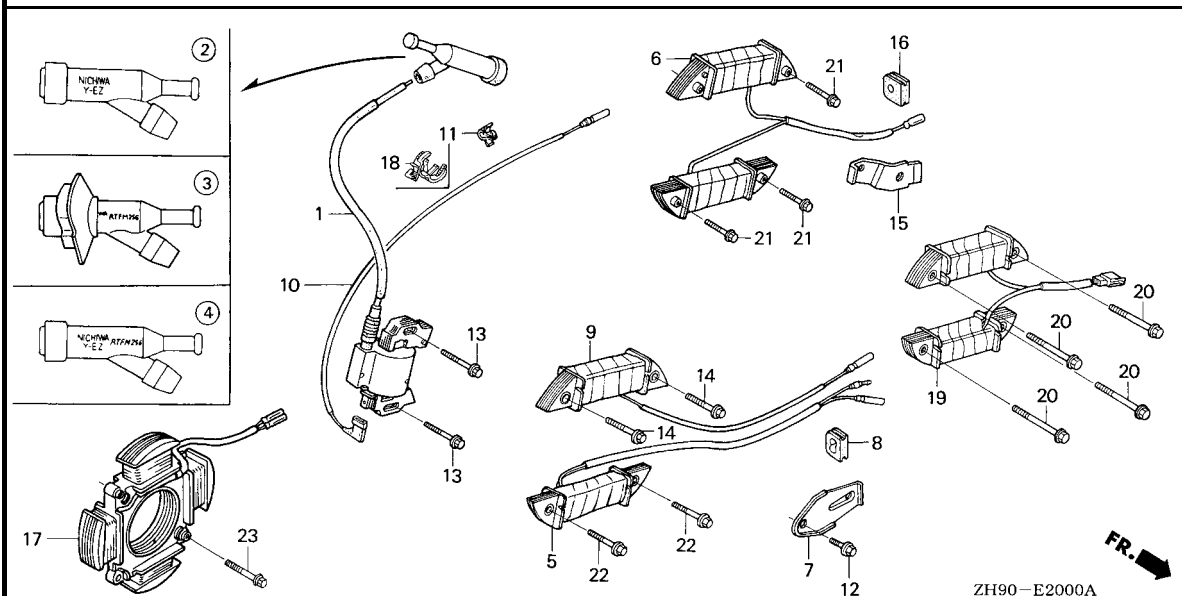

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
18	90684-ZA0-601	CLIP, HARNESS	1	-	1	-----	HAP, HAP/A, QAG, QAG/A, QAG2, QAG2/A, QAW, QAW/A, QL2, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QXB7, QXB7/A, QXK, RA3, SXB7, SXB7/A, VKX4, VM2, VM2/A, VMA4, VMX2, VN17, VN17/A, VNT2, VNT2/A, VPX7, VPX7/A, VS37, VS37/A, VSD7, VSD7/A, VSH7, VXB7, VXB7/A, VXX, VXQ4, VXQ4/A, VXT1, VXT1/A, VXU, VXU/A, VXU1, VXU1/A, WMT8, WMT8/A
19	31630-ZE2-861	COIL ASSY., CHARGE(10A)	1	-	-	-----	1584261 RSS
20	90017-883-000	BOLT, FLANGE, 6X32(CT200)	-	(1)	-	-----	LWD1, LWD1/A, QAG, QAG/A, QHR4, QHR4/A, QKE3, QKE3/A, QKE4, QME2, QME2/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QXB6, QXB6/A, SKE1, SME1, SME1/A, SME6, SME6/A
			4	-	-	-----	L1, L1/A, Q1, Q1/A, Q2, R1, R1/A, V1, W1, W1/A
			-	(4)	-	-----	LWD1, LWD1/A, QAG, QAG/A, QHR4, QHR4/A, QKE3, QKE3/A, QKE4, QME2, QME2/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QXB6, QXB6/A, SKE1, SME1, SME1/A, SME6, SME6/A
			-	(4)	-	-----	L1, L1/A, Q1, Q1/A, Q2, R1, R1/A, V1, W1, W1/A
21	90015-883-000	BOLT, FLANGE, 6X28(CT200)	4	-	-	-----	LT, LT/A, LW, LW/A, QHR, QHR/A, QP, QP/A, RSC2, RSC2/A, SMC4, SMC4/A, SW
22	90015-883-000	BOLT, FLANGE, 6X28(CT200)	2	-	-	-----	LTJ, RSS, RSS/A, VMS2, VMX2
23	90017-883-000	BOLT, FLANGE, 6X32(CT200)	4	-	-	-----	QAR2, QAR2/A, QL2
	90015-883-000	BOLT, FLANGE, 6X28(CT200)	-	(4)	-	-----	1120970 L1, Q1, R1, S1, V1, W1

E-21

STARTER MOTOR

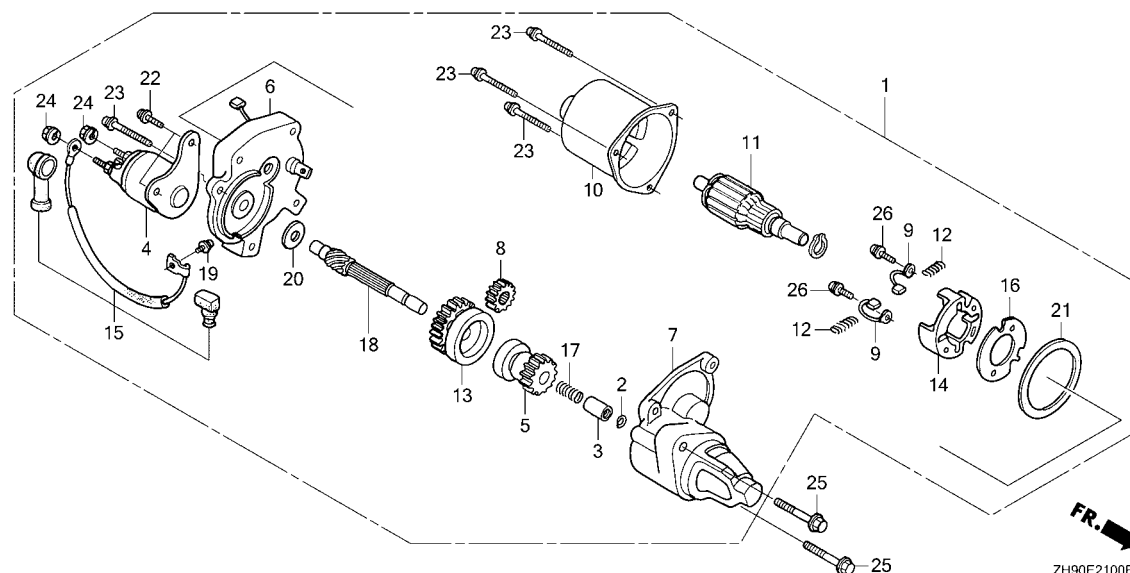

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	6121D5	MOTOR, STARTER	0.2
4	6121E5	CONTACTOR, STARTER	0.2
5	6121B0	CLUTCH, OVERRUNNING	0.4
6	6121C3	BRACKET, STARTER :CENTER	0.4
7	6121D2	BRACKET, STARTER :FRONT	0.3
9	6121A9	BRUSH, STARTER	0.4
11	6121A0	ARMATURE, STARTER	0.4
13	6121B5	GEAR, STARTER REDUCTION	0.4

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	GX270 (2)	(3)		
1	31200-ZH9-003	MOTOR ASSY., STARTER.....	1	-	-	-----	HEA, HEA2, HEA2/A, HEA8, HEA8/A, LHE, LTJ, LWD, LWD1, LXE, LXE/A, LXE8 LXE8/A, PAE2, PAE2/A, PXE8, PXE8/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QHE QHE4, QHE4/A, QHR4, QHR4/A, QKE3, QKE3/A, QKE4, QME2, QME2/A, QSC, QSC9 QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QXB6, QXB6/A, QXE, QXE4, QXE4/A QXE6, QXE6/A, QXE8, QXE8/A, QXEB, RHE, RHE4, RHE4/A, SHE, SHEZ, SKE1, SME1 SME1/A, SWE, SXE, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, VDE, VDE2 VDE2/A, VEB6, VKB2, VKB2/A, VKE4, VME2, VME2/A, VME4, VMS2, VPE4, VPE4/A VPE5, VPE7, VPE7/A, VWT4, VWT4/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7 VXE7/A, VXEB, VXEB/A, WMA4, WXE8, WXE8/A
	31200-ZH9-013		1	-	-	-----	2440203 LHE/A, LWD1/A, QXE/A, QXE9, SXE/A, VKK, VPK, VXE8
	31200-ZH9-003		1	-	-	-----	2440204 LHE/A, LWD1/A, QXE/A, QXE9, SXE/A, VKK, VPK, VXE8
			-	(1)	-	-----	L1, Q1, Q2, R1, S1, V1, W1
			-	(1)	-	-----	2440203 L1/A, Q1/A, R1/A, S1/A, W1/A
	31200-ZH9-013		-	(1)	-	-----	2440204 L1/A, Q1/A, R1/A, S1/A, W1/A
2	31201-ZA1-003	RING, SNAP.....	1	-	-	-----	HEA, HEA2, HEA2/A, HEA8, HEA8/A, LHE/A, LTJ, LWD1, LWD1/A, LXE, LXE/A, LXE8 LXE8/A, PAE2, PAE2/A, PXE8, PXE8/A, QAE, QAE2/A, QAE6, QAE6/A, QHE4, QHE4/A QHR4, QHR4/A, QKE3, QKE3/A, QKE4, QME2, QME2/A, QSC, QSC9, QSC9/A, QSE QSE/A, QSE2, QSE8, QSE8/A, QXB6, QXB6/A, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A QXE8, QXE8/A, QXE9, RHE4, RHE4/A, SKE1, SME1, SME1/A, SXE/A, SXE4, SXE4/A SXE8, SXE8/A, SXEB/A, VDE, VDE2, VDE2/A, VEB6, VKB2, VKB2/A, VKE4, VKK, VME2 VME2/A, VME4, VMS2, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VWT4, VWT4/A VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXEB/A, WMA4, WXE8, WXE8/A
			1	-	-	-----	1065305 LHE, LWD, QAE2, QHE, QXE, QXEB, RHE, SHE, SHEZ, SWE, SXE, SXEB, VXE, VXEB
			-	(1)	-	-----	L1/A, Q1/A, R1/A, S1/A, W1/A
			-	(1)	-	-----	1065305 L1, Q1, Q2, R1, S1, V1, W1

E-21


STARTER MOTOR

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
3	31202-ZA1-003	COLLAR, CLUTCH STOP.....	1	-	-	-----	HEA, HEA2, HEA2/A, HEA8, HEA8/A, LHE/A, LTJ, LWD1, LWD1/A, LXE, LXE/A, LXE8, LXE8/A, PAE2, PAE2/A, PXE8, PXE8/A, QAE, QAE2/A, QAE6, QAE6/A, QHE4, QHE4/A, QHR4, QHR4/A, QKE3, QKE3/A, QKE4, QME2, QME2/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QXB6, QXB6/A, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, RHE4, RHE4/A, SKE1, SME1, SME1/A, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB/A, VDE, VDE2, VDE2/A, VEB6, VKB2, VKB2/A, VKE4, VKK, VME2, VME2/A, VME4, VMS2, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VWT4, VWT4/A, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8/A, WMA4, WXE8, WXE8/A, LHE, LWD, QAE2, QHE, QXE, QXEB, RHE, SHE, SHEZ, SWE, SXE, SXEB, VXE, VXEB
			-	(1)	-	-----	L1/A, Q1/A, R1/A, S1/A, W1/A
			-	(1)	-	-----	L1, Q1, Q2, R1, S1, V1, W1
4	31204-ZA0-003	CONTACTOR ASSY.	1	-	-	-----	HEA, HEA2, HEA2/A, HEA8, HEA8/A, LHE, LHE/A, LTJ, LWD, LWD1, LWD1/A, LXE, LXE/A, LXE8, LXE8/A, PAE2, PAE2/A, PXE8, PXE8/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QHE, QHE4, QHE4/A, QHR4, QHR4/A, QKE3, QKE3/A, QKE4, QME2, QME2/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QXB6, QXB6/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXEB, RHE, RHE4, RHE4/A, SHE, SHEZ, SKE1, SME1, SME1/A, SWE, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, VDE, VDE2, VDE2/A, VEB6, VKB2, VKB2/A, VKE4, VKK, VME2, VME2/A, VME4, VMS2, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VWT4, VWT4/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8, VXE8/A, WMA4, WXE8, WXE8/A
5	31207-ZH9-003	CLUTCH COMP., OVERRUNNING	-	(1)	-	-----	HEA, HEA2, HEA2/A, HEA8, HEA8/A, LHE/A, LTJ, LWD1, LWD1/A, LXE, LXE/A, LXE8, LXE8/A, PAE2, PAE2/A, PXE8, PXE8/A, QAE, QAE2/A, QAE6, QAE6/A, QHE4, QHE4/A, QHR4, QHR4/A, QKE3, QKE3/A, QKE4, QME2, QME2/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QXB6, QXB6/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXEB, RHE, RHE4, RHE4/A, SHE, SHEZ, SKE1, SME1, SME1/A, SWE, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, VDE, VDE2, VDE2/A, VEB6, VKB2, VKB2/A, VKE4, VKK, VME2, VME2/A, VME4, VMS2, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VWT4, VWT4/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8, VXE8/A, WMA4, WXE8, WXE8/A
			1	-	-	-----	LHE, LWD, QAE2, QHE, QXE, QXEB, RHE, SHE, SHEZ, SWE, SXE, SXEB, VXE, VXEB
			-	(1)	-	-----	L1/A, Q1/A, R1/A, S1/A, W1/A
			-	(1)	-	-----	L1, Q1, Q2, R1, S1, V1, W1
6	31211-ZE2-003	BRACKET, CENTER.....	1	-	-	-----	HEA, HEA2, HEA2/A, HEA8, HEA8/A, LHE, LHE/A, LTJ, LWD, LWD1, LWD1/A, LXE, LXE/A, LXE8, LXE8/A, PAE2, PAE2/A, PXE8, PXE8/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QHE, QHE4, QHE4/A, QHR4, QHR4/A, QKE3, QKE3/A, QKE4, QME2, QME2/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QXB6, QXB6/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXEB, RHE, RHE4, RHE4/A, SHE, SHEZ, SKE1, SME1, SME1/A, SWE, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, VDE, VDE2, VDE2/A, VEB6, VKB2, VKB2/A, VKE4, VKK, VME2, VME2/A, VME4, VMS2, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VWT4, VWT4/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8, VXE8/A, WMA4, WXE8, WXE8/A
7	31212-ZE2-003	BRACKET, FR.	-	(1)	-	-----	HEA, HEA2, HEA2/A, HEA8, HEA8/A, LHE, LHE/A, LTJ, LWD, LWD1, LWD1/A, LXE, LXE/A, LXE8, LXE8/A, PAE2, PAE2/A, PXE8, PXE8/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QHE, QHE4, QHE4/A, QHR4, QHR4/A, QKE3, QKE3/A, QKE4, QME2, QME2/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QXB6, QXB6/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXEB, RHE, RHE4, RHE4/A, SHE, SHEZ, SKE1, SME1, SME1/A, SWE, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, VDE, VDE2, VDE2/A, VEB6, VKB2, VKB2/A, VKE4, VKK, VME2, VME2/A, VME4, VMS2, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VWT4, VWT4/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8, VXE8/A, WMA4, WXE8, WXE8/A
			-	(1)	-	-----	

2

E-21

STARTER MOTOR

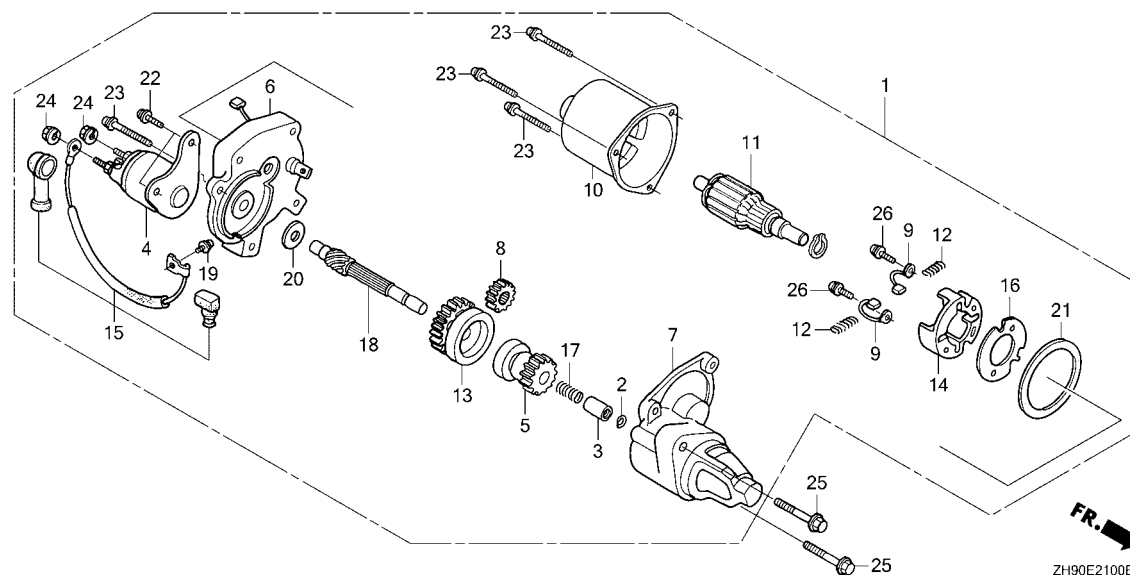

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
8	31213-ZE2-003	GEAR, DRIVE PINION	1	-	-	-----	HEA, HEA2, HEA2/A, HEA8, HEA8/A, LHE, LHE/A, LTJ, LWD, LWD1, LWD1/A, LXE, LXE/A, LXE8, LXE8/A, PAE2, PAE2/A, PXE8, PXE8/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QHE, QHE4, QHE4/A, QHR4, QHR4/A, QKE3, QKE3/A, QKE4, QME2, QME2/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QXB6, QXB6/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXE9, RHE, RHE4, RHE4/A, SHE, SHEZ, SKE1, SME1, SME1/A, SWE, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, VDE, VDE2, VDE2/A, VEB6, VKB2, VKB2/A, VKE4, VKK, VME2, VME2/A, VME4, VMS2, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VWT4, VWT4/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXEB, VXEB/A, WMA4, WXE8, WXE8/A
9	31215-ZE2-003	BRUSH	2	(1)	-	-----	HEA, HEA2, HEA2/A, HEA8, HEA8/A, LHE, LHE/A, LTJ, LWD, LWD1, LWD1/A, LXE, LXE/A, LXE8, LXE8/A, PAE2, PAE2/A, PXE8, PXE8/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QHE, QHE4, QHE4/A, QHR4, QHR4/A, QKE3, QKE3/A, QKE4, QME2, QME2/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QXB6, QXB6/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXE9, RHE, RHE4, RHE4/A, SHE, SHEZ, SKE1, SME1, SME1/A, SWE, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, VDE, VDE2, VDE2/A, VEB6, VKB2, VKB2/A, VKE4, VKK, VME2, VME2/A, VME4, VMS2, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VWT4, VWT4/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXEB, VXEB/A, WMA4, WXE8, WXE8/A
			-	(2)	-	-----	

E-21


STARTER MOTOR

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
10	31216-ZE2-003	YOKE COMP.	1	-	-	-----	HEA, HEA2, HEA2/A, HEA8, HEA8/A, LHE, LHE/A, LTJ, LWD, LWD1, LWD1/A, LXE, LXE/A, LXE8, LXE8/A, PAE2, PAE2/A, PXE8, PXE8/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QHE, QHE4, QHE4/A, QHR4, QHR4/A, QKE3, QKE3/A, QKE4, QME2, QME2/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QXB6, QXB6/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXE9, RHE, RHE4, RHE4/A, SHE, SHEZ, SKE1, SME1, SME1/A, SWE, SWE, SWE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, VDE, VDE2, VDE2/A, VEB6, VEB6, VEB6/A, VKE4, VKE4, VKE4/A, VME2, VME2/A, VME4, VME4/A, VPE4, VPE4/A, VPE5, VPE5, VPE5/A, VPK, VPK, VPK/A, VWT4, VWT4/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8, VXE8/A, WMA4, WMA4, WMA4/A, WXE8, WXE8/A
			-	(1)	-		
11	31217-ZE2-003	ARMATURE COMP.	1	-	-	-----	HEA, HEA2, HEA2/A, HEA8, HEA8/A, LHE, LHE/A, LTJ, LWD, LWD1, LWD1/A, LXE, LXE/A, LXE8, LXE8/A, PAE2, PAE2/A, PXE8, PXE8/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QHE, QHE4, QHE4/A, QHR4, QHR4/A, QKE3, QKE3/A, QKE4, QME2, QME2/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QXB6, QXB6/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXE9, RHE, RHE4, RHE4/A, SHE, SHEZ, SKE1, SME1, SME1/A, SWE, SWE, SWE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, VDE, VDE2, VDE2/A, VEB6, VEB6, VEB6/A, VKE4, VKE4, VKE4/A, VME2, VME2/A, VME4, VME4/A, VPE4, VPE4/A, VPE5, VPE5, VPE5/A, VPK, VPK, VPK/A, VWT4, VWT4/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8, VXE8/A, WMA4, WMA4, WMA4/A, WXE8, WXE8/A
			-	(1)	-		
12	31219-ZE2-003	SPRING, BRUSH RETURN	4	-	-	-----	HEA, HEA2, HEA2/A, HEA8, HEA8/A, LHE, LHE/A, LTJ, LWD, LWD1, LWD1/A, LXE, LXE/A, LXE8, LXE8/A, PAE2, PAE2/A, PXE8, PXE8/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QHE, QHE4, QHE4/A, QHR4, QHR4/A, QKE3, QKE3/A, QKE4, QME2, QME2/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QXB6, QXB6/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXE9, RHE, RHE4, RHE4/A, SHE, SHEZ, SKE1, SME1, SME1/A, SWE, SWE, SWE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, VDE, VDE2, VDE2/A, VEB6, VEB6, VEB6/A, VKE4, VKE4, VKE4/A, VME2, VME2/A, VME4, VME4/A, VPE4, VPE4/A, VPE5, VPE5, VPE5/A, VPK, VPK, VPK/A, VWT4, VWT4/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8, VXE8/A, WMA4, WMA4, WMA4/A, WXE8, WXE8/A
			-	(4)	-		
13	31222-ZE3-791	GEAR, REDUCTION	1	-	-	-----	HEA, HEA2, HEA2/A, HEA8, HEA8/A, LHE, LHE/A, LTJ, LWD, LWD1, LWD1/A, LXE, LXE/A, LXE8, LXE8/A, PAE2, PAE2/A, PXE8, PXE8/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QHE, QHE4, QHE4/A, QHR4, QHR4/A, QKE3, QKE3/A, QKE4, QME2, QME2/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QXB6, QXB6/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXE9, RHE, RHE4, RHE4/A, SHE, SHEZ, SKE1, SME1, SME1/A, SWE, SWE, SWE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, VDE, VDE2, VDE2/A, VEB6, VEB6, VEB6/A, VKE4, VKE4, VKE4/A, VME2, VME2/A, VME4, VME4/A, VPE4, VPE4/A, VPE5, VPE5, VPE5/A, VPK, VPK, VPK/A, VWT4, VWT4/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8, VXE8/A, WMA4, WMA4, WMA4/A, WXE8, WXE8/A
			-	(1)	-		
14	31231-ZE2-003	HOLDER, BRUSH	1	-	-	-----	HEA, HEA2, HEA2/A, HEA8, HEA8/A, LHE, LHE/A, LTJ, LWD, LWD1, LWD1/A, LXE, LXE/A, LXE8, LXE8/A, PAE2, PAE2/A, PXE8, PXE8/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QHE, QHE4, QHE4/A, QHR4, QHR4/A, QKE3, QKE3/A, QKE4, QME2, QME2/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QXB6, QXB6/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXE9, RHE, RHE4, RHE4/A, SHE, SHEZ, SKE1, SME1, SME1/A, SWE, SWE, SWE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, VDE, VDE2, VDE2/A, VEB6, VEB6, VEB6/A, VKE4, VKE4, VKE4/A, VME2, VME2/A, VME4, VME4/A, VPE4, VPE4/A, VPE5, VPE5, VPE5/A, VPK, VPK, VPK/A, VWT4, VWT4/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8, VXE8/A, WMA4, WMA4, WMA4/A, WXE8, WXE8/A
			-	(1)	-		

2

E-21

STARTER MOTOR

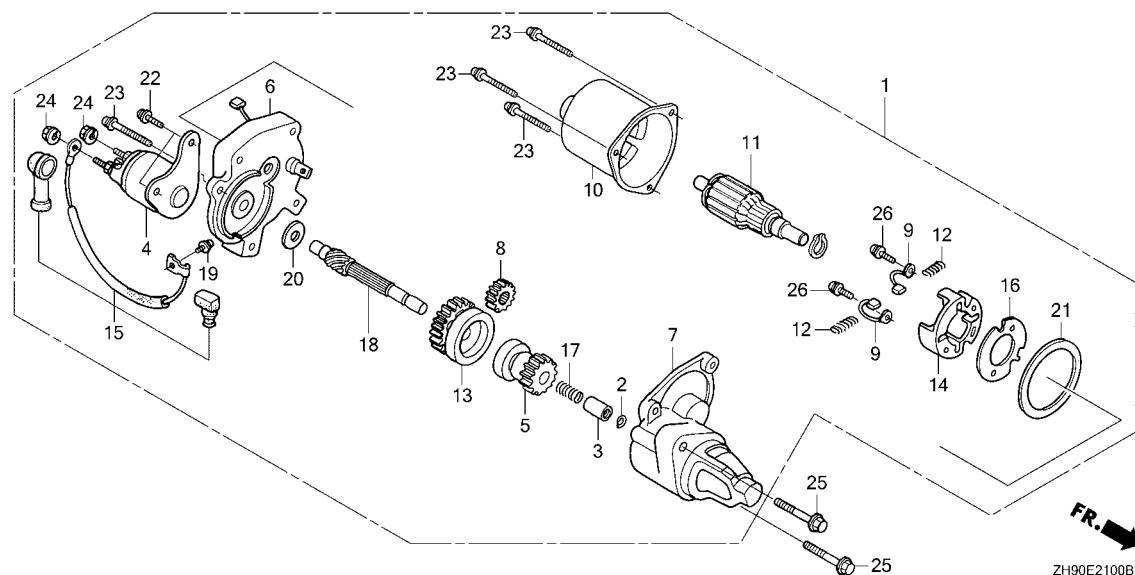

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
15	31232-ZE3-003	WIRE, WATER COVER	1	-	-	-----	HEA, HEA2, HEA2/A, HEA8, HEA8/A, LHE, LHE/A, LTJ, LWD, LWD1, LWD1/A, LXE, LXE/A, LXE8, LXE8/A, PAE2, PAE2/A, PXE8, PXE8/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QHE, QHE4, QHE4/A, QHR4, QHR4/A, QKE3, QKE3/A, QKE4, QME2, QME2/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QXB6, QXB6/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXE9, RHE, RHE4, RHE4/A, SHE, SHEZ, SKE1, SME1, SME1/A, SWE, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, VDE, VDE2, VDE2/A, VEB6, VKB2, VKB2/A, VKE4, VKK, VME2, VME2/A, VME4, VMS2, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VWT4, VWT4/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8, VXE8/A, WMA4, WXE8, WXE8/A
			-	(1)	-		
16	31233-ZE2-003	INSULATOR	1	-	-	-----	HEA, HEA2, HEA2/A, HEA8, HEA8/A, LHE, LHE/A, LTJ, LWD, LWD1, LWD1/A, LXE, LXE/A, LXE8, LXE8/A, PAE2, PAE2/A, PXE8, PXE8/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QHE, QHE4, QHE4/A, QHR4, QHR4/A, QKE3, QKE3/A, QKE4, QME2, QME2/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QXB6, QXB6/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXE9, RHE, RHE4, RHE4/A, SHE, SHEZ, SKE1, SME1, SME1/A, SWE, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, VDE, VDE2, VDE2/A, VEB6, VKB2, VKB2/A, VKE4, VKK, VME2, VME2/A, VME4, VMS2, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VWT4, VWT4/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8, VXE8/A, WMA4, WXE8, WXE8/A
			-	(1)	-		

E-21


STARTER MOTOR

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
17	31244-ZH9-003	SPRING	1	-	-	-----	HEA, HEA2, HEA2/A, HEA8, HEA8/A, LHE/A, LTJ, LWD1, LWD1/A, LXE, LXE/A, LXE8, LXE8/A, PAE2, PAE2/A, PXE8, PXE8/A, QAE, QAE2/A, QAE6, QAE6/A, QHE4, QHE4/A, QHR4, QHR4/A, QKE3, QKE3/A, QKE4, QME2, QME2/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QXB6, QXB6/A, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, RHE4, RHE4/A, SKE1, SME1, SME1/A, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB/A, VDE, VDE2, VDE2/A, VEB6, VKB2, VKB2/A, VKE4, VKK, VME2, VME2/A, VME4, VMS2, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VWT4, VWT4/A, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8/A, WMA4, WXE8, WXE8/A, LHE, LWD, QAE2, QHE, QXE, QXEB, RHE, SHE, SHEZ, SWE, SXE, SXEB, VXE, VXEB
			1	(1)	-	-----	L1/A, Q1/A, R1/A, S1/A, W1/A
			-	(1)	-	-----	L1, Q1, Q2, R1, S1, V1, W1
18	31245-ZH9-003	SHAFT	1	-	-	-----	HEA, HEA2, HEA2/A, HEA8, HEA8/A, LHE/A, LTJ, LWD1, LWD1/A, LXE, LXE/A, LXE8, LXE8/A, PAE2, PAE2/A, PXE8, PXE8/A, QAE, QAE2/A, QAE6, QAE6/A, QHE4, QHE4/A, QHR4, QHR4/A, QKE3, QKE3/A, QKE4, QME2, QME2/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QXB6, QXB6/A, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, RHE4, RHE4/A, SKE1, SME1, SME1/A, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB/A, VDE, VDE2, VDE2/A, VEB6, VKB2, VKB2/A, VKE4, VKK, VME2, VME2/A, VME4, VMS2, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VWT4, VWT4/A, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8/A, WMA4, WXE8, WXE8/A, LHE, LWD, QAE2, QHE, QXE, QXEB, RHE, SHE, SHEZ, SWE, SXE, SXEB, VXE, VXEB
			1	(1)	-	-----	L1/A, Q1/A, R1/A, S1/A, W1/A
			-	(1)	-	-----	L1, Q1, Q2, R1, S1, V1, W1
19	90110-ZE2-003	SCREW-WASHER, 4X6	1	-	-	-----	HEA, HEA2, HEA2/A, HEA8, HEA8/A, LHE, LHE/A, LTJ, LWD, LWD1, LWD1/A, LXE, LXE/A, LXE8, LXE8/A, PAE2, PAE2/A, PXE8, PXE8/A, QAE, QAE2/A, QAE6, QAE6/A, QHE4, QHE4/A, QHR4, QHR4/A, QKE3, QKE3/A, QKE4, QME2, QME2/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QXB6, QXB6/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXEB, RHE, RHE4, RHE4/A, SHE, SHEZ, SKE1, SME1, SME1/A, SWE, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, VDE, VDE2, VDE2/A, VEB6, VKB2, VKB2/A, VKE4, VKK, VME2, VME2/A, VME4, VMS2, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VWT4, VWT4/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8/A, WMA4, WXE8, WXE8/A
			-	(1)	-	-----	HEA, HEA2, HEA2/A, HEA8, HEA8/A, LHE, LHE/A, LTJ, LWD, LWD1, LWD1/A, LXE, LXE/A, LXE8, LXE8/A, PAE2, PAE2/A, PXE8, PXE8/A, QAE, QAE2/A, QAE6, QAE6/A, QHE4, QHE4/A, QHR4, QHR4/A, QKE3, QKE3/A, QKE4, QME2, QME2/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QXB6, QXB6/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXEB, RHE, RHE4, RHE4/A, SHE, SHEZ, SKE1, SME1, SME1/A, SWE, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, VDE, VDE2, VDE2/A, VEB6, VKB2, VKB2/A, VKE4, VKK, VME2, VME2/A, VME4, VMS2, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VWT4, VWT4/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8/A, WMA4, WXE8, WXE8/A
20	90403-ZH9-003	WASHER, SK	1	-	-	-----	HEA, HEA2, HEA2/A, HEA8, HEA8/A, LHE, LHE/A, LTJ, LWD, LWD1, LWD1/A, LXE, LXE/A, LXE8, LXE8/A, PAE2, PAE2/A, PXE8, PXE8/A, QAE, QAE2/A, QAE6, QAE6/A, QHE4, QHE4/A, QHR4, QHR4/A, QKE3, QKE3/A, QKE4, QME2, QME2/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QXB6, QXB6/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, RHE4, RHE4/A, SKE1, SME1, SME1/A, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB/A, VDE, VDE2, VDE2/A, VEB6, VKB2, VKB2/A, VKE4, VKK, VME2, VME2/A, VME4, VMS2, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VWT4, VWT4/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8/A, WMA4, WXE8, WXE8/A
			1	(1)	-	-----	LHE, LWD, QAE2, QHE, QXE, QXEB, RHE, SHE, SHEZ, SWE, SXE, SXEB, VXE, VXEB
			-	(1)	-	-----	L1/A, Q1/A, R1/A, S1/A, W1/A
			-	(1)	-	-----	L1, Q1, Q2, R1, S1, V1, W1
21	91601-ZE2-003	PACKING	1	-	-	-----	HEA, HEA2, HEA2/A, HEA8, HEA8/A, LHE, LHE/A, LTJ, LWD, LWD1, LWD1/A, LXE, LXE/A, LXE8, LXE8/A, PAE2, PAE2/A, PXE8, PXE8/A, QAE, QAE2/A, QAE6, QAE6/A, QHE4, QHE4/A, QHR4, QHR4/A, QKE3, QKE3/A, QKE4, QME2, QME2/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QXB6, QXB6/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXEB, RHE, RHE4, RHE4/A, SHE, SHEZ, SKE1, SME1, SME1/A, SWE, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, VDE, VDE2, VDE2/A, VEB6, VKB2, VKB2/A, VKE4, VKK, VME2, VME2/A, VME4, VMS2, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VWT4, VWT4/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8/A, WMA4, WXE8, WXE8/A
			-	(1)	-	-----	

2

E-21


STARTER MOTOR

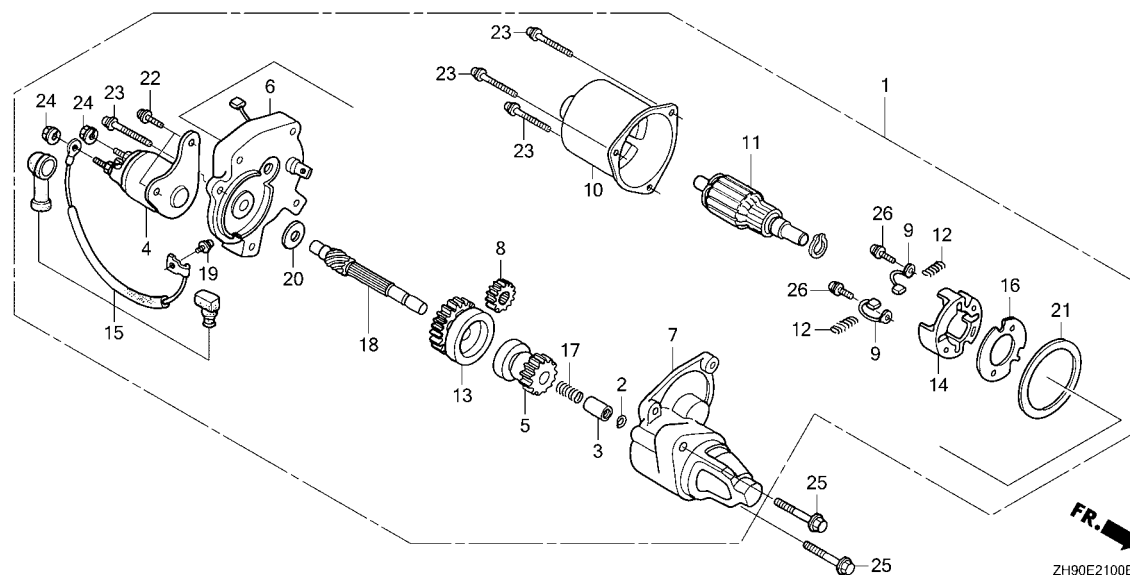

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
22	90007-ZE2-003	BOLT-WASHER, 5X14	2	-	-	-	HEA2/A, HEA8, HEA8/A, LHE/A, LWD1, LWD1/A, LXE/A, LXE8, LXE8/A, PAE2, PAE2/A, PXE8, PXE8/A, QAE2/A, QAE6/A, QHE4/A, QHR4, QHR4/A, QKE3, QKE3/A, QKE4, QME2/A, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QXB6, QXB6/A, QXE/A, QXE4/A, QXE6/A, QXE8, QXE8/A, QXE9, RHE4/A, SKE1, SME1/A, SXE/A, SXE4/A, SXE8, SXE8/A, SXEB/A, VDE2/A, VKB2, VKB2/A, VKE4, VKK, VME2, VME2/A, VME4, VMS2, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VWT4, VWT4/A, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8/A, WMA4, WXE8, WXE8/A
	93892-05014-18	SCREW-WASHER, 5X14	2	-	-	1221119	HEA, HEA2, LHE, LTJ, LWD, LXE, QAE, QAE2, QAE6, QHE, QHE4, QME2, QSC, QSC9, QXE, QXE4, QXE6, QXE8, RHE, RHE4, SHE, SHEZ, SME1, SWE, SXE, SXE4, SXEB, VDE, VDE2, VEB6, VXE, VXE4, VXE8
	90007-ZE2-003	BOLT-WASHER, 5X14	2	-	-	1221120	HEA, HEA2, LHE, LTJ, LWD, LXE, QAE, QAE2, QAE6, QHE, QHE4, QME2, QSC, QSC9, QXE, QXE4, QXE6, QXE8, RHE, RHE4, SHE, SHEZ, SME1, SWE, SXE, SXE4, SXEB, VDE, VDE2, VEB6, VXE, VXE4, VXE8
	93892-05014-18	SCREW-WASHER, 5X14	-	(2)	-	-	L1/A, Q1/A, R1/A, S1/A
			-	(2)	-	-	V1, W1, W1/A
	90007-ZE2-003	BOLT-WASHER, 5X14	-	(2)	-	1221119	L1, Q1, Q2, R1, S1
23	93892-05032-18	SCREW-WASHER, 5X32	4	-	-	1221120	L1, Q1, Q2, R1, S1
			-	(4)	-	-	HEA, HEA2, HEA2/A, HEA8, HEA8/A, LHE, LHE/A, LTJ, LWD, LWD1, LWD1/A, LXE, LXE/A, LXE8, LXE8/A, PAE2, PAE2/A, PXE8, PXE8/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QHE, QHE4, QHE4/A, QHR4, QHR4/A, QKE3, QKE3/A, QKE4, QME2, QME2/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QXB6, QXB6/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXE9, RHE, RHE4, RHE4/A, SHE, SHEZ, SKE1, SME1, SME1/A, SWE, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, VDE, VDE2, VDE2/A, VEB6, VKB2, VKB2/A, VKE4, VKK, VME2, VME2/A, VME4, VMS2, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VWT4, VWT4/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8, VXE8/A, WMA4, WXE8, WXE8/A


E-21

STARTER MOTOR

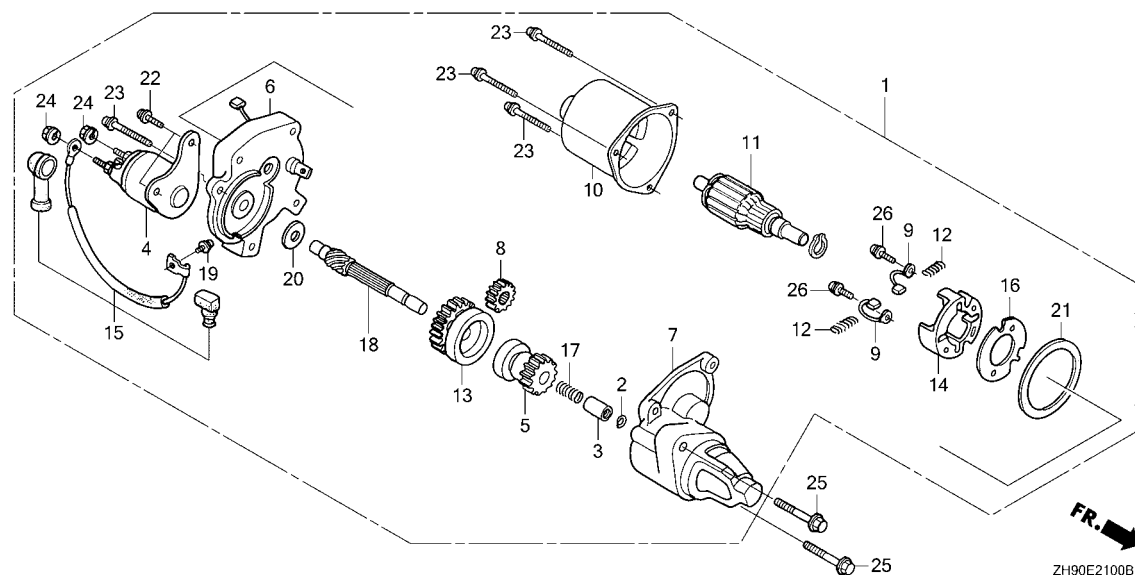

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
24	94070-06080	NUT-WASHER, 6MM.....	2	-	-	-----	HEA, HEA2, HEA2/A, HEA8, HEA8/A, LHE, LHE/A, LTJ, LWD, LWD1, LWD1/A, LXE, LXE/A, LXE8, LXE8/A, PAE2, PAE2/A, PXE8, PXE8/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QHE, QHE4, QHE4/A, QHR4, QHR4/A, QKE3, QKE3/A, QKE4, QME2, QME2/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QXB6, QXB6/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXEB, RHE, RHE4, RHE4/A, SHE, SHEZ, SKE1, SME1, SME1/A, SWE, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, VDE, VDE2, VDE2/A, VEB6, VKB2, VKB2/A, VKE4, VKK, VME2, VME2/A, VME4, VMS2, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VWT4, VWT4/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXEB, VXEB/A, WMA4, WXE8, WXE8/A
25	95701-08040-00	BOLT, FLANGE, 8X40.....	2	(2)	-	-----	HEA, HEA2, HEA2/A, HEA8, HEA8/A, LHE, LHE/A, LTJ, LWD, LWD1, LWD1/A, LXE, LXE/A, LXE8, LXE8/A, PAE2, PAE2/A, PXE8, PXE8/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QHE, QHE4, QHE4/A, QHR4, QHR4/A, QKE3, QKE3/A, QKE4, QME2, QME2/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QXB6, QXB6/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXEB, RHE, RHE4, RHE4/A, SHE, SHEZ, SKE1, SME1, SME1/A, SWE, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, VDE, VDE2, VDE2/A, VEB6, VKB2, VKB2/A, VKE4, VKK, VME2, VME2/A, VME4, VMS2, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VWT4, VWT4/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXEB, VXEB/A, WMA4, WXE8, WXE8/A
26	31219-ZE3-003	SCREW-WASHER, 4X14.....	2	2	-	2440204 -----	L1/A, LHE/A, LWD1/A, Q1/A, QXE/A, QXE9, R1/A, S1/A, SXE/A, VKK, VPK, VXE8 W1/A

2

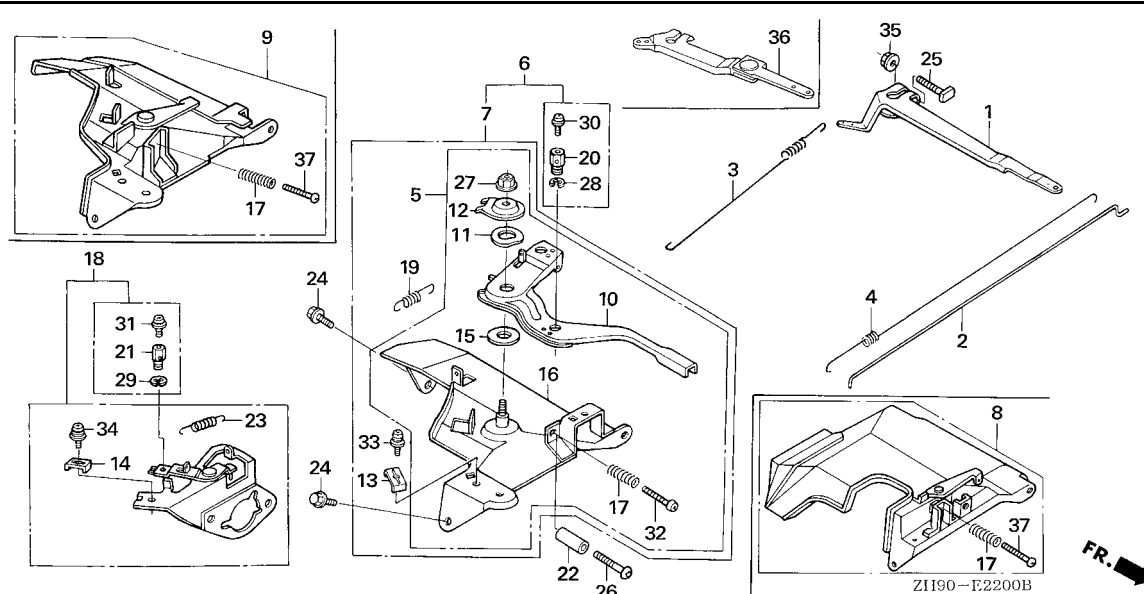

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1		(36)	
1	1161A0	ARM, GOVERNOR	0.2
2	1161B1	ROD, GOVERNOR	0.3
3	1161C5	SPRING, GOVERNOR	0.2
4	1161C2	SPRING, THROTTLE RETURN	0.3
6		(8,9)	
6	1161A5	CONTROL, THROTTLE/GOVERNOR ...	0.2
10	1161A8	LEVER, CONTROL	0.3
16	1161A2	BASE, CONTROL	0.3
18	3111G3	STAY, CHOKE CONTROL	0.2

Ref. No.	Part No.	Description	Reqd. QTY	Serial No.	Parts catalogue code
			(1) (2) (3)		
1	16551-ZE2-000	ARM, GOVERNOR	1 1 1	-----	ES1, ES1/A, ES3, ES3/A, ES4, HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, HH, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A, L1, L1/A, LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LT, LT/A, LTJ, LW, LW/A, LWD1, LWD1/A, LX, LX/A, LX16, LX16/A, LX8, LX8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ, PA, PA2, PA2/A, PAE2, PAE2/A, PX, PX/A, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, Q1, Q1/A, Q2, Q2/A, QAB1, QAB3, QAB3/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAG4, QAG4/A, QAR2, QAR2/A, QAW, QAW/A, QD, QD/A, QE, QE/A, QH, QH/A, QH26, QH26/A, QHB5, QHC, QHE, QHE4, QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A, QKE3, QKE3/A, QKE4, QKE4/A, QME2, QME2/A, QMH, QMH/A, QP, QP/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE2/A, QSE8, QSE8/A, QT, QT/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX, QX/A, QX26, QX26/A, QXB, QXB/A, QXB6, QXB6/A, QXB7, QXB7/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXE9/A, QXQ4, QXQ4/A, QXU, QXU/A, R1, R1/A, RA, RA2, RA2/A, RA3, RD, RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A, S1, S1/A, SD, SD/A, SE, SE/A, SH, SH/A, SHE, SHEZ, SHQ4, SHQ4/A, SJ, SJ/A, SJG, SJG/A, SJP, SK, SKE1, SMC4, SMC4/A, SMD, SME1, SME1/A, SME6, SME6/A, SMX2, SN, SN/A, SW, SWA4, SWC4, SWC4/A, SWE, SX, SX/A, SX2, SXB, SXB/A, SXB7, SXB7/A, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4, SXQ4/A, SXU, SXU/A, V1, VA, VA2, VA2/A, VAW, VAW1, VD16, VDE, VDE2, VDE2/A, VEB6, VH, VM2, VM2/A, VMA4, VME2, VME2/A, VME4, VMX2, VN17, VN17/A, VNG1, VNG1/A, VNT2, VNT2/A, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4, VS5, VSD, VSD/A, VSD3, VSD3/A, VSD7, VSD7/A, VSH7, VW12, VW12/A, VW22, VWN2, VWN2/A, VWT4, VWT4/A, VX, VX/A, VX26, VXB, VXB/A, VXB2, VXB6, VXB7, VXB7/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8/A, VXG, VXK, VXP, VXP/A, VXQ4, VXQ4/A, VXQP, VXT1, VXT1/A, VXTB, VXU, VXU/A, VXU1, VXU1/A, W1, W1/A, WMA4, WMT8, WMT8/A, WXE8, WXE8/A


E-22

CONTROL(1)

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
2	16555-ZE2-000	ROD, GOVERNOR	1	1	1	-----	ES1, ES1/A, ES3, ES3/A, ES4, HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2 HEA2/A, HEA8, HEA8/A, HH, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A L1, L1/A, LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LJ, LJ/A, LJC, LJC/A LJG, LJG/A, LSS, LT, LT/A, LTJ, LW, LW/A, LWD1, LWD1/A, LX, LX/A, LX16, LX LXE/A, LX8, LX8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ, PA, PA2, PA2/A, PAE2 PAE2/A, PX, PX/A, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, Q1, Q1/A, Q2, QA QA2, QA2/A, QAB1, QAB3, QAB3/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A QAG2, QAG2/A, QAQ, QAQ4, QAQ4/A, QAR2, QAR2/A, QAW, QAW/A, QD, QD/A, QE, QE/A QH, QH/A, QH26, QH26/A, QHB5, QHC, QHE, QHE4, QHE4/A, QHP1, QHP1/A, QHQ4 QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A, QKE3, QKE3/A, QKE4, QL2, QME2 QME2/A, QMH, QMH/A, QP, QP/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8 QSE8/A, QT, QT/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX, QX/A, QX26, QX26/A QXB, QXB/A, QXB6, QXB6/A, QXB7, QXB7/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A QXC9, QXC9/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9 QXEB, QXK, QXQ4, QXQ4/A, QXU, QXU/A, R1, R1/A, RA, RA2, RA2/A, RA3, RD, RD/A RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A, S1, S1/A, SD, SD/A, SE, SE/A SH, SH/A, SHE, SHEZ, SHQ4, SHQ4/A, SJ, SJ/A, SJG, SJG/A, SJP, SK, SKE1, SMC4 SMC4/A, SMD, SME1, SME1/A, SME6, SME6/A, SMX2, SN, SN/A, SW, SWA4, SWC4 SWC4/A, SWE, SX, SX/A, SX2, SXB, SXB/A, SXB7, SXB7/A, SXE, SXE/A, SXE4 SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4, SXQ4/A, SXU, SXU/A, V1, VA, VA2 VA2/A, VAG2, VAG2/A, VAW, VAW1, VD16, VDE, VDE2, VDE2/A, VEB6, VH, VKB2 VKB2/A, VKE4, VKK, VKX4, VM2, VM2/A, VMA4, VME2, VME2/A, VME4, VMS2, VMT VMT/A, VMX2, VN17, VN17/A, VNG1, VNG1/A, VNT2, VNT2/A, VPE4, VPE4/A, VPE5 VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4 VS5, VSD, VSD/A, VSD3, VSD3/A, VSD7, VSD7/A, VSH7, VW12, VW12/A, VW22, VWA VWA2, VWA2/A, VWN2, VWN2/A, VWT4, VWT4/A, VX, VX/A, VX26, VXB, VXB/A, VXB2 VXB6, VXB7, VXB7/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8 VXEB, VXEB/A, VXG, VXX, VXP, VXP/A, VXQ4, VXQ4/A, VXQP, VXT1, VXT1/A, VXTB VXU, VXU/A, VXU1, VXU1/A, W1, W1/A, WMA4, WMT8, WMT8/A, WXE8, WXE8/A ESS, ESS/A
	16555-ZB7-000		1	-	-	-----	

2


CONTROL(1)

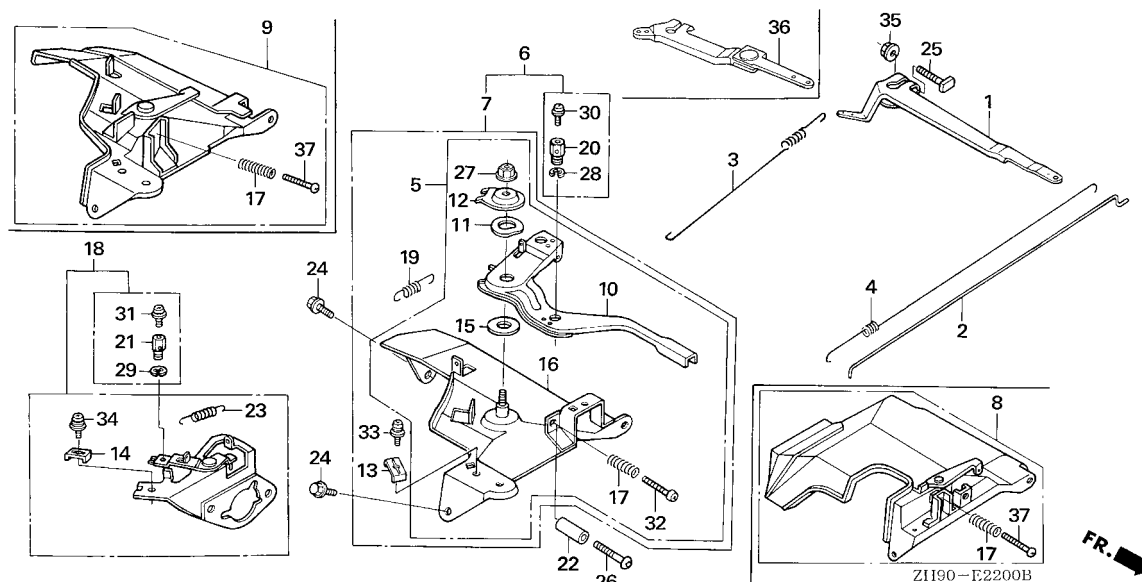[illegible]

E-22

CONTROL(1)

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
(3)	16561-ZE2-000	SPRING, GOVERNOR(L=145.0MM) (WIRE DIAMETER 1.0MM)	1	1	1	-----	VXK, VXP, VXP/A, VXQ4, VXQ4/A, VXQP, VXT1, VXT1/A, VXTB, VXU, VXU/A, VXU1 VXU1/A, W1, W1/A, WMA4, WMT8, WMT8/A, WXE8, WXE8/A
	16561-ZE2-800	SPRING, GOVERNOR(L=142.0MM) ..	(1)	-	(1)	-----	VD16, VN17, VN17/A, VNG1, VNG1/A, VPX4, VPX4/A, VPX7, VPX7/A, VS37, VS37/A VSD, VSD/A, VSD3, VSD3/A, VSD7, VSD7/A, VX, VX/A, VX26, VXB, VXB/A, VXB2 VXB6, VXB7, VXB7/A, VXG, VXK, VXP, VXP/A, VXQ4, VXQ4/A, VXQP, VXT1, VXT1/A VXTB, VXU, VXU/A, VXU1, VXU1/A
	16561-ZH9-U30	SPRING, GOVERNOR	1	-	-	-----	VKB2, VKB2/A, VM2/A, VME2/A, VMS2
	16561-ZK9-800		1	-	-	-----	VPE5, VPK, VPX5
	16561-ZH9-U30		(1)	-	-	-----	VPE5, VPX5
	16561-ZE2-000	SPRING, GOVERNOR(L=145.0MM) (WIRE DIAMETER 1.0MM)	1	-	-	-----	1304886 VME2
			1	-	-	-----	1368686 VM2
			1	-	-	-----	2134945 VPE4/A, VPX4/A, VXB7/A, VXE7/A
	16561-ZH9-U30	SPRING, GOVERNOR	1	-	-	-----	1304887 VME2
			1	-	-	-----	1368687 VM2
	16561-ZK9-800		1	-	-	-----	2134946 VPE4/A, VPX4/A
	16561-ZH9-U30		1	-	-	-----	2134946 VXB7/A, VXE7/A
4	16562-ZE2-000	SPRING, THROTTLE RETURN	1	1	1	-----	ES1, ES1/A, ES3, ES3/A, ES4, ESS, ESS/A, HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA HEA2, HEA2/A, HEA8, HEA8/A, HH, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4 HXQ4/A, L1, L1/A, LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LJ, LJ/A, LJC LJC/A, LJG, LJG/A, LSS, LT, LT/A, LTJ, LW, LW/A, LWD1, LWD1/A, LX, LX/A, LX16 LXE, LXE/A, LX8, LX8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ, PA, PA2, PA2/A, PAE2 PAE2/A, PX, PX/A, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, Q1, Q1/A, Q2, Q2/A QA2, QA2/A, QAB1, QAB3, QAB3/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A QAG2, QAG2/A, QAG, QAG4, QAG4/A, QAR2, QAR2/A, QAW, QAW/A, QD, QD/A, QE, QE/A QH, QH/A, QH26, QH26/A, QHB5, QHC, QHE, QHE4, QHE4/A, QHP1, QHP1/A, QHQ4 QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A, QKE3, QKE3/A, QKE4, QKE4/A, QME2 QME2/A, QMH, QMH/A, QP, QP/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8 QSE8/A, QT, QT/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX, QX/A, QX26, QX26/A QXB, QXB/A, QXB6, QXB6/A, QXB7, QXB7/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A QXC9, QXC9/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9 QXE9, QXK, QXK4, QXQ4/A, QXU, QXU/A, R1, R1/A, RA, RA2, RA2/A, RA3, RD, RD/A RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A, S1, S1/A, SD, SD/A, SE, SE/A SH, SH/A, SHE, SHEZ, SHQ4, SHQ4/A, SJ, SJ/A, SJG, SJG/A, SJP, SK, SKE1, SMC4 SMC4/A, SMD, SME1, SME1/A, SME6, SME6/A, SMX2, SN, SN/A, SW, SWA4, SWC4 SWC4/A, SWE, SX, SX/A, SX2, SXB, SXB/A, SXB7, SXB7/A, SXE, SXE/A, SXE4 SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4, SXQ4/A, SXU, SXU/A, V1, VA, VA2 VA2/A, VAW, VAW1, VD16, VDE, VDE2, VDE2/A, VEB6, VH, VHX4, VVK, VVK4, VM2 VM2/A, VMA4, VME2, VME2/A, VME4, VN17, VN17/A, VNG1, VNG1/A, VNT2, VNT2/A VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS3 VS37, VS37/A, VS4, VS5, VSD, VSD/A, VSD3, VSD3/A, VSD7, VSD7/A, VSH7, VW12 VW12/A, VW22, VWN2, VWN2/A, VWT4, VWT4/A, VX, VX/A, VX26, VXB, VXB/A, VXB2 VXB6, VXB7, VXB7/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8 VXE8, VXE8/A, VXG, VXK, VXP, VXP/A, VXQ4, VXQ4/A, VXQP, VXT1, VXT1/A, VXTB VXU, VXU/A, VXU1, VXU1/A, W1, W1/A, WMA4, WMT8, WMT8/A, WXE8, WXE8/A VAG2, VAG2/A, VKB2, VKB2/A, VMS2, VMT, VMT/A, VMX2, VWA, VWA2, VWA2/A HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, HH, HX, HX/A HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A, PA, PA2, PA2/A, PX, PX/A, PX26 PX26/A, PXU, PXU/A, QD, QD/A, RD, RD/A, SD, SD/A, SMC4, SMC4/A, SMD, SN, SN/A VD16, VEB6, VH, VX, VX/A, VX26, VXB, VXB/A, VXB2, VXB6, VXB7, VXB7/A, VXE VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8, VXE8/A, VXP, VXP/A VXQ4, VXQ4/A, VXQP, VXTB, WMA4, WMT8, WMT8/A, WXE8, WXE8/A VN17, VN17/A, VNG1, VNG1/A
	16562-ZE2-700		1	-	-	-----	
5	16570-ZE2-W00	CONTROL ASSY.	1	-	1	-----	HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, HH, HX, HX/A HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A, PA, PA2, PA2/A, PX, PX/A, PX26 PX26/A, PXU, PXU/A, QD, QD/A, RD, RD/A, SD, SD/A, SMC4, SMC4/A, SMD, SN, SN/A VD16, VEB6, VH, VX, VX/A, VX26, VXB, VXB/A, VXB2, VXB6, VXB7, VXB7/A, VXE VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8, VXE8/A, VXP, VXP/A VXQ4, VXQ4/A, VXQP, VXTB, WMA4, WMT8, WMT8/A, WXE8, WXE8/A VN17, VN17/A, VNG1, VNG1/A
	16570-ZE2-W40		1	-	-	-----	
	16570-ZE2-W00		-	(1)	-	-----	
	16570-ZE2-W40		-	(1)	-	-----	

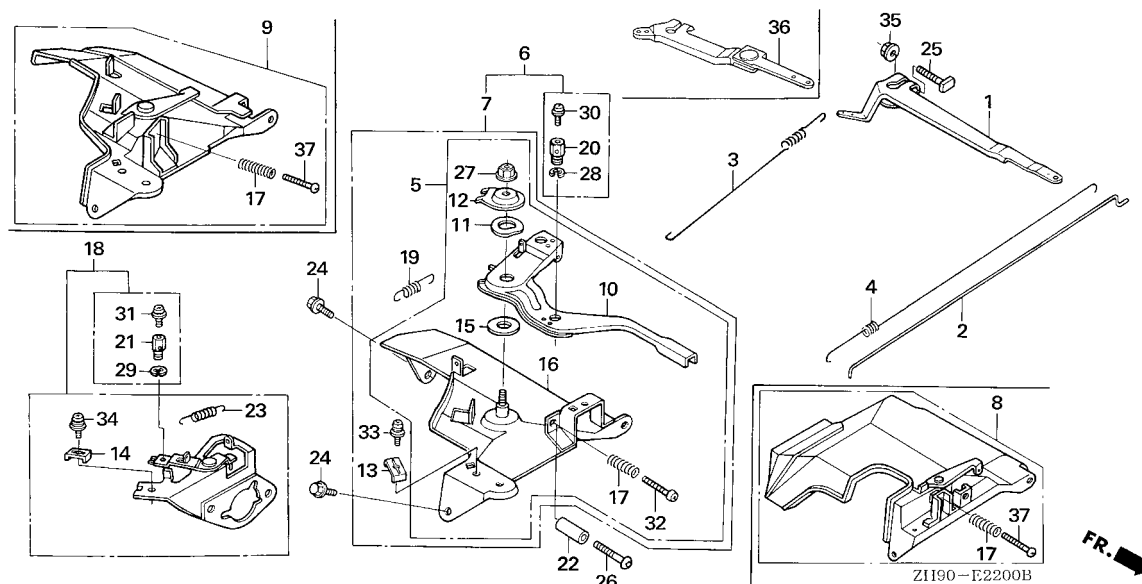


Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
6	16570-ZE2-W10	CONTROL ASSY. (REMOTE)	1	-	-	-----	LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LT, LT/A, LTJ, LWD1, LWD1/A, QKE3 QKE3/A, QKE4, SJ, SJ/A, SJG, SJG/A, SK, SKE1, SME6, SME6/A, VMA4, VME4
	16570-ZE2-W50		1	-	-	-----	SJP
	16570-ZE2-W10		1	-	-	-----	2302563 SMX2
	16570-ZE2-W50		1	-	-	-----	2302564 SMX2
	16570-ZE2-W10		-	(1)	-	-----	
7	16570-ZE2-W20	CONTROL ASSY. (REMOTE)	1	-	1	-----	LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LW, LW/A, LX, LX/A, LX16, LXE LXE/A, LXE8, LXE8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ, PAE2, PAE2/A, PXE8 PXE8/A, QA, QA2, QA2/A, QAB1, QAB3, QAB3/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A QAG, QAG/A, QAG2, QAG2/A, QAQ, QAQ4, QAQ4/A, QAR2, QAR2/A, QAW, QAW/A, QE QE/A, QH, QH/A, QH26, QH26/A, QHB5, QHC, QHE, QHE4, QHE4/A, QHP1, QHP1/A QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A, QL2, QME2, QME2/A, QMH QMH/A, QP, QP/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QT, QT/A QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX, QX/A, QX26, QX26/A, QXB, QXB/A, QXB6 QXB6/A, QXB7, QXB7/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXEB, QXK, QXQ4 QXQ4/A, QXU, QXU/A, RA, RA2, RA2/A, RA3, RH, RH26, RH26/A, RHE, RHE4, RHE4/A RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A RXU, RXU/A, SE, SE/A, SH, SH/A, SHE, SHEZ, SHQ4, SHQ4/A, SME1, SME1/A, SW SWA4, SWC4, SWC4/A, SWE, SX, SX/A, SX2, SXB, SXB/A, SXB7, SXB7/A, SXE, SXE/A SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4, SXQ4/A, SXU, SXU/A, VA, VA2 VA2/A, VAW, VDE, VDE2, VDE2/A, VM2, VM2/A, VME2, VME2/A, VWN2, VWN2/A
8	16570-ZE2-701	CONTROL ASSY.	1	-	-	-----	ES3, ES3/A, ES4, VKE4, VKK, VKX4, VMT, VMT/A, VPE4, VPE4/A, VPE5, VPE7 VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4, VS5 VSD3, VSD3/A
9	16570-ZE2-721	CONTROL ASSY.	1	-	-	-----	ES1, VAG2, VAG2/A, VAW1, VKB2, VKB2/A, VMS2, VMX2, VNT2, VNT2/A, VSD, VSD/A VSD7, VSD7/A, VSH7, VW12, VW12/A, VW22, VWA, VWA2, VWA2/A, VWT4, VWT4/A, VXG VXT1, VXU, VXU1, VXU1/A

E-22

CONTROL(1)

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
(9)	16570-ZE2-722	CONTROL ASSY.	1	-	-	-----	VXK
	16570-ZE2-721		1	-	-	-----	ES1/A, VXT1/A, VXU/A
	16570-ZE2-722		1	-	-	2418415	ES1/A, VXT1/A, VXU/A
10	16571-ZE2-W00	LEVER, CONTROL	1	-	1	-----	HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, HH, HX, HX/A HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A, LH, LH/A, LHB1, LHB3, LHB5, LHE LHE/A, LHQ4, LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LT, LT/A, LTJ, LW, LW/A LWD1, LWD1/A, LX, LX/A, LX16, LXE, LXE/A, LXE8, LXE8/A, LXQ4, LXQ4/A, LXU LXU/A, LXZ, PA, PA2, PA2/A, PAE2, PAE2/A, PX, PX/A, PX26, PX26/A, PXE8 PXE8/A, PXU, PXU/A, QA, QA2, QA2/A, QAB1, QAB3, QAB3/A, QAE, QAE2, QAE2/A QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAQ, QAQ4, QAQ4/A, QAR2, QAR2/A, QAW QAW/A, QD, QD/A, QE, QE/A, QH, QH/A, QH26, QH26/A, QHB5, QHC, QHE, QHE4 QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A QKE3, QKE3/A, QKE4, QL2, QME2, QME2/A, QMH, QMH/A, QP, QP/A, QSC, QSC9 QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QT, QT/A, QWA2, QWA4, QWA4/A, QWH2 QWH2/A, QX, QX/A, QX26, QX26/A, QXB, QXB/A, QXB6, QXB6/A, QXB7, QXB7/A, QXC QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE, QXE/A, QXE4, QXE4/A, QXE6 QXE6/A, QXE8, QXE8/A, QXE9, QXEB, QXK, QXQ4, QXQ4/A, QXU, QXU/A, RA, RA2 RA2/A, RA3, RD, RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2 RSC2/A, RSS, RSS/A, RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A, SD, SD/A SE, SE/A, SH, SH/A, SHE, SHEZ, SHQ4, SHQ4/A, SJ, SJ/A, SJG, SJG/A, SJP, SK SKE1, SMC4, SMC4/A, SMD, SME1, SME1/A, SME6, SME6/A, SMX2, SN, SN/A, SW, SWA4 SWC4, SWC4/A, SWE, SX, SX/A, SX2, SXB, SXB/A, SXB7, SXB7/A, SXE, SXE/A, SXE4 SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4, SXQ4/A, SXU, SXU/A, VA, VA2, VA2/A VAW, VD16, VDE, VDE2, VDE2/A, VEB6, VH, VM2, VM2/A, VMA4, VME2, VME2/A, VME4 VWN2, VWN2/A, VX, VX/A, VX26, VXB, VXB/A, VXB2, VXB6, VXB7, VXB7/A, VXE, VXE4 VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8/A, VXE9, VXE9/A, VXP, VXP/A, VXQ4 VXQ4/A, VXQP, VXTB, WMA4, WMT8, WMT8/A, WXE8, WXE8/A VN17, VN17/A, VNG1, VNG1/A
	16571-ZE2-W10	LEVER, CONTROL(###)	1	-	-	-----	
	16571-ZE2-W00	LEVER, CONTROL	-	(1)	-	-----	
	16571-ZE2-W10	LEVER, CONTROL(###)	-	(1)	-	-----	L1, L1/A, Q1, Q1/A, R1, R1/A, S1, S1/A, V1, W1, W1/A
		(16570-ZE2-W40)	-	(1)	-	-----	Q2

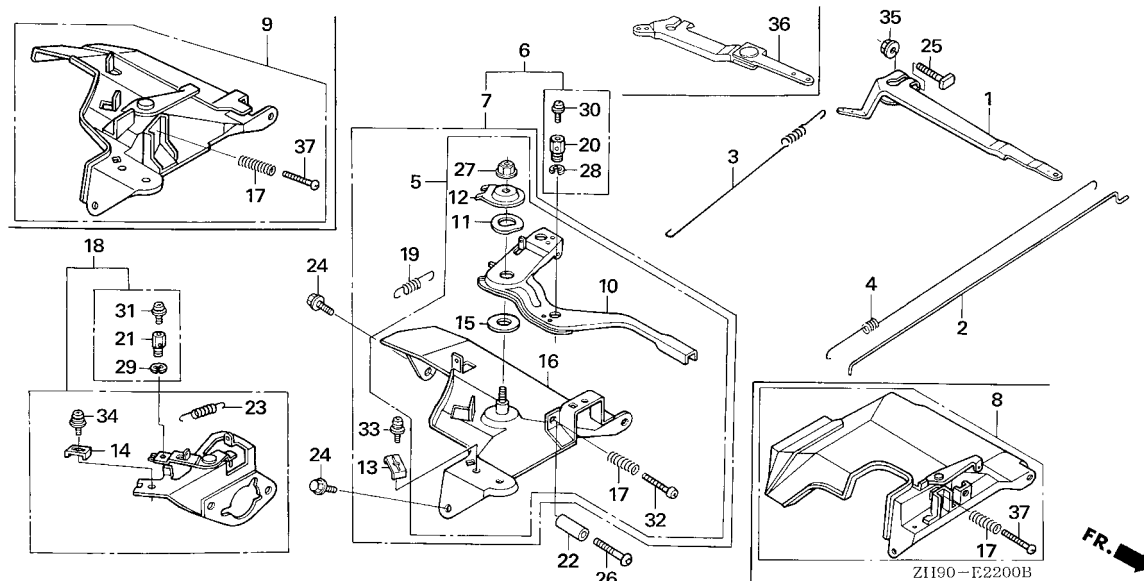


Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	GX270 (2)	(3)		
11	16574-ZE1-000	SPRING, LEVER.....	1	-	1	-----	HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, HH, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A, LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LT, LT/A, LTJ, LW, LW/A, LWD1, LWD1/A, LX, LX/A, LX16, LX16, LX16/A, LX8, LX8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ, PA, PA2, PA2/A, PAE2, PAE2/A, PX, PX/A, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, QA, QA2, QA2/A, QAB1, QAB3, QAB3/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAA, QAA4, QAA4/A, QAR2, QAR2/A, QAW, QAW/A, QD, QD/A, QE, QE/A, QH, QH/A, QH26, QH26/A, QHB5, QHC, QHE, QHE4, QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A, QKE3, QKE3/A, QKE4, QL2, QME2, QME2/A, QMH, QMH/A, QP, QP/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE2, QSE2/A, QT, QT/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX, QX/A, QX26, QX26/A, QXB, QXB/A, QXB6, QXB6/A, QXB7, QXB7/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXE9, QXE9/A, QXK, QXK4, QXQ4/A, QXU, QXU/A, RA, RA2, RA2/A, RA3, RD, RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A, SD, SD/A, SE, SE/A, SH, SH/A, SHE, SHEZ, SHQ4, SHQ4/A, SJ, SJ/A, SJG, SJG/A, SJP, SK, SKE1, SMC4, SMC4/A, SMD, SME1, SME1/A, SME6, SME6/A, SMX2, SN, SN/A, SW, SWA4, SWC4, SWC4/A, SWE, SX, SX/A, SX2, SXB, SXB/A, SXB7, SXB7/A, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4, SXQ4/A, SXU, SXU/A, VA, VA2, VA2/A, VAW, VD16, VDE, VDE2, VDE2/A, VEB6, VH, VM2, VM2/A, VMA4, VME2, VME2/A, VME4, VN17, VN17/A, VNG1, VNG1/A, VWN2, VWN2/A, VX, VX/A, VX26, VXB, VXB/A, VXB2, VXB6, VXB7, VXB7/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8, VXE8/A, VXP, VXP/A, VXQ4, VXQ4/A, VXQP, VXTB, WMA4, WMT8, WMT8/A, WXE8, WXE8/A

- (1) -

CONTROL(1)

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	GX270 (2)	(3)		
12	16575-ZE2-W00	WASHER, CONTROL LEVER	1	-	1	-----	HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, HH, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A, LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LT, LT/A, LTJ, LW, LW/A, LWD1, LWD1/A, LX, LX/A, LX16, LX16/A, LX16, LX16/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ, PA, PA2, PA2/A, PAE2, PAE2/A, PX, PX/A, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, QA, QA2, QA2/A, QAB1, QAB3, QAB3/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAQ, QAQ4, QAQ4/A, QAR2, QAR2/A, QAW, QAW/A, QD, QD/A, QE, QE/A, QH, QH/A, QH26, QH26/A, QHB5, QHC, QHE, QHE4, QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A, QKE3, QKE3/A, QKE4, QL2, QME2, QME2/A, QMH, QMH/A, QP, QP/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QT, QT/A, QWA2, QWA4/A, QWH2, QWH2/A, QX, QX/A, QX26, QX26/A, QXB, QXB/A, QXB6, QXB6/A, QXB7, QXB7/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXE9, QXX, QXQ4, QXQ4/A, QXU, QXU/A, RA, RA2, RA2/A, RA3, RD, RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A, SD, SD/A, SE, SE/A, SH, SH/A, SHE, SHEZ, SHQ4, SHQ4/A, SJ, SJ/A, SJG, SJG/A, SJP, SK, SKE1, SMC4, SMC4/A, SMD, SME1, SME1/A, SME6, SME6/A, SMX2, SN, SN/A, SW, SWA4, SWC4, SWC4/A, SWE, SX, SX/A, SX2, SXB, SXB/A, SXB7, SXB7/A, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4, SXQ4/A, SXU, SXU/A, VA, VA2, VA2/A, VAW, VD16, VDE, VDE2, VDE2/A, VEB6, VH, VM2, VM2/A, VMA4, VME2, VME2/A, VME4, VN17, VN17/A, VNG1, VNG1/A, VWN2, VWN2/A, VX, VX/A, VX26, VXB, VXB/A, VXB2, VXB6, VXB7, VXB7/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8/A, VXB7, VXB7/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8/A, VXP, VXP/A, VXQ4, VXQ4/A, VXQP, VXTB, WMA4, WMT8, WMT8/A, WXE8, WXE8/A
13	16576-891-000	HOLDER, CABLE	- 1	(1) -	- 1	-----	LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LT, LT/A, LTJ, LW, LW/A, LWD1, LWD1/A, LX, LX/A, LX16, LX16/A, LX16, LX16/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ, PAE2, PAE2/A, PXE8, PXE8/A, QA, QA2, QA2/A, QAB1, QAB3, QAB3/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAG2, QAG2/A, QAR2, QAR2/A, QAW, QAW/A, QE, QE/A, QH, QH/A, QH26, QH26/A, QHB5, QHC, QHE, QHE4, QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A, QKE3, QKE3/A, QKE4, QL2, QME2, QME2/A, QMH, QMH/A, QP, QP/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QT, QT/A, QWA2, QWA4/A, QWH2, QWH2/A, QX, QX/A, QX26, QX26/A, QXB, QXB/A, QXB6, QXB6/A, QXB7, QXB7/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXE9, QXX, QXQ4, QXQ4/A, QXU, QXU/A, RA, RA2, RA2/A, RA3, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A, SE, SE/A, SH, SH/A, SHE, SHEZ, SHQ4, SHQ4/A, SJ, SJ/A, SJG, SJG/A, SJP, SK, SKE1, SME1, SME1/A, SME6, SME6/A, SMX2, SW, SWA4, SWC4, SWC4/A, SWE, SX, SX/A, SX2, SXB, SXB/A, SXB7, SXB7/A, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4, SXQ4/A, SXU, SXU/A, VA, VA2, VA2/A, VAW, VDE, VDE2, VDE2/A, VM2, VM2/A, VMA4, VME2, VME2/A, VME4, VVN2, VVN2/A
14	16576-891-000	HOLDER, CABLE	- 1 -	(1) (-) -	- 1 -	-----	LTJ, LWD1, LWD1/A, QKE3, QKE3/A, QKE4, QME2, QME2/A, SKE1

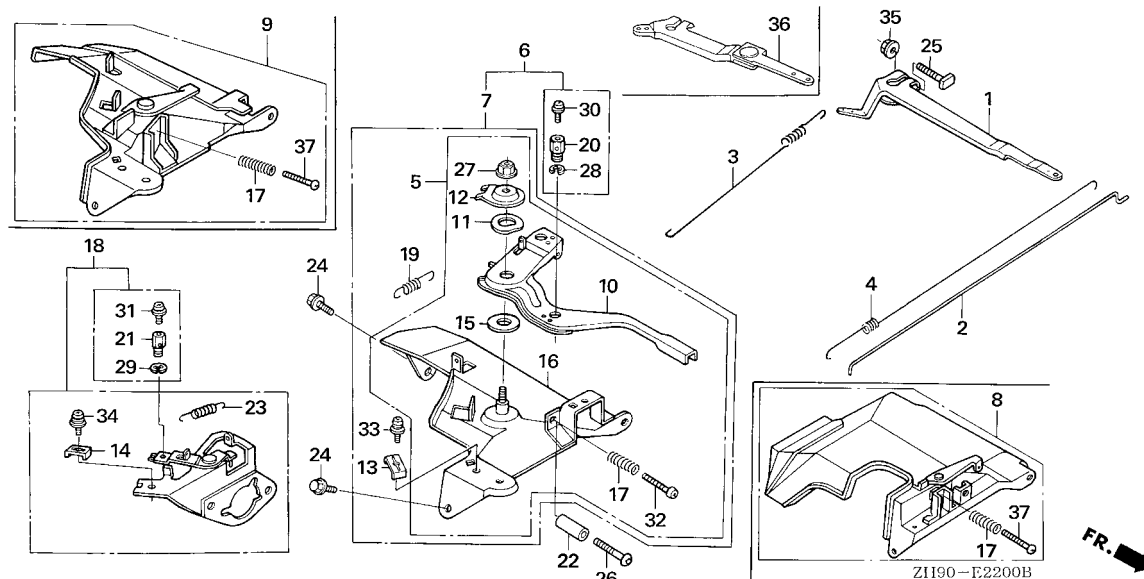


Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
15	16578-ZE1-000	SPACER, CONTROL LEVER.....	1	-	1	HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, HH, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A, LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LT, LT/A, LTJ, LW, LW/A, LWD1, LWD1/A, LX, LX/A, LX16, LX16/A, LX8, LX8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ, PA, PA2, PA2/A, PAE2, PAE2/A, PX, PX/A, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, QA, QA2, QA2/A, QAB1, QAB3, QAB3/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAQ, QAQ4, QAQ4/A, QAR2, QAR2/A, QAW, QAW/A, QD, QD/A, QE, QE/A, QH, QH/A, QH26, QH26/A, QHB5, QHC, QHE, QHE4, QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A, QKE3, QKE3/A, QKE4, QL2, QME2, QME2/A, QMH, QMH/A, QP, QP/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE2/A, QSE8, QSE8/A, QT, QT/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX, QX/A, QX26, QX26/A, QXB, QXB/A, QXB6, QXB6/A, QXB7, QXB7/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXE9/A, QXQ4, QXQ4/A, QXU, QXU/A, RA, RA2, RA2/A, RA3, RD, RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A, SD, SD/A, SE, SE/A, SH, SH/A, SHE, SHEZ, SHQ4, SHQ4/A, SJ, SJ/A, SJG, SJG/A, SJP, SK, SKE1, SMC4, SMC4/A, SMD, SME1, SME1/A, SME6, SME6/A, SMX2, SN, SN/A, SW, SWA4, SWC4, SWC4/A, SWE, SX, SX/A, SX2, SXB, SXB/A, SXB7, SXB7/A, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4, SXQ4/A, SXU, SXU/A, VA, VA2, VA2/A, VAW, VD16, VDE, VDE2, VDE2/A, VEB6, VH, VM2, VM2/A, VMA4, VME2, VME2/A, VME4, VN17, VN17/A, VNG1, VNG1/A, VWN2, VWN2/A, VX, VX/A, VX26, VXB, VXB/A, VXB2, VXB6, VXB7, VXB7/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8/A, VXB7, VXB7/A, VXP, VXP/A, VXQ4, VXQ4/A, VXQP, VXQP/A, WMA4, WMT8, WMT8/A, WXE8, WXE8/A	

- (1) -

CONTROL(1)


Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	GX270 (2)	(3)		
16	16581-ZE2-W00	BASE COMP., CONTROL(###).....	1	-	1	-----	HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, HH, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A, LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LT, LT/A, LTJ, LW, LW/A, LWD1, LWD1/A, LX, LX/A, LX16, LX16/A, LX16, LX16/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ, PA, PA2, PA2/A, PAE2, PAE2/A, PX, PX/A, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, QA, QA2, QA2/A, QAB1, QAB3, QAB3/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAQ, QAQ4, QAQ4/A, QAR2, QAR2/A, QAW, QAW/A, QD, QD/A, QE, QE/A, QH, QH/A, QH26, QH26/A, QHB5, QHC, QHE, QHE4, QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A, QKE3, QKE3/A, QL2, QME2, QME2/A, QMH, QMH/A, QP, QP/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QT, QT/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX, QX/A, QX26, QX26/A, QXB, QXB/A, QXB6, QXB6/A, QXB7, QXB7/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXE9, QXK, QXQ4, QXQ4/A, QXU, QXU/A, RA, RA2, RA2/A, RA3, RD, RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A, SD, SD/A, SE, SE/A, SH, SH/A, SHE, SHEZ, SHQ4, SHQ4/A, SJ, SJ/A, SJG, SJG/A, SJP, SK, SKE1, SMC4, SMC4/A, SMD, SME1, SME1/A, SME6, SME6/A, SMX2, SN, SN/A, SW, SWA4, SWC4, SWC4/A, SWE, SX, SX/A, SX2, SXB, SXB/A, SXB7, SXB7/A, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4, SXQ4/A, SXU, SXU/A, VA, VA2, VA2/A, VAW, VD16, VDE, VDE2, VDE2/A, VEB6, VH, VM2, VM2/A, VMA4, VME2, VME2/A, VME4, VN17, VN17/A, VNG1, VNG1/A, VWN2, VWN2/A, VX, VX/A, VX26, VXB, VXB/A, VXB2, VXB6, VXB7, VXB7/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8/A, VXE8, VXE8/A, VXP, VXP/A, VXQ4, VXQ4/A, VXQP, VXTB, WMA4, WMT8, WMT8/A, WXE8, WXE8/A
17	16584-883-300	SPRING, CONTROL ADJUSTING.....	-	(1)	-	-----	ES1, ES1/A, ES3, ES3/A, ES4, HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, HH, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A, LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LT, LT/A, LTJ, LW, LW/A, LWD1, LWD1/A, LX, LX/A, LX16, LX16/A, LX16, LX16/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ, PA, PA2, PA2/A, PAE2, PAE2/A, PX, PX/A, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, QA, QA2, QA2/A, QAB1, QAB3, QAB3/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAQ, QAQ4, QAQ4/A, QAR2, QAR2/A, QAW, QAW/A, QD, QD/A, QE, QE/A, QH, QH/A, QH26, QH26/A, QHB5, QHC, QHE, QHE4, QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A, QKE3, QKE3/A, QKE4, QL2, QME2, QME2/A, QMH, QMH/A, QP, QP/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QT, QT/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX, QX/A, QX26, QX26/A, QXB, QXB/A, QXB6, QXB6/A, QXB7, QXB7/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXE9, QXK, QXQ4, QXQ4/A, QXU, QXU/A, RA, RA2, RA2/A, RA3, RD, RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A, SD, SD/A, SE, SE/A, SH, SH/A, SHE, SHEZ, SHQ4, SHQ4/A, SJ, SJ/A, SJG, SJG/A, SJP, SK, SKE1, SMC4, SMC4/A, SMD, SME1, SME1/A, SME6, SME6/A, SMX2, SN, SN/A, SW, SWA4, SWC4, SWC4/A, SWE, SX, SX/A, SX2, SXB, SXB/A, SXB7, SXB7/A, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4, SXQ4/A, SXU, SXU/A, VA, VA2, VA2/A, VAG2, VAG2/A, VAW, VAW1, VD16, VDE, VDE2, VDE2/A, VEB6, VH, VKB2, VKB2/A, VKE4, VKK, VKX4, VM2, VM2/A, VMA4, VME2, VME2/A, VME4, VMS2, VMT, VMT/A, VMX2, VN17, VN17/A, VNG1, VNG1/A, VNT2, VNT2/A, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4, VS5, VSD, VSD/A, VSD3, VSD3/A, VSD7, VSD7/A, VSH7, VW12, VW12/A, VW22, VWA, VWA2, VWA2/A, VWN2, VWN2/A, VWT4, VWT4/A, VX, VX/A, VX26, VXB, VXB/A, VXB2, VXB6, VXB7, VXB7/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8/A, VXE8, VXE8/A, VXP, VXP/A, VXQ4, VXQ4/A, VXQP, VXT1, VXT1/A, VXTB, VXU, VXU/A, VXU1, VXU1/A, WMA4, WMT8, WMT8/A, WXE8, WXE8/A

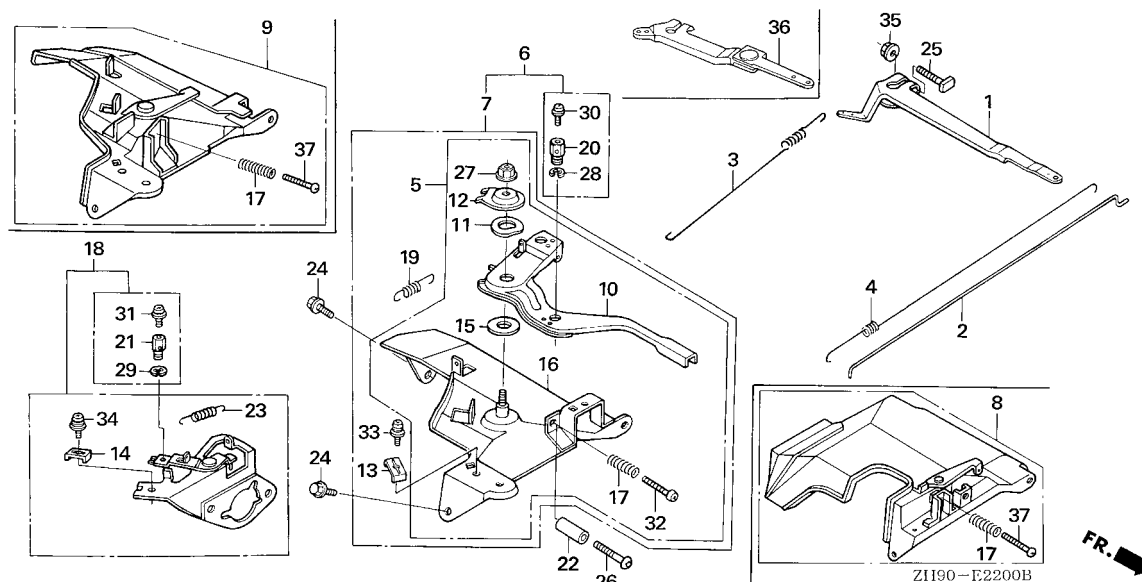

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
18	16590-ZE2-812	STAY ASSY., CHOKE CONTROL (REMOTE)	1	-	-	-----	LTJ, LWD1, LWD1/A, QKE3, QKE3/A, QKE4, QME2, QME2/A, SKE1
19	16592-883-310	SPRING, CABLE RETURN.....	1	-	1	-----	LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LT, LT/A, LTJ, LW, LW/A, LWD1, LWD1/A, LX, LX/A, LX16, LXE, LXE/A, LXE8, LXE8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ, PAE2, PAE2/A, PXE8, PXE8/A, QA, QA2, QA2/A, QAB1, QAB3, QAB3/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAQ, QAQ4, QAQ4/A, QAR2, QAR2/A, QAW, QAW/A, QE, QE/A, QH, QH/A, QH26, QH26/A, QHB5, QHC, QHE, QHE4, QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A, QKE3, QKE3/A, QKE4, QL2, QME2, QME2/A, QMH, QMH/A, QP, QP/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QT, QT/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX, QX/A, QX26, QX26/A, QXB, QXB/A, QXB6, QXB6/A, QXB7, QXB7/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXEB, QXK, QXQ4, QXQ4/A, QXU, QXU/A, RA, RA2, RA2/A, RA3, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A, SE, SE/A, SH, SH/A, SHE, SHEZ, SHQ4, SHQ4/A, SJ, SJ/A, SJG, SJG/A, SJP, SK, SKE1, SME1, SME1/A, SME6, SME6/A, SMX2, SW, SWA4, SWC4, SWC4/A, SWE, SX, SX/A, SX2, SXB, SXB/A, SXB7, SXB7/A, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4, SXQ4/A, SXU, SXU/A, VA, VA2, VA2/A, VAW, VDE, VDE2, VDE2/A, VM2, VM2/A, VMA4, VME2, VME2/A, VME4, VWN2, VWN2/A
20	16594-883-010	HOLDER, WIRE	1	-	-	-----	LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LT, LT/A, LTJ, LWD1, LWD1/A, QKE3, QKE3/A, QKE4, SJ, SJ/A, SJG, SJG/A, SJP, SK, SKE1, SME6, SME6/A, SMX2, VMA4, VME4
21	16594-883-010	HOLDER, WIRE	1	-	-	-----	LTJ, LWD1, LWD1/A, QKE3, QKE3/A, QKE4, QME2, QME2/A, SKE1

CONTROL(1)

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	GX270 (2)	(3)		
22	16599-ZG1-M10	COLLAR, STOPPER.....	(1)	(1)	(1)	-----	HH, HX, HX26, HX8, HXQ4, L1, L1/A, LH, LHB1, LHB3, LHE, LHQ4, LW, LX, LX16, LXE, LXE8, LXQ4, LXU, LXZ, PX, PX26, PXE8, PXU, Q1, Q1/A, Q2, QA, QAB1, QAB3, QAE, QAE6, QAQ4, QD, QE, QH, QH26, QHC, QHE, QHE4, QHP1, QHQ4, QHR, QHR4, QHZ, QKE3, QME2, QMH, QP, QSE, QSE8, QT, QWA4, QX, QX26, QXB, QXB6, QXB7, QXC, QXC4, QXC6, QXE, QXE4, QXE6, QXE8, QXEB, QXQ4, QXU, R1, R1/A, RD, RH, RH26, RHE, RHE4, RHQ4, RX, RXQ4, SD, SE, SH, SHE, SHEZ, SHQ4, SKE1, SMC4, SMD, SME6, SN, SW, SWA4, SWC4, SWE, SX, SXB, SXB7, SXE, SXE4, SXE8, SXEB, SXQ4, SXU, V1, VD16, VEB6, VH, VMA4, VME4, VN17, VNG1, VPE4, VPE5, VPE7, VPK, VPX4, VPX5, VPX7, VS37, VSD7, VSH7, VWT4, VX, VX26, VXB, VXB2, VXB6, VXB7, VXE, VXE4, VXE6, VXE7, VXE8, VXE9, VXP, VXQ4, VXQP, VXTB, W1, W1/A, WMA4
23	16615-ZE2-810	SPRING, RETURN.....	1	-	-	-----	LTJ, LWD1, LWD1/A, QKE3, QKE3/A, QKE4, QME2, QME2/A, SKE1
24	90013-883-000	BOLT, FLANGE, 6X12(CT200)....	2	(1)	-	-----	ES1, ES1/A, ES3, ES3/A, ES4, HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, HH, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A, L1, L1/A, LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LT, LT/A, LTJ, LW, LW/A, LWD1, LWD1/A, LX, LX/A, LX16, LXE, LXE/A, LXE8, LXEB/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ, PA, PA2, PA2/A, PAE2, PAE2/A, PX, PX/A, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, Q1, Q1/A, Q2, QA, QA2, QA2/A, QAB1, QAB3, QAB3/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAQ, QAQ4, QAQ4/A, QAR2, QAR2/A, QAW, QAW/A, QD, QD/A, QE, QE/A, QH, QH/A, QH26, QH26/A, QHB5, QHC, QHE, QHE4, QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A, QKE3, QKE3/A, QKE4, QL2, QME2, QME2/A, QMH, QMH/A, QP, QP/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QT, QT/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX, QX/A, QX26, QX26/A, QXB, QXB/A, QXB6, QXB6/A, QXB7, QXB7/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXE9/A, QXQ4, QXQ4/A, QXU, QXU/A, RA, RA2, RA2/A, RA3, RD, RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A, S1, S1/A, SD, SD/A, SE, SE/A, SH, SH/A, SHE, SHEZ, SHQ4, SHQ4/A, SJ, SJ/A, SJG, SJG/A, SJP, SK, SKE1, SMC4, SMC4/A, SMD, SME1, SME1/A, SME6, SME6/A, SMX2, SN, SN/A, SW, SWA4, SWC4, SWC4/A, SWE, SX, SX/A, SX2, SXB, SXB/A, SXB7, SXB7/A, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4, SXQ4/A, SXU, SXU/A, V1, VA, VA2, VA2/A, VAG2, VAG2/A, VAW, VAW1, VD16, VDE, VDE2, VDE2/A, VEB6, VH, VEB2, VEB2/A, VKE4, VKE4/A, VKX4, VM2, VM2/A, VMA4, VME2, VME2/A, VME4, VMS2, VMT, VMT/A, VMX2, VN17, VN17/A, VNG1, VNG1/A, VNT2, VNT2/A, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4, VS5, VSD, VSD/A, VSD3, VSD3/A, VSD7, VSD7/A, VSH7, VW12, VW12/A, VW22, VWA, VWA2, VWA2/A, VWN2, VWN2/A, VWT4, VWT4/A, VX, VX/A, VX26, VXB, VXB/A, VXB2, VXB6, VXB7, VXB7/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8, VXE9, VXE9/A, VXG, VVK, VXP, VXP/A, VXQ4, VXQ4/A, VXQP, VXT1, VXT1/A, VXTB, VXU, VXU/A, VXU1, VXU1/A, W1, W1/A, WMA4, WMT8, WMT8/A, WXE8, WXE8/A, R1, R1/A
			-	(2)	-	-----	

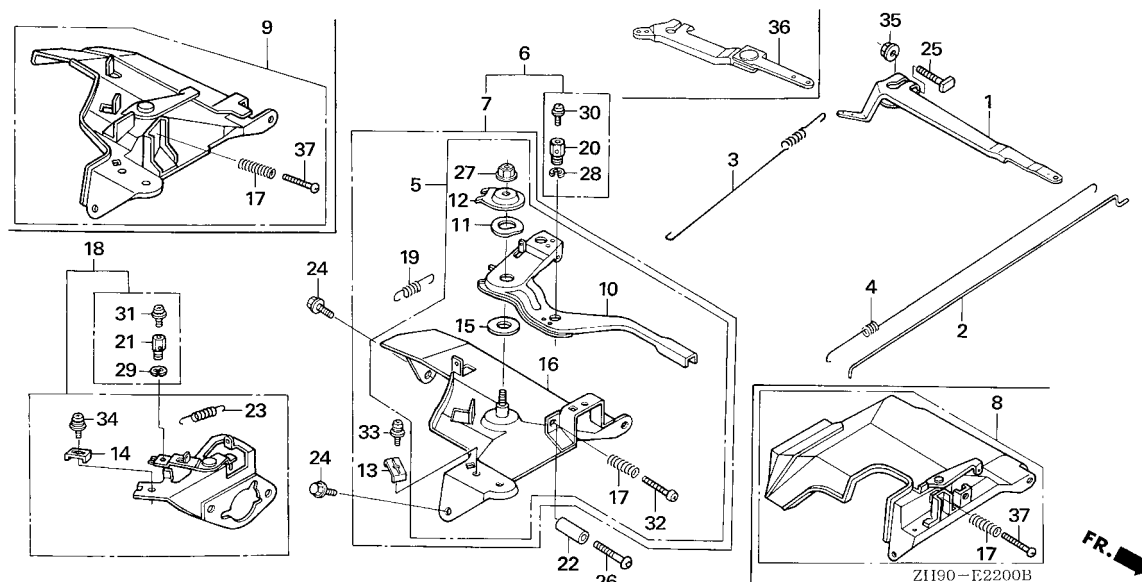


Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	GX270 (2)	(3)		
25	90015-ZE5-010	BOLT, GOVERNOR ARM.....	1	1	1	-----	ES1, ES1/A, ES3, ES3/A, ES4, ESS, ESS/A, HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA HEA2, HEA2/A, HEA8, HEA8/A, HH, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4 HXQ4/A, L1, L1/A, LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LJ, LJ/A, LJC LJC/A, LJG, LJG/A, LSS, LT, LT/A, LTJ, LW, LW/A, LWD1, LWD1/A, LX, LX/A, LX16 LXE, LXE/A, LXE8, LXE8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ, PA, PA2, PA2/A, PAE2 PAE2/A, PX, PX/A, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, Q1, Q1/A, Q2, QA QA2, QA2/A, QAB1, QAB3, QAB3/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A QAG2, QAG2/A, QAQ, QAQ4, QAQ4/A, QAR2, QAR2/A, QAW, QAW/A, QD, QD/A, QE, QE/A QH, QH/A, QH26, QH26/A, QHB5, QHC, QHE, QHE4, QHE4/A, QHP1, QHP1/A, QHQ4 QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A, QKE3, QKE3/A, QKE4, QL2, QME2 QME2/A, QMH, QMH/A, QP, QP/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8 QSE8/A, QT, QT/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX, QX/A, QX26, QX26/A QXB, QXB/A, QXB6, QXB6/A, QXB7, QXB7/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A QXC9, QXC9/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9 QXEB, QXK, QXQ4, QXQ4/A, QXU, QXU/A, R1, R1/A, RA, RA2, RA2/A, RA3, RD, RD/A RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A, S1, S1/A, SD, SD/A, SE, SE/A SH, SH/A, SHE, SHEZ, SHQ4, SHQ4/A, SJ, SJ/A, SJG, SJG/A, SJP, SK, SKE1, SMC4 SMC4/A, SMD, SME1, SME1/A, SME6, SME6/A, SMX2, SN, SN/A, SW, SWA4, SWC4 SWC4/A, SWE, SX, SX/A, SX2, SXB, SXB/A, SXB7, SXB7/A, SXE, SXE/A, SXE4 SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4, SXQ4/A, SXU, SXU/A, V1, VA, VA2 VA2/A, VAG2, VAG2/A, VAW, VAW1, VD16, VDE, VDE2, VDE2/A, VEB6, VH, VKB2 VKB2/A, VKE4, VKK, VKX4, VM2, VM2/A, VMA4, VME2, VME2/A, VME4, VMS2, VMT VMT/A, VMX2, VN17, VN17/A, VNG1, VNG1/A, VNT2, VNT2/A, VPE4, VPE4/A, VPE5 VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4 VS5, VSD, VSD/A, VSD3, VSD3/A, VSD7, VSD7/A, VSH7, VW12, VW12/A, VW22, VWA VWA2, VWA2/A, VWN2, VWN2/A, VWT4, VWT4/A, VX, VX/A, VX26, VXB, VXB/A, VXB2 VXB6, VXB7, VXB7/A, VXE, VXE4, VXE4/A, VXE6

E-22

CONTROL(1)

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code	
			(1)	GX270 (2)	(3)			
25)	90015-ZE5-010	BOLT, GOVERNOR ARM.....	1	1	1	-----	VXE6/A, VXE7, VXE7/A, VXE8, VXE8, VXE8/A, VXG, VXK, VXP, VXP/A, VXQ4, VXQ4/A, VXQP, VXT1, VXT1/A, VXTB, VXU, VXU/A, VXU1, VXU1/A, W1, W1/A, WMA4, WMT8, WMT8/A, WXE8, WXE8/A	
26	90016-ZG9-N30	SCREW, RECESSED, 5X25.....	(1)	-	(1)	-----	HXQ4, HXQ4/A, LHQ4, LXQ4, LXQ4/A, QAQ4, QAQ4/A, QE/A, QHE4, QHE4/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QKE3, QKE3/A, QKE4, QME2, QME2/A, QWA4, QWA4/A, QXB/A, QXB7, QXB7/A, QXC4, QXC4/A, QXE4, QXE4/A, QXQ4, QXQ4/A, RHE4, RHE4/A, RHQ4, RHQ4/A, RXQ4, RXQ4/A, SE/A, SHQ4, SHQ4/A, SKE1, SMC4, SMC4/A, SME1, SME1/A, SME6, SME6/A, SWA4, SWC4, SWC4/A, SXB/A, SXB7, SXB7/A, SXE4, SXE4/A, SXEB/A, SXQ4, SXQ4/A, VD16, VEB6, VMA4, VME4, VN17, VN17/A, VNG1/A, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS37, VS37/A, VSD/A, VSD3/A, VSD7, VSD7/A, VSH7, VWT4, VWT4/A, VXB/A, VXB7, VXB7/A, VXE4, VXE4/A, VXE7, VXE7/A, VXE8, VXE8/A, VXQ4, VXQ4/A, VXQP, VXTB, WMA4	
27	90114-SA0-000	NUT, SELF-LOCK, 6MM.....	(1)	-	-	1106274	-----	QE, QXB, SE, SXB, SXEB, VNG1, VSD, VSD3, VXB, VXE8, VXG HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, HH, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A, LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LT, LT/A, LTJ, LW, LW/A, LWD1, LWD1/A, LX, LX/A, LX16, LX16/A, LX8, LX8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ, PA, PA2, PA2/A, PAE2, PAE2/A, PX, PX/A, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, QA, QA2, QA2/A, QAB1, QAB3, QAB3/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAG, QAG4, QAG4/A, QAR2, QAR2/A, QAW, QAW/A, QD, QD/A, QE, QE/A, QH, QH/A, QH26, QH26/A, QHB5, QHC, QHE, QHE4, QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A, QKE3, QKE3/A, QKE4, QL2, QME2, QME2/A, QMH, QMH/A, QP, QP/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QT, QT/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX, QX/A, QX26, QX26/A, QXB, QXB/A, QXB6, QXB6/A, QXB7, QXB7/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXE9, QXK, QXQ4, QXQ4/A, QXU, QXU/A, RA, RA2, RA2/A, RA3, RD, RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A, SD, SD/A, SE, SE/A, SH, SH/A, SHE, SHEZ, SHQ4, SHQ4/A, SJ, SJ/A, SJG, SJG/A, SJP, SK, SKE1, SMC4, SMC4/A, SMD, SME1, SME1/A, SME6, SME6/A, SMX2, SN, SN/A, SW, SWA4, SWC4, SWC4/A, SWE, SX, SX/A, SX2, SXB, SXB/A, SXB7, SXB7/A, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4, SXQ4/A, SXU, SXU/A, VA, VA2, VA2/A, VAW, VD16, VDE, VDE2, VDE2/A, VEB6, VH, VM2, VM2/A, VMA4, VME2, VME2/A, VME4, VN17, VN17/A, VNG1, VNG1/A, VWN2, VWN2/A, VX, VX/A, VX26, VXB, VXB/A, VXB2, VXB6, VXB7, VXB7/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8, VXE8/A, VXP, VXP/A, VXQ4, VXQ4/A, VXQP, VXTB, WMA4, WMT8, WMT8/A, WXE8, WXE8/A
28	90605-230-000	CIRCLIP, 5MM.....	-	(1)	-	1	-----	LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LT, LT/A, LTJ, LWD1, LWD1/A, QKE3, QKE3/A, QKE4, SJ, SJ/A, SJG, SJG/A, SJP, SK, SKE1, SME6, SME6/A, SMX2, VMA4, VME4
29	90605-230-000	CIRCLIP, 5MM.....	-	(1)	-	1	-----	LTJ, LWD1, LWD1/A, QKE3, QKE3/A, QKE4, QME2, QME2/A, SKE1
30	93500-04006-0H	SCREW, PAN, 4X6.....	-	(1)	-	1	-----	LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LT, LT/A, LTJ, LWD1, LWD1/A, QKE3, QKE3/A, QKE4, SJ, SJ/A, SJG, SJG/A, SJP, SK, SKE1, SME6, SME6/A, SMX2, VMA4, VME4
31	93500-04006-0H	SCREW, PAN, 4X6.....	-	(1)	-	1	-----	LTJ, LWD1, LWD1/A, QKE3, QKE3/A, QKE4, QME2, QME2/A, SKE1


2

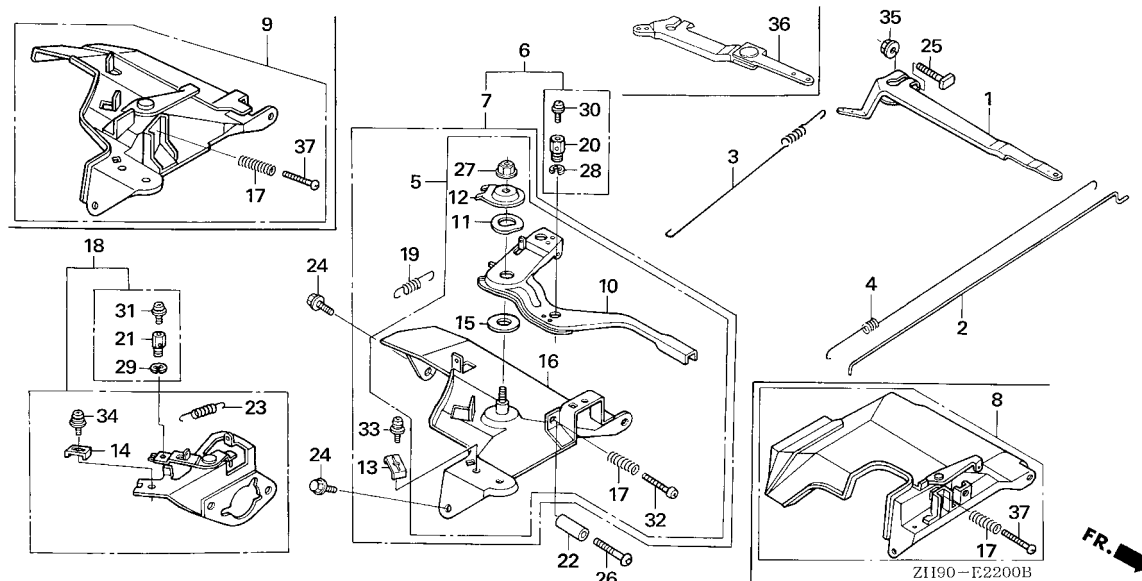

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	GX270 (2)	(3)		
32	93500-05028-0A	SCREW, PAN, 5X28.....	1	1	1	-----	HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, HH, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A, LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LT, LT/A, LTJ, LW, LW/A, LWD1, LWD1/A, LX, LX/A, LX16, LX16/A, LX8, LX8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ, PA, PA2, PA2/A, PAE2, PAE2/A, PX, PX/A, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, Q2, QA, QA2, QA2/A, QAB1, QAB3, QAB3/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAQ, QAQ4, QAQ4/A, QAR2, QAR2/A, QAW, QAW/A, QD, QD/A, QE, QE/A, QH, QH/A, QH26, QH26/A, QHB5, QHC, QHE, QHE4, QHE4/A, QHP1, QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A, QKE3, QKE3/A, QKE4, QL2, QME2, QME2/A, QMH, QMH/A, QP, QP/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE2/A, QSE8, QSE8/A, QT, QT/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX, QX/A, QX26, QX26/A, QXB, QXB/A, QXB6, QXB6/A, QXB7, QXB7/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A, QXC9, QXC9/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXE9/A, QXK, QXK4, QXK4/A, QXU, QXU/A, R1, R1/A, RA, RA2, RA2/A, RA3, RD, RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A, SD, SD/A, SE, SE/A, SH, SH/A, SHE, SHEZ, SHQ4, SHQ4/A, SJ, SJ/A, SJG, SJG/A, SJP, SK, SKE1, SMC4, SMC4/A, SMD, SME1, SME1/A, SME6, SME6/A, SMX2, SN, SN/A, SW, SWA4, SWC4, SWC4/A, SWE, SX, SX/A, SX2, SXB, SXB/A, SXB7, SXB7/A, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4, SXQ4/A, SXU, SXU/A, VA, VA2, VA2/A, VAW, VD16, VDE, VDE2, VDE2/A, VEB6, VH, VM2, VM2/A, VMA4, VME2, VME2/A, VME4, VN17, VN17/A, VNG1, VNG1/A, VWN2, VWN2/A, VX, VX/A, VX26, VXB, VXB/A, VXB2, VXB6, VXB7, VXB7/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8/A, VXP, VXP/A, VXQ4, VXQ4/A, VXQP, VXTB, WMA4, WMT8, WMT8/A, WXE8, WXE8/A
			-	(1)	-	-----	L1, L1/A, Q1, Q1/A, S1, S1/A, V1, W1, W1/A

CONTROL(1)

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	GX270 (2)	(3)		
33	93500-05016-0A	SCREW, PAN, 5X16	1	-	1		LH/A, LHB1, LHB3, LHB5, LHE/A, LHQ4, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LT LT/A, LTJ, LW/A, LWD1, LWD1/A, LX/A, LX16, LXE, LXE/A, LXE8, LXE8/A, LXQ4 LXQ4/A, LXU, LXU/A, PAE2, PAE2/A, PXE8, PXE8/A, QA2, QA2/A, QAB1, QAB3 QAB3/A, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAQ4, QAQ4/A QAR2, QAR2/A, QAW, QAW/A, QE/A, QH/A, QH26, QH26/A, QHB5, QHE4, QHE4/A, QHP1 QHP1/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A, QKE3, QKE3/A QKE4, QL2, QME2, QME2/A, QMH, QMH/A, QP/A, QSC, QSC9, QSC9/A, QSE, QSE/A QSE2, QSE8, QSE8/A, QT, QT/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX/A, QX26 QX26/A, QXB/A, QXB6, QXB6/A, QXB7, QXB7/A, QXC4, QXC4/A, QXC6, QXC6/A, QXC9 QXC9/A, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXK, QXQ4 QXQ4/A, QXU, QXU/A, RA2, RA2/A, RA3, RH26, RH26/A, RHE4, RHE4/A, RHQ4 RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A SE/A, SH/A, SHQ4, SHQ4/A, SJ/A, SJG, SJG/A, SKE1, SME1, SME1/A, SME6, SME6/A SMX2, SWA4, SWC4, SWC4/A, SX/A, SX2, SXB/A, SXB7, SXB7/A, SXE/A, SXE4 SXE4/A, SXE8, SXE8/A, SXEB/A, SXQ4, SXQ4/A, SXU, SXU/A, VA2, VA2/A, VDE VDE2, VDE2/A, VM2, VM2/A, VMA4, VME2, VME2/A, VME4, VWN2, VWN2/A VA, VAW
	93893-05016-00	SCREW-WASHER, 5X16	1	-	-	1053526	LH, LHE, LJ, LW, LX, LXZ, QA, QAE, QAQ, QE, QH, QHC, QHE, QP, QX, QXB, QXC, QXE QXEB, RA, RH, RHE, RX, SE, SH, SHE, SHEZ, SJ, SJP, SK, SW, SWE, SX, SXB, SXE, SXEB VA, VAW
	93500-05016-0A	SCREW, PAN, 5X16	1	-	-	1053527	LH, LHE, LJ, LW, LX, LXZ, QA, QAE, QAQ, QE, QH, QHC, QHE, QP, QX, QXB, QXC, QXE QXEB, RA, RH, RHE, RX, SE, SH, SHE, SHEZ, SJ, SJP, SK, SW, SWE, SX, SXB, SXE, SXEB VA, VAW
	93893-05016-00	SCREW-WASHER, 5X16	-	(1)	-		L1/A, Q1/A, R1/A, S1/A, W1/A
	93500-05016-0A	SCREW, PAN, 5X16	-	(1)	-	1053526	L1, Q1, Q2, R1, S1, V1, W1
	93893-05016-00	SCREW-WASHER, 5X16	-	(1)	-	1053527	L1, Q1, Q2, R1, S1, V1, W1
34	93893-05016-00	SCREW-WASHER, 5X16	1	-	-		LTJ, LWD1, LWD1/A, QKE3, QKE3/A, QKE4, QME2, QME2/A, SKE1
			-	(1)	-		
35	94050-06000	NUT, FLANGE, 6MM	1	1	1		ES1, ES1/A, ES3, ES3/A, ES4, ESS, ESS/A, HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA HEA2, HEA2/A, HEA8, HEA8/A, HH, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4 HXQ4/A, L1, L1/A, LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LJ, LJ/A, LJC LJC/A, LJG, LJG/A, LSS, LT, LT/A, LTJ, LW, LW/A, LWD1, LWD1/A, LX, LX/A, LX16 LXE, LXE/A, LXE8, LXE8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ, PA, PA2, PA2/A, PAE2 PAE2/A, PX, PX/A, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, Q1, Q1/A, Q2, Q2/A QA2, QA2/A, QAB1, QAB3, QAB3/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A QAG2, QAG2/A, QAQ, QAQ4, QAQ4/A, QAR2, QAR2/A, QAW, QAW/A, QD, QD/A, QE, QE/A QH, QH/A, QH26, QH26/A, QHB5, QHC, QHE, QHE4, QHE4/A, QHP1, QHP1/A, QHQ4 QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QHZ, QHZ/A, QKE3, QKE3/A, QKE4, QL2, QME2 QME2/A, QMH, QMH/A, QP, QP/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8 QSE8/A, QT, QT/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX, QX/A, QX26, QX26/A QXB, QXB/A, QXB6, QXB6/A, QXB7, QXB7/A, QXC, QXC4, QXC4/A, QXC6, QXC6/A QXC9, QXC9/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9 QXEB, QXK, QXQ4, QXQ4/A, QXU, QXU/A, R1, R1/A, RA, RA2, RA2/A, RA3, RD, RD/A RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A, S1, S1/A, SD, SD/A, SE, SE/A SH, SH/A, SHE, SHEZ, SHQ4, SHQ4/A, SJ, SJ/A, SJG, SJG/A, SJP, SK, SKE1, SMC4 SMC4/A, SMD, SME1, SME1/A, SME6, SME6/A, SMX2, SN, SN/A, SW, SWA4, SWC4 SWC4/A, SWE, SX, SX/A, SX2, SXB, SXB/A, SXB7, SXB7/A, SXE, SXE/A, SXE4 SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, SXQ4, SXQ4/A, SXU, SXU/A, V1, VA, VA2 VA2/A, VAG2, VAG2/A, VAW, VAW1, VD16, VDE, VDE2, VDE2/A, VEB6, VH, VKB2 VKB2/A, VKE4, VKK, VKX4, VM2, VM2/A, VMA4, VME2, VME2/A, VME4, VMS2, VMT VMT/A, VMX2, VN17, VN17/A, VNG1, VNG1/A, VNT2, VNT2/A, VPE4, VPE4/A, VPE5 VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4 VS5, VSD, VSD/A, VSD3, VSD3/A, VSD7, VSD7/A, VSH7, VW12, VW12/A, VW22, VWA VWA2, VWA2/A, VWN2, VWN2/A, VWT4, VWT4/A, VX, VX/A, VX26, VXB, VXB/A, VXB2 VXB6, VXB7, VXB7/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8 VXE8, VXE8/A, VXG, VXK, VXP, VXP/A, VXQ4, VXQ4/A, VXQP, VXT1, VXT1/A, VXTB VXU, VXU/A, VXU1, VXU1/A, W1, W1/A, WMA4, WMT8, WMT8/A, WXE8, WXE8/A

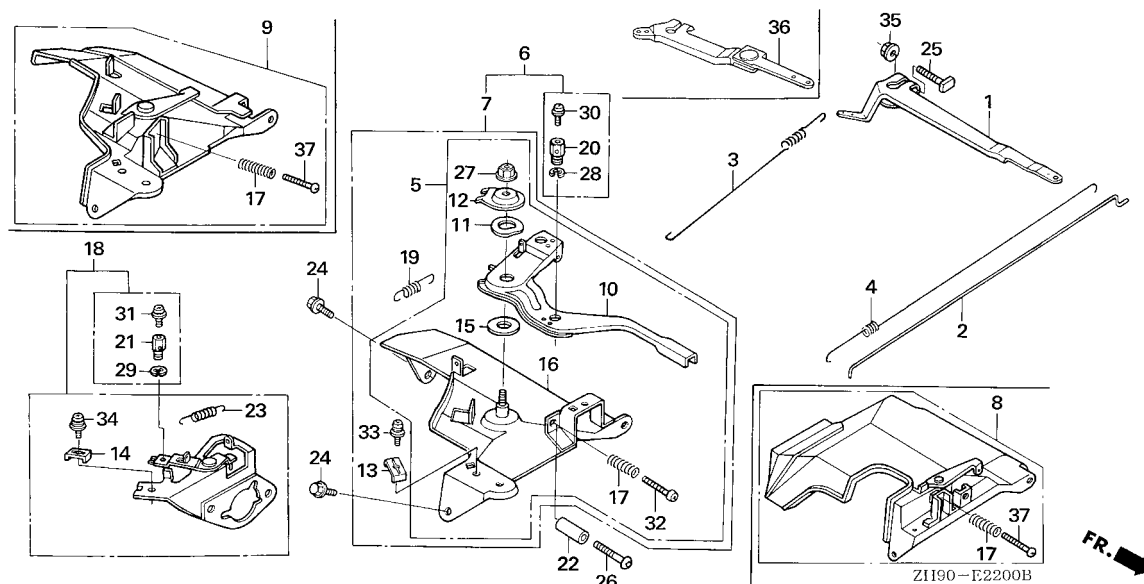


ZH90-E2200B

FR. ➔

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
36	16550-ZE2-700	ARM COMP., GOVERNOR.....	1	-	-	-----	ESS, ESS/A, VAG2, VAG2/A, VKB2, VKB2/A, VKE4, VKK, VKX4, VMS2, VMT, VMT/A, VWA, VWA2, VWA2/A
37	93500-05035-0A	SCREW, PAN, 5X35.....	1	-	-	-----	ES1, ES1/A, ES3, ES3/A, ES4, VAG2, VAG2/A, VAW1, VKB2, VKB2/A, VKE4, VKK, VKX4, VMS2, VMT, VMT/A, VMX2, VNT2, VNT2/A, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS3, VS37, VS37/A, VS4, VS5, VSD, VSD/A, VSD3, VSD3/A, VSD7, VSD7/A, VSH7, VW12, VW12/A, VW22, VWA, VWA2, VWA2/A, VWT4, VWT4/A, VXG, VXK, VXT1, VXT1/A, VXU, VXU/A, VXU1, VXU1/A

E-22-1

CONTROL(2)

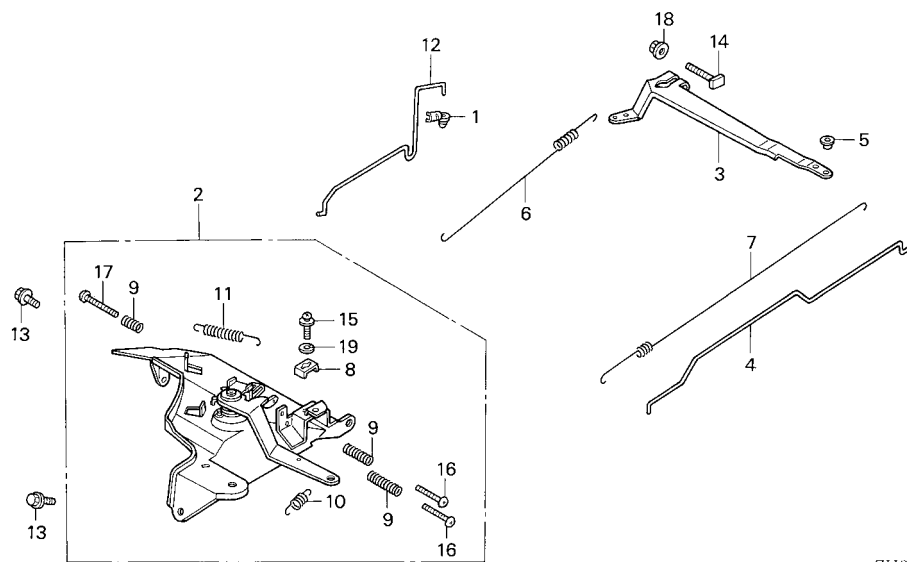

ZH90-E2201


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
2	1161A5	CONTROL, THROTTLE/GOVERNOR ...	0.2
3	1161A0	ARM, GOVERNOR	0.2
4	1161B1	ROD, GOVERNOR	0.3
6	1161C5	SPRING, GOVERNOR	0.2
7	1161D3	SPRING, THROTTLE RETURN(A) ...	0.2
12	8101R5	ROD, GOVERNOR CHOKE CONTROL ..	0.2

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
1	16263-ZA0-000	JOINT, ROD	1	-	-	-----	LWD
2	16500-ZE2-P52	CONTROL ASSY.	1	-	-	-----	LWD
3	16551-ZE2-780	ARM, GOVERNOR	1	-	-	-----	LWD
4	16555-ZE2-780	ROD, GOVERNOR	1	-	-	-----	LWD
5	16559-ZE2-780	COLLAR, GOVERNOR ROD	1	-	-	-----	LWD
6	16561-ZE2-000	SPRING, GOVERNOR(L=145.0MM) (WIRE DIAMETER 1.0MM)	1	-	-	-----	LWD
7	16562-ZE2-000	SPRING, THROTTLE RETURN	1	-	-	-----	LWD
8	16576-891-000	HOLDER, CABLE	1	-	-	-----	LWD
9	16584-883-300	SPRING, CONTROL ADJUSTING	3	-	-	-----	LWD
10	16592-732-700	SPRING, CABLE RETURN	1	-	-	-----	LWD
11	16592-883-310	SPRING, CABLE RETURN	1	-	-	-----	LWD
12	16674-ZE2-P50	ROD, CHOKE	1	-	-	-----	LWD
13	90013-883-000	BOLT, FLANGE, 6X12(CT200)	2	-	-	-----	LWD
14	90015-ZE5-010	BOLT, GOVERNOR ARM	1	-	-	-----	LWD
15	92301-05016-0A	BOLT, RECESSED, 5X16	1	-	-	-----	LWD
16	93500-05025-0H	SCREW, PAN, 5X25	2	-	-	-----	LWD
17	93500-05035-0H	SCREW, PAN, 5X35	1	-	-	-----	LWD
18	94050-06000	NUT, FLANGE, 6MM	1	-	-	-----	LWD
19	94111-05800	WASHER, SPRING, 5MM	1	-	-	-----	LWD

2

E-22-10

AUTO THROTTLE

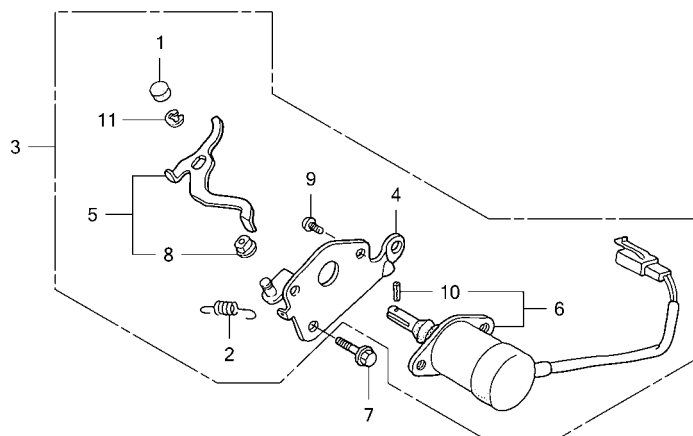

ZH90E2210B




Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
2	8101Q9	SPRING, CHOKE RETURN	0.2
3	8101S8	THROTTLE, AUTO	0.2
6	6211C5	(4) SOLENOID, AUTO THROTTLE	0.3

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
1	16252-ZA1-000	CAP, CHOKE LEVER.....	1	-	-	-----	VAG2
	16252-ZA1-010		1	-	-	-----	VAG2/A, VMS2, VMT, VMT/A
2	16268-893-000	SPRING, CHOKE RETURN.....	1	-	-	-----	VAG2, VAG2/A, VMS2, VMT, VMT/A
3	16270-ZB4-000	AUTO-THROTTLE ASSY.	1	-	-	-----	VAG2
	16270-ZB4-010		1	-	-	-----	VAG2/A, VMS2, VMT, VMT/A
4	16271-ZB4-000	STAY, SOLENOID THROTTLE.....	1	-	-	-----	VAG2, VAG2/A, VMS2, VMT, VMT/A
5	16273-ZB4-000	LEVER COMP., SOLENOID THROTTLE	1	-	-	-----	VAG2, VAG2/A, VMS2, VMT, VMT/A
6	36160-ZB4-003	SOLENOID ASSY.	1	-	-	-----	VAG2, VAG2/A, VMS2, VMT
	36160-ZB4-013		1	-	-	2458001	VMT/A
			1	-	-	2458002	VMT/A
7	90013-883-000	BOLT, FLANGE, 6X12(CT200)....	1	-	-	-----	VAG2, VAG2/A, VMS2, VMT, VMT/A
8	91502-ZB4-701	BUSH, AUTO-THROTTLE LEVER....	1	-	-	-----	VAG2, VAG2/A, VMS2, VMT, VMT/A
9	93500-05008-0A	SCREW, PAN, 5X8.....	2	-	-	-----	VAG2, VAG2/A, VMS2, VMT, VMT/A
10	94305-20062	PIN, SPRING, 2X6.....	1	-	-	-----	VAG2, VAG2/A, VMS2, VMT, VMT/A
11	94540-04018	E-RING, 4MM.....	1	-	-	-----	VAG2, VAG2/A, VMS2, VMT, VMT/A

E-23

CONTROL BOX(1)

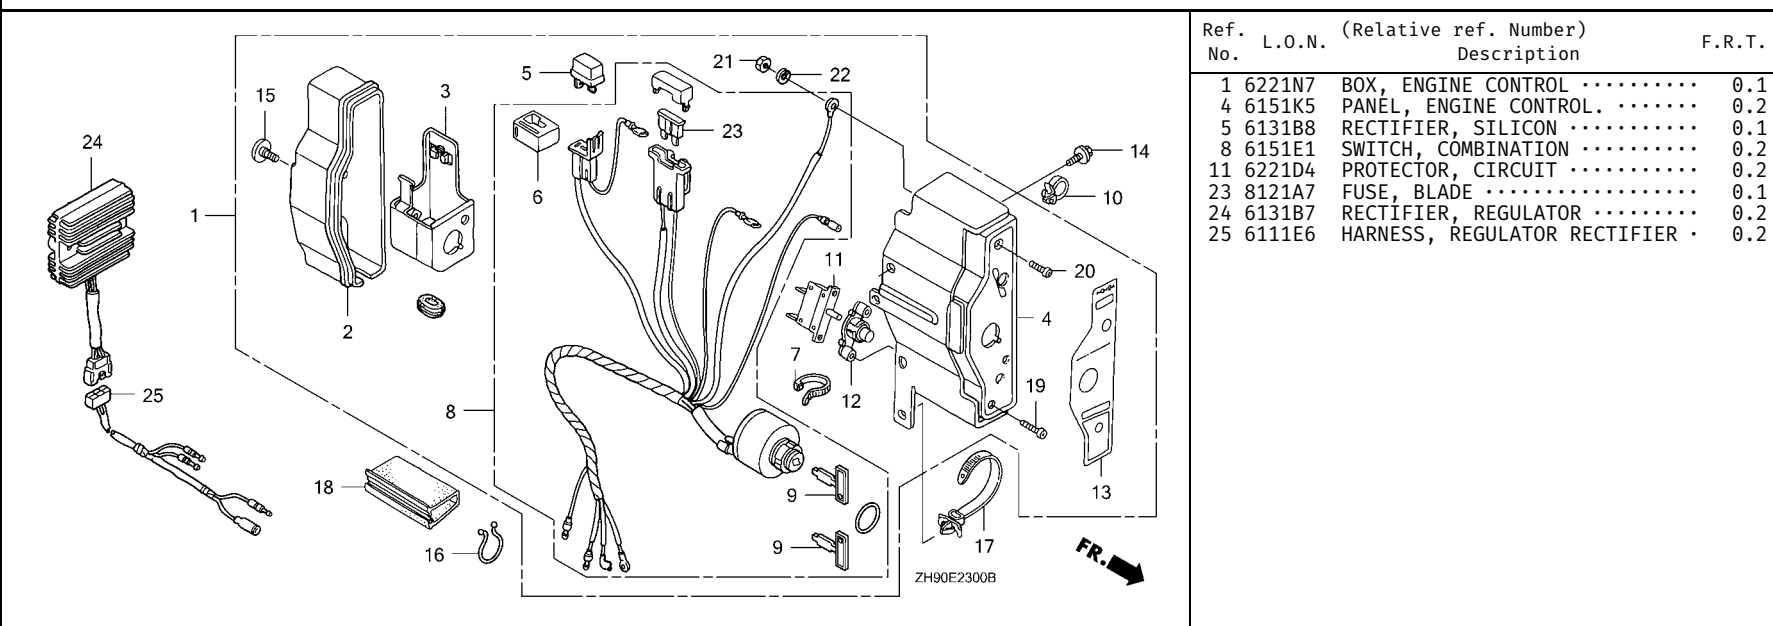


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	6221N7	BOX, ENGINE CONTROL	0.1
4	6151K5	PANEL, ENGINE CONTROL.	0.2
5	6131B8	RECTIFIER, SILICON	0.1
8	6151E1	SWITCH, COMBINATION	0.2
11	6221D4	PROTECTOR, CIRCUIT	0.2
23	8121A7	FUSE, BLADE	0.1
24	6131B7	RECTIFIER, REGULATOR	0.2
25	6111E6	HARNESS, REGULATOR RECTIFIER	0.2

Ref. No.	Part No.	Description	Reqd. QTY	Serial No.	Parts catalogue code
			(1) (2) (3)		
1	31610-ZE2-812ZB	BOX ASSY., CONTROL			
	R8	BRIGHT RED	1 - -	-----	LHE, QHE, RHE, SHE, SHEZ, SWE
	31610-ZE2-812ZD	BOX ASSY., CONTROL(EXP)			
	R280	POWER RED	1 - -	-----	LHE/A
	31610-ZE2-013ZB	BOX ASSY., CONTROL(INTERNAL)			
	R8	BRIGHT RED	1 - -	-----	LTJ
	31610-ZE2-812ZB	BOX ASSY., CONTROL			
	R8	BRIGHT RED	- (1) -	-----	L1, Q1, Q2, R1, V1, W1
	31610-ZE2-013ZB	BOX ASSY., CONTROL(INTERNAL)			
	R8	BRIGHT RED	- (1) -	-----	L1, Q1, R1, S1, V1, W1
			- (1) -	2085591	L1/A, Q1/A, R1/A, S1/A, W1/A
	31610-ZE2-812ZB	BOX ASSY., CONTROL			
	R8	BRIGHT RED	- (1) -	2085591	L1/A, Q1/A, R1/A, W1/A
	31610-ZE2-013ZD	BOX ASSY., CONTROL(INTERNAL)			
	R280	POWER RED	- (1) -	2085592	L1/A, Q1/A, R1/A, S1/A, W1/A
	31610-ZE2-812ZD	BOX ASSY., CONTROL(EXP)			
	R280	POWER RED	- (1) -	2085592	L1/A, Q1/A, R1/A, W1/A
2	31612-ZE2-003	CASE, CONTROL	1 - -	-----	LHE, LHE/A, LTJ, QHE, RHE, SHE, SHEZ, SWE
			- (1) -	-----	
3	31614-ZE2-003	BRACKET, CASE MOUNTING	1 - -	-----	LHE, LHE/A, LTJ, QHE, RHE, SHE, SHEZ, SWE
			- (1) -	-----	
4	31615-ZE2-003ZB	PANEL COMP., CONTROL			
	R8	BRIGHT RED	1 - -	-----	LHE, LTJ, QHE, RHE, SHE, SHEZ, SWE
	31615-ZE2-003ZG	*R280*.....POWER RED	1 - -	-----	LHE/A
	31615-ZE2-003ZB	*R8*.....BRIGHT RED	- (1) -	-----	L1, Q1, Q2, R1, S1, V1, W1
			- (1) -	2050808	L1/A, Q1/A, R1/A, S1/A, W1/A
	31615-ZE2-003ZG	*R280*.....POWER RED	- (1) -	2050809	L1/A, Q1/A, R1/A, S1/A, W1/A

E-23

CONTROL BOX(1)

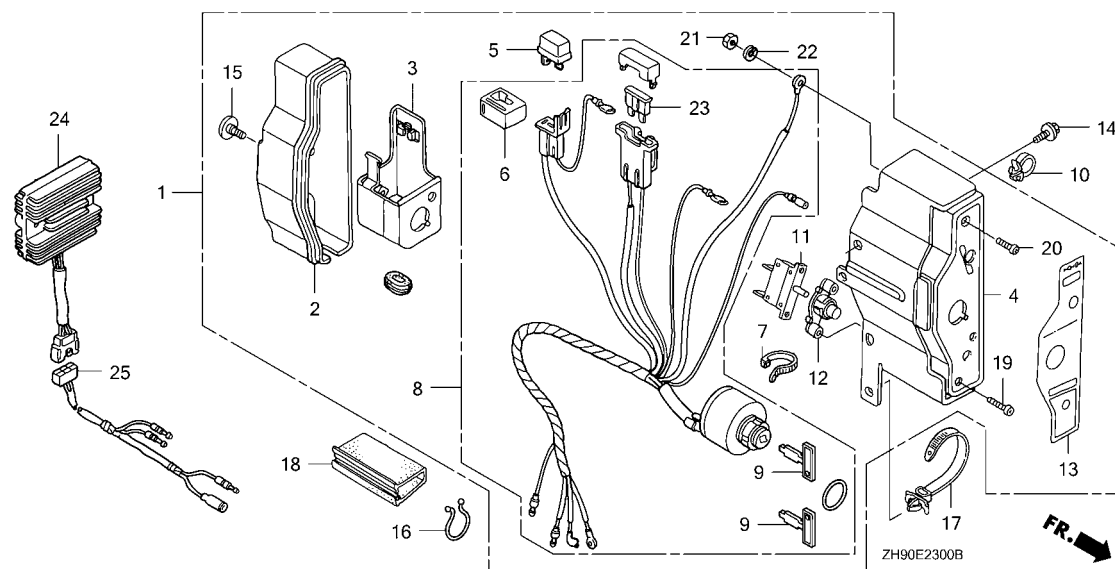

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
5	31700-124-008	RECTIFIER ASSY., SILICON (SHINDENGEN)	1	-	-	-----	LHE, LHE/A, LTJ, QHE, RHE, SHE, SHEZ, SWE
			-	(1)	-	-----	
6	32127-738-700	SUSPENSION, COUPLER.....	1	-	-	-----	LHE, LHE/A, LTJ, QHE, RHE, SHE, SHEZ, SKE1, SWE
			-	(1)	-	-----	
7	32902-892-003	BAND.....	1	-	-	-----	LHE, LHE/A, LTJ, QHE, RHE, SHE, SHEZ, SWE
			-	(1)	-	-----	
8	35100-ZE2-023	SWITCH ASSY., COMBINATION....	1	-	-	-----	LHE, LTJ, QHE, RHE, SHE, SHEZ, SKE1, SWE
			1	-	-	2440203	LHE/A
	35100-ZE2-033		1	-	-	2440204	LHE/A
	35100-ZE2-023		-	(1)	-	-----	L1, Q1, Q2, R1, S1, V1, W1
			-	(1)	-	2440203	L1/A, Q1/A, R1/A, S1/A, W1/A
	35100-ZE2-033		-	(1)	-	2440204	L1/A, Q1/A, R1/A, S1/A, W1/A
9	35111-880-003	KEY COMP.	2	-	-	-----	LHE, QHE, RHE, SHE, SHEZ, SKE1, SWE
			2	-	-	2233813	LHE/A
			2	-	-	2242189	LTJ
	35111-880-013	KEY COMP.(HONDA LOCK).....	2	-	-	2233814	LHE/A
			2	-	-	2242190	LTJ
	35111-880-003	KEY COMP.	-	(2)	-	-----	L1, Q1, Q2, R1, S1, V1, W1
			-	(2)	-	2233813	L1/A, Q1/A, R1/A, S1/A, W1/A
	35111-880-013	KEY COMP.(HONDA LOCK).....	-	(2)	-	2233814	L1/A, Q1/A, R1/A, S1/A, W1/A
10	36103-ZE1-000	HOLDER, STOP SWITCH CORD.....	1	-	-	-----	LHE, LHE/A, LTJ, QHE, RHE, SHE, SHEZ, SWE
			-	(1)	-	-----	
11	38240-VA3-900	PROTECTOR, CIRCUIT(1.0A).....	1	-	-	-----	LHE, LHE/A, LTJ, QHE, RHE, SHE, SHEZ, SWE
			-	(1)	-	-----	
12	38250-ZA8-701	LENS ASSY., PROTECTOR.....	1	-	-	-----	LHE, LHE/A, LTJ, QHE, RHE, SHE, SHEZ, SWE
			-	(1)	-	-----	

E-23


CONTROL BOX(1)

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	GX270 (2)	(3)		
13	87529-ZE2-811	MARK, CONTROL BOX(EXTERNAL)··	1	-	-	-----	LHE,QHE,RHE,SHE,SHEZ,SWE
	87529-ZE2-010	PANEL, CONTROL BOX(INTERNAL)··	1	-	-	-----	LTJ
	87529-ZE2-811	MARK, CONTROL BOX(EXTERNAL)··	1	-	-	2151454	LHE/A
	87529-ZE2-812	MARK, CONTROL BOX(EXP)······	1	-	-	2151455	LHE/A
	87529-ZE2-811	MARK, CONTROL BOX(EXTERNAL)··	-	(1)	-	-----	L1,L1/A,Q1,Q1/A,Q2,R1,R1/A,V1,W1,W1/A
	87529-ZE2-010	PANEL, CONTROL BOX(INTERNAL)··	-	(1)	-	-----	L1,Q1,Q1/A,R1,S1,V1,W1,W1/A
			-	(1)	-	2165395	L1/A,R1/A,S1/A
	87529-ZE2-020	··········	-	(1)	-	2165396	L1/A,R1/A,S1/A
14	90013-883-000	BOLT, FLANGE, 6X12(CT200)····	2	-	-	-----	LHE,LHE/A,LTJ,QHE,RHE,SHE,SHEZ,SWE
			-	(2)	-	-----	
15	90380-MA6-010	SCREW, SPECIAL, 6X12········	1	-	-	-----	LHE,LHE/A,LTJ,QHE,RHE,SHE,SHEZ,SWE
			-	(1)	-	-----	
16	90630-751-000	CLIP, PURSE LOCK··········	1	-	-	-----	LHE,LHE/A,LTJ,QHE,RHE,SHE,SHEZ,SWE
			-	(1)	-	-----	
17	90672-SA0-003	STRAP, CABLE, 118MM(BLACK)···	1	-	-	-----	LHE,LHE/A,LTJ,QHE,RHE,SHE,SHEZ,SWE
			-	(1)	-	-----	
18	91406-ZE2-003	TUBE, FASTENER, 30MM········	1	-	-	-----	LHE,LHE/A,LTJ,QHE,RHE,SHE,SHEZ,SWE
			-	(1)	-	-----	
19	93500-03012-0H	SCREW, PAN, 3X12··········	2	-	-	-----	LHE,LHE/A,LTJ,QHE,RHE,SHE,SHEZ,SWE
			-	(2)	-	-----	
20	93500-04012-0H	SCREW, PAN, 4X12··········	1	-	-	-----	LHE,LHE/A,LTJ,QHE,RHE,SHE,SHEZ,SWE
			-	(1)	-	-----	
21	94001-04390-0S	NUT, HEX., 4MM··········	1	-	-	-----	LHE,LHE/A,LTJ,QHE,RHE,SHE,SHEZ,SWE
			-	(1)	-	-----	
22	94111-04800	WASHER, SPRING, 4MM········	1	-	-	-----	LHE,LHE/A,LTJ,QHE,RHE,SHE,SHEZ,SWE
			-	(1)	-	-----	
23	98200-30500	FUSE, BLADE(5A)··········	1	-	-	-----	LHE,LHE/A,LTJ,QHE,RHE,SHE,SHEZ,SKE1,SWE
			-	(1)	-	-----	
24	31620-ZG5-013	RECTIFIER ASSY., REGULATOR (20A)	1	-	-	-----	QAR2,QAR2/A
25	32110-ZE2-W00	HARNESS ASSY., SUB WIRE······	1	-	-	-----	QAR2,QAR2/A

2

E-23-1

CONTROL BOX(2)

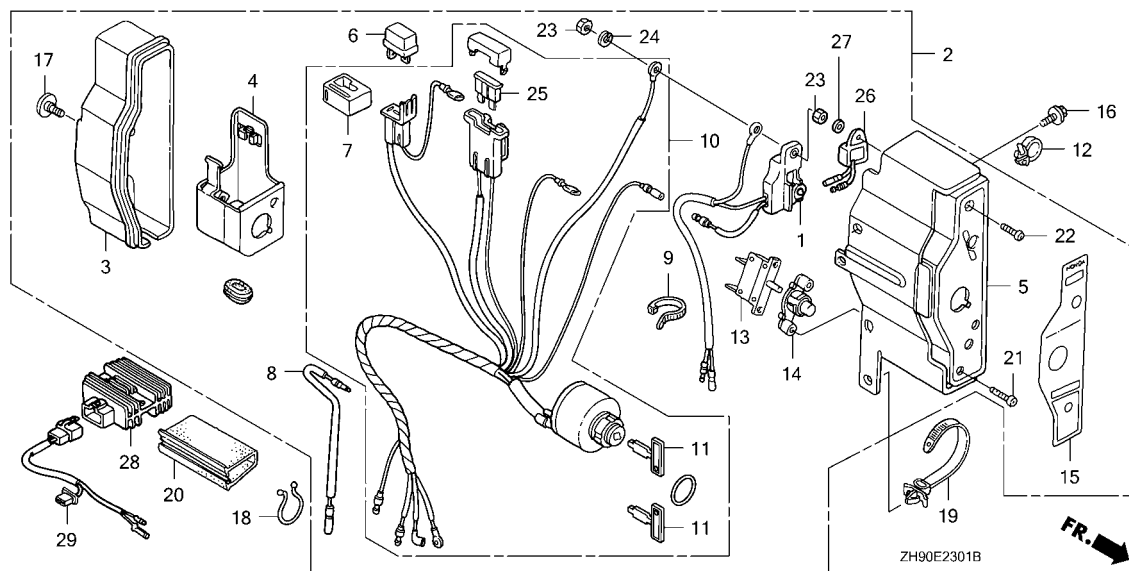

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	6151K4	ALERT UNIT, ENGINE CONTROL OIL	0.2
2	6221N7	BOX, ENGINE CONTROL	0.1
6	6131B8	RECTIFIER, SILICON	0.1
10	6151E1	SWITCH, COMBINATION	0.2
13	6221D4	PROTECTOR, CIRCUIT	0.2
25	8121A7	FUSE, BLADE	0.1
28	6131B7	RECTIFIER, REGULATOR	0.2
29	6111E6	HARNESS, REGULATOR RECTIFIER	0.2

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
1	15520-ZE2-822	ALERT UNIT, OIL(SEL).....	1	-	-	1033679 QAE,QXE,QXEB,SXE,SXEB,VXE,VXEB	
2	31610-ZE2-854ZB	BOX ASSY., CONTROL(EXP-ALERT) (3A)	-	(1)	-	1033679 L1,Q1,R1,S1,V1,W1	
		R8.....BRIGHT RED	1	1	-	1321603 ----- HEA2,HEA8,L1,PAE2,Q1,Q2,QAE2,QAE6,R1,S1,V1,VDE,VDE2,VKB2,VME2,W1	
	31610-ZE2-834ZB	BOX ASSY., CONTROL	1	1	-	1324182 ----- L1,LXE,LXE8,PXE8,Q1,Q2,QXE,QXE6,QXE8,R1,S1,SXE,SXE8,V1,VXE,VXE6 W1,WXE8	
	31610-ZE2-853ZB	BOX ASSY., CONTROL (EXTERNAL-ALERT)(3A)	1	-	-	----- HEA	
	31610-ZE2-854ZB	BOX ASSY., CONTROL(EXP-ALERT) (3A)	1	-	-	----- HEA2/A,HEA8/A,PAE2/A,QAE2/A,QAE6/A,VDE2/A,VKB2/A,VME2/A	
	31610-ZE2-854ZA	*NH1*.....BLACK	1	-	-	----- QAE2/A,VME2	
	31610-ZK2-W41ZA	BOX ASSY., CONTROL	1	-	-	----- QHE4,QHE4/A,RHE4,RHE4/A	
	31610-ZE2-873ZB	BOX ASSY., CONTROL(10A)	1	-	-	----- QSC	
	31610-ZE2-874ZB	*R8*.....BRIGHT RED	1	-	-	----- QSC9/A,QSE/A,QSE8/A,QXB6/A	
	31610-ZH9-W52ZB	BOX ASSY., CONTROL (EXTERNAL-ALERT)	1	-	-	----- QXE4/A,SXE4/A,SXEB/A,VXE4/A,VXE7/A,VXEB/A	
	31610-ZE2-834ZE	BOX ASSY., CONTROL(EXP-ALERT)	1	-	-	----- QXE9,WMA4	
	31610-ZE2-854ZD	*R280*.....POWER RED	1	-	-	-----	
		BOX ASSY., CONTROL(EXP-ALERT) (3A)	1	-	-	----- VME2/A,VMS2	
	31610-ZE2-852ZB	*NH105*....MAT BLACK(#15-#20)	1	-	-	1033679 QAE	
		R8.....BRIGHT RED	1	-	-		

E-23-1


CONTROL BOX(2)

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
(2)	31610-ZE2-832ZB	BOX ASSY., CONTROL(Alert)					
		R8.....BRIGHT RED	1	-	-	1033679	QXE,QXEB,SXE,SXEB,VXE,VXEB
	31610-ZH9-W51ZA	BOX ASSY., CONTROL					
		R8.....BRIGHT RED	1	-	-	1033679	VEB6
	31610-ZE2-853ZB	BOX ASSY., CONTROL					
		(EXTERNAL-Alert)(3A)					
		R8.....BRIGHT RED	1	-	-	1321602	HEA2,PAE2,QAE2,QAE6,VDE,VDE2
	31610-ZE2-853ZA	*NH1*.....BLACK	1	-	-	1321602	QAE2
	31610-ZE2-853ZD	*NH105*....MAT BLACK(#15-#20)	1	-	-	1321602	VME2
	31610-ZE2-833ZB	BOX ASSY., CONTROL					
		R8.....BRIGHT RED	1	-	-	1324181	LXE,QXE6,VXE6
	31610-ZK9-W41ZA	BOX ASSY., CONTROL(10A)					
		R8.....BRIGHT RED	1	-	-	1325169	QME2,SME1
	31610-ZH9-W51ZA	BOX ASSY., CONTROL					
		R8.....BRIGHT RED	1	-	-	1325304	QXE4,SXE4,VXE4
	31610-ZH9-W52ZB	BOX ASSY., CONTROL					
		(EXTERNAL-Alert)					
		NH1.....BLACK	1	-	-	1325304	VXE7
	31610-ZE2-873ZB	BOX ASSY., CONTROL(10A)					
		R8.....BRIGHT RED	1	-	-	1329949	QSC9,QSE,QXB6
	31610-ZE2-834ZB	BOX ASSY., CONTROL					
		R8.....BRIGHT RED	1	-	-	2080306	LXE/A,LXE8/A,PXE8/A,QXE/A,QXE6/A,QXE8/A,SXE/A,SXE8/A,VXE6/A WXE8/A
	31610-ZH9-W52ZA	BOX ASSY., CONTROL(Alert)					
		R8.....BRIGHT RED	1	-	-	2081323	QXE4/A,SXE4/A,SXEB/A,VXE4/A,VXE7/A,VXEB/A
	31610-ZK9-W42ZA	BOX ASSY., CONTROL					
		(EXTERNAL-Alert)(10A)					
		R8.....BRIGHT RED	1	-	-	2085216	QME2/A,SME1/A
	31610-Z5K-801ZA	BOX ASSY., CONTROL(Exp-Alert)					
		R280.....POWER RED	1	-	-	2451486	VXE8
	31610-Z5K-801ZB	*NH1*.....BLACK	1	-	-	2451486	VXE8
	31610-ZE2-853ZB	BOX ASSY., CONTROL					
		(EXTERNAL-Alert)(3A)					
		R8.....BRIGHT RED	1	-	-	1033680	QAE
	31610-ZE2-833ZB	BOX ASSY., CONTROL					
		R8.....BRIGHT RED	1	-	-	1033680	QXEB,VEB6
			1	-	-	1033680	1106355 SXEB,VXEB
			1	-	-	1033680	1324181 QXE,SXE,VXE
			1	-	-	1106356	1325304 SXEB,VXEB
	31610-ZH9-W51ZA	*R8*.....BRIGHT RED					
	31610-ZE2-854ZA	BOX ASSY., CONTROL(Exp-Alert)					
		(3A)					
		NH1.....BLACK	1	-	-	1321603	QAE2
	31610-ZE2-854ZD	*NH105*....MAT BLACK(#15-#20)	1	-	-	1321603	VME2
	31610-ZK9-W42ZA	BOX ASSY., CONTROL					
		(EXTERNAL-Alert)(10A)					
		R8.....BRIGHT RED	1	-	-	1325170	QME2,SME1
	31610-ZH9-W52ZA	BOX ASSY., CONTROL(Alert)					
		R8.....BRIGHT RED	1	-	-	1325305	QXE4,SXE4,SXEB,VXE4,VXE7,VXEB
	31610-ZE2-874ZB	BOX ASSY., CONTROL(10A)					
		R8.....BRIGHT RED	1	-	-	1329950	QSC9,QSE,QSE8,QXB6
			1	-	-	1329950	2080508 QSE2
	31610-ZE2-834ZE	BOX ASSY., CONTROL(Exp-Alert)					
		R280.....POWER RED	1	-	-	2080307	LXE/A,LXE8/A,PXE8/A,QXE/A,QXE6/A,QXE8/A,RA2/A,SXE/A,SXE8/A,VXE6/A WXE8/A
	31610-ZE2-874ZD	BOX ASSY., CONTROL(10A)					
		R280.....POWER RED	1	-	-	2080509	QSE2

2

E-23-1

CONTROL BOX(2)

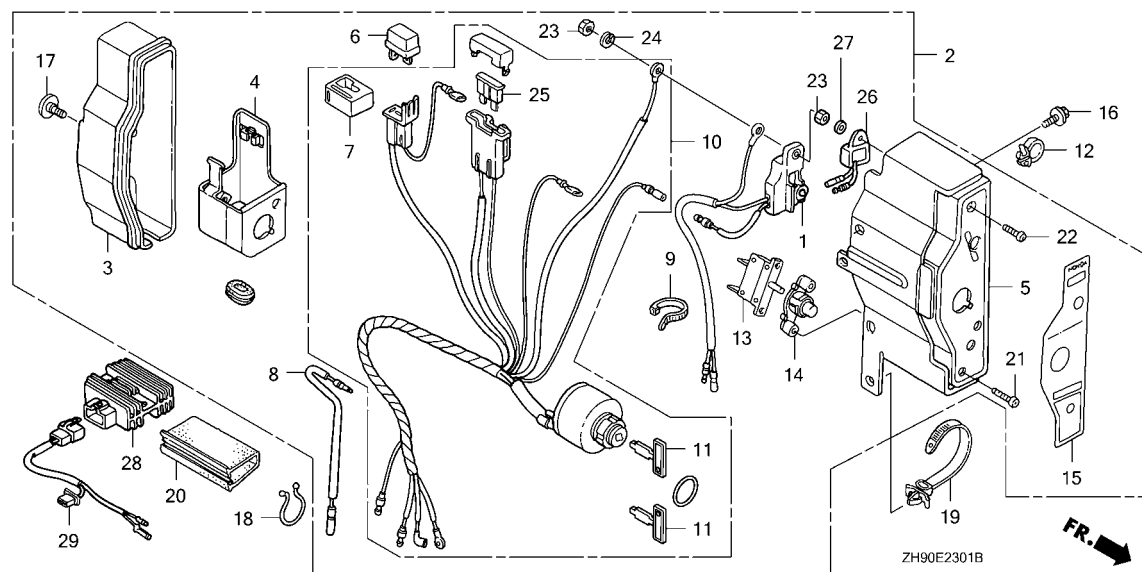

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
(2)	31610-ZE2-854ZF	BOX ASSY., CONTROL(EXP-ALERT) (3A)					
		R280.....POWER RED	1	-	-	2081314	HEA2/A,HEA8/A,PAE2/A,QAE2/A,QAE6/A,VDE2/A,VKB2/A,VME2/A
	31610-ZH9-W52ZC	BOX ASSY., CONTROL (EXTERNAL-ALERT)					
		R280.....POWER RED	1	-	-	2081324	QXE4/A,SXE4/A,SXEB/A,VXE4/A,VXE7/A,VXEB/A
	31610-ZK9-W42ZC	BOX ASSY., CONTROL (EXTERNAL-ALERT)(10A)					
		R280.....POWER RED	1	-	-	2085217	QME2/A,SME1/A
	31610-Z5K-802ZA	BOX ASSY., CONTROL(EXP-ALERT)					
		R280.....POWER RED	1	-	-	2451487	VXE8
	31610-Z5K-802ZB	*NH1*.....BLACK	1	-	-	2451487	VXE8
	31610-ZE2-842ZB	BOX ASSY., CONTROL(3A)					
		R8.....BRIGHT RED	-	(1)	-		
	31610-ZE2-862ZB	BOX ASSY., CONTROL(10A)					
		R8.....BRIGHT RED	-	(1)	-		
	31610-ZE2-854ZB	BOX ASSY., CONTROL(EXP-ALERT) (3A)					
		R8.....BRIGHT RED	-	(1)	-		L1,Q1,Q2,R1,S1,V1,W1
	31610-ZE2-874ZB	BOX ASSY., CONTROL(10A)					
		R8.....BRIGHT RED	-	(1)	-		L1/A,Q1/A,R1/A,S1/A,W1/A
	31610-ZE2-873ZB	*R8*.....BRIGHT RED	-	(1)	-		L1/A,Q1/A,R1/A,S1/A,W1/A
	31610-ZE2-822ZB	BOX ASSY., CONTROL (INTERNAL-ALERT)					
		R8.....BRIGHT RED	-	(1)	-	1033679	L1,Q1,R1,S1,V1,W1
	31610-ZE2-832ZB	BOX ASSY., CONTROL(ALERT)					
		R8.....BRIGHT RED	-	(1)	-	1033679	L1,Q1,R1,S1,V1,W1


E-23-1

CONTROL BOX(2)

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
(2)	31610-ZE2-852ZB	BOX ASSY., CONTROL(EXP-ALERT) (3A)	-	(1)	-	1033679	L1,Q1,R1,S1,V1,W1
	31610-ZE2-872ZB	BOX ASSY., CONTROL(EXP-ALERT) (10A)	-	(1)	-	1106814	L1,R1,V1,W1
	31610-ZE2-873ZB	BOX ASSY., CONTROL(10A)	-	(1)	-	1329949	Q1,S1
	31610-ZE2-824ZB	BOX ASSY., CONTROL	-	(1)	-	2085591	L1/A,Q1/A,R1/A,S1/A,W1/A
	31610-ZE2-834ZB	BOX ASSY., CONTROL(10A)	-	(1)	-	2085591	L1/A,Q1/A,R1/A,S1/A,W1/A
	31610-ZE2-862ZB	BOX ASSY., CONTROL	-	(1)	-	2085591	L1/A,Q1/A,R1/A,S1/A,W1/A
	31610-ZE2-833ZB	BOX ASSY., CONTROL	-	(1)	-	1033680	L1,Q1,Q2,R1,S1,V1,W1
	31610-ZE2-853ZB	BOX ASSY., CONTROL (EXTERNAL-ALERT)(3A)	-	(1)	-	1033680	L1,Q1,Q2,R1,S1,V1,W1
	31610-ZE2-823ZB	BOX ASSY., CONTROL	-	(1)	-	1033680	L1,Q1,R1,S1,V1,W1
	31610-ZE2-873ZB	BOX ASSY., CONTROL(10A)	-	(1)	-	1106815	L1,R1,V1,W1
	31610-ZE2-874ZB	BOX ASSY., CONTROL	-	(1)	-	1329950	L1,Q1,R1,S1,W1
	31610-ZE2-824ZE	BOX ASSY., CONTROL	-	(1)	-	2085592	L1/A,Q1/A,R1/A,S1/A,W1/A
	31610-ZE2-834ZE	BOX ASSY., CONTROL(EXP-ALERT)	-	(1)	-	2085592	L1/A,Q1/A,R1/A,S1/A,W1/A
	31610-ZE2-854ZF	BOX ASSY., CONTROL(EXP-ALERT) (3A)	-	(1)	-	2085592	L1/A,Q1/A,R1/A,S1/A,W1/A
	31610-ZE2-862ZD	BOX ASSY., CONTROL(10A)	-	(1)	-	2085592	L1/A,Q1/A,R1/A,S1/A,W1/A
3	31612-ZE2-003	CASE, CONTROL	1	-	-		HEA,HEA2,HEA2/A,HEA8,HEA8/A,LXE,LXE/A,LXE8,LXE8/A,PAE2,PAE2/A,PXE8,PXE8/A,QAE,QAE2,QAE2/A,QAE6,QAE6/A,QHE4,QHE4/A,QME2,QME2/A,QSC,QSC9,QSC9/A,QSE,QSE/A,QSE2,QSE8,QSE8/A,QXB6,QXB6/A,QXE,QXE/A,QXE4,QXE4/A,QXE6,QXE6/A,QXE8,QXE8/A,QXE9,QXE9,A,RHE4,RHE4/A,SME1,SME1/A,SXE,SXE/A,SXE4,SXE4/A,SXE8,SXE8/A,SXEB,SXEB/A,VDE,VDE2,VDE2/A,VEB6,VKB2,VKB2/A,VME2,VME2/A,VMS2,VXE,VXE4,VXE4/A,VXE6,VXE6/A,VXE7,VXE7/A,VXE8,VXE8,A,WMA4,WXE8,WXE8/A
4	31614-ZE2-003	BRACKET, CASE MOUNTING	1	(1)	-		HEA,HEA2,HEA2/A,HEA8,HEA8/A,LXE,LXE/A,LXE8,LXE8/A,PAE2,PAE2/A,PXE8,PXE8/A,QAE,QAE2,QAE2/A,QAE6,QAE6/A,QHE4,QHE4/A,QME2,QME2/A,QSC,QSC9,QSC9/A,QSE,QSE/A,QSE2,QSE8,QSE8/A,QXB6,QXB6/A,QXE,QXE/A,QXE4,QXE4/A,QXE6,QXE6/A,QXE8,QXE8/A,QXE9,QXE9,A,RHE4,RHE4/A,SME1,SME1/A,SXE,SXE/A,SXE4,SXE4/A,SXE8,SXE8/A,SXEB,SXEB/A,VDE,VDE2,VDE2/A,VEB6,VKB2,VKB2/A,VME2,VME2/A,VMS2,VXE,VXE4,VXE4/A,VXE6,VXE6/A,VXE7,VXE7/A,VXE8,VXE8,A,WMA4,WXE8,WXE8/A
5	31615-ZE2-003ZB	PANEL COMP., CONTROL	1	(1)	-		HEA,HEA2,HEA8,LXE,LXE8,PAE2,PXE8,QAE,QAE2,QAE6,QHE4,QME2,QSC,QSC9,QSE,QSE8,QXB6,QXE,QXE4,QXE6,QXE8,QXE9,QXE9,A,RHE4,RHE4/A,SME1,SME1/A,SXE,SXE/A,SXE4,SXE4/A,SXE8,SXE8/A,SXEB,SXEB/A,VDE,VDE2,VDE2/A,VEB6,VKB2,VKB2/A,VME2,VME2/A,VMS2,VXE,VXE4,VXE4/A,VXE6,VXE6/A,VXE7,VXE7/A,VXE8,VXE8,A,WMA4,WXE8,WXE8/A
	31615-ZE2-003ZA	*R8*.....BRIGHT RED	1	-	-		HEA,HEA2,HEA8,LXE,LXE8,PAE2,PXE8,QAE,QAE2,QAE6,QHE4,QME2,QSC,QSC9,QSE,QSE8,QXB6,QXE,QXE4,QXE6,QXE8,QXE9,QXE9,A,RHE4,RHE4/A,SME1,SME1/A,SXE,SXE/A,SXE4,SXE4/A,SXE8,SXE8/A,SXEB,SXEB/A,VDE,VDE2,VDE2/A,VEB6,VKB2,VKB2/A,VME2,VME2/A,VMS2,VXE,VXE4,VXE4/A,VXE6,VXE6/A,VXE7,VXE7/A,VXE8,VXE8,A,WMA4,WXE8,WXE8/A
	31615-ZE2-003ZG	*NH1*.....BLACK	1	-	-		HEA,HEA2,HEA8,LXE,LXE8,PAE2,PXE8,QAE,QAE2,QAE6,QHE4,QME2,QSC,QSC9,QSE,QSE8,QXB6,QXE,QXE4,QXE6,QXE8,QXE9,QXE9,A,RHE4,RHE4/A,SME1,SME1/A,SXE,SXE/A,SXE4,SXE4/A,SXE8,SXE8/A,SXEB,SXEB/A,VDE,VDE2,VDE2/A,VEB6,VKB2,VKB2/A,VME2,VME2/A,VMS2,VXE,VXE4,VXE4/A,VXE6,VXE6/A,VXE7,VXE7/A,VXE8,VXE8,A,WMA4,WXE8,WXE8/A
	31615-ZE2-003ZE	*R280*.....POWER RED	1	-	-		HEA,HEA2,HEA8,LXE,LXE8,PAE2,PXE8,QAE,QAE2,QAE6,QHE4,QME2,QSC,QSC9,QSE,QSE8,QXB6,QXE,QXE4,QXE6,QXE8,QXE9,QXE9,A,RHE4,RHE4/A,SME1,SME1/A,SXE,SXE/A,SXE4,SXE4/A,SXE8,SXE8/A,SXEB,SXEB/A,VDE,VDE2,VDE2/A,VEB6,VKB2,VKB2/A,VME2,VME2/A,VMS2,VXE,VXE4,VXE4/A,VXE6,VXE6/A,VXE7,VXE7/A,VXE8,VXE8,A,WMA4,WXE8,WXE8/A
	31615-ZE2-003ZE	*NH105*....MAT BLACK(#15-#20)	1	-	-		HEA,HEA2,HEA8,LXE,LXE8,PAE2,PXE8,QAE,QAE2,QAE6,QHE4,QME2,QSC,QSC9,QSE,QSE8,QXB6,QXE,QXE4,QXE6,QXE8,QXE9,QXE9,A,RHE4,RHE4/A,SME1,SME1/A,SXE,SXE/A,SXE4,SXE4/A,SXE8,SXE8/A,SXEB,SXEB/A,VDE,VDE2,VDE2/A,VEB6,VKB2,VKB2/A,VME2,VME2/A,VMS2,VXE,VXE4,VXE4/A,VXE6,VXE6/A,VXE7,VXE7/A,VXE8,VXE8,A,WMA4,WXE8,WXE8/A

E-23-1

CONTROL BOX(2)

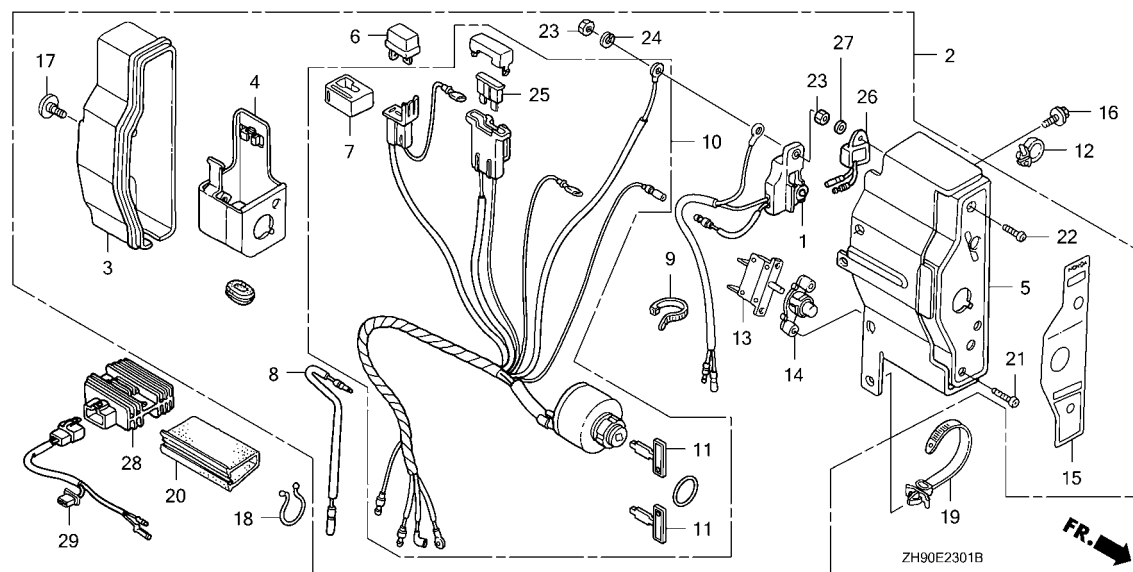

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
(5)	31615-ZE2-003ZB	PANEL COMP., CONTROL					
		R8.....BRIGHT RED	1	-	-	2080508	HEA2/A, HEA8/A, LXE/A, LXE8/A, PAE2/A, PXE8/A, QAE2/A, QAE6/A, QHE4/A, QME2/A, QSC9/A, QSE/A, QSE2, QSE8/A, QXB6/A, QXE/A, QXE4/A, QXE6/A, QXE8/A, RHE4/A, SME1/A, SXE4/A, SXE8/A, SXEB/A, VDE2/A, VKB2/A, VME2/A, VXE4/A, VXE6/A, VXE7/A, VXEB/A, WXE8/A
	31615-ZE2-003ZG	*R280*.....POWER RED	1	-	-	2080509	HEA2/A, HEA8/A, LXE/A, LXE8/A, PAE2/A, PXE8/A, QAE2/A, QAE6/A, QHE4/A, QME2/A, QSC9/A, QSE/A, QSE2, QSE8/A, QXB6/A, QXE/A, QXE4/A, QXE6/A, QXE8/A, RHE4/A, SME1/A, SXE/A, SXE4/A, SXE8/A, SXEB/A, VDE2/A, VKB2/A, VME2/A, VXE4/A, VXE6/A, VXE7/A, VXEB/A, WXE8/A
	31615-ZE2-003ZB	*R8*.....BRIGHT RED	-	(1)	-		
	31615-ZE2-003ZG	*R280*.....POWER RED	-	(1)	-	2080509	L1/A, Q1/A, R1/A, S1/A, W1/A
6	31700-124-008	RECTIFIER ASSY., SILICON (SHINDENGEN)	1	-	-		HEA, HEA2, HEA2/A, HEA8, HEA8/A, LXE, LXE/A, LXE8, LXE8/A, PAE2, PAE2/A, PXE8, PXE8/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QHE4, QHE4/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXEB, RA2/A, RHE4, RHE4/A, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, VDE, VDE2, VDE2/A, VEB6, VKB2, VKB2/A, VKE4, VME2, VME2/A, VMS2, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXEB, VXEB/A, WMA4, WXE8, WXE8/A
7	32127-738-700	SUSPENSION, COUPLER.....	1	-	-		HEA, HEA2, HEA2/A, HEA8, HEA8/A, LXE, LXE/A, LXE8, LXE8/A, PAE2, PAE2/A, PXE8, PXE8/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QHE4, QHE4/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXEB, RA2/A, RHE4, RHE4/A, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, VDE, VDE2, VDE2/A, VEB6, VKB2, VKB2/A, VKE4, VME2, VME2/A, VMS2, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXEB, VXEB/A, WMA4, WXE8, WXE8/A
			-	(1)	-		

E-23-1


CONTROL BOX(2)

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
8	32197-ZE1-003	HARNESS, SUB WIRE	1	-	-	-----	HEA, HEA2, HEA2/A, HEA8, HEA8/A, LXE, LXE/A, LXE8, LXE8/A, PAE2, PAE2/A, PXE8, PXE8/A, QAE2, QAE2/A, QAE6, QAE6/A, QME2/A, QSC, QSC9, QSC9/A, QSE/A, QSE2, QSE8/A, QXB6/A, QXE/A, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, RA2/A, SME1/A, SXE/A, SXE4/A, SXE8/A, SXEB/A, VDE, VDE2, VDE2/A, VEB6, VKB2, VKB2/A, VME2, VME2/A, VMS2, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8/A, WMA4, WXE8, WXE8/A
			1	-	-	1033680	----- QAE
			1	-	-	1127487	----- SXEB, VXE8
			1	-	-	1321603	----- QME2, QSE, QSE8, QXB6, QXE, QXE4, SME1, SXE, SXE4, SXE8, VXE4
9	32902-892-003	BAND	1	-	-	-----	HEA, HEA2, HEA2/A, HEA8, HEA8/A, LXE, LXE/A, LXE8, LXE8/A, PAE2, PAE2/A, PXE8, PXE8/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QHE4, QHE4/A, QME2, QME2/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QXB6, QXB6/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXE9, RA2/A, RHE4, RHE4/A, SME1, SME1/A, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, VDE, VDE2, VDE2/A, VEB6, VKB2, VKB2/A, VME2, VME2/A, VMS2, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8, VXE8/A, WMA4, WXE8, WXE8/A
10	35100-ZE2-842	SWITCH ASSY., COMBINATION (3A-CHARGE)	-	(1)	-	-----	HEA, HEA2, HEA2/A, HEA8, HEA8/A, PAE2, PAE2/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, VDE, VDE2, VDE2/A, VKB2, VKB2/A, VKE4, VME2, VME2/A, VMS2
	35100-ZE2-023	SWITCH ASSY., COMBINATION	1	-	-	-----	LXE, LXE/A, LXE8, LXE8/A, PXE8, PXE8/A, QHE4, QHE4/A, QXE, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXE9, RA2/A, RHE4, RHE4/A, SXE, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, VEB6, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8, WMA4, WXE8, WXE8/A
	35100-ZE2-862	SWITCH ASSY., COMBINATION (10A-CHARGE)	1	-	-	-----	QME2, QME2/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QXB6, QXB6/A, SME1, SME1/A
	35100-ZE2-023	SWITCH ASSY., COMBINATION	1	-	-	2440203	----- QXE/A, QXE9, SXE/A, VXE8
	35100-ZE2-033		1	-	-	2440204	----- QXE/A, QXE9, SXE/A, VXE8
	35100-ZE2-862	SWITCH ASSY., COMBINATION (10A-CHARGE)	-	(1)	-	-----	L1, L1/A, Q1, Q1/A, Q2, R1, R1/A, V1, W1, W1/A
	35100-ZE2-023	SWITCH ASSY., COMBINATION	-	(1)	-	-----	L1, Q1, Q2, R1, S1, V1, W1
	35100-ZE2-842	SWITCH ASSY., COMBINATION (3A-CHARGE)	-	(1)	-	-----	L1, Q1, Q2, R1, V1, W1
	35100-ZE2-023	SWITCH ASSY., COMBINATION	-	(1)	-	2440203	----- L1/A, Q1/A, R1/A, S1/A, W1/A
	35100-ZE2-842	SWITCH ASSY., COMBINATION (3A-CHARGE)	-	(1)	-	2451486	----- L1/A, Q1/A, R1/A, W1/A
	35100-ZE2-033	SWITCH ASSY., COMBINATION	-	(1)	-	2440204	----- L1/A, Q1/A, R1/A, S1/A, W1/A
	35100-ZE2-843	SWITCH ASSY., COMBINATION (3A-CHARGE)	-	(1)	-	2451487	----- L1/A, Q1/A, R1/A, W1/A
11	35111-880-003	KEY COMP.	2	-	-	-----	HEA, HEA2, HEA2/A, HEA8, HEA8/A, LXE, LXE/A, LXE8, LXE8/A, PAE2, PAE2/A, PXE8, PXE8/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QHE4, QHE4/A, QME2, QME2/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QXB6, QXB6/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXE9, RA2/A, RHE4, RHE4/A, SME1, SME1/A, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, VDE, VDE2, VDE2/A, VEB6, VKB2, VKB2/A, VKE4, VME2, VME2/A, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8, WMA4, WXE8, WXE8/A
	35111-880-013	KEY COMP.(HONDA LOCK)	2	-	-	-----	----- QXE9, VXE8, WMA4
	35111-880-003	KEY COMP.	2	-	-	2233813	----- VMS2
	35111-880-013	KEY COMP.(HONDA LOCK)	2	-	-	2233814	----- VMS2
	35111-880-003	KEY COMP.	-	(2)	-	-----	-----

2

E-23-1

CONTROL BOX(2)

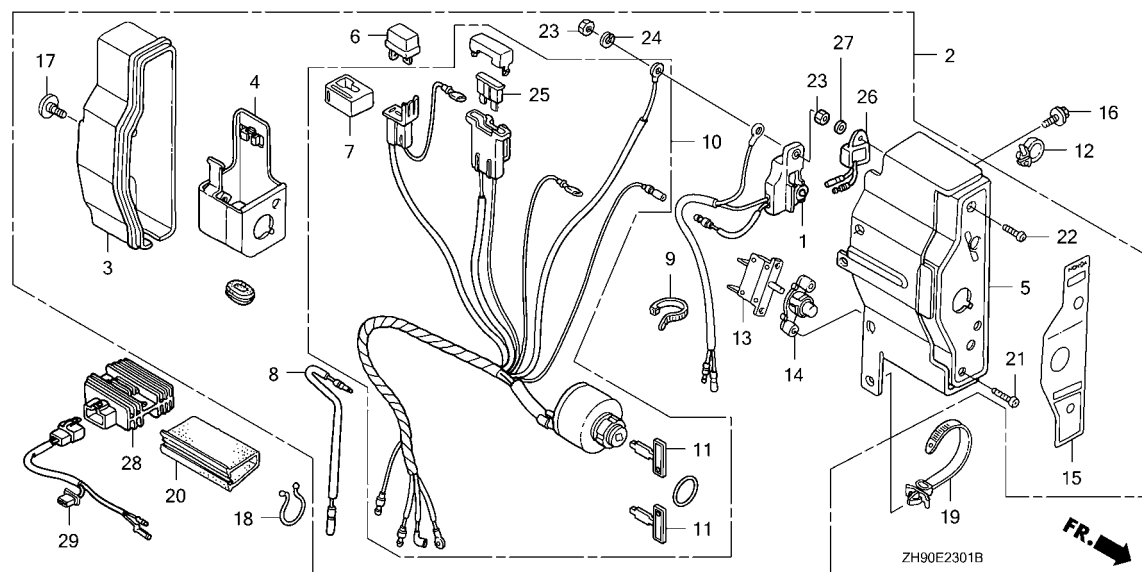

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
12	36103-ZE1-000	HOLDER, STOP SWITCH CORD.....	1	-	-	-----	HEA, HEA2, HEA2/A, HEA8, HEA8/A, LXE, LXE/A, LXE8, LXE8/A, PAE2, PAE2/A, PXE8, PXE8/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QHE4, QHE4/A, QME2, QME2/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QXB6, QXB6/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXEB, RHE4, RHE4/A, SME1, SME1/A, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, VDE, VDE2, VDE2/A, VEB6, VKB2, VKB2/A, VME2, VME2/A, VMS2, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8, VXE8/A, WMA4, WXE8, WXE8/A
13	38240-ZE2-840	PROTECTOR, CIRCUIT(3.5A).....	1	(1)	-	-----	HEA, HEA2, HEA2/A, HEA8, HEA8/A, PAE2, PAE2/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, VDE, VDE2, VDE2/A, VKB2, VKB2/A, VME2, VME2/A, VMS2
	38240-VA3-900	PROTECTOR, CIRCUIT(1.0A).....	1	-	-	-----	LXE, LXE/A, LXE8, LXE8/A, PXE8, PXE8/A, QHE4, QHE4/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXEB, RA2/A, RHE4, RHE4/A, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, VEB6, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8, VXE8/A, WMA4, WXE8, WXE8/A
	38240-ZE2-840	PROTECTOR, CIRCUIT(3.5A).....	-	(1)	-	-----	L1, L1/A, Q1, Q1/A, Q2, R1, R1/A, V1, W1, W1/A
14	38250-ZA8-701	LENS ASSY., PROTECTOR.....	1	(1)	-	-----	HEA, HEA2, HEA2/A, HEA8, HEA8/A, LXE, LXE/A, LXE8, LXE8/A, PAE2, PAE2/A, PXE8, PXE8/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QHE4, QHE4/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXEB, RA2/A, RHE4, RHE4/A, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, VDE, VDE2, VDE2/A, VEB6, VKB2, VKB2/A, VME2, VME2/A, VMS2, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8, VXE8/A, WMA4, WXE8, WXE8/A
15	87529-ZE2-811	MARK, CONTROL BOX(EXTERNAL)...	1	1	-	-----	HEA, HEA2, HEA8, L1/A, LXE, LXE8, PAE2, PXE8, Q1/A, QAE2, QAE6, QXE6, QXE8, R1/A, SXE8, VDE, VDE2, VKB2, VME2, VXE6, W1/A, WXE8
	87529-ZH9-W40	MARK, CONTROL BOX(ENGLISH)...	1	-	-	1033680	L1, Q1, Q2, QAE, QXE, QXEB, R1, SXE, V1, VEB6, VXE, W1
	87529-ZH8-W40		1	-	-	-----	QHE4, QXE4, RHE4, SXE4, VXE4, VXE7, QME2, SME1


E-23-1

CONTROL BOX(2)

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
15)	87529-ZE2-860	MARK, CONTROL BOX (EXTERNAL-REGULATOR)	1	-	-	-----	QSC, QSC9, QSE, QSE8, QXB6
	87529-ZE2-812	MARK, CONTROL BOX(EXP)	1	-	-	-----	QXE9, RA2/A, VMS2, WMA4
	87529-Z4T-840	MARK, CONTROL BOX(EXTERNAL) ..	1	-	-	-----	VXE8
	87529-ZE2-831	PANEL, CONTROL BOX (EXTERNAL-ALERT)	1	-	-	-----	1033679 QAE, QXE, QXEB, SXE, SXEB, VXE, VXEB
	87529-ZH9-W40	MARK, CONTROL BOX(ENGLISH) ...	1	-	-	-----	1033679 VEB6
	87529-ZE2-811	MARK, CONTROL BOX(EXTERNAL) ..	1	-	-	-----	2151454 HEA2/A, HEA8/A, LXE/A, LXE8/A, PAE2/A, PXE8/A, QAE2/A, QAE6/A, QXE/A, QXE6/A, QXE8/A, SXE/A, SXE8/A, VDE2/A, VKB2/A, VME2/A, VXE6/A, WXE8/A
	87529-ZH8-W40	MARK, CONTROL BOX(ENGLISH) ...	1	-	-	-----	2153922 QME2/A, SME1/A
	87529-ZH9-W40		1	-	-	-----	2155785 QHE4/A, QXE4/A, RHE4/A, SXE4/A, SXEB/A, VXE4/A, VXE7/A, VXEB/A
	87529-ZE2-860	MARK, CONTROL BOX (EXTERNAL-REGULATOR)	1	-	-	-----	2165395 QSC9/A, QSE/A, QSE2, QSE8/A, QXB6/A
	87529-ZE2-811	MARK, CONTROL BOX(EXTERNAL) ..	1	-	-	1033680	1127486 SXEB, VXEB
	87529-ZH9-W40	MARK, CONTROL BOX(ENGLISH) ...	1	-	-	1127487	----- SXEB, VXEB
	87529-ZE2-812	MARK, CONTROL BOX(EXP)	1	-	-	2151455	----- HEA2/A, HEA8/A, LXE/A, LXE8/A, PAE2/A, PXE8/A, QAE2/A, QAE6/A, QXE/A, QXE6/A, QXE8/A, SXE/A, SXE8/A, VDE2/A, VKB2/A, VME2/A, VXE6/A, WXE8/A
	87529-ZH8-W41	MARK, CONTROL BOX(ENGLISH) ...	1	-	-	2153923	----- QME2/A, SME1/A
	87529-ZH9-W41		1	-	-	2155786	----- QHE4/A, QXE4/A, RHE4/A, SXE4/A, SXEB/A, VXE4/A, VXE7/A, VXEB/A
	87529-ZE2-861	MARK, CONTROL BOX (EXTERNAL-REGULATOR)	1	-	-	2165396	----- QSC9/A, QSE/A, QSE2, QSE8/A, QXB6/A
	87529-ZE2-860		-	(1)	-	-----	L1, L1/A, Q1, Q2, R1, R1/A, V1, W1, W1/A
	87529-ZE2-010	PANEL, CONTROL BOX(INTERNAL) ..	-	(1)	-	-----	Q1/A, W1/A
	87529-ZE2-870	MARK, CONTROL BOX (EXTERNAL-ALERT)(REGULATOR)	-	(1)	-	-----	1033679 L1, Q1, Q2, R1, V1, W1
	87529-ZE2-821	PANEL, CONTROL BOX (INTERNAL-ALERT)	-	(1)	-	-----	1033679 L1, Q1, R1, S1, V1, W1
	87529-ZE2-831	PANEL, CONTROL BOX (EXTERNAL-ALERT)	-	(1)	-	-----	1033679 L1, Q1, R1, V1, W1
	87529-ZE2-010	PANEL, CONTROL BOX(INTERNAL) ..	-	(1)	-	-----	2165395 L1/A, R1/A, S1/A
	87529-ZE2-860	MARK, CONTROL BOX (EXTERNAL-REGULATOR)	-	(1)	-	-----	2165395 Q1/A
	87529-ZE2-010	PANEL, CONTROL BOX(INTERNAL) ..	-	(1)	-	1033680	----- L1, Q1, R1, S1, V1, W1
	87529-ZE2-020		-	(1)	-	2165396	----- L1/A, R1/A, S1/A
	87529-ZE2-861	MARK, CONTROL BOX (EXTERNAL-REGULATOR)	-	(1)	-	2165396	----- Q1/A
16	90013-883-000	BOLT, FLANGE, 6X12(CT200)	2	-	-	-----	HEA, HEA2, HEA2/A, HEA8, HEA8/A, LXE, LXE/A, LXE8, LXE8/A, PAE2, PAE2/A, PXE8, PXE8/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QHE4, QHE4/A, QME2, QME2/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QXB6, QXB6/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXE9, RHE4, RHE4/A, SME1, SME1/A, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, VDE, VDE2, VDE2/A, VEB6, VKB2, VKB2/A, VME2, VME2/A, VMS2, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8, VXEB, VXEB/A, WMA4, WXE8, WXE8/A
17	90380-MA6-010	SCREW, SPECIAL, 6X12	1	-	-	-----	HEA, HEA2, HEA2/A, HEA8, HEA8/A, LXE, LXE/A, LXE8, LXE8/A, PAE2, PAE2/A, PXE8, PXE8/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QHE4, QHE4/A, QME2, QME2/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QXB6, QXB6/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXE9, RHE4, RHE4/A, SME1, SME1/A, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, VDE, VDE2, VDE2/A, VEB6, VKB2, VKB2/A, VME2, VME2/A, VMS2, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8, VXEB, VXEB/A, WMA4, WXE8, WXE8/A
			-	(1)	-		

E-23-1

CONTROL BOX(2)

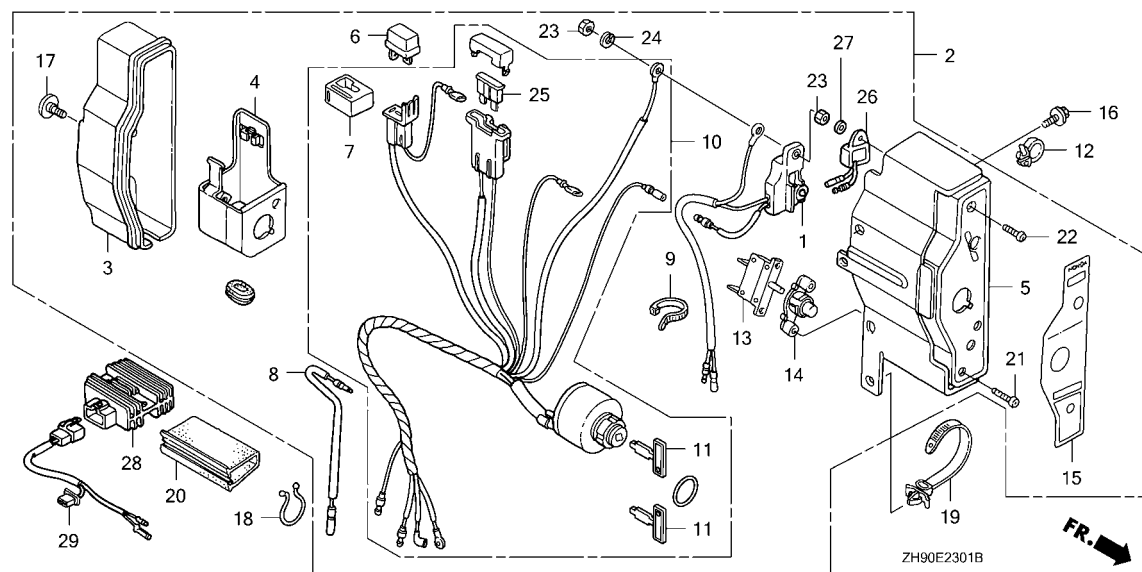

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
18	90630-751-000	CLIP, PURSE LOCK.....	1	-	-	-----	HEA, HEA2, HEA2/A, HEA8, HEA8/A, LXE, LXE/A, LXE8, LXE8/A, PAE2, PAE2/A, PXE8, PXE8/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QHE4, QHE4/A, QME2, QME2/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QXB6, QXB6/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXEB, RHE4, RHE4/A, SME1, SME1/A, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, VDE, VDE2, VDE2/A, VEB6, VKB2, VKB2/A, VME2, VME2/A, VMS2, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXEB, VXEB/A, WMA4, WXE8, WXE8/A
19	90672-SA0-003	STRAP, CABLE, 118MM(BLACK)...	1	(1)	-	-----	HEA, HEA2, HEA2/A, HEA8, HEA8/A, LXE, LXE/A, LXE8, LXE8/A, PAE2, PAE2/A, PXE8, PXE8/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QHE4, QHE4/A, QME2, QME2/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QXB6, QXB6/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXEB, RHE4, RHE4/A, SME1, SME1/A, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, VDE, VDE2, VDE2/A, VEB6, VKB2, VKB2/A, VME2, VME2/A, VMS2, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXEB, VXEB/A, WMA4, WXE8, WXE8/A
20	91406-ZE2-003	TUBE, FASTENER, 30MM.....	1	(1)	-	-----	HEA, HEA2, HEA2/A, HEA8, HEA8/A, LXE, LXE/A, LXE8, LXE8/A, PAE2, PAE2/A, PXE8, PXE8/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QHE4, QHE4/A, QME2, QME2/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QXB6, QXB6/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXEB, RHE4, RHE4/A, SME1, SME1/A, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, VDE, VDE2, VDE2/A, VEB6, VKB2, VKB2/A, VME2, VME2/A, VMS2, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXEB, VXEB/A, WMA4, WXE8, WXE8/A
			-	(1)	-	-----	

E-23-1


CONTROL BOX(2)

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
21	93500-03012-0H	SCREW, PAN, 3X12	2	-	-	-----	HEA, HEA2, HEA2/A, HEA8, HEA8/A, LXE, LXE/A, LXE8, LXE8/A, PAE2, PAE2/A, PXE8, PXE8/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QHE4, QHE4/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXE8, RA2/A, RHE4, RHE4/A, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, VDE, VDE2, VDE2/A, VEB6, VKB2, VKB2/A, VME2, VME2/A, VMS2, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8, VXE8/A, WMA4, WXE8, WXE8/A
22	93500-04012-0H	SCREW, PAN, 4X12	1	(2)	-	-----	HEA, HEA2, HEA2/A, HEA8, HEA8/A, LXE, LXE/A, LXE8, LXE8/A, PAE2, PAE2/A, PXE8, PXE8/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QHE4, QHE4/A, QME2, QME2/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QXB6, QXB6/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXE8, RA2/A, RHE4, RHE4/A, SME1, SME1/A, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, VDE, VDE2, VDE2/A, VEB6, VKB2, VKB2/A, VME2, VME2/A, VMS2, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8, VXE8/A, WMA4, WXE8, WXE8/A
23	94001-04390-0S	NUT, HEX., 4MM	1	(1)	-	-----	HEA, QAE, QHE4, QHE4/A, QSC, RHE4, RHE4/A
			2	-	-	-----	HEA2/A, HEA8/A, LXE/A, LXE8/A, PAE2/A, PXE8/A, QAE2/A, QAE6/A, QME2/A, QSC9/A, QSE/A, QSE8/A, QXB6/A, QXE/A, QXE4/A, QXE6/A, QXE8/A, QXE9, RA2/A, SME1/A, SXE/A, SXE4/A, SXE8/A, SXEB/A, VDE2/A, VKB2/A, VME2/A, VMS2, VXE4/A, VXE6/A, VXE7/A, VXE8, VXE8, VXE8/A, WMA4, WXE8, WXE8/A
			1	-	-	-----	1321602 HEA2, HEA8, PAE2, QAE2, QAE6, VDE, VDE2, VKB2, VME2
			1	-	-	-----	1324181 LXE, LXE8, PXE8, QXE, QXE6, QXE8, QXE8, SXE, SXE8, VEB6, VX26, VXE, VXE6, WXE8
			1	-	-	-----	1325169 QME2, SME1
			1	-	-	-----	1325304 QXE4, SXE4, SXEB, VXE4, VXE7, VXE8
			1	-	-	-----	1329949 QSC9, QSE, QSE2, QSE8, QXB6
			2	-	-	-----	1321603 HEA2, HEA8, PAE2, QAE2, QAE6, VDE, VDE2, VKB2, VME2
			2	-	-	-----	1324182 LXE, LXE8, PXE8, QXE, QXE6, QXE8, QXE8, SXE, SXE8, VEB6, VX26, VXE, VXE6, WXE8
			2	-	-	-----	1325170 QME2, SME1
			2	-	-	-----	1325305 QXE4, SXE4, SXEB, VXE4, VXE7, VXE8
			2	-	-	-----	1329950 QSC9, QSE, QSE2, QSE8, QXB6
			(2)	-	-	-----	L1/A, Q1/A, R1/A, S1/A, W1/A
			(1)	-	-	-----	V1, W1
			(1)	-	-	-----	1321602 L1, Q1, Q2, R1, S1
			(2)	-	-	-----	1321603 L1, Q1, Q2, R1, S1
24	94111-04800	WASHER, SPRING, 4MM	1	-	-	-----	HEA, HEA2, HEA2/A, HEA8, HEA8/A, LXE, LXE/A, LXE8, LXE8/A, PAE2, PAE2/A, PXE8, PXE8/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QHE4, QHE4/A, QME2, QME2/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QXB6, QXB6/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXE8, RA2/A, RHE4, RHE4/A, SME1, SME1/A, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, VDE, VDE2, VDE2/A, VEB6, VKB2, VKB2/A, VME2, VME2/A, VMS2, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8, VXE8/A, WMA4, WXE8, WXE8/A
25	98200-31500	FUSE, BLADE(15A)	1	(1)	-	-----	HEA, HEA2, HEA2/A, HEA8, HEA8/A, PAE2, PAE2/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QME2, QME2/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QXB6, QXB6/A, SME1, SME1/A, VDE, VDE2, VDE2/A, VKB2, VKB2/A, VKE4, VME2, VME2/A, VMS2
	98200-30500	FUSE, BLADE(5A)	1	-	-	-----	LXE, LXE/A, LXE8, LXE8/A, PXE8, PXE8/A, QHE4, QHE4/A, QXE, QXE/A, QXE4, QXE4/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXE8, RA2/A, RHE4, RHE4/A, SXE, SXE/A, SXE4, SXE4/A, SXE8, SXE8/A, SXEB, SXEB/A, VEB6, VXE, VXE4, VXE4/A, VXE6, VXE6/A, VXE7, VXE7/A, VXE8, VXE8, VXE8/A, WMA4, WXE8, WXE8/A
	98200-31500	FUSE, BLADE(15A)	(1)	-	-	-----	L1, L1/A, Q1, Q1/A, Q2, R1, R1/A, V1, W1, W1/A

2

E-23-1


CONTROL BOX(2)

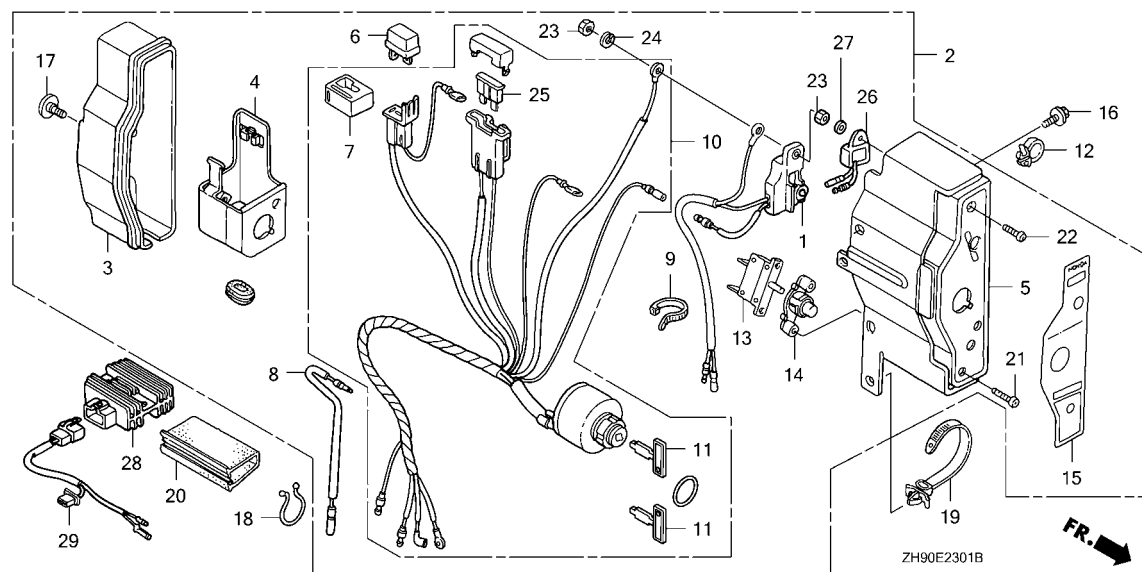

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code	
			(1)	GX270 (2)	(3)			
26	34150-ZH7-003	ALERT UNIT, OIL	1	-	-	HEA2/A, HEA8/A, LXE8/A, PAE2/A, PXE8/A, QAE2/A, QAE6/A, QME2/A, QSC9/A, QSE8/A, QXB6/A, QXE4/A, QXE6/A, QXE8/A, RA2, RA2/A, SME1/A, SXE4/A, SXE8/A, SXEB/A, VDE2/A, VKB2/A, VME2/A, VMS2, VXE4/A, VXE6/A, VXE7/A, VXE8/A, WMA4		
			1	-	-	2440203	LXE/A, QSE/A, QXE/A, QXE9, SXE/A, VXE8, WXE8/A	
			1	-	-	1321603	HEA2, HEA8, PAE2, QAE2, QAE6, VDE, VDE2, VKB2, VME2	
			1	-	-	1324182	LXE, LXE8, PXE8, QXE, QXE6, QXE8, QXEB, SXE, SXE8, VEB6, VX26, VXE, VXE6, WXE8	
			1	-	-	1325170	QME2, SME1	
			1	-	-	1325305	QXE4, SXE4, SXEB, VXE4, VXE7, VXE8	
			1	-	-	1329950	QSC9, QSE, QSE2, QSE8, QXB6	
	34150-ZH7-013		1	-	-	2440204	LXE/A, QSE/A, QXE/A, QXE9, SXE/A, VXE8, WXE8/A	
	34150-ZH7-003		-	(1)	-	2440203	Q1/A, S1/A	
			-	(1)	-	1321603	L1, Q1, Q2, R1, S1, V1, W1	
	34150-ZH7-013		-	(1)	-	2440204	Q1/A, S1/A	
27	94101-04800	WASHER, PLAIN, 4MM	1	-	-	HEA2/A, HEA8/A, LXE/A, LXE8/A, PAE2/A, PXE8/A, QAE2/A, QAE6/A, QME2/A, QSC9/A, QSE/A, QSE8/A, QXB6/A, QXE/A, QXE4/A, QXE6/A, QXE8/A, QXE9, RA2, RA2/A, SME1/A, SXE/A, SXE4/A, SXE8/A, SXEB/A, VDE2/A, VKB2/A, VME2/A, VMS2, VXE4/A, VXE6/A, VXE7, VXE7/A, VXE8, VXE8/A, WMA4, WXE8/A		
			1	-	-	1321603	HEA2, HEA8, PAE2, QAE2, QAE6, VDE, VDE2, VKB2, VME2	
			1	-	-	1324182	LXE, LXE8, PXE8, QXE, QXE6, QXE8, QXEB, SXE, SXE8, VEB6, VX26, VXE, VXE6, WXE8	
			1	-	-	1325170	QME2, SME1	
			1	-	-	1325305	QXE4, SXE4, SXEB, VXE4, VXE8	
			1	-	-	1329950	QSC9, QSE, QSE2, QSE8, QXB6	
			-	(1)	-	S1/A		
			-	(1)	-	1321603	L1, Q1, Q2, R1, S1, V1, W1	
28	31600-ZE2-861	RECTIFIER ASSY., REGULATOR (10A)	1	-	-	QHR4, QHR4/A, QKE3, QKE3/A, QKE4, QME2, QME2/A, QSC, QSE, QSE/A, QSE2, QSE8, QSE8/A, QXB6, QXB6/A, SME1, SME1/A		
			1	-	-	1241083	QSC9	
			-	(1)	-			

E-23-1

CONTROL BOX(2)

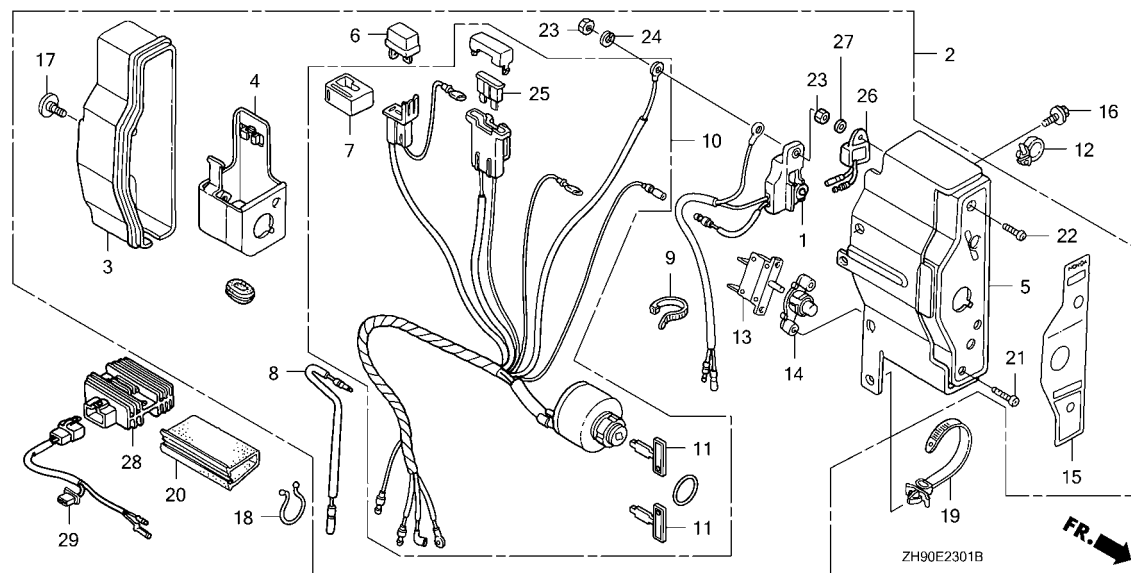


Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
29	32110-ZE2-860	HARNESS ASSY., SUB WIRE.....	1	-	-	-----	QHR4,QHR4/A,QKE3,QKE3/A,QKE4,QME2,QME2/A,QSC,QSE,QSE/A,QSE2,QSE8
			1	-	-	-----	QSE8/A,QXB6,QXB6/A,SME1,SME1/A
			-	(1)	-	-----	1241083 QSC9

2

E-23-2

CONTROL BOX(3)

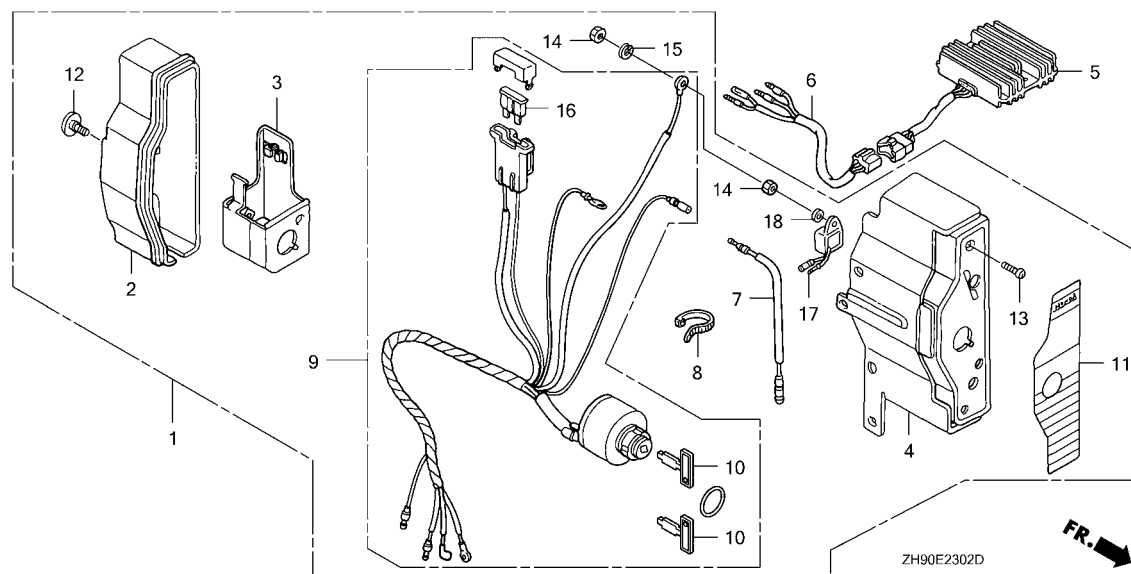


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	6221N7	BOX, ENGINE CONTROL	0.1
5	6131B7	RECTIFIER, REGULATOR	0.2
6	6111E7	HARNESS, REGULATOR RECTIFIER (A)	0.1
9	6151E1	SWITCH, COMBINATION	0.2
16	8121A7	FUSE, BLADE	0.1
17	6151K4	ALERT UNIT, ENGINE CONTROL OIL	0.2

Ref. No.	Part No.	Description	Reqd. QTY	Serial No.	Parts catalogue code
			(1) (2) (3)		
1	31610-ZE2-W01ZC	BOX ASSY., CONTROL (EXTERNAL-ALERT)(18A)	-	(1) -	1321602 L1,Q1,Q2,R1,S1,V1,W1
		R8.....BRIGHT RED	-	(1) -	2085591 L1/A,Q1/A,R1/A,S1/A,W1/A
	31610-ZE2-W02ZC	BOX ASSY., CONTROL(EXP-ALERT)(18A)	-	(1) -	1321603 L1,Q1,Q2,R1,S1,V1,W1
		R8.....BRIGHT RED	-	(1) -	2085592 L1/A,Q1/A,R1/A,S1/A,W1/A
	31610-ZE2-W02ZE	*R280*.....POWER RED	-	(1) -	2080508 L1/A,Q1/A,R1/A,S1/A,W1/A
2	31612-ZE2-003	CASE, CONTROL	-	(1) -	
3	31614-ZE2-003	BRACKET, CASE MOUNTING	-	(1) -	
4	31615-ZE2-003ZB	PANEL COMP., CONTROL	-	(1) -	
		R8.....BRIGHT RED	-	(1) -	2080509 L1/A,Q1/A,R1/A,S1/A,W1/A
	31615-ZE2-003ZG	*R280*.....POWER RED	-	(1) -	
5	31620-ZG5-003	RECTIFIER ASSY., REGULATOR (20A)	-	(1) -	2437499 L1/A,Q1/A,R1/A,S1/A,W1/A
	31620-ZG5-013		-	(1) -	2437500 W1/A
	31620-ZG5-023		-	(1) -	2437500 L1/A,Q1/A,R1/A,S1/A
	31620-ZG5-033		-	(1) -	2454911 L1/A,Q1/A,R1/A,S1/A
6	32110-ZE2-W00	HARNESS ASSY., SUB WIRE	-	(1) -	
7	32197-ZE1-003	HARNESS, SUB WIRE	-	(1) -	
8	32902-892-003	BAND	-	(1) -	
9	35100-ZE2-W01	SWITCH ASSY., COMBINATION (18A-CHARGE)	-	(1) -	
10	35111-880-003	KEY COMP.	-	(2) -	

E-23-2


CONTROL BOX(3)

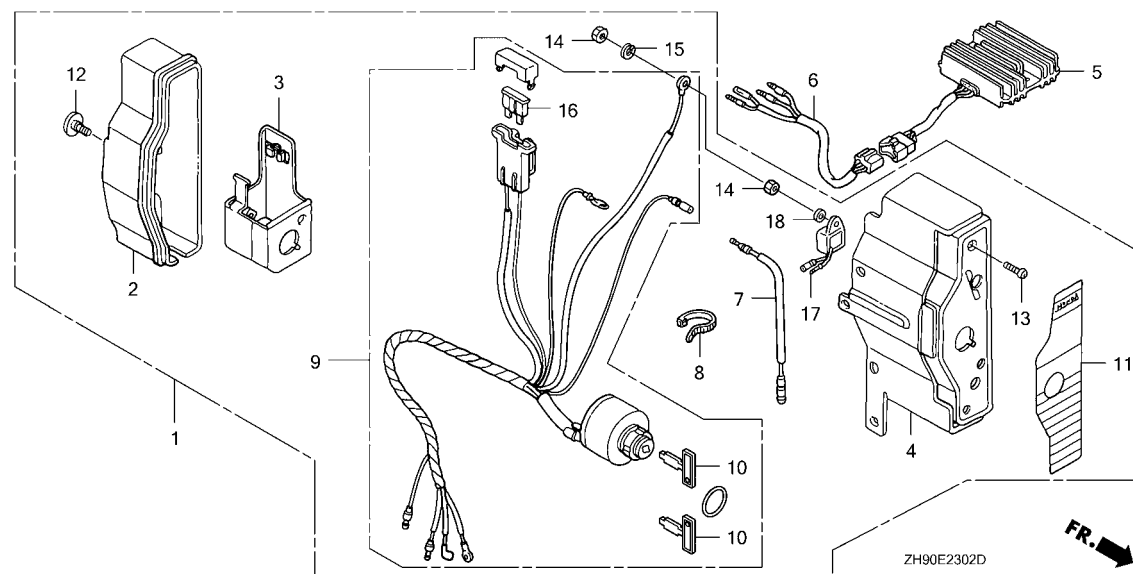

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
11	87529-ZE2-860	MARK, CONTROL BOX (EXTERNAL-REGULATOR)	-	(1)	-	-----	L1, L1/A, Q1, Q2, R1, R1/A, S1, V1, W1, W1/A
	87529-ZE2-861		-	(1)	-	2165395	Q1/A, S1/A
12	90380-MA6-010	SCREW, SPECIAL, 6X12.....	-	(1)	-	2165396	Q1/A, S1/A
13	93500-04012-0H	SCREW, PAN, 4X12.....	-	(1)	-		
14	94001-04390-0S	NUT, HEX., 4MM.....	-	(2)	-	-----	L1/A, Q1/A, R1/A, S1/A, W1/A
			-	(1)	-	1321602	L1, Q1, Q2, R1, S1, V1, W1
			-	(2)	-	1321603	L1, Q1, Q2, R1, S1, V1, W1
15	94111-04800	WASHER, SPRING, 4MM.....	-	(1)	-		
16	98200-32500	FUSE, BLADE(25A).....	-	(1)	-	-----	L1/A, R1/A, W1/A
17	34150-ZH7-003	ALERT UNIT, OIL.....	-	(1)	-	2440203	Q1/A, S1/A
			-	(1)	-	1321603	L1, Q1, Q2, R1, S1, V1, W1
	34150-ZH7-013		-	(1)	-	2440204	Q1/A, S1/A
18	94101-04800	WASHER, PLAIN, 4MM.....	-	(1)	-	-----	L1/A, Q1/A, R1/A, S1/A, W1/A
			-	(1)	-	1321603	L1, Q1, Q2, R1, S1, V1, W1

E-26

REDUCTION(1/2)(CLUTCH)

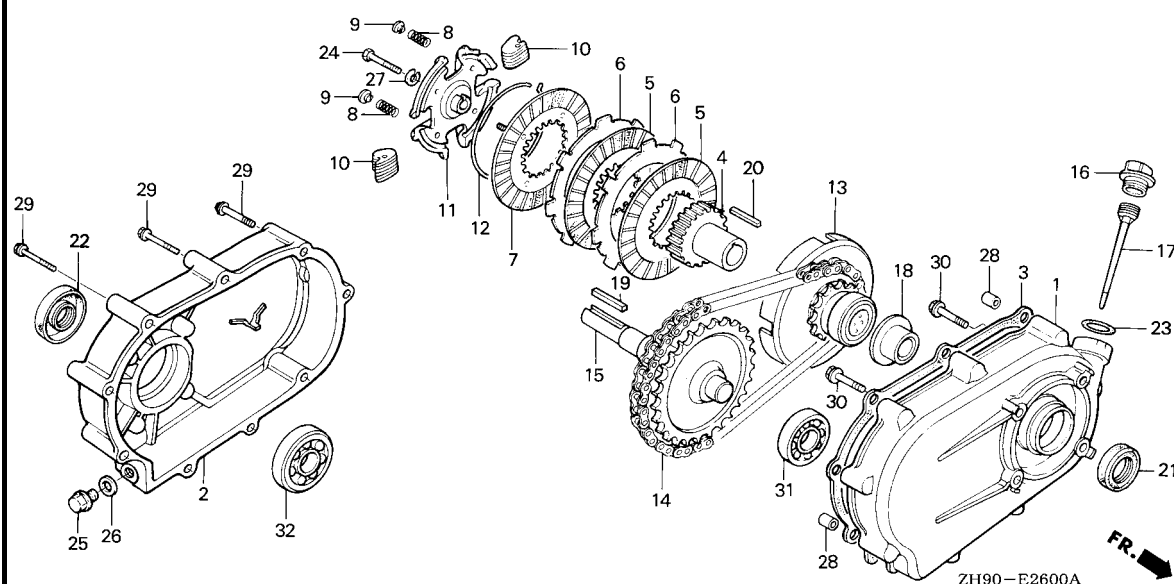

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	2141Y6	CASE, REDUCTION(R-TYPE)	0.4
2	2141W7	REDUCTION COVER AND/OR PACKING (R-TYPE)	0.3
3	2141R2	PACKING, REDUCTION COVER	0.2
5	2141Z0	DISC, REDUCTION CLUTCH FRICTION	0.2
6	2141Z1	PLATE, REDUCTION CLUTCH	0.2
7	2141Z2	PLATE, REDUCTION CLUTCH PRESSURE	0.2
11	(10)		
11	2121F5	HOLDER, CLUTCH WEIGHT	0.2
14	(13)		
14	2141W3	CHAIN, POWER TAKE OFF DRIVE (R-TYPE)	0.3
15	2141V8	SHAFT, POWER TAKE OFF(R-TYPE)	0.3
21	2141AB	OIL SEAL, REDUCTION CASE	0.3
22	2141X4	OIL SEAL, POWER TAKE OFF SHAFT (R-TYPE) :REAR	0.2
31	2141Y5	BEARING, POWER TAKE OFF SHAFT (R-TYPE) :FRONT	0.4
32	2141X9	BEARING, POWER TAKE OFF SHAFT (R-TYPE) :REAR	0.3

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
1	21510-889-750	CASE, REDUCTION	1	1	1	-----	R1, R1/A, RA, RA2, RA2/A, RA3, RD, RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A
2	21610-889-750	COVER, REDUCTION	1	1	1	-----	R1, R1/A, RA, RA2, RA2/A, RA3, RD, RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A
3	21691-889-750	PACKING, REDUCTION COVER	1	1	1	-----	R1, R1/A, RA, RA2, RA2/A, RA3, RD, RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A
4	22121-889-750	CENTER, CLUTCH(28T)	1	1	1	-----	R1, R1/A, RA, RA2, RA2/A, RA3, RD, RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A
5	22201-822-610	DISK, CLUTCH FRICTION	2	2	2	-----	R1, R1/A, RA, RA2, RA2/A, RA3, RD, RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A
6	22311-822-610	PLATE, CLUTCH	2	2	2	-----	R1, R1/A, RA, RA2, RA2/A, RA3, RD, RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A
7	22350-822-610	PLATE COMP., CLUTCH PRESSURE	1	1	1	-----	R1, R1/A, RA, RA2, RA2/A, RA3, RD, RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A
8	22411-822-611	SPRING, CLUTCH FREE	4	4	4	-----	R1, R1/A, RA, RA2, RA2/A, RA3, RD, RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A
9	22421-822-610	HOLDER, CLUTCH SPRING	4	4	4	-----	R1, R1/A, RA, RA2, RA2/A, RA3, RD, RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A


E-26

REDUCTION(1/2)(CLUTCH)

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
10	22521-822-610	WEIGHT, CLUTCH	48	48	48	-----	R1, R1/A, RA, RA2, RA2/A, RA3, RD, RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A RXU, RXU/A
11	22531-889-750	HOLDER, CLUTCH WEIGHT	1	1	1	-----	R1, R1/A, RA, RA2, RA2/A, RA3, RD, RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A RXU, RXU/A
12	22535-822-610	CENTER, CLUTCH WEIGHT	1	1	1	-----	R1, R1/A, RA, RA2, RA2/A, RA3, RD, RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A RXU, RXU/A
13	23120-889-750	SPROCKET COMP., DRIVE(14T) ...	1	1	1	-----	R1, R1/A, RA, RA2, RA2/A, RA3, RD, RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A RXU, RXU/A
14	23161-822-611	CHAIN, DRIVE(RK428SH-36LE) ...	1	1	1	-----	R1/A, RA2, RA2/A, RA3, RD/A, RH26, RH26/A, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2 RSC2/A, RSS, RSS/A, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A
	23161-822-610	CHAIN, DRIVE	1	1	-	1034459	R1, RA, RD, RH, RHE, RX
	23161-822-611	CHAIN, DRIVE(RK428SH-36LE) ...	1	1	-	1034460	R1, RA, RD, RH, RHE, RX
15	23711-822-610	SHAFT COMP., P.T.O.(28T)	1	1	1	-----	R1, R1/A, RA, RA2, RA2/A, RA3, RD, RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A RXU, RXU/A
16	25620-823-000	CAP, REDUCTION OIL(YELLOW) ...	1	1	1	-----	R1, RA, RA2, RD, RH, RH26, RHE, RHE4, RHQ4, RSC2, RSS, RX, RXP, RXQ4, RXU
	25620-805-612	CAP, REDUCTION OIL(GRAY)	1	1	1	-----	R1/A, RA2/A, RA3, RD/A, RH26/A, RHE4/A, RHQ4/A, RSC2/A, RSS/A, RX/A, RXP/A RXQ4/A, RXU/A
17	25651-889-750	GAUGE, OIL LEVEL	1	1	1	-----	R1, R1/A, RA, RA2, RA2/A, RA3, RD, RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A RXU, RXU/A
18	90403-889-000	WASHER, THRUST, 25MM	1	1	1	-----	R1, R1/A, RA, RA2, RA2/A, RA3, RD, RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A RXU, RXU/A
19	90741-889-810	KEY, 7X7X33(YELLOW)(O.S.)	(1)	(1)	(1)	-----	R1, R1/A, RA, RA2, RA2/A, RA3, RD, RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A RXU, RXU/A
	90741-805-000	KEY, 7X7X33	1	1	1	-----	R1, R1/A, RA, RA2, RA2/A, RA3, RD, RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A RHQ4, RHQ4/A, RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A
20	90741-889-000	KEY, CLUTCH CENTER	1	1	1	-----	R1, R1/A, RA, RA2, RA2/A, RA3, RD, RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A RXU, RXU/A
21	91201-890-003	OIL SEAL, 30X46X8	1	1	1	-----	R1, R1/A, RA, RA2, RA2/A, RA3, RD, RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A RXU, RXU/A
22	91202-805-610	OIL SEAL(PJ30507)	1	1	1	-----	R1, RA, RA2, RA2/A, RD, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A RSC2, RSC2/A, RSS, RX, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A
	91202-Z2F-801	OIL SEAL, 30X50X7	1	1	-	2425806	R1/A, RD/A, RSS/A, RX/A
			1	1	-	2425807	R1/A, RD/A, RSS/A, RX/A
			1	-	-		RA3
23	91301-805-000	O-RING, 26X2.7	1	1	1	-----	R1, R1/A, RA, RA2, RA2/A, RA3, RD, RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A RXU, RXU/A
24	92101-08035-0A	BOLT, HEX., 8X35	1	1	1	-----	R1/A, RA2/A, RA3, RD/A, RH26/A, RHE4/A, RHQ4/A, RSC2/A, RSS/A, RX/A, RXP/A RXQ4/A, RXU/A
	92100-08035-0H		1	1	-	-----	R1, RA, RD, RH, RHE, RX, RXU
	92101-08035-0H		1	-	1	-----	RA2, RH26, RHE4, RHQ4, RSC2, RSS, RXP, RXQ4
25	92800-12000	BOLT, DRAIN PLUG, 12MM	1	1	1	-----	R1, R1/A, RA, RA2, RA2/A, RA3, RD, RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A RXU, RXU/A

E-26


REDUCTION(1/2)(CLUTCH)

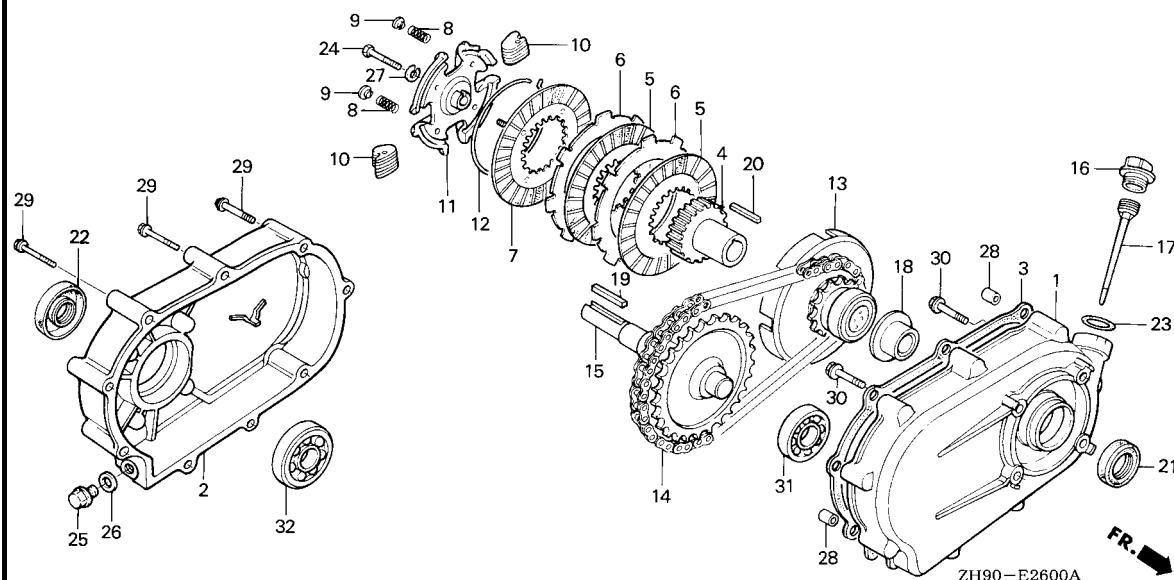

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
26	94109-12000	WASHER, DRAIN PLUG, 12MM.....	1	1	1	-----	R1, R1/A, RA, RA2, RA2/A, RA3, RD, RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A
27	94111-08800	WASHER, SPRING, 8MM.....	1	1	1	-----	R1, R1/A, RA, RA2, RA2/A, RA3, RD, RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A
28	94301-08140	DOWEL PIN, 8X14.....	2	2	2	-----	R1, R1/A, RA, RA2, RA2/A, RA3, RD, RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A
29	95701-06050-08	BOLT, FLANGE, 6X50.....	9	9	9	-----	R1/A, RA2, RA2/A, RA3, RD/A, RH26, RH26/A, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU/A
	95700-06050-08		9	9	-	-----	R1, RA, RD, RH, RHE, RX, RXU
30	95701-08032-08	BOLT, FLANGE, 8X32.....	4	4	4	-----	R1/A, RA2, RA2/A, RA3, RD/A, RH26, RH26/A, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU/A
	95700-08032-08		4	4	-	-----	R1, RA, RD, RH, RHE, RX, RXU
31	96100-62050-00	BEARING, RADIAL BALL, 6205...	1	1	1	-----	R1, R1/A, RA, RA2, RA2/A, RA3, RD, RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A
32	96100-62060-00	BEARING, RADIAL BALL, 6206...	1	1	1	-----	R1, R1/A, RA, RA2, RA2/A, RA3, RD, RD/A, RH, RH26, RH26/A, RHE, RHE4, RHE4/A, RHQ4, RHQ4/A, RSC2, RSC2/A, RSS, RSS/A, RX, RX/A, RXP, RXP/A, RXQ4, RXQ4/A, RXU, RXU/A

E-26-1

REDUCTION(1/2)

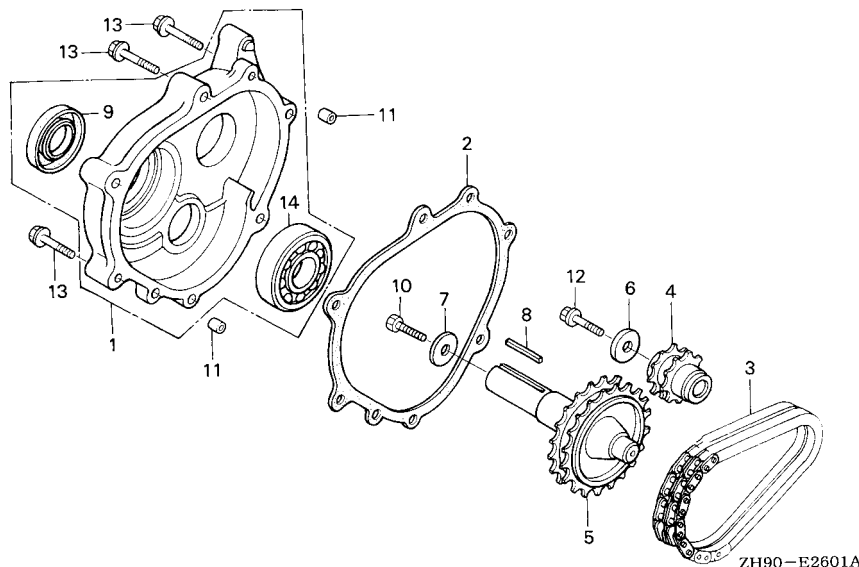


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	2141W9	(2) CHAIN CASE COVER AND/OR PACKING(L-TYPE)	0.2
3	2141W2	CHAIN, POWER TAKE OFF DRIVE (L-TYPE)	0.2
4	2141X0	SPROCKET, POWER TAKE OFF DRIVE CHAIN(L-TYPE)	0.2
5	2141V7	SHAFT, POWER TAKE OFF(L-TYPE)	0.2
9	2141X3	OIL SEAL, POWER TAKE OFF SHAFT (L-TYPE) :REAR	0.3
14	2141X8	BEARING, POWER TAKE OFF SHAFT (L-TYPE) :REAR	0.4

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
1	11500-ZE2-610	COVER ASSY., CHAIN CASE	1	1	-	-----	L1, L1/A, LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LT, LT/A, LTJ, LW, LW/A, LWD, LWD1, LWD1/A, LX, LX/A, LX16, LXE, LXE/A, LX8, LX8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ
	11500-ZK2-800		1	-	-	-----	LT, LT/A
2	11521-ZE2-800	PACKING, CHAIN CASE COVER	1	-	-	-----	LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LT, LT/A, LTJ, LW, LW/A, LWD, LWD1, LWD1/A, LX, LX/A, LX16, LXE, LXE/A, LX8, LX8/A, LXQ4, LXQ4/A, LXU, LXU/A
	11521-ZE2-610		1	-	-	-----	LJ, LW, LXZ
	11521-ZE2-800		1	-	-	-----	LJ, LW, LXZ
	11521-ZE2-610		-	(1)	-	-----	L1/A
	11521-ZE2-800		-	(1)	-	-----	L1
	11521-ZE2-800		-	(1)	-	-----	L1
3	14411-ZE2-611	CHAIN, P.T.O. DRIVE	1	1	-	-----	L1, L1/A, LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LT, LT/A, LTJ, LW, LW/A, LWD, LWD1, LWD1/A, LX, LX/A, LX16, LXE, LXE/A, LX8, LX8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ
4	23110-ZE2-610	SPROCKET, DRIVE(14T)	1	1	-	-----	L1, L1/A, LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LT, LT/A, LTJ, LW, LW/A, LWD, LWD1, LWD1/A, LX, LX/A, LX16, LXE, LXE/A, LX8, LX8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ
5	23710-ZE2-610	SHAFT, P.T.O.(28T)	1	1	-	-----	L1, L1/A, LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LT, LT/A, LTJ, LW, LW/A, LWD, LWD1, LWD1/A, LX, LX/A, LX16, LXE, LXE/A, LX8, LX8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ
	23710-ZK2-800		1	-	-	-----	LT, LT/A
6	90473-842-000	WASHER, 8MM	1	1	-	-----	L1, L1/A, LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LT, LT/A, LTJ, LW, LW/A, LWD, LWD1, LWD1/A, LX, LX/A, LX16, LXE, LXE/A, LX8, LX8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ
7	90534-706-010	WASHER, LOCK, 8.5X35X4.5	1	-	-	-----	LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LTJ, LWD1, LWD1/A
	90471-ZE3-000	WASHER, 10.5X40X4	1	-	-	-----	LT, LT/A
	90534-706-010	WASHER, LOCK, 8.5X35X4.5	-	(1)	-	-----	L1, L1/A

E-26-1


REDUCTION(1/2)

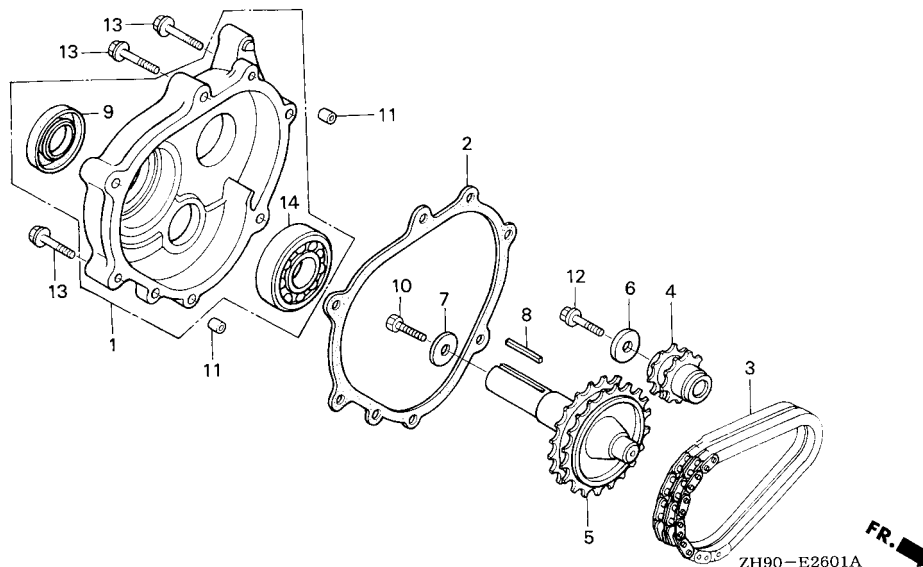

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
8	90741-889-810	KEY, 7X7X33(YELLOW)(O.S.).....	(1)	(1)	-	-----	L1, L1/A, LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LTJ, LW, LW/A, LWD, LWD1, LWD1/A, LX, LX/A, LX16, LXE, LXE/A, LXE8, LXE8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ
	90741-805-000	KEY, 7X7X33.....	1	-	-	-----	LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LTJ, LW, LW/A, LWD, LWD1, LWD1/A, LX, LX/A, LX16, LXE, LXE/A, LXE8, LXE8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ
	90745-ZK2-800	KEY, 6.3X6.3X33.....	1	-	-	-----	LT, LT/A
	90741-805-000	KEY, 7X7X33.....	-	(1)	-	-----	L1, L1/A
9	91201-890-003	OIL SEAL, 30X46X8.....	1	-	-	-----	LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LT, LT/A, LTJ, LW, LW/A, LWD, LWD1, LWD1/A, LX, LX/A, LX16, LXE, LXE/A, LXE8, LXE8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ
			-	(1)	-	-----	L1, L1/A
10	92000-08025-0A	BOLT, HEX., 8X25.....	1	-	-	-----	LJ
	92101-08025-0A		1	-	-	-----	LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LTJ, LWD1, LWD1/A
	95701-08025-00	BOLT, FLANGE, 8X25.....	1	-	-	-----	LWD
	92000-08025-0A	BOLT, HEX., 8X25.....	-	(1)	-	-----	L1
			-	(1)	-	-----	2437805 L1/A
	92101-08025-0A		-	(1)	-	-----	2437806 L1/A
11	94301-08140	DOWEL PIN, 8X14.....	2	2	-	-----	L1, L1/A, LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LT, LT/A, LTJ, LW, LW/A, LWD, LWD1, LWD1/A, LX, LX/A, LX16, LXE, LXE/A, LXE8, LXE8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ
12	95900-08025-00	BOLT, FLANGE, 8X25.....	1	1	-	-----	L1, LH, LHE, LJ, LW, LX, LXU, LXZ
	95701-08025-00		1	1	-	-----	L1/A, LH/A, LHB1, LHB3, LHB5, LHE/A, LHQ4, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LT, LT/A, LTJ, LW/A, LWD, LWD1, LWD1/A, LX/A, LX16, LXE, LXE/A, LXE8, LXE8/A, LXQ4, LXQ4/A, LXU/A
13	95900-08040-00	BOLT, FLANGE, 8X40.....	6	6	-	-----	L1, LH, LHE, LJ, LW, LX, LXU, LXZ

E-26-1


REDUCTION(1/2)

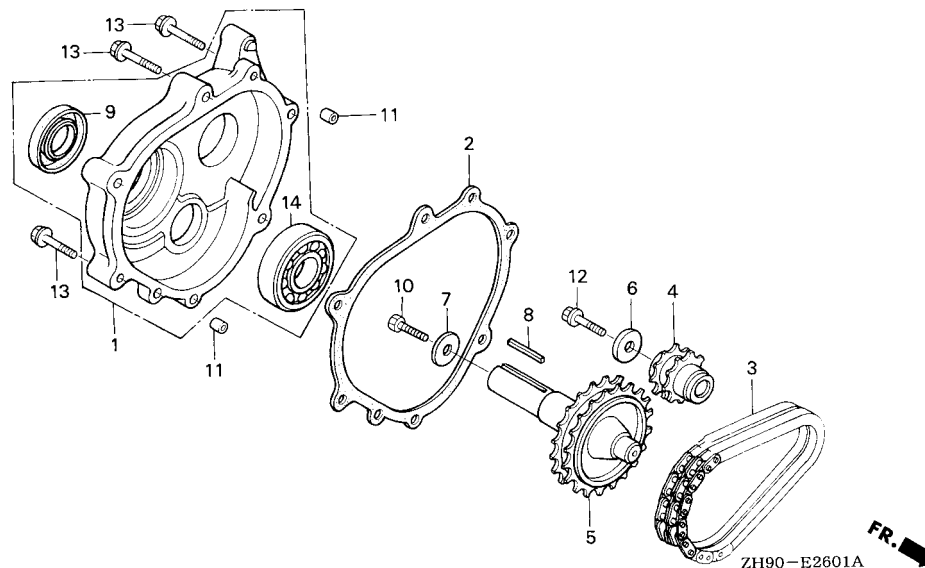

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
13)	95701-08040-00	BOLT, FLANGE, 8X40.....	6	6	-	-----	L1/A, LH/A, LHB1, LHB3, LHB5, LHE/A, LHQ4, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS LT, LT/A, LTJ, LW/A, LWD, LWD1, LWD1/A, LX/A, LX16, LXE, LXE/A, LXE8, LXE8/A LXQ4, LXQ4/A, LXU/A
14	96100-62060-00	BEARING, RADIAL BALL, 6206...	1	1	-	-----	L1, L1/A, LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LHQ4, LJ, LJ/A, LJC, LJC/A LJG, LJG/A, LSS, LT, LT/A, LTJ, LW, LW/A, LWD, LWD1, LWD1/A, LX, LX/A, LX16 LXE, LXE/A, LXE8, LXE8/A, LXQ4, LXQ4/A, LXU, LXU/A, LXZ

E-26-2

REDUCTION(1/6)

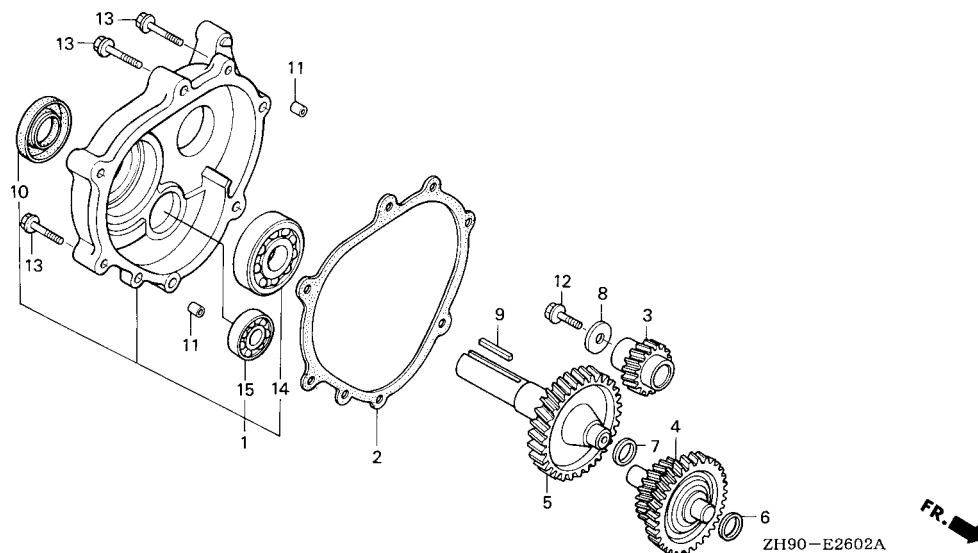

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	2141W8	(2) REDUCTION COVER AND/OR PACKING (H-TYPE)	0.2
3	2141L2	GEAR, PRIMARY DRIVE	0.2
4	2141Z9	COUNTERSHAFT, REDUCTION (H-TYPE)	0.2
5	2141V9	SHAFT, POWER TAKE OFF(H-TYPE)	0.2
10	2141X5	OIL SEAL, POWER TAKE OFF SHAFT (H-TYPE) :REAR	0.3
14	2141Y0	BEARING, POWER TAKE OFF SHAFT (H-TYPE) :REAR	0.4
15	2101U4	BEARING, COUNTERSHAFT :REAR ..	0.4

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
1	11500-ZE2-620	COVER ASSY., REDUCTION CASE..	1	-	1	-----	HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, HH, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A
2	11521-ZE2-800	PACKING, CHAIN CASE COVER....	1	-	1	-----	HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, HH, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A
3	22103-ZE2-620	GEAR, PRIMARY DRIVE(17T).....	1	-	1	-----	HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, HH, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A
4	23220-ZE2-621	COUNTERSHAFT COMP.(18T/40T) ..	1	-	1	-----	HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, HH, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A
5	23710-ZE2-621	SHAFT, P.T.O.(46T)	1	-	1	-----	HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, HH, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A
6	90401-ZE2-620	SHIM A	N	-	N	-----	HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, HH, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A
7	90402-ZE2-620	SHIM B	N	-	N	-----	HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, HH, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A
8	90473-842-000	WASHER, 8MM	1	-	1	-----	HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, HH, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A
9	90745-ZE2-600	KEY, 6.3X6.3X43	1	-	1	-----	HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, HH, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A
	90745-ZE2-G00	KEY, 6.3X6.3X63	-	-	1	-----	HAP
10	91201-890-003	OIL SEAL, 30X46X8	1	-	1	-----	HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, HH, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A
11	94301-08140	DOWEL PIN, 8X14	2	-	2	-----	HA, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, HH, HX, HX/A, HX26, HX26/A, HX8, HX8/A, HXQ4, HXQ4/A
12	95701-08025-00	BOLT, FLANGE, 8X25	1	-	1	-----	HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, HX/A, HX26, HX26/A, HX8/A, HXQ4, HXQ4/A
	95900-08025-00		1	-	-	-----	HA, HH, HX, HX8


REDUCTION(1/6)



2

E-28

LABEL(1)

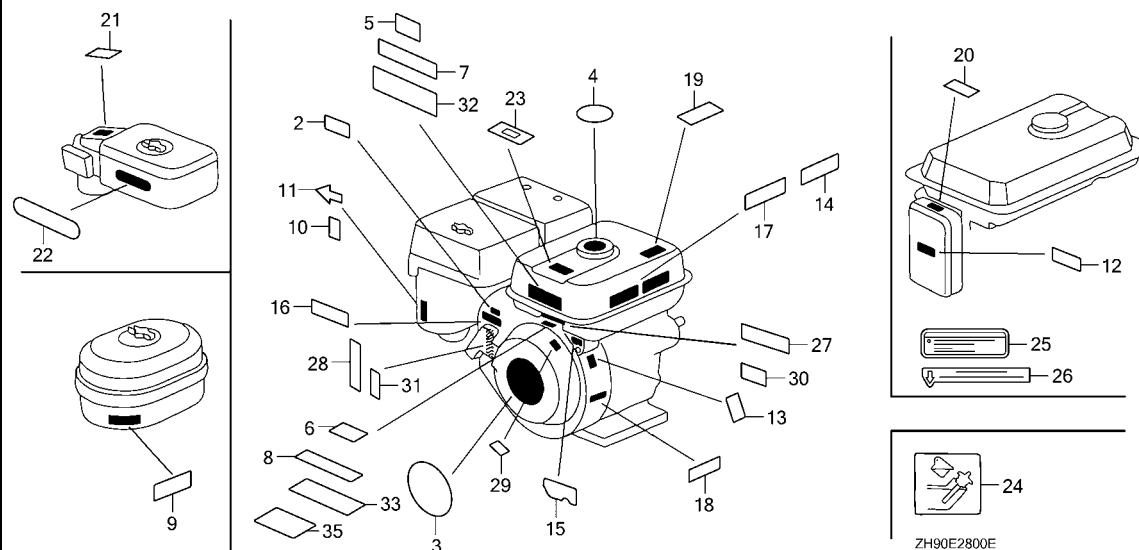

Ref. L.O.N. (Relative ref. Number)
No. Description F.R.T.

NO INFORMATION


Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
2	87124-ZV3-010	MARK, EMERGENCY SWITCH	-	-	1		
3	87521-ZH9-010	EMBLEM INDICATION	1	-	1	-----	HAP, HAQ, HEA, LHB1, LHB3, LHQ4, LX16, QAB1, QAQ, QL2, QSC, QWA2, RXP, SKE1 SMD, SX2, VAW1, VD16, VDE, VEB6, VW22, VWA, VX26, VXB2, VXB6, VXG, VXP, VXQP VXTB
	87521-ZH9-020	EMBLEM(GX270 9.0)	1	-	-	-----	LHQ4, LX16, QKE3, QKE3/A, QKE4, QWA2, QXB7, SXB7, VAG2, VD16, VEB6, VPX7 VS37, VSD7, VX26, VXB6, VXB7, VXE7
	87521-ZH9-040	EMBLEM(GX270)	1	-	-	-----	RA3
	87521-ZH9-030	EMBLEM(GX270 9.0)	1	-	-	-----	SMX2, SWA4, VKE4, VKX4, VMA4, VME4, VMS2, VMX2, VPE5, VPX5, VSH7, WMA4
	87521-ZH9-810	EMBLEM(EXTERNAL)	1	-	-	-----	1033679 HA, HH, HX, LH, LHE, LW, LX, LXZ, PA, PX, QA, QAE, QD, QE, QH, QHC, QHE, QP, QX, QXB QXC, QXE, QXEB, RA, RD, RH, RHE, RX, SD, SE, SH, SHE, SHEZ, SW, SWE, SX, SXB, SXE SXEB, VA, VAW, VH, VNG1, VSD, VX, VXB, VXE, VXE8
	87521-ZH9-010	EMBLEM	1	-	-	-----	1812277 ES1, ES3, HA2, HEA2, HEA8, HX26, HX8, HXQ4, LT, LXE, LXE8, LXQ4, LXU, PA2, PAE2 PX26, PXE8, PXU, QA2, QAB3, QAE2, QAE6, QAG, QAG2, QQA4, QAR2, QAW, QH26, QHE4 QHP1, QHQ4, QHR, QHR4, QHZ, QME2, QMH, QSC9, QSE, QSE8, QT, QWA4, QWH2, QX26 QXB6, QXC4, QXC6, QXC9, QXE4, QXE6, QXE8, QXQ4, QXU, RA2, RH26, RHE4, RHQ4 RSC2, RXQ4, RXU, SHQ4, SMC4, SME1, SME6, SN, SWC4, SXE4, SXE8, SXQ4, SXU, VA2 VDE2, VKB2, VM2, VME2, VMT, VN17, VNT2, VPE4, VPE7, VPX4, VSD3, VW12, VWA2 VWN2, VWT4, VXE4, VXE6, VXQ4, VXT1, VXU, VXU1, WMT8, WXE8

LABEL(1)

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	GX270 (2)	(3)		
(3)	87521-ZH9-020	EMBLEM(GX270 9.0)	1	-	-	-----	2082940 ES1/A, ES3/A, HA2/A, HEA2/A, HEA8/A, HX/A, HX26/A, HX8/A, HXQ4/A, LH/A, LHB5, LHE/A, LT/A, LW/A, LX/A, LX/A, LX/E/A, LXQ4/A, LXU/A, PA2/A, PAE2/A, PX/A, PX26/A, PXE8/A, PXU/A, QA2/A, QAB3/A, QAE2/A, QAE6/A, QAG/A, QAG2/A, QAQ4/A, QAR2/A, QAW/A, QD/A, QE/A, QH/A, QH26/A, QHB5, QHE4/A, QHP1/A, QHQ4/A, QHR/A, QHR4/A, QHZ/A, QME2/A, QMH/A, QP/A, QSC9/A, QSE/A, QSE2, QSE8/A, QT/A, QWA4/A, QWH2/A, QX/A, QX26/A, QXB/A, QXB6/A, QXB7/A, QXC4/A, QXC6/A, QXC9/A, QXE/A, QXE4/A, QXE6/A, QXE8/A, QXQ4/A, QXU/A, RA2/A, RD/A, RH26/A, RHE4/A, RHQ4/A, RSC2/A, RX/A, RXQ4/A, RXU/A, SD/A, SE/A, SH/A, SHQ4/A, SMC4/A, SME1/A, SME6/A, SN/A, SWC4/A, SX/A, SXB/A, SXB7/A, SXE/A, SXE4/A, SXE8/A, SXEB/A, SXQ4/A, SXU/A, VA2/A, VAG2/A, VDE2/A, VKB2/A, VM2/A, VME2/A, VMT/A, VN17/A, VNG1/A, VNT2/A, VPE4/A, VPE7/A, VPX4/A, VPX7/A, VS37/A, VSD/A, VSD3/A, VSD7/A, VW12/A, VWA2/A, VWN2/A, VWT4/A, VX/A, VXB/A, VXB7/A, VXE4/A, VXE6/A, VXE7/A, VXE8/A, VXE9/A, VXQ4/A, VXT1/A, VXU/A, VXU1/A, WMT8/A, WXE8/A
	87521-ZH9-030		1	-	-	-----	2437806 QXE9, QXK, VKK, VPK, VS3, VXE8, VXX
	87521-ZH9-010	EMBLEM	1	-	-	-----	1033680 HA, HH, LZ, PA, QA, QAE, QHC, QHE, QXC, QXEB, RA, RH, RHE, SHE, SHEZ, SW, SWE, VA, VAW, VH, VXE
			1	-	-	-----	1033680 1812277 HX, LH, LHE, LW, LX, PX, QD, QE, QH, QP, QX, QXB, QXE, RD, RX, SD, SE, SH, SX, SXB, SXE, SXEB, VNG1, VSD, VX, VXB, VXEB
	87521-ZH9-020	EMBLEM(GX270 9.0)	1	-	-	-----	1812278 ES1, ES3, HA2, HEA2, HEA8, HX, HX26, HX8, HXQ4, LH, LHE, LT, LW, LX, LX/E, LX/E8, LXQ4, LXU, PA2, PAE2, PX, PX26, PXE8, PXU, QA2, QAB3, QAE2, QAE6, QAG, QAG2, QAQ4, QAR2, QAW, QD, QE, QH, QH26, QHE4, QHP1, QHQ4, QHR, QHR4, QHZ, QME2, QMH, QP, QSC9, QSE, QSE8, QT, QWA4, QWH2, QX, QX26, QXB, QXB6, QXC4, QXC6, QXC9, QXE, QXE4, QXE6, QXE8, QXQ4, QXU, RA2, RD, RH26, RHE4, RHQ4, RSC2, RX, RXQ4, RXU, SD, SE, SH, SHQ4, SMC4, SME1, SME6, SN, SWC4, SX, SXB, SXE, SXE4, SXE8, SXEB, SXQ4, SXU, VA2, VDE2, VKB2, VM2, VME2, VMT, VN17, VNG1, VNT2, VPE4, VPE7, VPX4, VSD, VSD3, VW12, VWA2, VWN2, VWT4, VX, VXB, VXE4, VXE6, VXE8, VXQ4, VXT1, VXU, VXU1, WMT8, WXE8
	87521-ZH9-030		1	-	-	-----	2082941 HA2/A, HEA2/A, HEA8/A, HX26/A, HX8/A, HXQ4/A, LX/E8/A, LXQ4/A, LXU/A, PA2/A, PAE2/A, PX26/A, PXE8/A, PXU/A, QA2/A, QAE2/A, QAE6/A, QAG/A, QAG2/A, QAQ4/A, QAR2/A, QAW/A, QE/A, QH26/A, QHE4/A, QHQ4/A, QHR/A, QHR4/A, QME2/A, QSC9/A, QSE2, QSE8/A, QWA4/A, QWH2/A, QX26/A, QXB/A, QXB6/A, QXB7/A, QXC4/A, QXC6/A, QXC9/A, QXE4/A, QXE6/A, QXE8/A, QXQ4/A, QXU/A, RA2/A, RH26/A, RHE4/A, RHQ4/A, RSC2/A, RXQ4/A, RXU/A, SE/A, SHQ4/A, SMC4/A, SME1/A, SME6/A, SWC4/A, SXB/A, SXB7/A, SXE4/A, SXE8/A, SXEB/A, SXQ4/A, SXU/A, VA2/A, VAG2/A, VDE2/A, VKB2/A, VM2/A, VME2/A, VN17/A, VNG1/A, VNT2/A, VPE4/A, VPE7/A, VPX4/A, VPX7/A, VS37/A, VSD/A, VSD3/A, VSD7/A, VW12/A, VWA2/A, VWN2/A, VWT4/A, VXB/A, VXB7/A, VXE4/A, VXE6/A, VXE7/A, VXE8/A, VXQ4/A, VXU1/A
	87521-ZH9-040	EMBLEM(GX270)	1	-	-	-----	2437806 ES1/A, ES3/A, HX/A, LH/A, LHB5, LHE/A, LT/A, LW/A, LX/A, LX/E/A, PX/A, QAB3/A, QD/A, QH/A, QHB5, QHP1/A, QHZ/A, QMH/A, QP/A, QSE/A, QT/A, QX/A, QXE/A, RD/A, RX/A, SD/A, SH/A, SN/A, SX/A, SXE/A, VMT/A, VX/A, VXT1/A, VXU/A, WMT8/A, WXE8/A
	87521-ZH9-040	EMBLEM(GX270)	1	-	-	-----	2437807 ES1/A, ES3/A, HX/A, LH/A, LHB5, LHE/A, LT/A, LW/A, LX/A, LX/E/A, PX/A, QAB3/A, QD/A, QH/A, QHB5, QHP1/A, QHZ/A, QMH/A, QP/A, QSE/A, QT/A, QX/A, QXE/A, QXE9, QXK, RD/A, RX/A, SD/A, SH/A, SN/A, SX/A, SXE/A, VKK, VMT/A, VPK, VS3, VX/A, VXE8, VXX, VXT1/A, VXU/A, WMT8/A, WXE8/A
	87521-ZH9-020	EMBLEM(GX270 9.0)	-	(1)	-	-----	L1/A, R1/A
	87521-ZH9-010	EMBLEM	-	(1)	-	-----	Q1/A, W1/A
	87521-ZH9-810	EMBLEM(EXTERNAL)	-	(1)	-	-----	1033679 L1, Q1, R1, V1, W1
	87521-ZH9-010	EMBLEM	-	(1)	-	-----	1033680 Q1, Q2, V1, W1
			-	(1)	-	-----	1812277 L1, R1
	87521-ZH9-020	EMBLEM(GX270 9.0)	-	(1)	-	-----	1812278 L1, R1
			-	-	1	-----	1100008 HAP/A, RXP/A, VXP/A
	87521-ZH9-030		-	-	1	-----	HAP/A, RXP/A, VXP/A

E-28

LABEL(1)

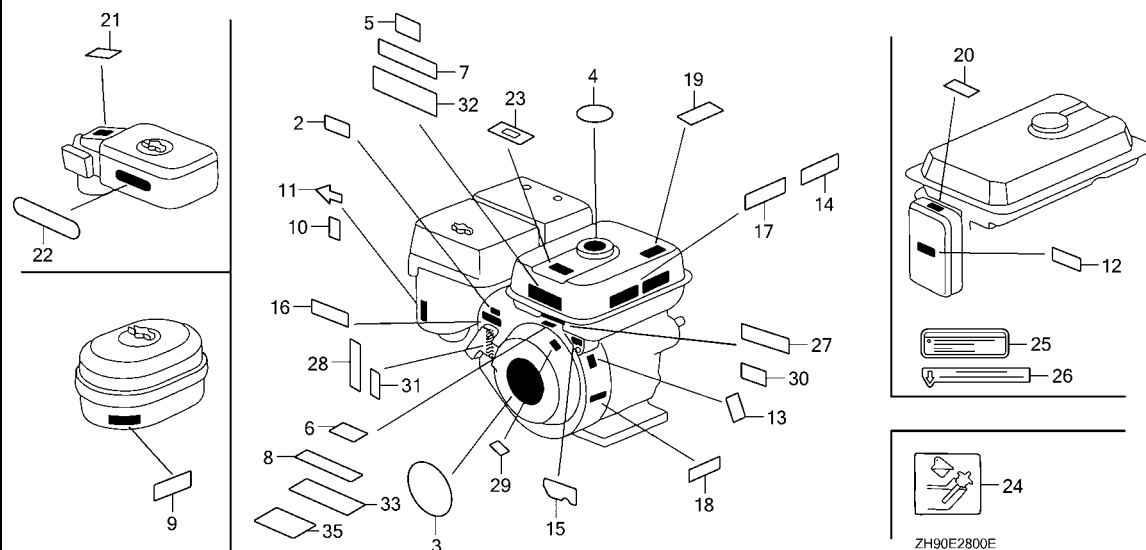

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
4	87522-ZE1-810	MARK, CAUTION	1	-	-	-----	LHB1, LHB3, LT, LT/A, QAB1, QAB3, QAB3/A, QT, QT/A, VXG
			1	-	-	1056014	VSD3
			1	-	-	1090815	HA, HA2, HAQ, HEA, HH, HX, LH, LHE, LW, LX, LXZ, PA, PA2, PX, QA, QA2, QAE, QAE2, QAQ, QD, QE, QH, QHC, QHE, QP, QSC, QX, QXB, QXC, QXE, QXEB, RA, RA2, RD, RH, RHE, RX, SD, SE, SH, SHE, SHEZ, SN, SW, SWE, SX, SXB, SXE, SXEB, VA, VA2, VH, VSD, VX, VXB, VXE, VXEB, VXU
5	87522-ZH8-W40	MARK, CAUTION(PICTOGRAPH)	-	(1)	-	-----	1090815 L1, Q1, Q2, R1, V1, W1
			1	-	-	-----	HXQ4, LHQ4, LXQ4, QAQ4, QHE4, QHQ4, QHR, QHR4, QME2, QWA4, QXB7, QXC4, QXE4, QXQ4, RHE4, RHQ4, RXQ4, SHQ4, SMC4, SME1, SME6, SWC4, SXB7, SXE4, SXQ4, VD16, VEB6, VSD7, VXB7, VXE4, VXE7, VXQ4, VXTB
	87522-ZH8-W41		1	-	-	-----	SWA4, WMA4
	87522-ZH8-W40		1	-	-	2155985	HXQ4/A, LXQ4/A, QAQ4/A, QE/A, QHE4/A, QHQ4/A, QHR/A, QHR4/A, QKE4, QME2/A, QWA4/A, QXB/A, QXB7/A, QXC4/A, QXE4/A, QXQ4/A, RHE4/A, RHQ4/A, RXQ4/A, SE/A, SHQ4/A, SMC4/A, SME1/A, SME6/A, SWC4/A, SXB/A, SXB7/A, SXE4/A, SXEB/A, SXQ4/A, VSD/A, VSD7/A, VSH7, VXB/A, VXB7/A, VXE4/A, VXE7/A, VXEB/A, VXQ4/A
			1	-	-	1110061	QE, QXB, SE, SXB, SXEB, VSD, VXB, VXEB, VXG
	87522-ZH8-W41		1	-	-	2155986	HXQ4/A, LXQ4/A, QAQ4/A, QE/A, QHE4/A, QHQ4/A, QHR/A, QHR4/A, QKE4, QME2/A, QWA4/A, QXB/A, QXB7/A, QXC4/A, QXE4/A, QXQ4/A, RHE4/A, RHQ4/A, RXQ4/A, SE/A, SHQ4/A, SMC4/A, SME1/A, SME6/A, SWC4/A, SXB/A, SXB7/A, SXE4/A, SXEB/A, SXQ4/A, VSD/A, VSD7/A, VSH7, VXB/A, VXB7/A, VXE4/A, VXE7/A, VXEB/A, VXQ4/A
6	87522-ZH8-W40	MARK, CAUTION(PICTOGRAPH)	1	-	1	-----	QKE3, VXQP
	87522-ZH8-W41		1	-	-	-----	SWA4
	87522-ZH8-W40		1	-	-	2155985	QKE3/A
	87522-ZH8-W41		1	-	-	2155986	QKE3/A


E-28

LABEL(1)

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
7	87522-ZH9-010	LABEL, CAUTION(ENGLISH, ETC.)	1	-	1	-----	ES1, ES1/A, HA2, HA2/A, HAP, HAP/A, HEA2, HEA2/A, HEA8, HEA8/A, HX, HX/A, HX26, HX26/A, HX8, HX8/A, LH, LH/A, LHB5, LHE, LHE/A, LW, LW/A, LX, LX/A, LX8, LX8/A, LX8, LX8/A, LXU, LXU/A, PA2, PA2/A, PAE2, PAE2/A, PX, PX/A, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, QA2, QAB3, QAB3/A, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAR2, QAR2/A, QAW, QD, QD/A, QH, QH/A, QH26, QH26/A, QHB5, QHP1, QHP1/A, QHZ, QHZ/A, QKE4, QMH, QMH/A, QP, QP/A, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QWA4, QWA4/A, QWH2, QWH2/A, QX, QX/A, QX26, QX26/A, QXB6, QXB6/A, QXC6, QXC6/A, QXC9, QXE, QXE/A, QXE6, QXE6/A, QXE8, QXE8/A, QXU, QXU/A, RA2, RA2/A, RD, RD/A, RH26, RH26/A, RX, RX/A, RXU, RXU/A, SD, SD/A, SH, SH/A, SMX2, SN, SN/A, SWC4, SWC4/A, SX, SX/A, SXE, SXE/A, SXE8, SXE8/A, SXU, SXU/A, VA2, VA2/A, VKB2, VKB2/A, VM2, VM2/A, VME2, VME2/A, VMS2, VMX2, VX, VX/A, VXE6, VXE6/A, VXU, VXU/A, VXU1, VXU1/A, WMT8, WMT8/A, WXE8, WXE8/A
	87522-ZH9-000		1	-	-	-----	HA, HAQ, HEA, HH, LHB1, LHB3, LX16, LXZ, PA, QA, QAB1, QAE, QAQ, QHC, QHE, QL2, QSC, QWA2, QXC, QXE8, RA, RH, RHE, SHE, SHEZ, SKE1, SMD, SW, SWE, SX2, VA, VD16, VEB6, VH, VW22, VX26, VXB2, VXB6, VXE
	87522-ZH9-820	LABEL, CAUTION(THAI)	1	-	-	-----	LT, QT
	87522-ZH9-000	LABEL, CAUTION(ENGLISH, ETC.)	1	-	-	-----	1056014 VSD3
			1	-	-	-----	1110060 QE, QXB, SE, SXB, SXEB, VSD, VXB, VXEB, VXG
	87522-ZH9-820	LABEL, CAUTION(THAI)	1	-	-	-----	2204588 LT/A, QT/A
	87522-ZH9-010	LABEL, CAUTION(ENGLISH, ETC.)	1	-	-	-----	2375749 QA2/A, QAW/A, QXC9/A
	87522-ZH9-821	LABEL, CAUTION(THAI)	1	-	-	-----	2204589 LT/A, QT/A
	87522-ZH9-000	LABEL, CAUTION(ENGLISH, ETC.)	-	(1)	-	-----	L1, L1/A, Q1, Q1/A, Q2, R1, R1/A, V1, W1, W1/A
8	87522-ZH9-010	LABEL, CAUTION(ENGLISH, ETC.)	1	-	1	-----	RXP, RXP/A, VMS2, VMX2, VXP, VXP/A, VXT1, VXT1/A
	87522-ZH9-000		-	-	1	-----	VXQP
9	87524-883-690	MARK, AIR CLEANER CAUTION (OIL BATH)(ARABIC)	1	-	-	-----	LT, LT/A, LW, LW/A, QP, QP/A, QT, QT/A, SW, SWE
10	87528-ZE2-810	MARK, CHOKE(ORANGE)	1	-	-	-----	ES1, ES1/A, HA, HA2, HA2/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, HH, HX, HX/A, HX26, HX26/A, HX8, HX8/A, LH, LH/A, LHB1, LHB3, LHB5, LHE, LHE/A, LW, LW/A, LX, LX/A, LX16, LX16, LX8, LX8/A, LXU, LXU/A, LXZ, PA, PA2, PA2/A, PAE2, PAE2/A, PX, PX/A, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, QA, QA2, QAB1, QAB3, QAB3/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAQ, QAR2, QAR2/A, QAW, QD, QD/A, QH, QH/A, QH26, QH26/A, QHB5, QHC, QHE, QHP1, QHP1/A, QHZ, QHZ/A, QKE4, QL2, QMH, QMH/A, QP, QP/A, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX, QX/A, QX26, QX26/A, QXB6, QXB6/A, QXC, QXC6, QXC6/A, QXC9, QXE, QXE/A, QXE6, QXE6/A, QXE8, QXE8/A, QXE9, QXE9, QXU, QXU/A, RA, RA2, RA2/A, RD, RD/A, RH, RH26, RH26/A, RHE, RSC2, RSC2/A, RX, RX/A, RXU, RXU/A, SD, SD/A, SH, SH/A, SHE, SHEZ, SMD, SMX2, SN, SN/A, SW, SWC4/A, SWE, SX, SX/A, SX2, SXE, SXE/A, SXE8, SXE8/A, SXU, SXU/A, VA, VA2, VA2/A, VAG2, VAG2/A, VAW, VAW1, VD16, VDE, VDE2, VDE2/A, VH, VKB2, VKB2/A, VM2, VM2/A, VME2, VME2/A, VNT2, VNT2/A, VW12, VW12/A, VW22, VWA, VWA2, VWA2/A, VWN2, VWN2/A, VX, VX/A, VX26, VXB2, VXB6, VXE, VXE6, VXE6/A, VXX, VXT1, VXT1/A, VXU, VXU/A, VXU1, VXU1/A, WMT8, WMT8/A, WXE8, WXE8/A
	87528-ZF6-W40	MARK, CHOKE(BLACK)	1	-	-	-----	HXQ4/A, LXQ4/A, QAQ4/A, QE/A, QHE4/A, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QKE3, QKE3/A, QKE4, QME2/A, QWA4, QWA4/A, QXB/A, QXB7/A, QXC4, QXC4/A, QXE4/A, QXQ4/A, RHE4/A, RHQ4/A, RXQ4/A, SE/A, SHQ4/A, SMC4/A, SME1/A, SME6/A, SWA4, SWC4, SWC4/A, SXB/A, SXB7, SXB7/A, SXE4/A, SXEB/A, SXQ4/A, VD16, VEB6, VMA4, VME4, VN17, VN17/A, VNG1/A, VSD/A, VSD7, VSD7/A, VSH7, VXB/A, VXB7, VXB7/A, VXE4/A, VXE7, VXE7/A, VXEB/A, VXQ4/A, VXTB, WMA4
	87528-ZE1-690	MARK, CHOKE(THAI)	1	-	-	-----	LT, LT/A, QT, QT/A
	87528-ZH7-000	MARK, CHOKE(GRAY)	1	-	-	-----	QXK, RA3, VXE8
	87528-ZE2-810	MARK, CHOKE(ORANGE)	1	-	-	-----	1110060 QE, QXB, SE, SXB, SXEB, VNG1, VSD, VXB, VXEB, VXG
			1	-	-	-----	2375749 QA2/A, QAW/A, QXC9/A
	87528-ZF6-W40	MARK, CHOKE(BLACK)	1	-	-	-----	QE, QXB, SE, SXB, SXEB, VNG1, VSD, VXB, VXEB, VXG
	87528-ZE2-810	MARK, CHOKE(ORANGE)	1	-	-	-----	SWC4
			-	(1)	-	-----	L1, L1/A, Q1, Q1/A, Q2, R1, R1/A, V1, W1, W1/A

E-28

LABEL(1)

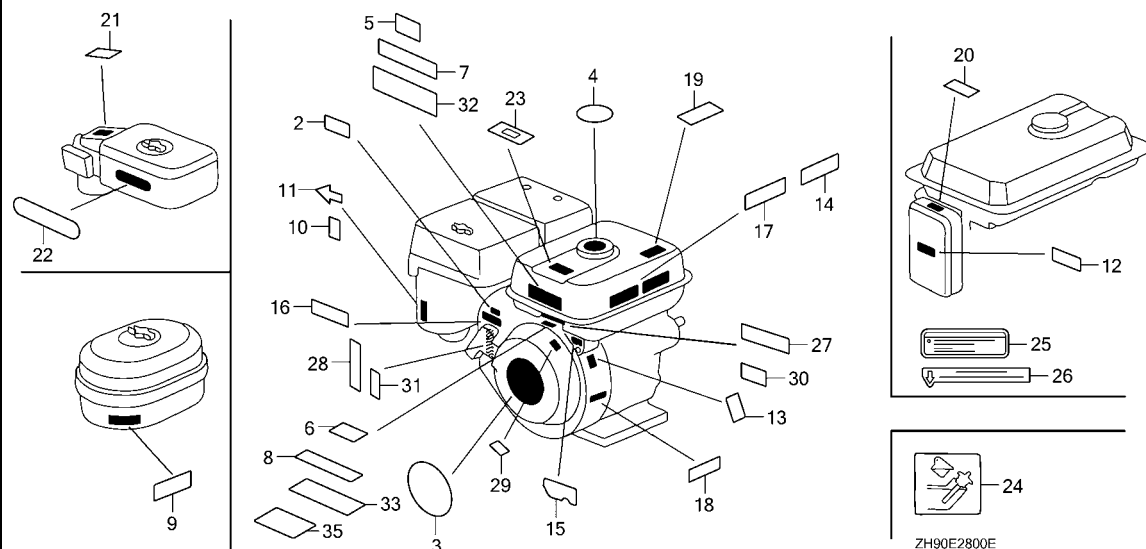

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
11	87528-883-661	MARK, CHOKE	-	-	1		
12	87528-898-620	MARK, CHOKE	1	-	-	-----	ES3, ES3/A, VKE4, VKK, VKX4, VMS2, VMT, VMT/A, VMX2, VPE4, VPE4/A, VPE5, VPE7, VPE7/A, VPK, VPX4, VPX4/A, VPX5, VPX7, VPX7/A, VS37, VS37/A, VSD3/A
13	87530-ZH9-810	LABEL, SPECIFICATION(EXTERNAL)	1	-	-	1056015	VSD3
			1	-	-	1053286	HA, HAQ, HEA, PA, QA, QAE, QAQ, QXC, RA, VA, VAW, VWA, HH, HX, LH, LHE, LW, LX, LXZ, PX, QD, QE, QH, QHC, QHE, QP, QX, QXB, QXE, QXEB, RD, RH, RHE, RX, SD, SE, SH, SHE, SHEZ, SW, SWE, SX, SXB, SXE, SXEB, VH, VNG1, VSD, VSD3, VX, VXB, VXE, VXEB
14	87532-ZB4-H50	MARK, OIL ALERT(FRENCH)	-	(1)	-	1053286	L1, Q1, Q2, R1, V1, W1
			1	-	-	-----	HEA2, HX26, HX26/A, HX8, LX16, LXE, LXE8, LXU, PX26, PX26/A, PXU, QAE6, QAE6/A, QAR2, QX26, QX26/A, QXB6, QXB6/A, QXC6, QXC6/A, QXE6, QXE6/A, QXE8, QXU, RSC2, RXU, SX2, SXE8, SXU, VAW1, VD16, VDE, VEB6, VW12, VWN2, VX26, VXB2, VXB6, VXU, VXU1
	87532-ZB4-G60	MARK, OIL ALERT(GERMAN)	1	-	-	-----	HEA2, HX26, HX8, LX16, LXE, LXE8, LXU, PX26, PXU, QAE6, QAR2, QX26, QXE6, QXE8, QXU, RSC2, RXU, SX2, SXE8, SXU, VAW1, VDE, VW12, VWN2, VX26, VXB2, VXB6, VXG, VXU, VXU1
	87532-ZB4-H50	MARK, OIL ALERT(FRENCH)	1	-	-	1106273	VXG
	87532-ZB4-G60	MARK, OIL ALERT(GERMAN)	1	-	-	1055455	HA, HA2, HAQ, HEA, HX, LX, LXZ, PA, PX, QA, QA2, QAE, QAE2, QAQ, QX, QXB, QXE, QXEB, RA, RX, SX, SXB, SXE, SXEB, VA, VAW, VNG1, VSD, VSD3, VX, VXB, VXE, VXEB
	87532-ZB4-H50	MARK, OIL ALERT(FRENCH)	1	-	-	1055455	HA, HA2, HAQ, HEA, HX, LX, LXZ, PA, PX, QA, QA2, QAE, QAE2, QAQ, QX, QXE, QXEB, RA, RX, SX, SXE, VA, VAW, VX, VXE
			1	-	-	1055455	1106273 QXB, SXB, SXEB, VNG1, VSD, VXB, VXEB
			1	-	-	1055455	1119302 VSD3
	87532-ZB4-G60	MARK, OIL ALERT(GERMAN)	-	(1)	-	-----	L1/A, Q1/A, R1/A, W1/A
	87532-ZB4-H50	MARK, OIL ALERT(FRENCH)	-	(1)	-	-----	L1/A, R1/A
	87532-ZB4-G60	MARK, OIL ALERT(GERMAN)	-	(1)	-	1055455	L1, Q1, Q2, R1, V1, W1
	87532-ZB4-H50	MARK, OIL ALERT(FRENCH)	-	(1)	-	1055455	L1, R1
			-	(1)	-	1055455	1177486 Q1, Q2, V1, W1


E-28

LABEL(1)

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
15	87532-ZE1-810	MARK, OIL ALERT(EXTERNAL).....	1	-	-	1033679	HA, HX, LX, LXZ, PA, PX, QA, QX, QXB, QXC, RA, RX, SX, SXB, VA, VAW, VNG1, VSD, VX
	87532-ZH9-V00	MARK, ENGINE SWITCH(SDMO).....	1	-	-	1056015	VXB VSD3
	87532-ZE1-810	MARK, OIL ALERT(EXTERNAL).....	-	(1)	-	1033679	L1, Q1, Q2, R1, V1, W1
16	87532-ZH8-W40	MARK, THROTTLE INDICATION.....	1	-	1		HAP, HAP/A, HXQ4, HXQ4/A, LHQ4, LXQ4, LXQ4/A, QAQ4, QAQ4/A, QE/A, QHE4 QHE4/A, QHQ4, QHQ4/A, QHR, QHR/A, QHR4, QHR4/A, QKE3, QKE3/A, QKE4, QME2 QME2/A, QWA4, QWA4/A, QXB/A, QXB7, QXB7/A, QXC4, QXC4/A, QXE4, QXE4/A, QXQ4 QXQ4/A, RHE4, RHE4/A, RHQ4, RHQ4/A, RXP, RXP/A, RXQ4, RXQ4/A, SE/A, SHQ4 SHQ4/A, SMC4, SMC4/A, SME1, SME1/A, SME6, SME6/A, SWA4, SWC4, SWC4/A, SXB/A SXB7, SXB7/A, SXE4, SXE4/A, SXEB/A, SXQ4, SXQ4/A, VD16, VEB6, VN17, VN17/A VNG1/A, VXB/A, VXB7, VXB7/A, VXE4, VXE4/A, VXE7, VXE7/A, VXEB/A, VXP, VXP/A VXQ4, VXQ4/A, VXQP, VXTB, WMA4 QXK, RA3, VMA4, VME4, VXE8 QE, QXB, SE, SXB, SXEB, VNG1, VXB, VXEB
	87532-ZH7-000		1	-	-		
	87532-ZH8-W40		1	-	-	1110061	
			1	-	-	1110061	1116416
			1	-	-	2375750	VSD, VSD3, VXG
17	87532-ZH8-810	MARK, OIL ALERT(ENGLISH).....	1	-	1		QA2/A, QAW/A, QXC9/A ES1, HA2, HA2/A, HAP, HAP/A, HAQ, HEA, HEA2, HEA2/A, HEA8, HEA8/A, HX26 HX26/A, HX8, HX8/A, LX16, LX16/A, LX16, LX16/A, LXU, LXU/A, PA2, PA2/A PAE2, PAE2/A, PX26, PX26/A, PXE8, PXE8/A, PXU, PXU/A, QA2, QAB1, QAB3 QAB3/A, QAE, QAE2, QAE2/A, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAQ, QAR2 QAR2/A, QAW, QKE4, QL2, QSC, QSC9, QSC9/A, QSE, QSE/A, QSE2, QSE8, QSE8/A QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QX26, QX26/A, QXB6, QXB6/A, QXC6, QXC6/A QXC9, QXE6, QXE6/A, QXE8, QXE8/A, QXU, QXU/A, RA2, RA2/A, RSC2, RSC2/A, RXU RXU/A, SMD, SMX2, SWC4/A, SX2, SXE8, SXE8/A, SXU, SXU/A, VA2, VA2/A, VAW1 VD16, VDE, VDE2, VDE2/A, VEB6, VKB2, VKB2/A, VM2, VM2/A, VME2, VME2/A, VNT2 VNT2/A, VW12, VW12/A, VW22, VWN2, VWN2/A, VX26, VXB2, VXB6, VXE6, VXE6/A VXU, VXU1, VXU1/A, WMT8, WMT8/A, WXE8, WXE8/A 1106273 VSD3, VXG 2373000 QA2/A, QAW/A, QXC9/A 2459526 ES1/A, HX/A, LX/A, PX/A, QX/A, QXE/A, RX/A, SX/A, SXE/A, VX/A, VXU/A 1033680 HA, HX, LX, LXZ, PA, PX, QA, QX, QXC, QXE, QXEB, RA, RX, SX, SXE, VA, VAW, VX, VXE 1106273 QXB, SXB, SXEB, VNG1, VSD, VXB, VXEB 1340170 SWC4 2459527 ES1/A, HX/A, LX/A, PX/A, QX/A, QXE/A, RX/A, SX/A, SXE/A, VX/A, VXU/A Q2, W1/A 2459526 L1/A, Q1/A, R1/A 1033680 L1, Q1, R1, V1, W1 2459527 L1/A, Q1/A, R1/A, S1/A RXP, RXP/A, VAG2, VAG2/A, VMS2, VMX2, VXP, VXP/A, VXT1, VXT1/A VS37 VS37/A, VSD3/A VSD3 1119303 1056015 1106273 VSD3
	87530-ZL8-850		1	-	-		
	87532-ZH8-810		-	(1)	-		
			-	(1)	-	2459526	
			-	(1)	-	1033680	
			-	(1)	-	2459527	
18	87530-ZL8-850		-	(1)	-		
18	87532-ZH8-810	MARK, OIL ALERT(ENGLISH).....	1	-	1		
19	87532-ZH9-W40	MARK, ENGINE SWITCH(EC).....	1	-	-		
	87532-ZH9-W41	MARK, ENGINE SWITCH.....	1	-	-		
	87532-ZH9-W40	MARK, ENGINE SWITCH(EC).....	1	-	-	1119303	
20	87533-ZA7-650	MARK, AIR CLEANER(FRENCH).....	1	-	-	1056015	1106273 VSD3
21	87534-ZE1-841	LABEL, AIR CLEANER CAUTION...	1	-	-		QHC, QSC, QSC9, QSC9/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QXC, QXC6, QXC6/A QXC9, QXC9/A
22	87535-ZE1-840	MARK, AIR CLEANER SALES POINT	1	-	-		QHC, QSC, QSC9, QSC9/A, QWA2, QWA4, QWA4/A, QWH2, QWH2/A, QXC, QXC4, QXC4/A QXC6, QXC6/A, QXC9, QXC9/A
	87535-ZE1-841		1	-	-		QXK, VMA4, VME4
	87535-ZE1-840		-	(1)	-		
23	87565-ZE2-810	MARK, FUEL INDICATION(ENGLISH)	1	-	-		QKE3, QKE3/A, QKE4, QSC, QSC9, QSC9/A
	87565-ZE2-A01	MARK, FUEL INDICATION (PICTOGRAPH)	1	-	-	1123181	VXG
	87565-ZE2-810	MARK, FUEL INDICATION(ENGLISH)	1	-	-	1123182	VXG
24	87594-ZB4-A00	MARK, OIL CAUTION.....	1	-	-		L1, L1/A, Q1, Q1/A, Q2, R1, R1/A, V1, W1, W1/A ES1, ES1/A

E-28


LABEL(1)

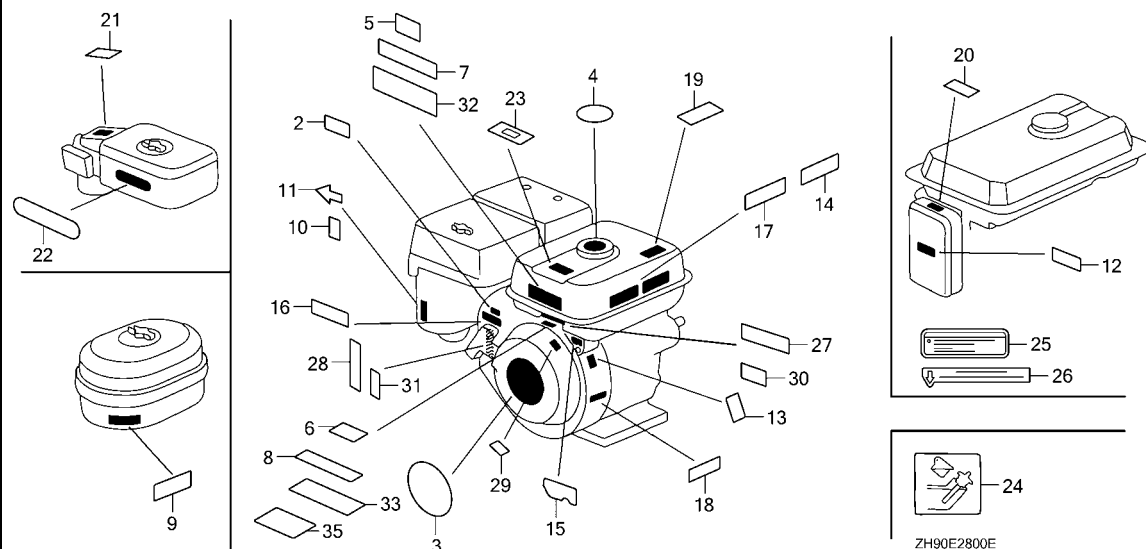

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
25	87533-ZC0-630	MARK, AIR CLEANER(ENGLISH)...	1	-	-	-----	ES3,ES3/A,VMT,VMT/A
26	87539-898-620	MARK, EX. CAUTION (ENGLISH/FRENCH)	1	-	-	-----	ES3,ES3/A,VMT,VMT/A
27	87135-ZE2-000	LABEL, E-SPEC(HONDA) (EPA STANDARD)(15.5X60.0)	1	1	-	1703189	----- ES1,HX,HX8,L1,LH,LHE,LT,LW,LX,LXE,LXE8,LXU,PX,PXE8,PXU,Q1,QAB3,QD QE,QH,QHP1,QHR,QHR4,QHZ,QKE3,QMH,QP,QSE,QSE8,QX,QXB,QXE,QXE8,QXU R1,RD,RX,RXU,S1,SD,SE,SH,SMC4,SME1,SME6,SX,SXB,SXE,SXE8,SXEB,SXU VSD,VX,VXB,VXEB,VXTB,VXU,VXU1,WMT8,WXE8
	87135-ZE2-010	LABEL, E-SPEC(EPA STANDARD) (15.5X60.0)	1	-	-	-----	----- QKE4,QSE2,QXB7,SXB7,VPX7,VS37,VSD7,VXB7,VXE7
	87135-ZE2-000	LABEL, E-SPEC(HONDA) (EPA STANDARD)(15.5X60.0)	1	-	-	1703189	1841642 HXQ4,LXQ4,QAQ4,QHE4,QHQ4,QME2,QXC4,QXE4,QXQ4,RHE4,RHQ4,RXQ4,SHQ4 SXE4,SXQ4,VXE4,VXQ4
	87135-ZE2-010	LABEL, E-SPEC(EPA STANDARD) (15.5X60.0)	1	-	-	1841643	----- HXQ4,LXQ4,QAQ4,QHE4,QHQ4,QME2,QXC4,QXE4,QXQ4,RHQ4,RXQ4,SHQ4,SXE4 SXQ4,VXE4,VXQ4
28	87135-ZE2-020	LABEL, E-SPEC(15.5X27.5).....	1	-	-	-----	----- SWA4
	87135-ZE2-000	LABEL, E-SPEC(HONDA) (EPA STANDARD)(15.5X60.0)	1	-	-	-----	1841642 VN17,VPE7
	87135-ZE2-020	LABEL, E-SPEC(15.5X27.5).....	1	-	-	-----	2297651 VKE4,VKX4,VN17/A,VNG1/A,VPE4/A,VPE7/A,VPX4/A,VSD3/A,VMT4/A
	87135-ZE2-000	LABEL, E-SPEC(HONDA) (EPA STANDARD)(15.5X60.0)	1	-	-	-----	2406429 ES3/A,VMT/A,VS3,VXT1/A
	87135-ZE2-020	LABEL, E-SPEC(15.5X27.5).....	1	-	-	1703189	----- ES3,QKE4,QSE2,SKE1,VMT,VNG1,VPE4,VPX4,VSD3,VMT4,VXT1
29	87106-ZE9-V00	LABEL, FUEL CAUTION.....	-	-	1	-----	----- VN17,VPE7 HAP,HAP/A

E-28




LABEL(1)

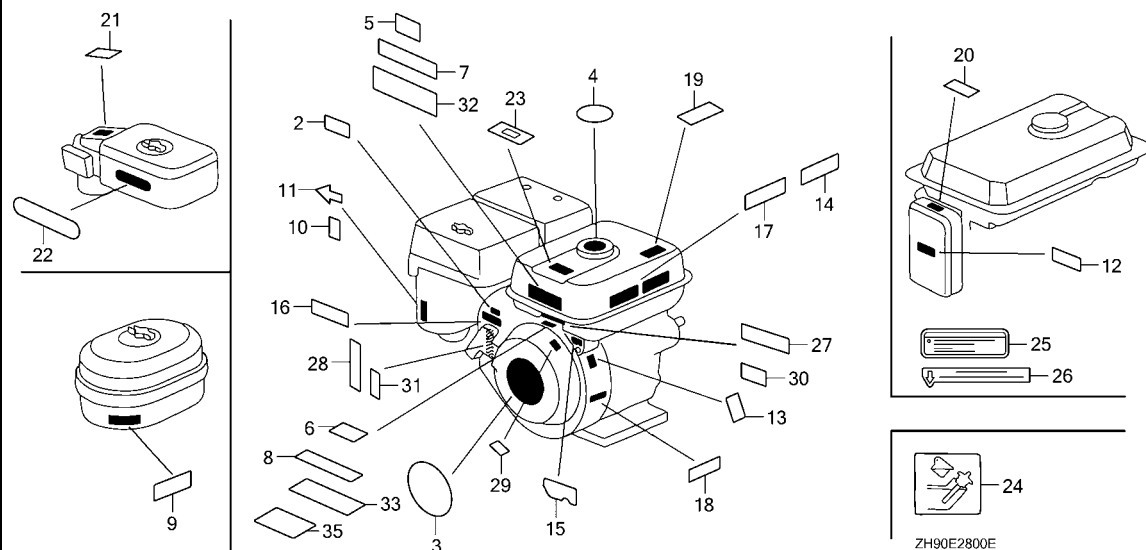

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
30	87135-ZE2-020	LABEL, E-SPEC(15.5X27.5).....	1	1	-	-----	L1,R1,S1,SME1,SWA4
			1	1	-	-----	2406429 ES1/A, ESS/A, HX/A, HX8/A, L1/A, LH/A, LHB5, LHE/A, LJ/A, LJC/A, LJG/A, LT/A, LW/A, LWD1/A, LX/A, LXE/A, LXE8/A, LXU/A, PX/A, PXE8/A, PXU/A, Q1/A, QAB3/A, QD/A, QH/A, QHB5, QHP1/A, QHZ/A, QMH/A, QP/A, QSE/A, QSE8/A, QX/A, QXE/A, QXE8/A, QXU/A, R1/A, RD/A, RSS/A, RX/A, RXU/A, S1/A, SD/A, SH/A, SJ/A, SJG/A, SX/A, SXE/A, SXE8/A, SXU/A, VX/A, VXU/A, VXU1/A, W1/A, WMT8/A, WXE8/A, HXQ4/A, LXQ4/A, QAQ4/A, QE/A, QHE4/A, QHQ4/A, QHR/A, QHR4/A, QKE3/A, QME2/A, QXB/A, QXB7/A, QXC4/A, QXE4/A, QXQ4/A, RHE4/A, RHQ4/A, RXQ4/A, SE/A, SHQ4/A, SMC4/A, SME1/A, SME6/A, SXB/A, SXB7/A, SXE4/A, SXEB/A, SXQ4/A, VPX7/A, VS37/A, VSD/A, VSD7/A, VSH7, VXB/A, VXB7/A, VXE4/A, VXE7/A, VXE8/A, VXQ4/A
			1	-	-	-----	2297651
			1	-	-	1841643	----- RHE4
			-	-	1	1100192	----- RXP/A, VXP/A
31	87114-ZH7-000	LABEL, WARNING (NOT CERTIFIED FOR SALE)	1	1	-	2359274	----- HX/A, L1/A, LHB5, LJ/A, LJC/A, LJG/A, LT/A, LWD1/A, LX/A, PX/A, Q1/A, QAB3/A, QD/A, QHB5, QHP1/A, QHZ/A, QMH/A, QP/A, QT/A, QX/A, QXE/A, R1/A, RD/A, RSS/A, RX/A, S1/A, SD/A, SJG/A, SN/A, SX/A, SXE/A, VMT/A, VX/A, VXT1/A, W1/A, ES4, QXE9, QXK, RA3, VKK, VPK, VS4, VS5, VXE8, VXK
			1	-	-	2397962	----- VS3
			1	-	-	2401383	----- ES1/A, ES3/A, ESS/A, LH/A, LHE/A, LW/A, LXE/A, QH/A, QSE/A, SH/A, SJ/A, VXU/A, WMT8/A, WXE8/A
			1	-	-	-----	QXE9, QXK, VXE8, VXK
			1	-	-	-----	VKK, VPK, VS4
32	87516-ZM7-801	MARK, OPERATOR CAUTION.....	1	-	-	-----	ES4, RA3, VS5
33	87516-ZM7-801	MARK, OPERATOR CAUTION.....	1	-	-	-----	
35	87516-Z0D-800	MARK, OPERATOR CAUTION.....	1	-	-	-----	

E-28-1

LABEL(2)

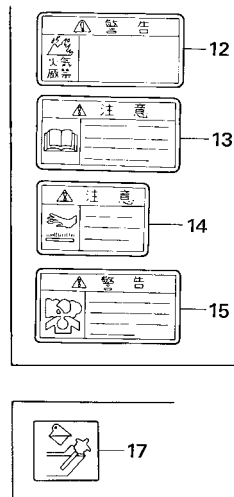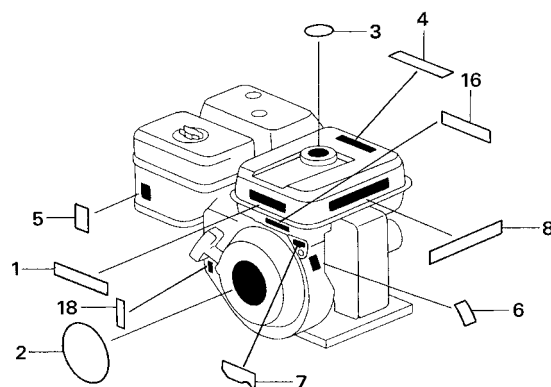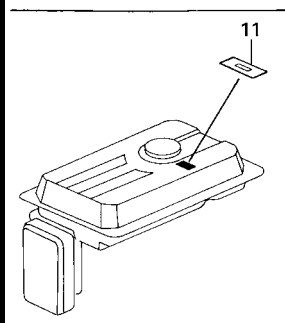

ZH90-E2801

Ref. L.O.N. (Relative ref. Number) F.R.T.
No. Description

NO INFORMATION

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
1	87520-ZH8-000	MARK A, COMBINATION(JAPANESE)	1	-	-	-----	LJ/A, LJC, LJC/A, LJG/A, LWD1, LWD1/A, RSS, RSS/A, SJ/A, SJG/A
			1	-	-	1143651	LJG, LSS, LTJ, LWD, SJ, SJG, SJP, SK
			1	-	-	1164474	LJ
			-	(1)	-	-----	L1/A, Q1/A, R1/A, S1/A, W1/A
			-	(1)	-	1143651	L1, Q1, R1, S1, V1, W1
2	87521-ZH9-020	EMBLEM(GX270 9.0)	1	-	-	-----	ESS/A, LJ/A, LJC/A, LJG/A, RSS/A, SJ/A, SJG/A
	87521-ZH9-010	EMBLEM	1	-	-	-----	LJC, LJG, LSS, LTJ, RSS, SJG
	87521-ZH9-000	EMBLEM(INTERNAL)	1	-	-	1033679	LJ, SJ, SJP, SK
	87521-ZH9-010	EMBLEM	1	-	-	1033680	LJ, SJ, SJP, SK
	87521-ZH9-020	EMBLEM(GX270 9.0)	-	(1)	-	-----	L1/A, R1/A
	87521-ZH9-010	EMBLEM	-	(1)	-	-----	Q1/A, S1/A, W1/A
	87521-ZH9-000	EMBLEM(INTERNAL)	-	(1)	-	1033679	L1, Q1, R1, S1, V1, W1
	87521-ZH9-010	EMBLEM	-	(1)	-	1033680	L1, Q1, R1, S1, V1, W1
3	87522-ZE1-010	LABEL, FUEL WARNING	1	-	-	1054062	LJ, LWD, SJ, SK
	87522-ZE1-810	MARK, CAUTION	1	-	-	1090815	LTJ
			1	-	-	1054063	1090815 LJ, LWD, SJ, SK
	87522-ZE1-010	LABEL, FUEL WARNING	-	(1)	-	1054062	L1, Q1, R1, S1, V1, W1
	87522-ZE1-810	MARK, CAUTION	-	(1)	-	1090815	L1, Q1, S1, V1, W1
4	87526-ZH8-000	MARK B, COMBINATION(JAPANESE)	1	-	-	-----	LJ/A, LJC, LJC/A, LJG/A, LWD1, LWD1/A, RSS, RSS/A, SJ/A, SJG/A
			1	-	-	1143651	LJG, LSS, LTJ, LWD, SJ, SJG, SJP, SK
			1	-	-	1164474	LJ
			-	(1)	-	-----	L1/A, Q1/A, R1/A, S1/A, W1/A
			-	(1)	-	1143651	L1, Q1, R1, S1, V1, W1
5	87528-ZE2-810	MARK, CHOKE(ORANGE)	1	-	-	-----	LJ/A, LJC, LJC/A, LJG, LJG/A, LTJ, LWD1, LWD1/A, RSS, RSS/A, SJ/A, SJG, SJG/A
	87528-ZE2-000	MARK, CHOKE(INTERNAL)	1	-	-	1053286	LJ, LWD, SJ, SJP, SK
	87528-ZE2-810	MARK, CHOKE(ORANGE)	1	-	-	1053287	LJ, LWD, SJ, SJP, SK
	87528-ZE2-000	MARK, CHOKE(INTERNAL)	-	(1)	-	1053286	L1, Q1, R1, S1, V1, W1
6	87530-ZH9-841	LABEL, SPECIFICATION	1	-	-	-----	LJ, LJ/A, LJC, LJC/A, LWD1, LWD1/A

E-28-1


LABEL(2)

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
(6)	87530-ZH9-840	LABEL, SPECIFICATION (INTERNAL/L-TYPE)	1	-	-	-----	LJG, LSS, LTJ
	87530-ZH9-000	LABEL, SPECIFICATION(INTERNAL)	1	-	-	-----	SJ, SJG, SJP, SK
	87530-ZH9-840	LABEL, SPECIFICATION (INTERNAL/L-TYPE)	1	-	-	-----	2035958 LJG/A
	87530-ZH9-841	LABEL, SPECIFICATION.....	1	-	-	2035959	LJG/A
			-	(1)	-	-----	L1, L1/A
	87530-ZH9-000	LABEL, SPECIFICATION(INTERNAL)	-	(1)	-	-----	Q1, Q1/A, V1, W1, W1/A
	87530-ZH9-010	LABEL, SPECIFICATION.....	-	(1)	-	-----	R1/A, S1/A
	87530-ZH9-000	LABEL, SPECIFICATION(INTERNAL)	-	(1)	-	2019729	R1, S1
	87530-ZH9-010	LABEL, SPECIFICATION.....	-	(1)	-	2019730	R1, S1
7	87532-ZE1-000	MARK, OIL ALERT(INTERNAL)....	1	-	-	-----	1033679 SJP
			-	(1)	-	-----	1033679 L1, Q1, R1, S1, V1, W1
8	87532-ZH8-000	MARK, OIL ALERT.....	1	1	-	-----	LJC, LJC/A, W1/A
			1	1	-	1033680	L1, Q1, R1, S1, SJP, V1, W1
	87532-ZB4-G60	MARK, OIL ALERT(GERMAN).....	-	(1)	-	-----	L1/A, Q1/A, R1/A, S1/A, W1/A
	87532-ZB4-H50	MARK, OIL ALERT(FRENCH).....	-	(1)	-	-----	L1/A, R1/A
	87532-ZH8-000	MARK, OIL ALERT.....	-	1	-	2459526	L1/A, Q1/A, R1/A, S1/A
	87532-ZB4-G60	MARK, OIL ALERT(GERMAN).....	-	(1)	-	1055455	L1, Q1, R1, S1, V1, W1
	87532-ZB4-H50	MARK, OIL ALERT(FRENCH).....	-	(1)	-	1055455	L1, R1
			-	(1)	-	1055455 1177486	Q1, S1, V1, W1
	87530-ZL8-810	MARK, OIL ALERT.....	-	1	-	2459527	L1/A, Q1/A, R1/A, S1/A
11	87565-ZB4-A00	PLATE, FUEL INDICATION.....	1	-	-	-----	ESS, ESS/A
	87565-ZE2-000	MARK, FUEL INDICATION (JAPANESE)	1	-	-	-----	LJ, LJG, LJG/A, LSS, LTJ, LWD1, LWD1/A, SJ, SJG, SJG/A, SK
	87565-ZE2-A01	MARK, FUEL INDICATION (PICTOGRAPH)	1	-	-	1054063	LWD
	87565-ZE2-000	MARK, FUEL INDICATION (JAPANESE)	-	(1)	-	-----	L1, L1/A, Q1, Q1/A, R1, R1/A, S1, S1/A, V1, W1, W1/A
12	87561-733-J00	MARK, EX. GAS WARNING.....	1	-	-	-----	ESS, ESS/A
13	87106-737-J00	MARK, FUEL WARNING.....	1	-	-	-----	ESS, ESS/A
14	87150-ZH8-000	MARK, CAUTION(JAPANESE).....	1	-	-	-----	ESS, ESS/A
15	87539-737-J00	MARK, HEAT CAUTION.....	1	-	-	-----	ESS, ESS/A
16	87135-ZE2-010	LABEL, E-SPEC(EPA STANDARD) (15.5X60.0)	1	1	-	-----	L1/A, LJ/A, LJC/A, LJG/A, LWD1/A, Q1/A, R1/A, S1/A, SJ/A, SJG/A
	87135-ZE2-000	LABEL, E-SPEC(HONDA) (EPA STANDARD)(15.5X60.0)	1	1	-	1703189	L1, LJ, LJC, LJG, LWD, LWD1, Q1, R1, RSS, S1, SJ, SJG
	87135-ZE2-020	LABEL, E-SPEC(15.5X27.5).....	1	-	-	2406429	RSS/A
17	87594-ZB4-A00	MARK, OIL CAUTION.....	1	-	-	-----	ESS, ESS/A
18	87135-ZE2-010	LABEL, E-SPEC(EPA STANDARD) (15.5X60.0)	1	-	-	-----	ESS/A
	87135-ZE2-000	LABEL, E-SPEC(HONDA) (EPA STANDARD)(15.5X60.0)	1	-	-	1703189	ESS

2

E-29

TOOL(1)

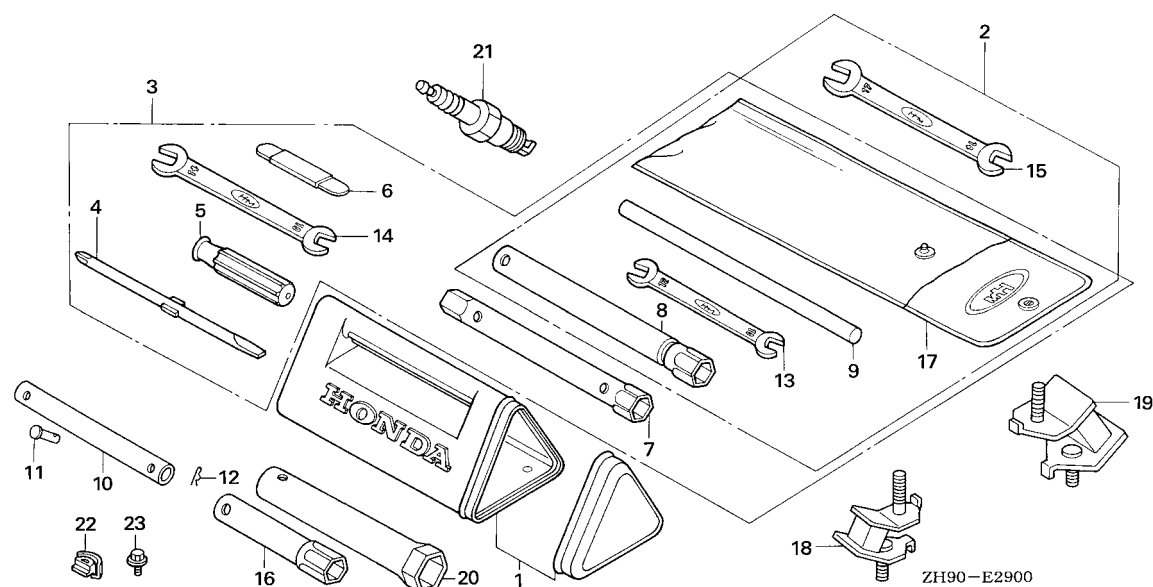


Ref. L.O.N. (Relative ref. Number)
No. Description F.R.T.

NO INFORMATION

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
1	83501-ZF1-000	BOX, TOOL	1	-	-	-	LHB3, LT, LT/A, LW, LW/A, QAB3, QAB3/A, QHZ, QHZ/A, QT, QT/A, SW, SWE
2	89000-ZE1-000	TOOL KIT	1	-	-	1264036	QP
			1	-	-	1264037	QHP1, QHP1/A, QMH, QMH/A, QP/A, WMA4, WMT8, WMT8/A, WXE8, WXE8/A
			-	(1)	-	-	QP
3	89001-ZF1-000	BAG SET, TOOL	1	-	-	-	LHB3, LT, LT/A, LW, LW/A, QAB3, QAB3/A, QHZ, QHZ/A, QT, QT/A, SW, SWE
			1	-	-	1264036	QP
4	89102-538-000	DRIVER, SCREW(NO.2 + -)	1	-	-	-	LHB3, LT, LT/A, LW, LW/A, QAB3, QAB3/A, QHZ, QHZ/A, QT, QT/A, SW, SWE
			1	-	-	1264036	QP
5	89103-538-000	GRIP	1	-	-	-	LHB3, LT, LT/A, LW, LW/A, QAB3, QAB3/A, QHZ, QHZ/A, QT, QT/A, SW, SWE
			1	-	-	1264036	QP
6	89210-ZF1-000	GAUGE ASSY., THICKNESS	1	-	-	-	LHB3, LT, LT/A, LW, LW/A, QAB3, QAB3/A, QHZ, QHZ/A, QT, QT/A, SW, SWE
			1	-	-	1264036	QP
7	89216-ZF1-000	WRENCH, BOX	1	-	-	-	LHB3, LT, LT/A, LW, LW/A, QAB3, QAB3/A, QHZ, QHZ/A, QT, QT/A, SW, SWE
			1	-	-	1264036	QP
8	89218-ZE1-000	WRENCH COMP., SPARK PLUG	(1)	(1)	(1)	-	HAP, HAP/A, HEA2, HEA2/A, HEA8, HEA8/A, L1, L1/A, PAE2, PAE2/A, Q1, Q1/A, Q2, QAB1, QAE6, QAE6/A, QAG, QAG/A, QAG2, QAG2/A, QAQ4, QAQ4/A, QAR2, QAR2/A, QAW, QAW/A, QL2, QX26, QX26/A, R1, R1/A, RA3, RSC2, RSC2/A, S1, S1/A, SE, SE/A, SKE1, V1, VAG2, VAG2/A, VAW1, VKB2, VKB2/A, VM2, VM2/A, VME2, VME2/A, VN17, VN17/A, VNT2, VNT2/A, VW12, VW12/A, VW22, VWA2, VWA2/A, VWN2, VWN2/A, W1, W1/A
			1	-	-	-	ES1, ES1/A, HA2, HA2/A, HAQ, LHB3, LT, LT/A, LW, LW/A, PA2, PA2/A, QA2, QA2/A, QAB3, QAB3/A, QAE2, QAE2/A, QAQ, QE, QE/A, QHP1, QHP1/A, QHZ, QHZ/A, QMH, QMH/A, QP, QP/A, QSC, QSC9, QSC9/A, QT, QT/A, RA2, RA2/A, SMC4, SMC4/A, SMX2, SW, SWE, VA2, VA2/A, VDE, VDE2, VDE2/A, VKE4, VKE4/A, VKE4, VKE4/A, VNG1, VNG1/A, WMA4, WMT8, WMT8/A, WXE8, WXE8/A
			1	-	-	3181387	HA, HEA, PA, QA, QAE, RA, VA, VAW, VWA
			(1)	-	-	3181388	HA, HEA, PA, QA, QAE, RA, VA, VAW, VWA

E-29


TOOL(1)

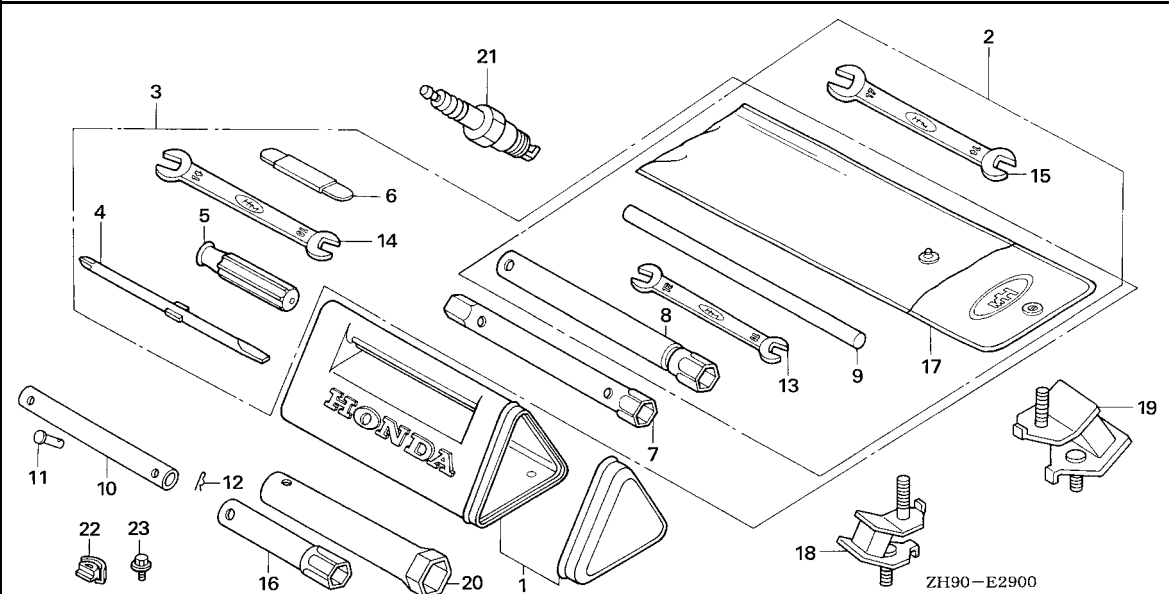

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
9	89219-805-000	HANDLE, BOX WRENCH.....	1	-	-	-----	LHB3, LT, LT/A, LW, LW/A, QAB3, QAB3/A, QHP1, QHP1/A, QHZ, QHZ/A, QMH, QMH/A, QP, QP/A, QT, QT/A, SW, SWE, WMA4, WMT8, WMT8/A, WXE8, WXE8/A
10	89220-ZE2-000	PIPE, BOX WRENCH EXTENSION...	-	(1)	-	-----	
11	90755-758-L00	PIN, ROLLER ARM, 8X22.....	-	(1)	-	-----	
12	94252-08000	PIN, LOCK, 8MM.....	-	(1)	-	-----	
13	99001-10120	SPANNER, 10X12.....	1	-	-	-----	LHB3, LT, LT/A, LW, LW/A, QAB3, QAB3/A, QHP1, QHP1/A, QHZ, QHZ/A, QMH, QMH/A, QP, QP/A, QT, QT/A, SW, SWE, WMA4, WMT8, WMT8/A, WXE8, WXE8/A
14	99001-10140	SPANNER, 10X14.....	1	-	-	-----	LHB3, LT, LT/A, LW, LW/A, QAB3, QAB3/A, QHZ, QHZ/A, QT, QT/A, SW, SWE
15	99001-14170	SPANNER, 14X17.....	1	-	-	-----	1264036 QP
			1	-	-	-----	QHP1, QHP1/A, QMH, QMH/A, QP/A, WMA4, WMT8, WMT8/A, WXE8, WXE8/A
			1	-	-	-----	1264037 QP
			-	(1)	-	-----	
16	99004-21003	WRENCH, BOX(P21).....	-	(1)	-	-----	
17	99008-02300	BAG, TOOL, 230MM.....	1	-	-	-----	LHB3, LT, LT/A, LW, LW/A, QAB3, QAB3/A, QHP1, QHP1/A, QHZ, QHZ/A, QMH, QMH/A, QP, QP/A, QT, QT/A, SW, SWE, WMA4, WMT8, WMT8/A, WXE8, WXE8/A
			-	(1)	-	-----	
18	68325-ZB4-000	RUBBER, BOTTOM.....	2	-	-	-----	ES1, ES1/A, ES3, ES3/A, ES4, VS3, VS4, VS5
19	68325-899-000	RUBBER, BOTTOM.....	2	-	-	-----	ES1, ES1/A, ES3, ES3/A, ES4, VS3, VS4, VS5
20	89216-ZB4-000	WRENCH, PLUG.....	1	-	-	-----	ES3, ES3/A, ES4, VMT, VMT/A, VS3, VS4, VS5
21	98079-56841	PLUG, SPARK(BP6ES)(NGK).....	1	-	-	-----	ES3, ES3/A, ES4
	98079-55846	PLUG, SPARK(BPR5ES)(NGK).....	1	-	-	-----	VS3, VS5
			(1)	-	-	-----	VS4
22	90855-ZB4-000	GROMMET, CRANKCASE.....	1	-	-	-----	VMT, VMT/A
23	95701-06010-00	BOLT, FLANGE, 6X10.....	8	-	-	-----	VMT, VMT/A

E-29-1

TOOL(2)

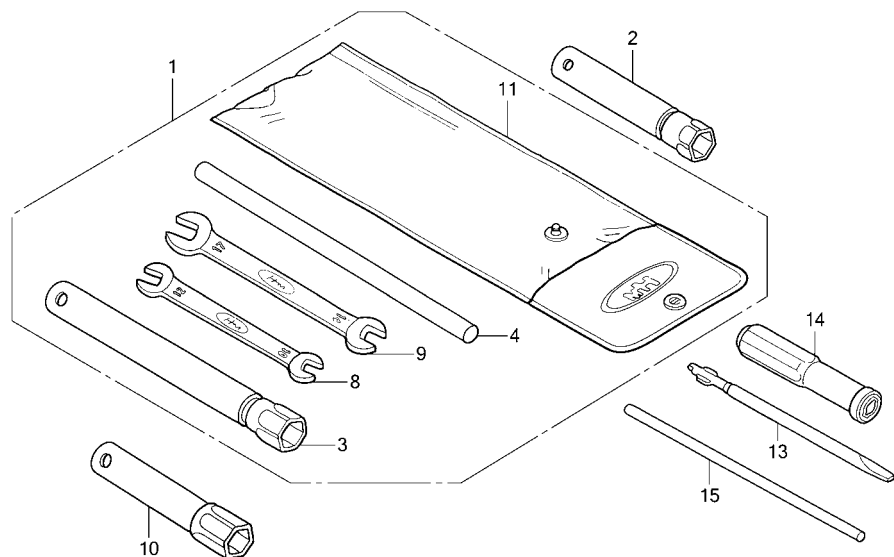

ZH90E2901A


Ref. No. L.O.N. (Relative ref. Number) Description F.R.T.

NO INFORMATION

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
1	89000-ZE1-000	TOOL KIT.....	1	-	-	-----	LWD1, LWD1/A
2	89216-809-000	WRENCH COMP., SPARK PLUG.....	1	-	-	-----	SJP
3	89218-ZE1-000	WRENCH COMP., SPARK PLUG.....	1	-	-	-----	LJ, LJ/A, LJC, LJC/A, LJG, LJG/A, LSS, LTJ, LWD1, LWD1/A, SJ, SJ/A, SJG, SJG/A
							SK
			(1)	-	-	-----	RSS, RSS/A
4	89219-805-000	HANDLE, BOX WRENCH.....	1	-	-	-----	LWD1, LWD1/A
8	99001-10120	SPANNER, 10X12.....	1	-	-	-----	ESS/A, LHB5, LWD1, LWD1/A, QHB5
			1	-	-	1274337	ESS
9	99001-14170	SPANNER, 14X17.....	1	-	-	-----	LWD1, LWD1/A
10	99004-21003	WRENCH, BOX(P21).....	1	-	-	-----	ESS/A, LHB5, QHB5
			1	-	-	1274337	ESS
11	99008-02000	BAG, TOOL, 200MM.....	1	-	-	-----	ESS/A, LHB5, QHB5
	99008-02300	BAG, TOOL, 230MM.....	1	-	-	-----	LWD1, LWD1/A
	99008-02000	BAG, TOOL, 200MM.....	1	-	-	1274337	ESS
13	99003-30000	DRIVER 3, MINUS SCREW(NO.2) ..	1	-	-	-----	ESS/A, LHB5, QHB5
			1	-	-	1274337	ESS
14	99003-50000	GRIP, SCREW DRIVER.....	1	-	-	-----	ESS/A, LHB5, QHB5
			1	-	-	1274337	ESS
15	99005-01000	BAR A, HANDLE.....	1	-	-	-----	ESS/A, LHB5, QHB5
			1	-	-	1274337	ESS

E-40

OTHER PARTS(FUEL TANK)

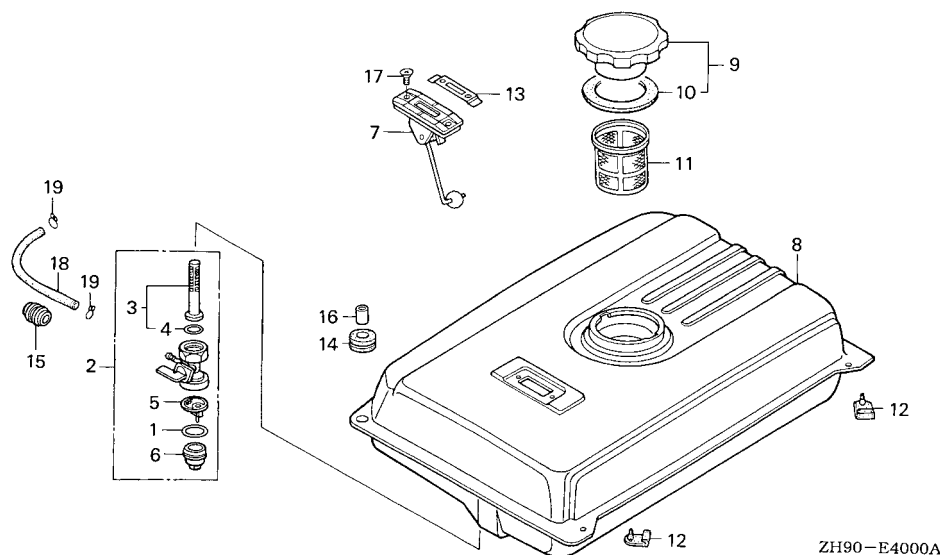


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	3101L6	PACKING, FUEL STRAINER CUP ...	0.2
2	3101A3	COCK, FUEL	0.2
3	3101D5	SCREEN, FUEL STRAINER	0.2
5	3101A7	FILTER, FUEL TANK CUP	0.2
7	6171A1	METER/GAUGE UNIT, FUEL	0.1
8	3101H7	TANK, FUEL	0.2
9	3101M7	CAP, FUEL FILLER	0.1
11	3101A6	FILTER, FUEL	0.1
18	3101F2	TUBE, FUEL COCK	0.2

Ref. No.	Part No.	Description	Reqd. QTY	Serial No.	Parts catalogue code
			(1) (2) (3)		
1	16173-001-004	O-RING	1 - -	-----	VMT, VMT/A
2	16950-ZB4-015	COCK ASSY., FUEL	1 - -	-----	VMT, VMT/A
3	16952-ZB4-005	SCREEN SET, FUEL STRAINER ...	1 - -	-----	VMT, VMT/A
4	16958-397-771	O-RING, 9.0X1.3	1 - -	-----	VMT, VMT/A
5	16959-471-831	FILTER, CUP	1 - -	-----	VMT, VMT/A
6	16967-GA6-671	CUP, FUEL STRAINER	1 - -	-----	VMT, VMT/A
7	17505-ZB2-003	METER ASSY., FUEL	1 - -	-----	VMT, VMT/A
8	17510-ZB4-000ZB	TANK COMP., FUEL *R8*	1 - -	1657671	VMT
9	17620-899-013	CAP COMP., FUEL FILLER	1 - -	-----	VMT, VMT/A
10	17631-899-000	PACKING, FUEL FILLER CAP	1 - -	-----	VMT, VMT/A
11	17672-899-000	FILTER, FUEL	1 - -	-----	VMT, VMT/A
12	50319-ZB2-000	RUBBER, TANK MOUNTING	2 - -	-----	VMT, VMT/A
13	87565-ZB4-A00	PLATE, FUEL INDICATION	1 - -	-----	VMT, VMT/A
14	90851-898-000	RUBBER, TANK CUSHION	2 - -	-----	VMT, VMT/A
15	90854-ZB2-000	RUBBER, FUEL(9X15X10)	1 - -	-----	VMT, VMT/A
16	91551-898-000	COLLAR, TANK CUSHION	2 - -	-----	VMT, VMT/A
17	93600-05010-0A	SCREW, FLAT, 5X10	2 - -	-----	VMT, VMT/A
18	95001-45250-40	TUBE, FUEL, 4.5X250 (95001-45001-60M)	1 - -	-----	VMT, VMT/A
19	95002-02080	CLIP, TUBE(B8)	2 - -	-----	VMT, VMT/A

E-40-10

OTHER PARTS(EMERGENCY STOP SWITCH)

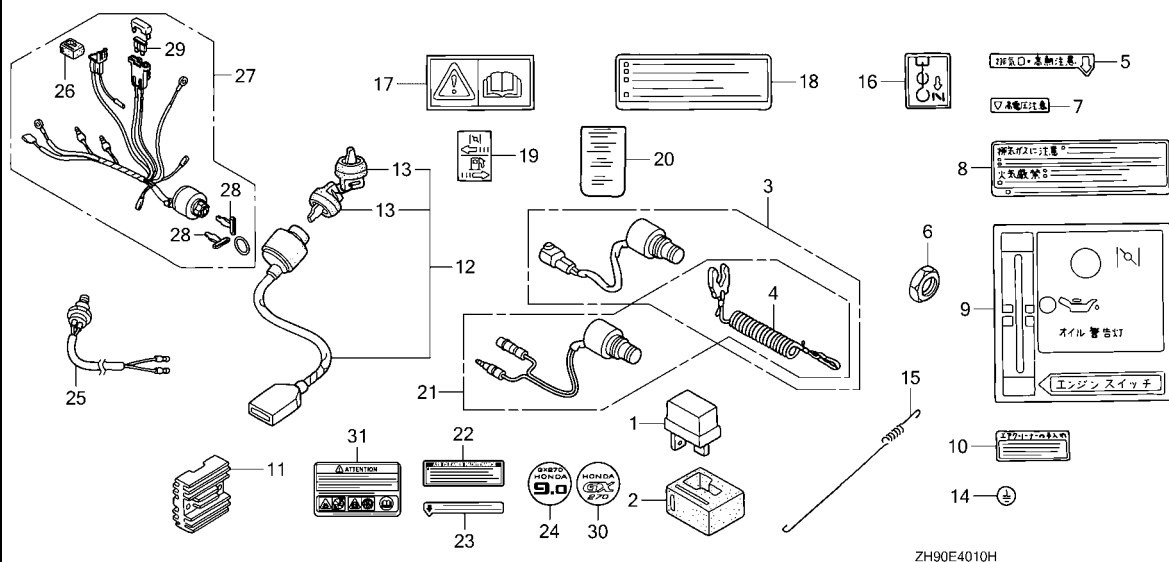


Ref. L.O.N. (Relative ref. Number)
No. Description F.R.T.

NO INFORMATION

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
1	31700-124-008	RECTIFIER ASSY., SILICON (SHINDENGEN)	1	-	-	VKK	
2	32127-738-700	SUSPENSION, COUPLER.....	1	-	-	1097930	LWD
3	36180-ZV3-003	SWITCH ASSY., EMERGENCY STOP	1	-	-	1097930	LWD
4	36182-ZV4-650	CORD COMP., EMERGENCY.....	1	-	-	1097929	LWD
5	87539-ZB2-000	MARK, EX. CAUTION.....	1	-	-		ESS,ESS/A
6	90302-921-000	NUT, HEX., 16MM.....	1	-	-	1097930	LWD
7	87511-892-000	MARK V, CAUTION.....	1	-	-		ESS,ESS/A
8	87522-892-000	MARK AB, CAUTION.....	1	-	-		ESS,ESS/A
9	87528-ZB7-700	MARK, ENGINE CONTROL.....	1	-	-		ESS
	87528-ZB7-701		1	-	-	2341608	ESS/A
10	87533-ZB6-000	MARK, AIR CLEANER.....	1	-	-	2341609	ESS/A
							ESS,ESS/A
11	31620-762-003	RECTIFIER COMP., REGULATOR...	1	-	-		LWD1,LWD1/A
12	35100-768-S01	SWITCH ASSY., COMBINATION....	1	-	-		LWD1,LWD1/A
13	35110-766-003	KEY ASSY., COMBINATION SWITCH (RED)	2	-	-		LWD1
	35110-736-612	KEY ASSY., COMBINATION SWITCH (BLACK)	2	-	-	2230574	LWD1/A
14	87534-892-640	MARK, EARTH.....	1	-	-		ESS,ESS/A
15	16561-ZE2-A00	SPRING, GOVERNOR.....	1	-	-	2134946	VXB7/A,VXE7/A
16	87528-898-620	MARK, CHOKE.....	1	-	-		ES4,VKK,VPK,VS3,VS4,VS5
17	87522-ZH8-W41	MARK, CAUTION(PICTOGRAPH)....	1	-	-		VMA4,VME4
			1	-	-	2375750	QA2/A,QAW/A,QXC9/A

E-40-10


OTHER PARTS(EMERGENCY STOP SWITCH)

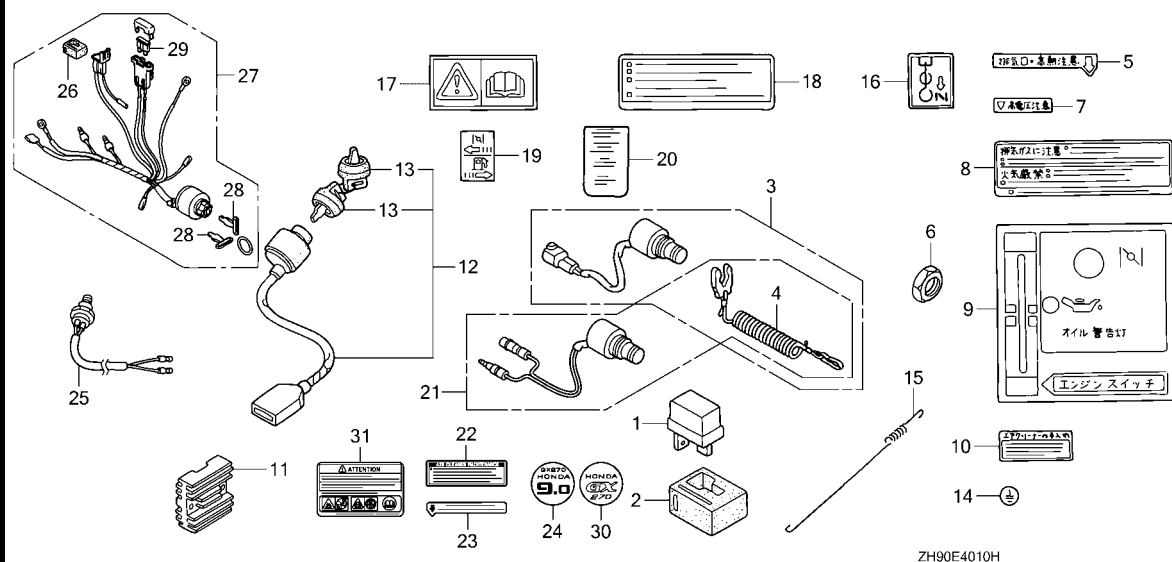

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
18	87522-ZH9-010	LABEL, CAUTION(ENGLISH, ETC.)	1	-	-	-----	VMA4, VME4
19	87528-ZE2-810	MARK, CHOKE(ORANGE).....	1	-	-	-----	QXE9, VMA4, VME4, VKK
	87528-ZH7-000	MARK, CHOKE(GRAY).....	1	-	-	2375750	QA2/A, QAW/A, QXC9/A
20	87534-ZE1-841	LABEL, AIR CLEANER CAUTION...	1	-	-	2375750	QA2/A, QAW/A, QXC9/A
			1	-	-	-----	VMA4, VME4
21	36180-ZV5-013	SWITCH ASSY., EMERGENCY STOP	1	-	-	1097930	LWD
22	87533-ZC0-630	MARK, AIR CLEANER(ENGLISH)...	1	-	-	-----	ES4, VS3, VS4, VS5
23	87539-898-620	MARK, EX. CAUTION (ENGLISH/FRENCH)	1	-	-	-----	ES4, VS3, VS4, VS5
24	87521-ZH9-030	EMBLEM(GX270 9.0).....	1	-	-	2437806	VKK, VS4
25	16500-ZE2-702	SWITCH, THERMO.....	1	-	-	2440626	VKK
	16500-ZE2-703		1	-	-	2440627	VKK
26	32127-738-700	SUSPENSION, COUPLER.....	1	-	-	-----	VKK
27	35100-ZE2-842	SWITCH ASSY., COMBINATION (3A-CHARGE)	1	-	-	2451486	VKK
	35100-ZE2-843		1	-	-	2451487	VKK
28	35111-880-013	KEY COMP.(HONDA LOCK).....	2	-	-	-----	VKK
29	98200-31500	FUSE, BLADE(15A).....	1	-	-	-----	VKK
30	87521-ZH9-040	EMBLEM(GX270).....	1	-	-	-----	ES4, VS5
			1	-	-	2437807	VKK, VS4
31	87516-ZH7-800	MARK, OPERATOR CAUTION(FRENCH) (MADE IN JAPAN)	1	-	-	-----	RA3

E-40-20

OTHER PARTS(KILL SWITCH/SUB HARNESS)

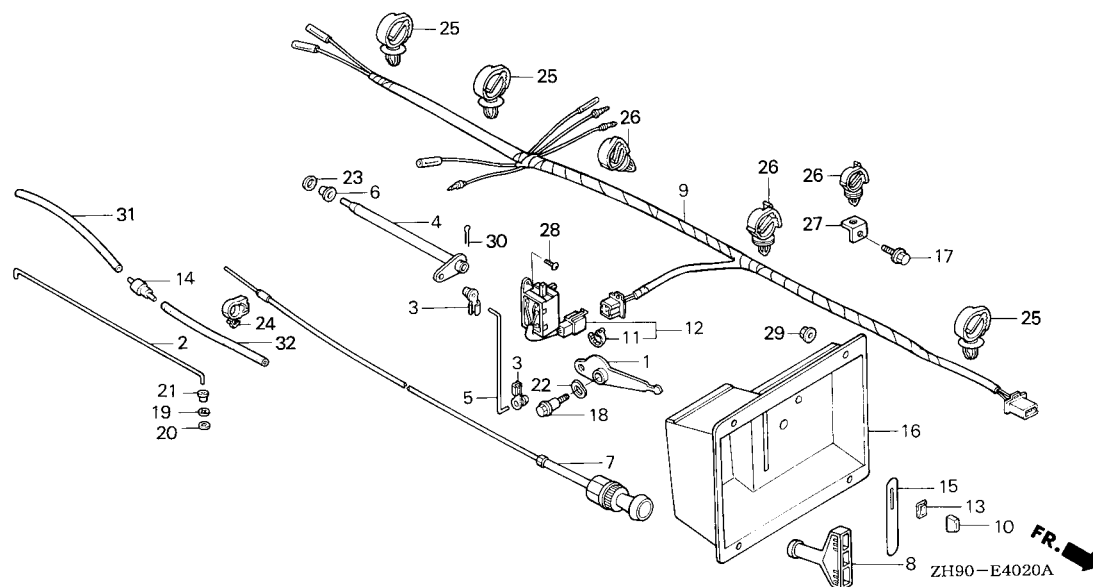


Ref. L.O.N. (Relative ref. Number) F.R.T.
No. Description

NO INFORMATION

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
1	16145-ZB7-700	LEVER COMP., ENGINE SWITCH...	1	-	-	ESS,ESS/A	
2	16325-ZB7-700	ROD, GOVERNOR CONTROL PUSH...	1	-	-	ESS,ESS/A	
3	16956-ZA7-000	JOINT, ROD	2	-	-	ESS,ESS/A	
4	16957-ZB7-700	ARM COMP., COCK CONTROL	1	-	-	ESS,ESS/A	
5	16958-ZB7-700	ROD, COCK CONTROL	1	-	-	ESS,ESS/A	
6	16960-ZB7-700	BUSH, COCK CONTROL ARM	1	-	-	ESS,ESS/A	
7	17950-ZB7-702	CABLE COMP., CHOKE	1	-	-	ESS,ESS/A	
8	28461-889-631	GRIP, STARTER	1	-	-	ESS,ESS/A	
9	32100-ZB7-700	HARNESS ASSY., SUB WIRE	1	-	-	ESS,ESS/A	
10	32343-892-003	KNOB, COCK LEVER	1	-	-	ESS,ESS/A	
11	32902-892-003	BAND	1	-	-	ESS,ESS/A	
12	36100-ZB7-701	SWITCH ASSY., KILL	1	-	-	ESS,ESS/A	
13	36106-892-003	BUSH, CONTROL KNOB	1	-	-	ESS,ESS/A	
14	36135-ZV1-003	VALVE, DASHPOT CHECK	1	-	-	ESS,ESS/A	
15	63117-ZB7-700	SEAL, ENGINE SWITCH LEVER	1	-	-	ESS,ESS/A	
16	63140-ZB7-700ZA	CASE, RECOIL GRIP					
	R8	BRIGHT RED	1	-	-	ESS	
	63140-ZB7-700ZB	*R280*	1	-	-	ESS/A	
17	90013-883-000	BOLT, FLANGE, 6X12(CT200)	1	-	-	ESS,ESS/A	
18	90045-PD1-000	BOLT, SPECIAL	1	-	-	ESS,ESS/A	
19	90310-ZB7-701	NUT, PUSH, 2.6	1	-	-	ESS,ESS/A	
20	90433-ZE2-700	WASHER, THRUST, 2.7X8	1	-	-	ESS,ESS/A	
21	90434-ZB7-700	COLLAR, PUSH ROD	1	-	-	ESS,ESS/A	
22	90511-735-801	WASHER, WAVE, 10MM	1	-	-	ESS,ESS/A	
23	90523-GB6-920	WASHER, CENTER COVER	1	-	-	ESS,ESS/A	

E-40-20


OTHER PARTS(KILL SWITCH/SUB HARNESS)

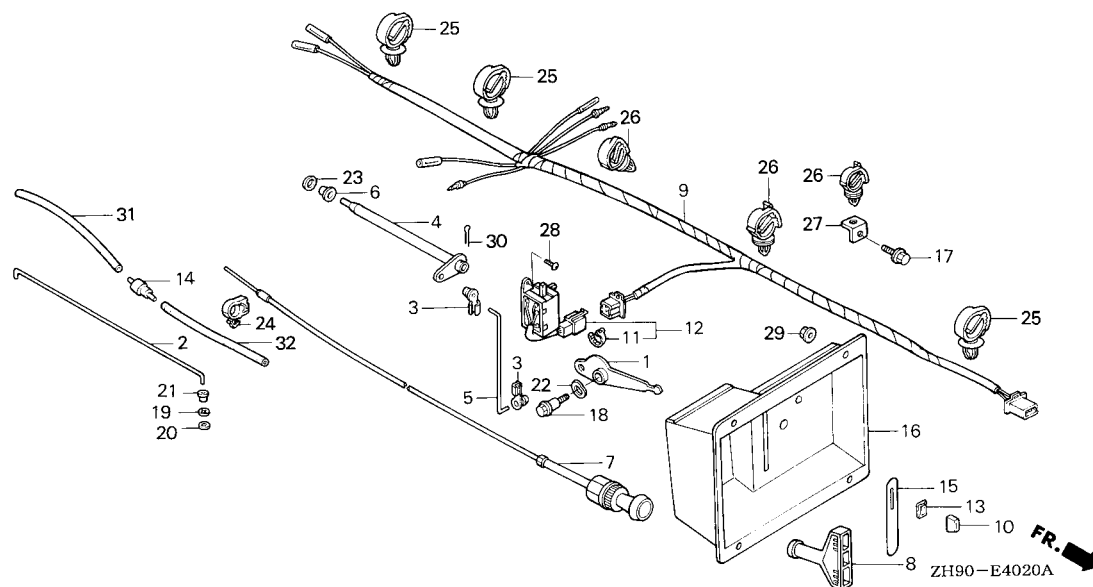

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
24	90650-SD9-003	CLIP, WIRE HARNESS.....	1	-	-	-----	ESS,ESS/A
25	90683-SA0-003	CLIP, WIRE HARNESS, 25MM.....	3	-	-	-----	ESS,ESS/A
26	90691-ZB7-003	CLIP, HARNESS.....	3	-	-	-----	ESS,ESS/A
27	90700-ZB7-000	BASE, CORD CLIP.....	1	-	-	-----	ESS,ESS/A
28	93500-03008-0A	SCREW, PAN, 3X8.....	2	-	-	-----	ESS,ESS/A
29	94050-06000	NUT, FLANGE, 6MM.....	4	-	-	-----	ESS,ESS/A
30	94201-20180	PIN, SPLIT, 2.0X18.....	1	-	-	-----	ESS,ESS/A
31	95005-35085-10	TUBE, 3.5X85(95005-35001-10M)	1	-	-	-----	ESS,ESS/A
32	95005-35175-10	TUBE, 3.5X175(95005-35001-10M)	1	-	-	-----	ESS,ESS/A

E-40-30

OTHER PARTS(UNDER FRAME)

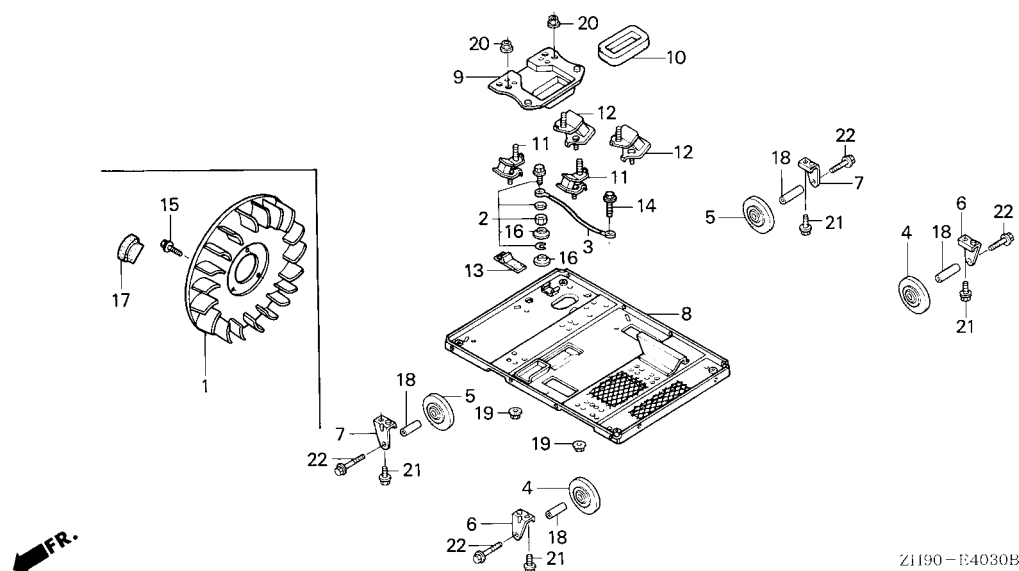


Ref. L.O.N. (Relative ref. Number)
No. Description F.R.T.

NO INFORMATION

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
1	31112-ZB4-003	FAN, GENERATOR COOLING	1	-	-	-----	ESS,ESS/A
2	32510-ZB6-003	TERMINAL ASSY., EARTH	1	-	-	-----	ESS,ESS/A
3	32610-ZB7-000	CABLE, EARTH	1	-	-	-----	ESS,ESS/A
4	42710-ZS9-A01	WHEEL COMP.(100X32)	2	-	-	-----	ESS/A
	42710-ZB6-003	WHEEL COMP.(100X33)	2	-	-	1833854	ESS
	42710-ZS9-A01	WHEEL COMP.(100X32)	2	-	-	1833855	ESS
5	42710-ZS9-A01	WHEEL COMP.(100X32)	2	-	-	-----	ESS/A
	42715-ZB7-003	WHEEL COMP.(100X33)	2	-	-	1833854	ESS
	42710-ZS9-A01	WHEEL COMP.(100X32)	2	-	-	1833855	ESS
6	42721-ZB6-000	BRACKET, R. WHEEL	2	-	-	-----	ESS,ESS/A
7	42725-ZB6-000	BRACKET, L. WHEEL	2	-	-	-----	ESS,ESS/A
8	50310-ZB7-000ZD	FRAME COMP., UNDER *NH105*...MAT BLACK(#15-#20)	1	-	-	-----	ESS,ESS/A
9	68310-ZB7-000	GUIDE, UNDER AIR	1	-	-	-----	ESS,ESS/A
10	68312-ZB7-000	SEAL, UNDER AIR GUIDE	1	-	-	-----	ESS,ESS/A
11	68325-ZB4-000	RUBBER, BOTTOM	2	-	-	-----	ESS,ESS/A
12	68325-899-000	RUBBER, BOTTOM	2	-	-	-----	ESS,ESS/A
13	89011-192-700	BAND, TOOL SETTING	1	-	-	-----	ESS,ESS/A
14	90013-883-000	BOLT, FLANGE, 6X12(CT200)	1	-	-	-----	ESS,ESS/A
15	90032-875-003	SCREW, TAPPING, 5X14	3	-	-	-----	ESS,ESS/A
16	90381-812-710	NUT, SPECIAL, 6MM	2	-	-	-----	ESS,ESS/A
17	90855-ZB4-000	GROMMET, CRANKCASE	1	-	-	-----	ESS,ESS/A
18	91554-ZB6-000	COLLAR, WHEEL SHAFT	4	-	-	-----	ESS,ESS/A
19	94050-08000	NUT, FLANGE, 8MM	4	-	-	-----	ESS,ESS/A
20	94050-10000	NUT, FLANGE, 10MM	4	-	-	-----	ESS,ESS/A

E-40-30


OTHER PARTS(UNDER FRAME)

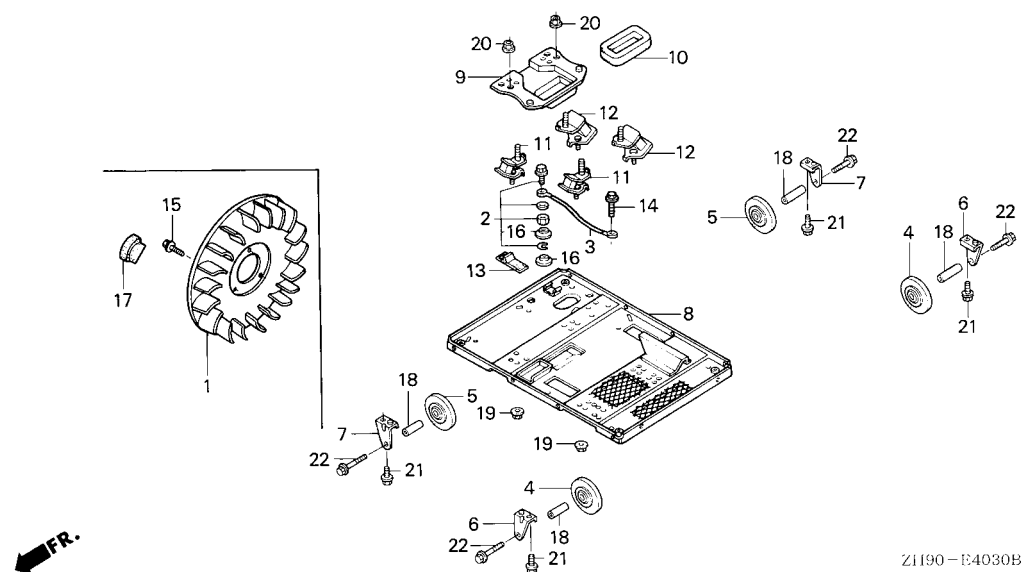

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
21	95701-08016-00	BOLT, FLANGE, 8X16.....	4	-	-	-----	ESS,ESS/A
22	95701-08055-00	BOLT, FLANGE, 8X55.....	4	-	-	-----	ESS,ESS/A

EOP-1

GASKET KIT

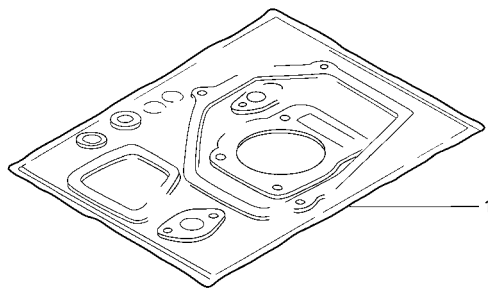

HENG-X0003

Ref. L.O.N. (Relative ref. Number)
No. Description F.R.T.

NO INFORMATION

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			(1)	(2)	(3)		
1	061A1-ZH9-000	GASKET KIT	1	1	-	1046250	HA, HH, HX, L1, L1/A, LH, LHE, LJ, LW, LWD, LX, LXZ, PA, PX, Q1, Q1/A, Q2, QA, QAE, QD, QE, QH, QHC, QHE, QP, QX, QXB, QXC, QXE, QXEB, R1, R1/A, RA, RD, RH, RHE, RX, S1, S1/A, SD, SE, SH, SHE, SHEZ, SJ, SK, SW, SWE, SX, SXB, SXE, SXEB, V1, VA, VAW, VH, VNG1, VSD, VSD3, VX, VXB, VXE, VXEB, W1, W1/A
	061A1-ZH9-050		1	1	-	1046251	HA, HH, LXZ, PA, Q2, QA, QAE, QHC, QHE, QXEB, RA, RH, RHE, SHE, SHEZ, SK, SW, SWE, V1, VA, VAW, VH, VXE
			1	1	-	1046251 1641019	HX, L1, L1/A, LH, LHE, LJ, LW, LWD, LX, PX, Q1, Q1/A, QD, QE, QH, QP, QX, QXB, QXE, R1, R1/A, RD, RX, S1, S1/A, SD, SE, SH, SJ, SX, SXB, SXE, SXEB, VNG1, VSD, VSD3, VX, VXB, VXEB, W1, W1/A
			1	-	-	-----	HEA, LHB1, LHB3, LHQ4, LSS, LX16, QAB1, SMD, SX2, VAW1, VD16, VDE, VEB6, VW22, VWA, VX26, VXB2, VXB6, VXG
	06111-ZK9-S01		1	-	-	-----	VNT2/A
	061A1-ZH9-000		1	-	-	1048121	HAQ, QAQ
	061A1-ZH9-050		1	-	-	1187115	LTJ, QSC
			1	-	-	1641019	HA2, HEA2, HEA8, HX26, HX8, HXQ4, LJC, LJG, LXE, LXE8, LXQ4, LXU, PA2, PAE2, PX26, PXU, QA2, QAB3, QAE2, QAE6, QAQ4, QAR2, QH26, QHE4, QHP1, QHQ4, QHZ, QME2, QMH, QSC9, QX26, QXC4, QXC6, QXC9, QXE4, QXE6, QXE8, QXQ4, QXU, RA2, RH26, RHE4, RHQ4, RSC2, RXQ4, RXU, SHQ4, SJG, SMC4, SME1, SME6, SN, SXE4, SXE8, SXQ4, SXU, VA2, VDE2, VM2, VME2, VW12, VWA2, VWN2, VWT4, VXE4, VXQ4, VXU, VXU1, WMT8
	06111-ZK9-S00		1	-	-	1641019	QWA2, VNT2
	061A1-ZH9-050		1	-	-	1046251 1187115	QXC
			1	-	-	1048122	HAQ, QAQ
	06111-ZK9-S01		1	-	-	1641020	QWA2, VNT2
	061A1-ZH9-050		-	-	1	1000186	VXP, VXQP

PART NO. INDEX

Part Number	Page	Ref.	Part Number	Page	Ref.	Part Number	Page	Ref.	Part Number	Page	Ref.	Part Number	Page	Ref.	Part Number	Page	Ref.
06000			11500-ZK2-800	289	1	12000-ZH9-Q20	61	1	13102-ZH9-000	109	2	14410-ZE2-013	111	2		89	6
			11521-ZE2-610	289	2	120A0-ZH9-000	62	1		105	2	14411-ZE2-611	289	3		91	26
06111-ZK9-S00	314	1	11521-ZE2-800	289	2		64	1		107	2	14431-ZE2-010	111	3		92	8
06111-ZK9-S01	314	1		292	2	120A0-ZH9-800	62	1	13102-ZH9-010	108	2	14441-ZE2-000	111	4			9
061A1-ZH9-000	314	1					64	1		109	2	14451-ZE1-013	111	5	15721-ZB4-000	192	1
061A1-ZH9-050	314	1	12000			120A0-ZH9-810	62	1	13103-ZH9-000	106	2	14568-ZE1-000	112	6	15721-ZB7-000	194	1
							65	1		108	2	14711-ZE2-000	112	7	15721-ZE2-780	53	7
						120A0-ZH9-820	63	1	13103-ZH9-010	109	2	14711-ZE2-W00	112	7	15772-292-010	194	2
11000			12000-ZH9-010	61	1		65	1	13104-ZH9-000	107	2	14721-ZE2-000	112	8			
				63	1	120A0-ZH9-850	62	1		108	2	14721-ZE2-810	112	8	16000		
11300-ZE2-000	72	2		64	1		63	1	13104-ZH9-010	109	2	14721-ZE2-W00	112	8			
	73	2		65	1	120A0-ZH9-860	62	1	13111-ZE2-000	109	3	14751-ZE2-003	112	9	16010-ZE2-015	137	1
11300-ZE2-010	72	2	12000-ZH9-020	62	1		63	1	13200-ZE2-010	109	4	14771-ZE2-000	112	10		138	1
	73	2		64	1		64	1	13200-ZE2-305	109	4		11	11	16010-ZE2-812	137	1
11300-ZE2-020	72	2		65	1	12200-ZH9-000	49	1		95	1	14773-ZE2-000	112	11		138	1
11300-ZE2-405	73	2	12000-ZH9-405	61	1	12200-ZH9-405	50	1	13310-ZH9-000	95	1	14775-ZE2-010	53	9		139	1
11300-ZE2-406	94	1	12000-ZH9-406	61	1	12200-ZH9-406	50	1	13310-ZH9-010	95	1	14781-ZE2-000	112	12	16010-ZE2-A20	138	1
11300-ZE2-600	72	2	12000-ZH9-407	62	1	12200-ZH9-800	50	1	13310-ZH9-600	95	2	14791-ZE2-010	112	13	16010-ZE3-701	167	1
11300-ZE2-601	72	2	12000-ZH9-408	61	1	12204-ZE2-306	50	2	13310-ZH9-601	96	2					172	1
11300-ZE2-602	72	2	12000-ZH9-409	62	1	12205-ZE2-305	50	3		96	3	15000			16010-ZF5-900	167	1
	73	2	12000-ZH9-801	61	1	12209-ZE8-003	113	16	13310-ZH9-610	96	3				16011-ZA0-931	139	2
11300-ZE2-610	83	2		63	1	12216-ZE2-300	50	4	13310-ZH9-611	96	3	15510-ZE2-043	65	2		167	2
11300-ZE2-611	83	2		64	1	12251-ZH9-000	50	5	13310-ZH9-630	96	4		66	2		172	2
11300-ZE2-612	83	2		65	1	12310-ZE2-010	51	6	13310-ZH9-650	96	5		65	2	16013-ZA0-931	139	3
11300-ZE2-620	86	2	12000-ZH9-802	61	1	12310-ZE2-020	51	6	13310-ZH9-651	96	5	15510-ZE2-053	66	2		167	3
11300-ZE2-621	86	2		63	1	12310-ZE3-790	51	6	13310-ZH9-670	96	6		66	2		172	3
11300-ZE2-622	86	2		64	1	12310-ZE3-791	51	6		97	6	15520-ZE2-003	129	2		172	3
11300-ZE2-630	72	2		65	1	12315-ZE3-840	52	7	13310-ZH9-671	96	6	15520-ZE2-822	272	1	16015-ZA0-931	171	46
11300-ZE2-631	72	2	12000-ZH9-811	62	1		53	7		97	6	15600-735-003	73	4		172	4
11300-ZE2-632	72	2		63	1	12391-ZE2-020	53	8	13310-ZH9-700	97	14		83	5	16015-ZE2-A20	140	4
11300-ZE2-700	94	1		64	1				13310-ZH9-701	97	14		85	25	16015-ZE8-005	141	5
11300-ZE2-701	94	1		65	1				13310-ZH9-800	95	1		86	5		167	4
11300-ZE2-E70	73	2	12000-ZH9-812	62	1	13000			13310-ZH9-801	95	1		89	5	16016-ZA0-931	141	6
11300-ZE2-E71	73	2		64	1				13310-ZH9-810	95	2		92	5		167	5
11300-ZH9-S50	73	2		65	1	13010-Z5H-004	104	1		96	2	15600-735-700	73	4		172	5
11300-ZK9-U60	73	2	12000-ZH9-821	63	1		105	1	13310-ZH9-811	96	2		92	5	16016-ZE0-005	141	6
11315-ZB7-000	129	1		64	1	13010-ZE8-601	98	1	13310-ZH9-820	96	3	15600-ZG4-003	74	6	16016-ZH7-W01	165	30
11315-ZE2-700	94	16		65	1		103	1	13310-ZH9-821	96	3		83	4	16016-ZH8-W01	165	30
11381-ZE2-801	73	3	12000-ZH9-822	64	1	13010-ZE8-602	99	1	13310-ZH9-830	96	5		85	24		171	52
	83	3		65	1		103	1	13310-ZH9-840	96	6		86	4		173	31
	86	3	12000-ZH9-823	64	1	13011-Z5H-004	104	1		97	6		89	4	16024-124-760	171	47
	88	2	12000-ZH9-841	61	1		105	1	13310-ZH9-841	97	6		92	4		172	6
	92	2		63	1	13011-ZE8-601	99	1	13310-ZK9-000	95	1	15620-ZE2-700	82	21	16024-124-761	171	47
	94	2	12000-ZH9-842	64	1		103	1	13310-ZK9-600	96	2		94	3		172	6
11400-ZE2-010	88	3	12000-ZH9-851	62	1	13011-ZE8-602	100	1	13310-ZK9-670	97	6	15620-ZG4-910	74	5	16024-ZE1-811	165	31
11400-ZE2-020	88	3		63	1		103	1	13310-ZK9-671	97	6		83	6		167	6
11400-ZE2-030	88	3		65	1	13012-Z5H-004	105	1	13310-ZK9-800	97	6		86	6	16024-ZH7-A20	141	7
11400-ZE2-601	88	3	12000-ZH9-852	62	1	13012-ZE8-601	101	1	13351-ZE2-010	97	15		91	24	16028-ZA0-931	171	48
11400-ZE2-602	88	3		63	1		103	1					92	6		172	7
11400-ZE2-603	88	3		65	1	13012-ZE8-602	101	1	14000			15621-896-010	74	7	16028-ZE0-005	142	8
11400-ZE2-611	85	23	12000-ZH9-860	62	1		104	1					83	7		167	7
11400-ZE2-612	85	23	12000-ZH9-861	62	1	13013-Z5H-004	105	1	14100-ZE3-010	111	1		86	7	16044-ZE2-005	143	9
11400-ZE2-613	85	23		63	1	13013-ZE8-601	102	1	14100-ZE3-020	110	1		91	25	16044-ZH9-831	174	1
11400-ZE2-621	92	3		65	1		104	1		111	1		92	7	16100-Z5H-V02	167	8
11400-ZE2-622	92	3	12000-ZH9-862	64	1	13013-ZE8-602	103	1	14100-ZH9-000	110	1	15625-ZE1-000	75	8	16100-Z5J-V12	167	8
11400-ZE2-623	92	3	12000-ZH9-870	61	1		104	1		111	1		92	8	16100-Z5J-V13	168	8
11400-ZE2-670	88	3		63	1	13101-ZE8-810	109	2	14100-ZH9-010	110	1	15625-ZE1-003	75	8	16100-ZE2-P51	143	10
11400-ZE2-671	88	3	12000-ZH9-871	64	1	13101-ZH9-000	107	2		111	1		83	8	16100-ZE2-P52	144	10
11500-ZE2-610	289	1	12000-ZH9-Q00	61	1		108	2	14100-ZK3-870	111	1		84	9	16100-ZE2-P53	144	10
11500-ZE2-620	292	1	12000-ZH9-Q10	61	1	13101-ZH9-010	108	2	14100-ZK9-870	111	1		86	8	16100-ZH9-800	143	10

PART NO. INDEX

Part Number	Page	Ref.	Part Number	Page	Ref.	Part Number	Page	Ref.	Part Number	Page	Ref.	Part Number	Page	Ref.	Part Number	Page	Ref.
16100-ZH9-800	145	10	16211-ZB7-000	172	13		188	1	16551-ZE2-780	267	3	16854-ZH8-000	216	1	17222-ZB7-000	194	6
16100-ZH9-801	144	10	16211-ZE2-000	149	15		190	1	16555-ZB7-000	251	2		217	1	17230-ZE2-820	181	4
	145	10		171	53	16273-ZB4-000	268	5	16555-ZE2-000	251	2	16857-ZB6-000	229	3	17230-ZE3-841	188	5
16100-ZH9-802	145	10		174	5	16325-ZB7-700	310	2	16555-ZE2-780	267	4	16857-ZB7-000	230	3	17231-899-000	192	6
16100-ZH9-810	143	10	16211-ZE2-010	149	15	16400-ZE2-703	169	24	16559-ZE2-780	267	5	16910-GB2-005	226	18	17231-ZB7-000	194	7
	145	10	16211-ZE2-700	168	13	16400-ZE2-704	169	24	16561-ZE2-000	252	3		229	4	17231-ZE2-000	175	4
16100-ZH9-811	144	10	16211-ZE2-701	168	13	16500-ZE2-702	309	25		253	3	16915-GB2-000	229	5	17231-ZE2-810	177	3
	145	10	16220-ZA0-702	150	16	16500-ZE2-703	309	25		267	6	16950-ZA0-803	230	4	17231-ZH9-820	181	5
16100-ZH9-812	145	10		174	6	16500-ZE2-P52	267	2	16561-ZE2-800	253	3	16950-ZB4-015	228	2	17231-ZH9-N01	190	4
16100-ZH9-820	143	10	16221-ZA0-700	151	17	16510-ZE2-000	75	9	16561-ZE2-A00	308	15		307	2	17232-891-000	182	6
	145	10	16221-ZA0-800	151	17		84	10	16561-ZH9-U30	253	3	16952-ZB4-005	228	3		188	6
16100-ZH9-821	143	10		168	14		86	9	16561-ZK9-800	253	3		307	3		190	5
	144	10		174	7		94	4	16562-ZE2-000	253	4	16952-ZB6-000	229	6	17233-896-701	195	1
	145	10	16221-ZB7-800	172	14	16510-ZE2-811	84	10		267	7	16952-ZB7-000	230	5		202	1
16100-ZH9-822	145	10	16223-ZA0-700	152	18		89	7	16562-ZE2-700	253	4	16953-ZE1-711	153	20		212	1
16100-ZH9-831	174	2	16223-ZA0-800	151	18		92	10	16570-ZE2-701	254	8	16953-ZE1-712	153	20	17235-899-000	192	7
16100-ZH9-D41	167	8		152	18	16510-ZE3-000	82	23	16570-ZE2-721	254	9	16953-ZE1-811	153	20		194	8
16100-ZH9-V00	167	8		168	15		91	20		255	9		154	20	17235-ZE2-820	187	15
16100-ZH9-V01	167	8		172	15	16511-ZE2-000	76	10	16570-ZE2-722	255	9	16953-ZE1-812	153	20	17235-ZH9-N00	190	6
16100-ZH9-V02	168	8		174	8		84	11	16570-ZE2-W00	253	5		154	20	17235-ZH9-N01	190	6
16100-ZH9-V10	172	8	16230-ZE3-701	171	49		86	10	16570-ZE2-W10	254	6	16954-ZE1-812	155	21	17236-899-000	192	8
16100-ZH9-V11	167	8		172	16		89	8	16570-ZE2-W20	254	7	16955-ZE1-000	217	2		194	9
	172	8	16230-ZE3-702	171	49		92	11	16570-ZE2-W40	253	5	16955-ZE1-010	217	2	17238-ZE2-310	175	5
16100-ZH9-V12	168	8		172	16		94	5	16570-ZE2-W50	254	6	16955-ZE2-H21	155	22		177	4
	172	8	16252-ZA1-000	268	1	16511-ZE8-000	82	24	16571-ZE2-W00	255	10	16956-ZA7-000	310	3		183	7
16100-ZH9-W00	143	10	16252-ZA1-010	172	17		91	21	16571-ZE2-W10	255	10	16956-ZB7-700	230	6		188	7
16100-ZH9-W01	143	10		268	1	16512-ZE2-000	77	11	16574-ZE1-000	256	11	16956-ZE1-811	155	23		191	7
	144	10	16260-ZB7-702	173	18		84	12	16575-ZE2-W00	257	12	16957-ZB7-700	310	4	17239-ZE1-000	175	6
16100-ZH9-W20	143	10	16260-ZE2-722	168	16		86	11	16576-891-000	257	13	16957-ZE1-812	156	24		177	5
16100-ZH9-W21	143	10		169	16		94	6			14	16958-397-771	228	4		183	8
	144	10	16260-ZE2-723	168	16	16512-ZE2-811	84	12			8		307	4		191	8
	145	10		169	16		89	9	16578-ZE1-000	258	15	16958-ZB7-700	310	5	17239-ZE3-840	188	8
16100-ZK9-R41	167	8	16260-ZE2-730	169	16		92	12	16581-ZE2-W00	259	16	16959-471-831	228	5	17252-899-000	192	9
16100-ZK9-R61	167	8	16260-ZE3-D21	169	16	16512-ZE3-000	82	25	16584-883-300	136	29		307	5		194	10
16100-ZK9-V21	143	10	16260-ZE3-D22	169	16		91	22		259	17	16960-ZB7-700	310	6	17316-611-000	53	10
	144	10	16260-ZF6-U70	171	54	16513-ZE2-000	77	12		267	9	16967-GA6-671	228	6	17367-413-690	193	10
16124-ZE0-005	146	11	16261-ZB7-700	173	19		84	13	16590-ZE2-812	260	18		307	6		194	11
	168	9	16261-ZE2-702	169	17		86	12	16591-ZE2-P51	175	1	16967-MA2-771	230	7	17402-ZE2-810	177	6
	172	9	16262-ZE2-711	169	18		89	10	16592-732-700	267	10	16967-ZE0-811	157	25	17403-ZE2-810	177	7
	174	3	16263-ZA0-000	169	19		91	23	16592-883-310	260	19				17410-ZE2-020	175	7
16145-ZB7-700	310	1		267	1		92	13		267	11	17000				177	8
16148-141-881	146	12	16263-ZB7-701	173	20		94	7	16594-883-010	260	20					184	9
	168	10	16264-ZE2-700	169	20	16531-Z0A-000	77	13			21	17210-ZE2-822	180	2	17410-ZE3-840	189	9
	172	10	16264-ZE2-701	169	20		78	13	16599-ZG1-M10	261	22	17210-ZE3-010	188	2	17410-ZH9-N00	191	9
16166-ZE2-781	147	13	16265-ZE2-721	169	21		84	14	16610-ZE1-000	153	19		190	2	17420-ZE2-000	175	8
16166-ZH9-000	147	13	16268-893-000	173	21		86	13		174	9	17211-899-000	192	2		178	9
16166-ZH9-820	147	13		268	2		89	11	16611-ZE2-711	169	25		194	3	17420-ZE2-P50	175	8
	168	11	16268-ZE2-721	169	22		92	14	16611-ZE3-D21	169	25	17211-ZE2-000	175	2	17470-ZE3-841	189	10
	172	11	16269-ZA0-800	169	23		93	14	16613-893-000	169	26	17212-ZB4-003	192	3	17470-ZE3-842	189	10
16166-ZH9-W00	147	13		173	22		94	8	16615-893-000	169	27		194	4	17475-ZE3-841	189	11
16166-ZH9-W20	147	13	16270-ZB4-000	268	3	16531-ZE2-000	78	13	16615-ZE2-810	261	23	17212-ZE2-000	175	3	17476-ZE3-841	189	12
16172-ZE3-W10	166	32	16270-ZB4-010	268	3		84	14	16617-890-010	173	23	17212-ZE2-810	177	2	17500-ZE2-811ZA	217	3
	168	12	16271-ZB4-000	268	4		86	13	16674-ZE2-P50	267	12	17218-ZE2-821	181	3	17500-ZE2-812ZA	217	3
	172	12	16271-ZE2-000	177	1		89	11	16731-ZE2-003	130	3	17218-ZE3-000	188	3	17500-ZE2-813ZA	217	3
	174	4		179	1		93	14	16851-ZB7-700	230	2		190	3	17505-898-023	229	7
16173-001-004	148	14		188	1		94	8	16852-ZB6-000	229	1	17219-ZE3-840	188	4	17505-ZB2-003	228	7
	228	1		190	1	16541-ZE2-010	66	3	16854-ZB6-000	229	2	17220-ZB4-003	192	4		230	8
	230	1	16271-ZE2-010	177	1	16550-ZE2-700	266	36	16854-ZE1-000	216	1	17220-ZB7-000	194	5		307	7
	307	1		179	1	16551-ZE2-000	250	1		217	1	17222-ZB4-000	192	5	17505-ZE2-013	217	4

PART NO. INDEX

Part Number	Page	Ref.	Part Number	Page	Ref.	Part Number	Page	Ref.	Part Number	Page	Ref.	Part Number	Page	Ref.	Part Number	Page	Ref.
17507-ZA0-800	229	8	17672-899-000	307	11	18333-ZE3-800	197	7	18466-ZH8-W40	198	17	23161-822-610	287	14	28462-ZE2-W01	125	11
17510-ZB4-000ZB	307	8	17672-ZE2-W00	221	9		203	7		206	17	23161-822-611	287	14	28462-ZE2-W11	125	11
17510-ZB6-010	229	9	17672-ZE2-W01	221	9		204	7		213	12	23220-ZE2-621	292	4	28469-ZE2-W01	126	12
17510-ZB7-000	230	9	17673-893-000	222	11		210	6				23710-ZE2-610	289	5			
17510-ZE2-010ZA	218	5	17950-ZB7-702	310	7		212	5	19000			23710-ZE2-621	292	5	30000		
	219	5					214	7				23710-ZK2-800	289	5			
	220	5	18000			18333-ZF6-W01	197	7	19511-ZE2-000	231	1	23711-822-610	287	15	30500-ZF6-H31	236	1
17510-ZE2-010ZB	217	5					203	7	19512-ZE2-000	231	2				30500-ZF6-W02	235	1
	218	5	18310-ZB7-003	215	1		204	7	19602-ZE2-E10	131	4	25000				236	1
17510-ZE2-010ZD	218	5	18310-ZD1-E31	212	2		213	24	19610-ZE2-010ZA	131	5				30500-ZF6-W03	235	1
	219	5		214	1		214	15		132	5	25620-805-612	287	16		236	1
17510-ZE2-010ZE	218	5	18310-ZD1-E32	214	1	18333-ZK6-Y00	197	7	19610-ZE2-010ZC	131	5	25620-823-000	287	16	30600-ZE1-013	236	2
	219	5	18310-ZE2-013	210	1		203	7		132	5	25651-889-750	287	17	30700-ZB7-013	236	3
17510-ZE2-010ZG	217	5	18310-ZE2-822	210	1		204	7	19610-ZE2-010ZD	131	5				30700-ZE1-013	237	4
	218	5	18310-ZE2-V60	214	1	18336-ZE2-000	211	12	19610-ZE2-010ZF	131	5	28000			30700-ZF5-013	237	4
17510-ZE2-010ZH	219	5	18310-ZE2-V61	214	1	18338-ZB7-000	215	6	19610-ZE2-010ZG	132	5				30701-883-000	133	9
17510-ZE2-020ZA	219	5	18310-ZE2-W00	195	2	18355-ZB4-630	212	6	19610-ZE2-010ZJ	131	5	28400-ZE2-W01ZA	114	1			
	220	5	18310-ZE2-W61	202	2		214	10	19610-ZE2-010ZL	131	5		115	1	31000		
17510-ZE2-020ZD	219	5	18310-ZH9-V01	212	2	18355-ZE2-010	197	8		132	5	28400-ZE2-W01ZB	114	1			
	219	5	18310-ZH9-V02	212	2		205	8	19610-ZE2-700ZA	132	5		115	1	31100-ZE2-010	232	5
17510-ZE2-020ZE	219	5	18320-ZB4-000	214	2		210	7	19610-ZE2-700ZL	132	5	28400-ZE2-W01ZC	114	1	31100-ZE2-812	232	6
17510-ZE2-020ZG	219	5	18320-ZE2-003	210	2	18355-ZE2-W00	205	8	19610-ZE2-W00ZB	132	5	28400-ZE2-W01ZD	114	1	31100-ZE2-822	233	7
17510-ZE2-800ZA	219	5	18320-ZE2-821	210	2	18381-Z1C-801	205	10	19610-ZE2-W00ZC	132	5	28400-ZE2-W01ZG	114	1	31100-ZE2-832	234	11
	220	5	18320-ZE2-P30	210	2	18381-Z8S-801	197	9	19610-ZH9-D40ZA	131	5		115	1	31100-ZE2-W01	233	10
17510-ZE2-800ZB	219	5	18320-ZE2-P50	210	2		205	9		132	5	28400-ZE2-W01ZL	114	1	31100-ZE2-W11	234	11
	220	5	18320-ZE2-W01	195	3		211	8	19610-ZH9-D40ZB	131	5		115	1	31112-ZB4-003	312	1
17510-ZE2-800ZC	219	5		196	3	18381-ZE2-800	197	10	19610-ZH9-D40ZC	131	5	28400-ZE2-W01ZM	115	1	31161-ZE2-000	66	4
	220	5	18320-ZE2-W02	196	3		198	10		132	5	28400-ZE2-W01ZN	114	1	31200-ZH9-003	242	1
17510-ZE2-801ZA	218	5	18320-ZE2-W61	203	3		205	10	19610-ZH9-D40ZD	132	5		115	1	31200-ZH9-013	242	1
	220	5	18320-ZE2-W62	203	3		211	13	19610-ZH9-D40ZE	131	5	28400-ZE2-W02ZB	115	1	31201-ZA1-003	242	2
17510-ZE2-801ZC	218	5	18320-ZF6-W01	203	3	18381-ZE2-801	197	10	19610-ZH9-V10	131	5	28400-ZE2-W02ZG	115	1	31202-ZA1-003	243	3
	220	5	18321-ZB7-000	215	2		205	10	19620-ZE2-000ZA	132	6	28400-ZE2-W02ZL	115	1	31204-ZA0-003	243	4
17510-ZE2-801ZD	220	5	18323-ZE2-W00	196	4	18381-ZE2-820	210	8	19620-ZE2-000ZD	132	6	28400-ZE2-W02ZM	115	1	31207-ZH9-003	243	5
17510-ZE3-010ZA	218	5	18323-ZE2-W60	201	30	18381-ZE2-W10	197	9	19631-ZE2-000	133	7	28400-ZE2-W02ZN	115	1	31211-ZE2-003	243	6
	219	5		203	4		205	9	19640-ZE2-E10	133	8	28410-ZE2-W01ZA	116	2	31212-ZE2-003	243	7
17510-ZE3-020ZA	219	5		210	8		211	8					117	2	31213-ZE2-003	244	8
17510-ZE3-800ZC	220	5	18325-ZB4-000	214	3		211	8	21000			28410-ZE2-W01ZB	116	2	31215-ZE2-003	244	9
17520-ZA0-800	229	10	18325-ZB7-000	215	3	18412-ZB7-000	215	7				28410-ZE2-W01ZC	116	2	31216-ZE2-003	245	10
	230	10	18325-ZE2-003	210	3	18413-ZB7-000	215	8	21510-889-750	286	1	28410-ZE2-W01ZD	116	2	31217-ZE2-003	245	11
17620-899-013	228	8	18325-ZE2-821	210	3	18414-ZB7-000	215	9	21610-889-750	286	2	28410-ZE2-W01ZG	116	2	31219-ZE2-003	245	12
	229	11	18325-ZE2-P30	210	3	18430-ZF6-W50	205	11	21691-889-750	286	3	28410-ZE2-W01ZL	116	2	31219-ZE3-003	249	26
	230	11	18325-ZE2-P50	210	3	18430-ZK9-W50	198	11				28410-ZE2-W01ZM	117	2	31222-ZE3-791	245	13
	307	9	18329-ZB4-000	214	4	18433-ZF6-W40	198	12	22000				116	2	31231-ZE2-003	245	14
17620-Z0T-305	227	23	18330-ZB7-003	215	4		205	12				28421-ZE2-W01	118	3	31232-ZE3-003	246	15
17620-ZE2-W00	220	6	18330-ZE2-000	210	4		212	7	22103-ZE2-620	292	3		117	2	31233-ZE2-003	246	16
17620-ZH7-013	221	7	18330-ZE2-700	212	3	18433-ZK9-W40	198	12	22121-889-750	286	4		119	3	31244-ZH9-003	247	17
17620-ZH7-023	220	7		214	5	18434-ZF6-W40	198	13	22201-822-610	286	5	28422-ZE2-W01	119	4	31245-ZH9-003	247	18
	221	7	18330-ZE2-W00	196	5		205	13	22311-822-610	286	6	28441-ZE2-W01	120	5	31510-ZE1-811	237	5
	229	12		197	5		212	8	22350-822-610	286	7		121	5	31510-ZE1-831	237	5
17624-187-020	229	12	18330-ZH9-D40	214	5	18434-ZK9-W40	198	13	22411-822-611	286	8	28442-ZE2-W01	121	6	31510-ZE2-811	237	6
17631-329-003	221	8	18330-ZH9-N00	196	5	18436-ZH8-W40	198	14	22421-822-610	286	9	28443-ZE2-W01	122	7	31510-ZE2-H91	237	5
17631-899-000	228	9		203	5		206	14	22521-822-610	287	10		123	7	31510-ZE3-003	237	5
	229	13	18331-ZE2-810	197	6		212	9	22531-889-750	287	11	28444-ZE2-W01	123	8	31511-ZE2-000	237	7
	230	12		203	6	18437-ZF6-W40	198	15	22535-822-610	287	12	28450-ZE2-W11	231	3	31511-ZE2-W00	240	15
	307	10		210	5		206	15				28451-ZE2-W01	232	4	31512-ZE2-000	238	8
17631-Z0T-812	227	24	18333-ZB4-800	212	4		213	10	23000			28461-889-631	310	8		239	8
17631-ZH7-003	227	22		214	6	18438-ZF6-W40	198	16				28461-ZE2-W02	124	10	31512-ZG3-000	240	16
17670-899-000	228	10	18333-ZB7-800	215	5		206	16	23110-ZE2-610	289	4		125	10	31600-ZE2-861	282	28
	230	13	18333-ZE3-000	203	7		213	11	23120-889-750	287	13	28461-ZE2-W03	125	10	31610-Z5K-801ZA	273	2
17670-ZB6-000	229	14		204	7												
17672-880-000	222	10															

PART NO. INDEX

Part Number	Page	Ref.	Part Number	Page	Ref.	Part Number	Page	Ref.	Part Number	Page	Ref.	Part Number	Page	Ref.	Part Number	Page	Ref.
31610-Z5K-801ZB	273	2	31610-ZK9-W41ZA	273	2	34000			36135-ZF6-D41	169	28	76000			87522-ZH9-000	297	7
31610-Z5K-802ZA	274	2	31610-ZK9-W42ZA	273	2				36135-ZV1-003	169	28				87522-ZH9-010	297	8
31610-Z5K-802ZB	274	2	31610-ZK9-W42ZC	274	2	34150-ZH7-003	69	16		310	14	76122-952-000	228	18			
31610-ZE2-013ZB	269	1	31612-ZE2-003	269	2		70	16	36160-ZB4-003	268	6						
31610-ZE2-013ZD	269	1		275	3		282	26	36160-ZB4-013	268	6	81000				309	18
31610-ZE2-812ZB	269	1		284	2		285	17	36170-ZB4-003	171	55				87522-ZH9-820	297	7
31610-ZE2-812ZD	269	1	31614-ZE2-003	269	3	34150-ZH7-013	69	16	36170-ZB4-013	171	55	81329-567-020	135	16	87522-ZH9-821	297	7
31610-ZE2-822ZB	274	2		275	4		70	16	36180-ZV3-003	308	3				87524-883-690	297	9
31610-ZE2-823ZB	275	2		284	3		282	26	36180-ZV5-013	309	21	83000			87526-ZH8-000	302	4
31610-ZE2-824ZB	275	2	31615-ZE2-003ZA	275	5		285	17	36182-ZV4-650	308	4				87528-883-661	298	11
31610-ZE2-824ZE	275	2	31615-ZE2-003ZB	269	4							83501-ZF1-000	304	1	87528-898-620	298	12
31610-ZE2-832ZB	273	2		275	5	35000											
	274	2		276	5				38000							308	16
31610-ZE2-833ZB	273	2		284	4	35100-768-S01	308	12	38240-VA3-900	270	11	87000			87528-ZB7-700	308	9
	275	2	31615-ZE2-003ZE	275	5	35100-ZE2-023	270	8		278	13	87106-737-J00	303	13	87528-ZB7-701	308	9
31610-ZE2-834ZB	272	2	31615-ZE2-003ZG	269	4		277	10	38240-ZE2-840	278	13	87106-ZE9-V00	300	29	87528-ZE1-690	297	10
	273	2		275	5	35100-ZE2-033	270	8	38250-ZA8-701	270	12	87114-ZH7-000	301	31	87528-ZE2-000	302	5
	275	2		276	5		277	10		278	14	87124-ZV3-010	294	2	87528-ZE2-810	297	10
31610-ZE2-834ZE	272	2		284	4	35100-ZE2-842	277	10				87135-ZE2-000	300	27		302	5
	273	2	31620-762-003	308	11		309	27	42000						87528-ZF6-W40	297	10
	275	2	31620-ZG5-003	284	5	35100-ZE2-843	277	10							87528-ZH7-000	297	10
31610-ZE2-842ZB	274	2	31620-ZG5-013	271	24		309	27	42710-ZB6-003	312	4						
31610-ZE2-852ZB	272	2		284	5	35100-ZE2-862	277	10	42710-ZS9-A01	312	4	87135-ZE2-010	300	27	87529-Z4T-840	279	15
	275	2	31620-ZG5-023	284	5	35100-ZE2-W01	284	9							87529-ZE2-010	271	13
31610-ZE2-853ZA	273	2	31620-ZG5-033	284	5	35110-736-612	308	13	42715-ZB7-003	312	5						
31610-ZE2-853ZB	272	2	31630-ZE1-003	239	9	35110-766-003	308	13	42721-ZB6-000	312	6	87135-ZE2-020	300	28	87529-ZE2-020	271	13
	273	2	31630-ZE1-013	239	9	35111-880-003	270	9	42725-ZB6-000	312	7						
	275	2	31630-ZE2-841	239	9		277	11							87529-ZE2-811	271	13
31610-ZE2-853ZD	273	2	31630-ZE2-842	239	9		284	10	50000			87150-ZH8-000	303	14		278	15
31610-ZE2-854ZA	272	2	31630-ZE2-861	241	19	35111-880-013	270	9				87511-892-000	308	7		279	15
	273	2	31630-ZE2-W01	240	17		277	11	50310-ZB7-000ZD	312	8	87516-Z00-800	301	35	87529-ZE2-812	271	13
31610-ZE2-854ZB	272	2	31700-124-008	270	5		309	28	50317-254-000	136	26	87516-ZH7-800	309	31		279	15
	274	2		276	6	35480-ZF6-003	65	2	50319-ZB2-000	307	12	87516-ZM7-801	301	32	87529-ZE2-821	279	15
31610-ZE2-854ZD	272	2		308	1		66	2							87529-ZE2-831	279	15
	273	2							53000			87520-ZH8-000	302	1	87529-ZE2-860	279	15
31610-ZE2-854ZF	274	2	32000			36000			53149-964-003	169	29	87521-ZH9-000	302	2		285	11
	275	2										87521-ZH9-010	294	3	87529-ZE2-861	279	15
31610-ZE2-862ZB	274	2	32100-ZB7-700	310	9	36100-ZB7-701	310	12									
	275	2	32110-ZE2-860	283	29	36100-ZE1-015	133	11	63000						87529-ZE2-870	279	15
31610-ZE2-862ZD	275	2	32110-ZE2-W00	271	25		134	11				87521-ZH9-020	294	3	87529-ZH8-W40	278	15
31610-ZE2-872ZB	275	2		284	6	36100-ZF6-P81	134	11	63117-ZB7-700	310	15						
31610-ZE2-873ZB	272	2		230	14	36100-ZF6-P82	134	11	63140-ZB7-700ZA	310	16				87529-ZH8-W41	279	15
	273	2	32112-611-000	270	6	36100-ZH7-003	133	11	63140-ZB7-700ZB	310	16	87521-ZH9-030	294	3	87529-ZH9-W40	278	15
	274	2	32127-738-700	276	7		134	11								279	15
	275	2		308	2	36100-ZH7-W41	133	11	64000						87529-ZH9-W41	279	15
31610-ZE2-874ZB	272	2		309	26		134	11				87521-ZH9-040	294	3	87530-ZH9-000	303	6
	273	2	32197-ZE1-003	277	8		135	11	64181-ZB7-000	215	10				87530-ZH9-010	303	6
	274	2		284	7	36100-ZH8-W41	133	11	64182-ZB7-000	215	11				87530-ZH9-810	298	13
	275	2	32197-ZE2-003	66	4		134	11	64185-ZB7-000	215	12	87521-ZH9-810	294	3	87530-ZH9-840	303	6
31610-ZE2-874ZD	273	2	32197-ZH8-003	133	10	36100-ZH9-V01	129	2	64186-ZB7-000	215	13				87530-ZH9-841	302	6
31610-ZE2-W01ZC	284	1	32343-892-003	310	10	36100-ZH9-V02	129	2				87522-892-000	308	8		303	6
31610-ZE2-W02ZC	284	1	32510-ZB6-003	312	2	36101-ZE1-010	239	10	68000			87522-ZE1-010	302	3	87530-ZL8-810	303	8
31610-ZE2-W02ZE	284	1	32610-ZB7-000	312	3	36101-ZE2-701	239	10				87522-ZE1-810	296	4	87530-ZL8-850	299	17
31610-ZH9-W51ZA	273	2	32902-892-003	270	7	36103-ZE1-000	135	12	68310-ZB7-000	312	9				87532-ZB4-G60	298	14
31610-ZH9-W52ZA	273	2		277	9		239	11	68312-ZB7-000	312	10	87522-ZH8-W40	296	5		303	8
31610-ZH9-W52ZB	272	2		284	8		270	10	68325-899-000	305	19				87532-ZB4-H50	298	14
	273	2		310	11		278	12				87522-ZH8-W41	296	5		303	8
31610-ZH9-W52ZC	274	2				36106-892-003	310	13	68325-ZB4-000	305	18				87532-ZE1-000	303	7
31610-ZK2-W41ZA	272	2				36135-PH3-004	174	10							87532-ZE1-810	299	15

PART NO. INDEX

Part Number	Page	Ref.	Part Number	Page	Ref.	Part Number	Page	Ref.	Part Number	Page	Ref.	Part Number	Page	Ref.	Part Number	Page	Ref.
87532-ZH7-000	299	16	90003-ZE3-600	97	9		209	31	90432-ZE2-700	170	32	90741-889-810	97	12	92101-08028-0A	215	15
87532-ZH8-000	303	8	90004-ZE2-W01	127	13		211	9	90433-ZE2-700	170	33		287	19	92101-08035-0A	287	24
87532-ZH8-810	299	17	90006-ZE2-000	208	26			14		310	20		290	8	92101-08035-0H	287	24
		18	90007-ZE2-003	248	22			13	90434-ZB7-700	310	21	90741-ZE2-000	233	9	92301-05016-0A	267	15
87532-ZH8-W40	299	16	90008-ZE2-003	127	14	90050-ZE3-H00	211	9	90434-ZE2-700	170	34	90745-ZE2-600	97	12	92800-12000	71	20
87532-ZH9-V00	299	15		128	14	90050-ZH8-W40	199	21	90441-ZE2-010	55	14		292	9		287	25
87532-ZH9-W40	299	19		136	25		207	21	90446-KE1-000	66	7	90745-ZE2-G00	292	9	92900-08032-0E	54	13
87532-ZH9-W41	299	19			28		213	14	90471-ZE3-000	289	7	90745-ZK2-800	290	8		55	13
87533-ZA7-650	299	20	90009-ZE2-003	176	13	90055-ZE1-000	199	22	90473-147-000	78	14	90755-758-L00	305	11			
87533-ZB6-000	308	10		178	13		200	29		84	15	90801-ZE2-003	67	8	93000		
87533-ZC0-630	300	25		185	13		201	29		86	14	90851-898-000	228	12			
	309	22		189	17		207	22		91	19		307	14	93404-06020-08	176	13
87534-892-640	308	14		191	13		209	31			27	90854-ZB2-000	228	13		178	13
87534-ZE1-841	299	21	90012-KM9-000	55	13		211	10		93	15		307	15		186	13
	309	20	90012-ZE0-010	112	14			14		94	18	90854-ZB3-000	226	19		189	17
87535-ZE1-840	299	22	90013-883-000	66	5	90110-ZE2-003	247	19	90473-842-000	289	6	90855-ZB4-000	305	22		191	13
87535-ZE1-841	299	22		71	17	90114-SA0-000	263	27		292	8		312	17	93494-06020-08	176	13
87539-737-J00	303	15		135	17	90131-883-000	66	6	90473-ZE2-000	97	10		176	12		178	13
87539-898-620	300	26			18	90131-ZE3-790	71	19	90503-898-000	228	11					186	13
	309	23			19	90142-MB0-000	189	13	90511-735-801	310	22	91000				189	17
87539-ZB2-000	308	5		199	18	90201-415-000	175	9	90523-GB6-920	310	23					191	13
87561-733-J00	303	12		207	18		178	10	90534-706-010	97	11	91001-ZH9-003	97	13	93500-03006-1H	157	26
87565-ZB4-A00	303	11		240	12		184	10		289	7	91201-889-003	80	17		158	26
	307	13		261	24		189	14	90551-ZE1-000	109	6	91201-890-003	67	9	93500-03008-0A	311	28
87565-ZE2-000	303	11		267	13		191	10	90602-896-000	86	15		80	17	93500-03008-1G	158	26
87565-ZE2-810	299	23		268	7	90201-ZE3-790	233	8		90	12		90	14	93500-03012-0H	271	19
87565-ZE2-A01	299	23		271	14	90201-ZE3-V00	233	8		93	16		94	11		281	21
	303	11		279	16	90203-PB2-000	175	10	90602-ZE1-000	79	15		287	21	93500-04006-0H	263	30
87594-ZB4-A00	299	24		310	17		176	10		85	16		290	9		31	
	303	17		312	14		178	11		86	15		292	10	93500-04008-0A	173	25
			90014-ZE2-000	53	11		185	11		90	12	91202-805-610	287	22	93500-04012-0H	271	20
88000			90015-883-000	240	13		189	15		93	16	91202-Z2F-801	287	22		281	22
					14		191	11		94	9	91301-805-000	82	22		285	13
88911-MJ3-000	170	30		241	21	90203-ZA0-800	176	10	90605-230-000	263	28		94	12	93500-05008-0A	136	23
					22		178	11		29			287	23		268	9
89000					23		185	11	90624-SB0-003	194	12	91353-671-004	67	10	93500-05012-0A	170	35
			90015-ZE5-010	262	25		189	15	90630-751-000	71	18		223	12	93500-05016-0A	265	33
89000-ZE1-000	304	2		263	25		191	11		135	21	91406-ZE2-003	271	18	93500-05025-0H	267	16
	306	1		267	14	90206-ZE1-000	112	15		271	16		280	20	93500-05028-0A	264	32
89001-ZF1-000	304	3	90016-ZG9-N30	263	26	90301-ZV0-000	176	10		280	18	91424-Z4J-801	226	21	93500-05032-0A	136	24
89011-192-700	312	13	90017-883-000	240	14	90302-921-000	308	6	90650-SD9-003	171	50	91424-Z4J-802	226	21	93500-05035-0A	266	37
89102-538-000	304	4		241	20	90302-KF9-900	199	23		311	24	91424-Z5J-801	226	20	93500-05035-0H	267	17
89103-538-000	304	5			23		207	23	90654-SA4-003	136	27	91424-Z5J-802	226	20	93600-05010-0A	223	13
89210-ZF1-000	304	6	90018-ZK6-P10	55	13		213	16	90672-SA0-003	271	17	91502-ZB4-701	268	8		228	15
89216-809-000	306	2	90019-883-000	94	17	90310-ZB7-701	310	19		280	19	91502-ZB7-700	173	24		230	15
89216-ZB4-000	305	20		135	20	90325-044-000	176	11	90683-SA0-003	311	25	91551-898-000	228	14		307	17
89216-ZF1-000	304	7	90032-875-003	312	15		178	12	90684-ZA0-601	136	22		307	16	93891-05012-00	199	24
89218-ZE1-000	304	8	90042-ZB7-000	53	12		185	12		241	18	91551-ZB7-000	215	14		207	24
	306	3	90042-ZE2-000	53	12		189	16	90691-ZB7-003	311	26	91552-ZT1-000	214	8		213	17
89219-805-000	305	9	90042-ZE2-700	53	12		191	12	90700-ZB7-000	311	27	91554-ZB6-000	312	18	93891-06020-07	199	25
	306	4	90045-PD1-000	310	18	90380-MA6-010	271	15	90701-HC4-000	79	16	91601-ZE2-003	247	21		208	25
89220-ZE2-000	305	10	90047-ZE2-000	55	13		279	17		85	17					213	18
			90047-ZE3-791	55	13		285	12		90	13	92000			93892-05012-18	171	51
			90050-ZE1-000	199	19	90381-812-710	312	16		93	17					173	26
					20	90401-ZE2-620	292	6		94	10	92000-08025-0A	97	9	93892-05014-18	248	22
90001-ZE8-000	109	5		200	29	90402-ZE2-620	292	7	90741-805-000	97	12		290	10	93892-05032-18	248	23
90002-ZE2-U91	213	15		201	29	90403-889-000	287	18		287	19	92100-08035-0H	287	24	93893-05016-00	265	33
	214	11		207	19	90403-ZH9-003	247	20		290	8	92101-08025-0A	97	9		34	
90003-ZE2-000	97	9		20	20	90431-ZE2-700	170	31	90741-889-000	287	20		290	10	93901-360J0	208	26

PART NO. INDEX

Part Number	Page	Ref.	Part Number	Page	Ref.	Part Number	Page	Ref.	Part Number	Page	Ref.	Part Number	Page	Ref.	Part Number	Page	Ref.
94000				288	28				98000				162	28			
				290	11	95701-08016-08	213	22					163	28			
94001-04390-0S	271	21		292	11		214	13	98079-55841	58	17	99101-ZH8-0820	159	28			
	281	23	94301-12200	55	15	95701-08020-00	213	23	98079-55846	57	17		160	28			
	285	14	94305-20062	268	10	95701-08020-08	213	23		60	17		161	28			
94001-08000-0S	215	16	94305-20122	159	27		214	14		305	21		162	28			
94050-05000	193	11		174	11	95701-08025-00	225	17	98079-55854	59	17		163	28			
	194	13	94540-02010	170	38		290	10	98079-55855	58	17	99101-ZH8-0850	159	28			
94050-06000	176	14	94540-04010	170	39					60	17		161	28			
	178	14	94540-04018	173	27		292	12	98079-56841	59	17		162	28			
	187	14		268	11	95701-08032-08	288	30		60	17		163	28			
	189	18	94540-05010	173	28	95701-08035-00	81	19		305	21		171	44			
	191	14	94540-07010	171	40		85	19	98079-56846	59	17	99101-ZH8-0880	159	28			
	193	13					87	18		60	17		161	28			
	194	14	95000				91	16	98079-56854	59	17		162	28			
	230	16					93	19		60	17		171	44			
	265	35	95001-45120-40	226	20		94	14	98079-56855	59	17		173	29			
	267	18	95001-45150-40	226	21	95701-08040-00	215	19		60	17	99101-ZH8-0900	159	28			
	311	29		228	16		249	25	98200-30500	271	23		161	28			
94050-06080	193	12	95001-45222-40	224	15		291	13		281	25		162	28			
94050-08000	200	26		225	15		293	13	98200-31500	281	25		171	44			
	209	27	95001-45250-40	230	17	95701-08055-00	313	22		309	29		173	29			
	211	11		307	18	95701-10080-00	57	16	98200-32500	285	16	99101-ZH8-0920	159	28			
	213	19	95001-45430-40	224	15	95725-10080-00	56	16					161	28			
	214	9	95002-02070	171	41		57	16	99000				162	28			
	223	14	95002-02080	225	16	95900-08025-00	225	17					171	44			
	312	19		228	17		290	12	99001-10120	305	13		173	29			
94050-10000	67	11		229	15		292	12		306	8	99101-ZH8-0950	159	28			
	312	20		230	18	95900-08035-00	81	19	99001-10140	305	14		161	28			
94070-06080	249	24		307	19		85	19	99001-14170	305	15	99104-ZE0-0450	174	12			
94101-04800	282	27	95002-02100	229	16		87	18		306	9	99204-ZE0-0350	163	29			
	285	18		230	19		91	16	99003-30000	306	13	99204-ZE0-0400	163	29			
94101-06800	81	18	95002-40800-08	227	25		93	19	99003-50000	306	14		164	29			
	85	18	95002-45000	194	15	95900-08040-00	290	13	99004-21003	305	16		171	45			
	86	16	95003-09023-31	194	16		293	13		306	10	99204-ZE2-0380	163	29			
	91	15	95003-09038-31	194	17				99005-01000	306	15	99204-ZE2-0400	163	29			
	93	18	95005-11100-30	52	7	96000			99008-02000	306	11		164	29			
	94	13		53	7				99008-02300	305	17		171	45			
94103-05000	170	37	95005-11105-30	52	7	96100-62020-00	69	15		306	11		173	30			
94103-05700	200	27		53	7		85	20	99101-ZF5-0820	160	28						
	209	28	95005-35040-10	171	42		91	17		163	28						
	213	20	95005-35055-10	171	42		93	20	99101-ZF5-0850	160	28						
94109-12000	68	12	95005-35065-10	171	42	96100-62040-00	85	21		163	28						
	288	26	95005-35075-10	171	43		87	19	99101-ZF5-0880	160	28						
94111-04800	271	22	95005-35085-10	311	31		93	21		163	28						
	281	24	95005-35130-10	171	43	96100-62050-00	288	31	99101-ZF5-0900	160	28						
	285	15	95005-35175-10	311	32	96100-62060-00	82	20		163	28						
94111-05000	200	28	95700-06050-08	288	29		85	22	99101-ZF5-0920	160	28						
	209	29	95700-08032-08	288	30		87	20		163	28						
		30	95701-06008-00	128	14		91	18	99101-ZF5-0950	160	28						
	213	21		136	28		93	22		163	28						
94111-05800	267	19	95701-06010-00	305	23		94	15	99101-ZH7-0800	161	28						
94111-08800	288	27	95701-06012-00	69	14		288	32	99101-ZH7-0820	161	28						
94201-20180	311	30		214	12		291	14	99101-ZH7-0850	161	28						
94251-08000	69	13		215	17		293	14	99101-ZH7-0880	161	28						
94251-10000	68	13	95701-06035-08	176	13	96100-63020-00	87	21	99101-ZH7-0900	161	28						
	69	13	95701-06050-08	288	29		93	23	99101-ZH7-0920	161	28						
94252-08000	305	12	95701-08016-00	213	22		293	15	99101-ZH8-0800	159	28						
94301-08140	86	17		215	18					161	28						

PART NAME INDEX

Part name	Page	Ref.	Part name	Page	Ref.	Part name	Page	Ref.
[A]			BEARING, RADIAL BALL, 6206 ...	288	32	BOLT, FLANGE, 6X8	128	14
ALERT UNIT, OIL	69	16		291	14		136	28
	70	16	BEARING, RADIAL BALL, 6302 ...	293	14	BOLT, FLANGE, 8X16	213	22
	272	1		87	21		214	13
	282	26		93	23		215	18
	285	17	BOLT-WASHER, 5X14	293	15	BOLT, FLANGE, 8X20	313	21
ALERT UNIT, OIL / SWITCH, ENGINE STOP	129	2	BOLT-WASHER, 6X20	248	22		213	23
ARMATURE COMP.	245	11		176	13	BOLT, FLANGE, 8X25	214	14
ARM COMP., COCK CONTROL	310	4		178	13		225	17
ARM COMP., GOVERNOR	266	36		186	13		290	10
ARM, GOVERNOR	250	1		189	17			12
	267	3	BOLT-WASHER, 6X22	191	13		292	12
ARM, VALVE ROCKER	111	3		176	13	BOLT, FLANGE, 8X32	288	30
ARRESTER, SPARK	197	8		178	13	BOLT, FLANGE, 8X35	81	19
	205	8		185	13		85	19
	210	7	BOLT, CONNECTING ROD	189	17		87	18
	212	6	BOLT, DRAIN PLUG, 12MM	191	13		91	16
	214	10		109	5		93	19
AUTO-THROTTLE ASSY.	268	3		71	20		94	14
			BOLT, DRAIN PLUG, 12X15	287	25	BOLT, FLANGE, 8X40	215	19
[B]				66	6		249	25
BAG SET, TOOL	304	3	BOLT, FLANGE, 10X80	56	16		290	13
BAG, TOOL, 200MM	306	11		57	16		291	13
BAG, TOOL, 230MM	305	17	BOLT, FLANGE, 5X10	94	17		293	13
	306	11		135	20	BOLT, FLANGE, 8X55	313	22
BAND	270	7	BOLT, FLANGE, 6X10	127	14	BOLT, GOVERNOR ARM	262	25
	277	9		128	14		263	25
	284	8		136	25		267	14
	310	11			28	BOLT, HEAD COVER	53	11
BAND, TOOL SETTING	312	13	BOLT, FLANGE, 6X12	305	23	BOLT, HEX.	97	9
BARRÉL ASSY., CYLINDER	61	1		66	5	BOLT, HEX., 3/8-24UNF	97	9
	62	1		69	14	BOLT, HEX., 8X25	97	9
	63	1		71	17		290	10
	64	1		135	17	BOLT, HEX., 8X28	215	15
	65	1			18	BOLT, HEX., 8X35	287	24
BAR A, HANDLE	306	15		199	18	BOLT, PIVOT, 8MM	112	14
BASE COMP., CONTROL	259	16		207	18	BOLT, RECESSED, 5X16	267	15
BASE COMP., MUFFLER COVER	198	14		214	12	BOLT, SPECIAL	310	18
	206	14		215	17	BOLT, STUD, 8X111	53	12
	212	9		240	12	BOLT, STUD, 8X123	53	12
BASE, CORD CLIP	311	27		261	24	BOLT, STUD, 8X22	55	13
BEARING, RADIAL BALL	97	13		267	13	BOLT, STUD, 8X25	55	13
BEARING, RADIAL BALL, 6202	69	15		268	7	BOLT, STUD, 8X32	54	13
	85	20		271	14		55	13
	91	17		279	16	BOLT, STUD, 8X34	55	13
	93	20		310	17	BOLT, STUD, 8X47	55	13
BEARING, RADIAL BALL, 6204	85	21	BOLT, FLANGE, 6X28	312	14	BOLT, STUD, 8X98	53	12
	87	19		240	13	BOX ASSY., CONTROL	269	1
	93	21			14		272	2
BEARING, RADIAL BALL, 6205	288	31		241	21		273	2
BEARING, RADIAL BALL, 6206	82	20			22		274	2
	85	22			22		275	2
	87	20	BOLT, FLANGE, 6X32	240	14		284	1
	91	18		241	20	BOX, TOOL	304	1
	93	22			23	BRACKET, CASE MOUNTING	269	3
	94	15	BOLT, FLANGE, 6X35	176	13		275	4
			BOLT, FLANGE, 6X50	288	29		284	3
						BRACKET, CENTER	243	6
						BRACKET, FR.	243	7



PART NAME INDEX

Part name	Page	Ref.	Part name	Page	Ref.	Part name	Page	Ref.
BRACKET, FUEL COCK	230	6	CAP, REDUCTION OIL	287	16	CLIP, TUBE	228	17
BRACKET, L. WHEEL	312	7	CARBURETOR ASSY.	143	10		229	15
BRACKET, R. WHEEL	312	6		144	10			16
BRUSH	244	9		145	10		230	18
BUSH, ARM PIVOT	169	29		167	8			19
BUSH, AUTO-THROTTLE LEVER	268	8		168	8	CLIP, VALVE GUIDE	307	19
BUSH, CHOKE LEVER	173	24		172	8		50	4
BUSH, COCK CONTROL ARM	310	6		174	2	CLIP, WIRE HARNESS	171	50
BUSH, CONTROL KNOB	310	13	CASE COMP., AIR CLEANER	192	4		194	12
BUSH, FUEL PURGE	229	6		194	5		311	24
			CASE COMP., PRE AIR CLEANER ..	189	10	CLIP, WIRE HARNESS, 25MM	311	25
[C]			CASE COMP., RECOIL STARTER ...	116	2	CLIP, WIRE HARNESS, 6MM	136	27
CABLE COMP., CHOKE	310	7		117	2	CLUTCH COMP., OVERRUNNING	243	5
CABLE, EARTH	312	3	CASE, CONTROL	269	2	COCK ASSY., FUEL	228	2
CAMSHAFT ASSY.	110	1		275	3		230	4
	111	1		284	2		307	2
CAP ASSY., NOISE SUPPRESSOR ...	236	3	CASE, RECOIL GRIP	310	16	COIL ASSY., CHARGE	239	9
	237	4	CASE, REDUCTION	286	1		240	17
CAP ASSY., OIL FILLER	73	4	CENTER, CLUTCH	286	4		241	19
	74	6	CENTER, CLUTCH WEIGHT	287	12	COIL ASSY., IGNITION	235	1
	83	4	CHAIN, DRIVE	287	14		236	1
		5	CHAIN, P.T.O. DRIVE	289	3	COIL ASSY., LAMP	237	5
	85	24	CHAMBER SET, FLOAT	140	4			6
		25		141	5	COLLAR B, AIR CLEANER	175	6
	86	4		167	4		177	5
		5		171	46		183	8
	89	4	CHOKE SET	172	4		188	8
		5		143	9		191	8
	92	4	CIRCLIP, 5MM	174	1	COLLAR, 6.9X9	214	8
		5		263	28	COLLAR, AIR CLEANER	175	5
CAP COMP., AIR CLEANER	175	8			29		177	4
	178	9	CLAMPER, CORD	237	7		183	7
CAP COMP., FUEL FILLER	220	6		240	15		188	7
		7	CLAMP, TUBE	227	25		191	7
	221	7	CLIP A, AIR CLEANER WIRE	192	7	COLLAR, AIR CLEANER CASE	195	1
	227	23		194	8		202	1
	228	8	CLIP B, AIR CLEANER WIRE	192	8		212	1
	229	11		194	9	COLLAR, CLUTCH STOP	243	3
	230	11	CLIP, BREATHER TUBE	53	10	COLLAR, GOVERNOR ROD	267	5
	307	9		194	2	COLLAR, LEVER	170	34
CAP, CHOKE DUST	146	12	CLIP, GOVERNOR HOLDER	79	15	COLLAR, MUFFLER STAY	215	14
	168	10		85	16	COLLAR, PUSH ROD	310	21
	172	10		86	15	COLLAR, SETTING	166	32
CAP, CHOKE LEVER	172	17		90	12		168	12
	268	1		93	16		172	12
CAP, FUEL METER	229	8		94	9		174	4
CAP, LEVER	155	22	CLIP, HARNESS	136	22	COLLAR, STOPPER	261	22
CAP, MUFFLER	197	6		241	18	COLLAR, TANK CUSHION	228	14
	203	6		311	26		307	16
	210	5	CLIP, HIGH TENSION CORD	133	9	COLLAR, WHEEL SHAFT	312	18
	74	5	CLIP, PISTON PIN, 18MM	109	6	CONTACTOR ASSY.	243	4
CAP, OIL FILLER			CLIP, PURSE LOCK	71	18	CONTROL ASSY.	253	5
	82	21		135	21		254	6
	83	6		271	16			7
	86	6		280	18			8
	91	24	CLIP, TUBE	130	3			9
	92	6		171	41		255	9
	94	3		194	15		267	2
CAP, PRE AIR CLEANER	189	11		225	16	CORD COMP., EMERGENCY	308	4

PART NAME INDEX

Part name	Page	Ref.	Part name	Page	Ref.	Part name	Page	Ref.
CORD, EARTH	66	4	DOWEL PIN, 8X14	86	17	FLYWHEEL COMP.	233	10
CORD, STOP SWITCH	239	10		288	28		234	11
COUNTERSHAFT COMP.	292	4		290	11	FRAME COMP., UNDER	312	8
COVER ASSY., CHAIN CASE	289	1		292	11	FUSE, BLADE	271	23
COVER ASSY., CRANKCASE	72	2	DRIVER 3, MINUS SCREW	306	13		281	25
	73	2	DRIVER, SCREW	304	4		285	16
	83	2	DUCT, LOWER MUFFLER	215	2		309	29
	85	23	DUCT, UPPER MUFFLER	215	3			
	86	2				[G]		
	88	3	[E]			GASKET KIT	314	1
	92	3	ELBOW COMP., AIR CLEANER	175	7	GASKET SET	137	1
	94	1		177	8		138	1
COVER ASSY., REDUCTION CASE ...	292	1		184	9		139	1
COVER COMP., AIR CLEANER	188	5		189	9		167	1
	192	6		191	9		172	1
	194	7	ELEMENT, AIR CLEANER	175	2	GASKET, CYLINDER HEAD	50	5
COVER COMP., FAN	131	5		177	7	GASKET, EX. PIPE	197	7
	132	5		180	2		203	7
COVER COMP., HEAD	51	6		188	2		204	7
COVER COMP., MUFFLER	198	12		190	2		210	6
	205	12		192	2		212	4
	212	7		194	3			5
COVER COMP., RR. MUFFLER	198	13	EMBLEM	294	3		213	24
	205	13		295	3		214	6
	212	8		302	2			7
COVER, AIR CLEANER	175	4		309	24			15
	177	3			30		215	5
	181	4	E-RING, 2MM	170	38	GASKET, MUFFLER	197	9
		5	E-RING, 4MM	170	39			10
	190	4		173	27		198	10
COVER, CONTROL	175	1		268	11		205	9
COVER, DUCT	94	16	E-RING, 5MM	173	28			10
COVER, REDUCTION	286	2	E-RING, 7MM	171	40		210	8
CRANKSHAFT COMP.	95	1					211	8
		2						13
	96	2	[F]			GAUGE ASSY., FUEL	217	4
		3	FAN, COOLING	231	1	GAUGE ASSY., THICKNESS	304	6
		4	FAN, GENERATOR COOLING	312	1	GAUGE, OIL LEVEL	287	17
		5	FILTER COMP., FUEL	228	10	GEAR, DRIVE PINION	244	8
		6		229	14	GEAR, PRIMARY DRIVE	292	3
	97	6		230	13	GEAR, REDUCTION	245	13
		14	FILTER, CUP	228	5	GOVERNOR ASSY.	75	9
CUP, FUEL STRAINER	157	25		307	5		82	23
	228	6	FILTER, DRAIN TUBE	193	10		84	10
	230	7		194	11		86	9
	307	6	FILTER, FUEL	221	9		89	7
				222	10		91	20
[D]				307	11		92	10
DEFLECTOR COMP., MUFFLER	198	11	FILTER, OUTER	181	3		94	4
	205	11		188	3	GRID, AIR CLEANER	175	3
DIAPHRAGM ASSY.	169	24		190	3		177	2
DISK, CLUTCH FRICTION	286	5	FLANGE COMP., BAFFLE	211	12	GRIP	304	5
DOWEL PIN, 12X20	55	15	FLOAT SET	139	3	GRIP, SCREW DRIVER	306	14
DOWEL PIN, 8X12	79	16		167	3	GRIP, STARTER	124	10
	85	17		172	3		125	10
	90	13	FLYWHEEL COMP.	232	5		310	8
	93	17			6			
	94	10		233	7			



PART NAME INDEX

Part name	Page	Ref.	Part name	Page	Ref.	Part name	Page	Ref.
GROMMET, AIR CLEANER	182	6	INSULATOR A, UPPER MUFFLER			JET, MAIN, #95	161	28
	188	6	DUCT	215	12		163	28
	190	5	INSULATOR B, LOWER MUFFLER			JET, PILOT, #45	174	12
GROMMET, CHOKE ROD	169	26	DUCT	215	11	JOINT, FUEL TANK	217	2
GROMMET, CORD	238	8	INSULATOR B, UPPER MUFFLER			JOINT, ROD	169	19
	239	8	DUCT	215	13		267	1
	240	16	INSULATOR, CARBURETOR	149	15		310	3
GROMMET, CRANKCASE	305	22		168	13			
	312	17		171	53	[K]		
GROMMET, DRAIN HOLE	135	16		172	13			
GROMMET, FENDER	170	30		174	5	KEY ASSY., COMBINATION SWITCH ..	308	13
GROMMET, WIRE CORD	230	14				KEY COMP.	270	9
GUIDE, CHOKE ROD	169	27	[J]				277	11
GUIDE, EX. VALVE	50	3					284	10
GUIDE, IN. VALVE	50	2	JET SET, PILOT, #35	163	29		309	28
GUIDE, PRE AIR CLEANER	189	12	JET SET, PILOT, #38	163	29	KEY, 6.3X6.3X33	290	8
GUIDE, PUSH ROD	112	13	JET SET, PILOT, #40	163	29	KEY, 6.3X6.3X43	97	12
GUIDE, UNDER AIR	312	9		164	29		292	9
				171	45	KEY, 6.3X6.3X63	292	9
[H]				173	30	KEY, 7X7X33	97	12
HANDLE, BOX WRENCH	305	9	JET, MAIN, #80	159	28		287	19
	306	4		161	28		290	8
HARNESS ASSY., SUB WIRE	271	25		162	28	KEY, CLUTCH CENTER	287	20
	283	29	JET, MAIN, #82	163	28	KEY, SPECIAL WOODRUFF, 25X18 ..	233	9
	284	6		159	28	KNOB, COCK LEVER	310	10
	310	9		160	28			
HARNESS, SUB WIRE	277	8		161	28	[L]		
	284	7		162	28			
HEAD COMP., CYLINDER	49	1	JET, MAIN, #85	163	28	LABEL, AIR CLEANER CAUTION	299	21
	50	1		159	28		309	20
HOLDER, BRUSH	245	14		160	28	LABEL, CAUTION	297	7
HOLDER, CABLE	173	23		161	28			8
	257	13		162	28		309	18
		14		163	28	LABEL, E-SPEC	300	27
	267	8	JET, MAIN, #88	171	44			28
HOLDER, CLUTCH SPRING	286	9		159	28		301	30
HOLDER, CLUTCH WEIGHT	287	11		160	28		303	16
HOLDER, FUEL FILTER	222	11		161	28			18
HOLDER, GOVERNOR WEIGHT	77	11		162	28	LABEL, FUEL CAUTION	300	29
	82	25		163	28	LABEL, FUEL WARNING	302	3
	84	12		171	44	LABEL, SPECIFICATION	298	13
	86	11	JET, MAIN, #90	173	29		302	6
	89	9		159	28		303	6
	91	22		160	28	LABEL, WARNING	301	31
	92	12		161	28	LENS ASSY., PROTECTOR	270	12
	94	6		162	28		278	14
HOLDER, STOP SWITCH CORD	135	12		163	28	LEVER COMP., CHOKE	153	19
	239	11		171	44		174	9
	270	10	JET, MAIN, #92	173	29	LEVER COMP., ENGINE SWITCH	310	1
	278	12		159	28	LEVER COMP., SOLENOID THROTTLE	268	5
		20		160	28	LEVER, CHOKE	169	18
HOLDER, WIRE	260	21		161	28	LEVER, COCK	153	20
				162	28		154	20
				163	28	LEVER, CONTROL	255	10
[I]				171	44	LEVER, REMOTE CHOKE	173	20
INSULATOR	246	16		173	29	LIFTER, VALVE	111	4
INSULATOR A, LOWER MUFFLER			JET, MAIN, #95	159	28			
DUCT	215	10		160	28			

PART NAME INDEX

Part name	Page	Ref.	Part name	Page	Ref.	Part name	Page	Ref.
[M]			MOTOR ASSY., STARTER	242	1	NUT, PUSH, 2.6	310	19
MARK AB, CAUTION	308	8	MUFFLER COMP.	195	2	NUT, SELF-LOCK, 6MM	263	27
MARK A, COMBINATION	302	1		202	2	NUT, SPECIAL, 16MM	233	8
MARK B, COMBINATION	302	4		210	1	NUT, SPECIAL, 6MM	312	16
MARK V, CAUTION	308	7		212	2	NUT, TOOL BOX SETTING	176	11
MARK, AIR CLEANER	299	20		214	1		178	12
	300	25		215	1		185	12
	308	10					189	16
	309	22	[N]				191	12
MARK, AIR CLEANER CAUTION	297	9	NOSE, SILENCER	187	15	NUT, WING	176	10
MARK, AIR CLEANER SALES POINT	299	22		190	6	NUT, WING, 6MM	176	10
MARK, CAUTION	296	4	NOZZLE, MAIN	147	13		178	11
		5		168	11		185	11
		6		172	11		189	15
	302	3	NUT-WASHER, 6MM	249	24		191	11
	303	14	NUT, AIR CLEANER COVER	175	10			
	308	17		176	10	[O]		
MARK, CHOKE	297	10		178	11	OIL SEAL	287	22
	298	11		185	11	OIL SEAL, 30X45X8	80	17
		12		189	15	OIL SEAL, 30X46X8	67	9
	302	5		191	11		80	17
	308	16	NUT, CAP, 6MM	175	9		90	14
	309	19		178	10		94	11
MARK, CONTROL BOX	271	13		184	10		287	21
	278	15		189	14		290	9
	279	15		191	10		292	10
	285	11	NUT, FLANGE, 10MM	67	11	OIL SEAL, 30X50X7	287	22
MARK, EARTH	308	14		312	20	O-RING	148	14
MARK, EMERGENCY SWITCH			NUT, FLANGE, 5MM	193	11		228	1
INDICATION	294	2		194	13		230	1
MARK, ENGINE CONTROL	308	9	NUT, FLANGE, 6MM	176	14		307	1
MARK, ENGINE SWITCH	299	15		178	14	O-RING, 14MM	67	10
		19		187	14		223	12
MARK, EX. CAUTION	300	26		189	18	O-RING, 26X2.7	82	22
	308	5		191	14		94	12
	309	23		193	12	O-RING, 9.0X1.3	287	23
MARK, EX. GAS WARNING	303	12			13		228	4
MARK, FUEL INDICATION	299	23		194	14		307	4
	303	11		230	16			
MARK, FUEL WARNING	303	13		265	35	[P]		
MARK, HEAT CAUTION	303	15		267	18	PACKING	247	21
MARK, OIL ALERT	298	14		311	29	PACKING C, FUEL METER	229	12
	299	15	NUT, FLANGE, 8MM	200	26	PACKING, AIR CLEANER	169	23
		17		209	27		173	22
		18		211	11		188	4
	303	7		213	19	PACKING, AIR CLEANER COVER	151	17
		8		214	9	PACKING, CARBURETOR	168	14
MARK, OIL CAUTION	299	24		223	14		172	14
	303	17		312	19		174	7
MARK, OPERATOR CAUTION	301	32	NUT, HEX., 16MM	308	6	PACKING, CASE COVER	73	3
		33	NUT, HEX., 4MM	271	21		83	3
		35		281	23		86	3
	309	31		285	14		88	2
MARK, THROTTLE INDICATION	299	16	NUT, HEX., 5MM	199	23		92	2
METER ASSY., FUEL	228	7		207	23		94	2
	230	8		213	16	PACKING, CHAIN CASE COVER	289	2
	307	7	NUT, HEX., 8MM	215	16		292	2
METER COMP., FUEL	229	7	NUT, PIVOT ADJUSTING	112	15			



PART NAME INDEX

Part name	Page	Ref.	Part name	Page	Ref.	Part name	Page	Ref.
PACKING, ELBOW	177	1	PIPE, EX.	196	5	RETAINER, EX. VALVE SPRING	112	11
	179	1		197	5	RETAINER, IN. VALVE SPRING	112	10
	188	1		203	5			11
	190	1		210	4	RETAINER, SPRING	123	8
PACKING, FUEL COCK	156	24		212	3	RING SET, PISTON	98	1
PACKING, FUEL FILLER CAP	221	8		214	5		99	1
	227	22	PISTON	105	2		100	1
		24		106	2		101	1
	228	9		107	2		102	1
	229	13		108	2		103	1
	230	12		109	2		104	1
	307	10		111	5		105	1
PACKING, HEAD COVER	53	8	PIVOT, ROCKER ARM	286	7	RING, SNAP	242	2
PACKING, INSULATOR	151	18	PLATE COMP., CLUTCH PRESSURE ..	286	6	ROD ASSY., CONNECTING	109	4
	152	18	PLATE, CLUTCH	231	2	ROD, CHOKE	169	20
	168	15	PLATE, COOLING FAN SETTING ...	303	11		267	12
	172	15	PLATE, FUEL INDICATION	307	13	ROD, CHOKE CONTROL	169	25
	174	8	PLATE, LEVER SETTING	155	21	ROD, COCK CONTROL	310	5
PACKING, OIL FILLER CAP	74	7	PLATE, SET	198	16	ROD, GOVERNOR	251	2
	75	8		206	16		267	4
	83	7		213	11	ROD, GOVERNOR CONTROL PUSH	310	2
		8	PLUG, CONE TYPE	176	12	ROD, PUSH	111	2
	84	9	PLUG, OIL DRAIN	71	19	ROPE, RECOIL STARTER	125	11
	86	7	PLUG, SEALING	67	8	ROTATOR, VALVE	112	12
	89	6	PLUG, SPARK	57	17	RUBBER, BOTTOM	305	18
	91	25		58	17			19
		26		59	17		312	11
	92	7		60	17			12
		8		305	21	RUBBER, FUEL	226	19
PACKING, REDUCTION COVER	286	3	PLUG, USELESS HOLE	136	26		228	13
PANEL COMP., CONTROL	269	4	PROTECTOR COMP., FAN COVER ...	132	6		307	15
	275	5	PROTECTOR COMP., MUFFLER	195	3	RUBBER, SUPPORTER	216	1
	276	5		196	3		217	1
	284	4	PROTECTOR, CIRCUIT	203	3		229	3
PANEL, CONTROL BOX	271	13		270	11	RUBBER, TANK CUSHION	228	12
	279	15	PROTECTOR, EX. PIPE	278	13		307	14
PAN, CLEANER OIL	177	6		196	4	RUBBER, TANK MOUNTING	307	12
PIN, GOVERNOR WEIGHT	77	12		201	30			
	84	13		203	4	[S]		
	86	12	PROTECTOR, L. MUFFLER	210	3	SCREEN SET, FUEL STRAINER	228	3
	89	10	PROTECTOR, MUFFLER INNER	214	3		307	3
	91	23	PROTECTOR, MUFFLER OUTER	214	2	SCREW-WASHER, 4X14	249	26
	92	13	PROTECTOR, R. MUFFLER	210	2	SCREW-WASHER, 4X6	247	19
	94	7	PULLEY COMP., STARTER	231	3	SCREW-WASHER, 5X12	171	51
PIN, LOCK, 10MM	68	13	PULLEY, RECOIL STARTER	118	3		173	26
	69	13		119	3		199	24
PIN, LOCK, 8MM	69	13	PULLEY, STARTER	232	4		207	24
	305	12	[R]				213	17
PIN, PISTON	109	3	RATCHET, STARTER	119	4	SCREW-WASHER, 5X14	248	22
PIN, ROLLER ARM, 8X22	305	11	RECTIFIER ASSY., REGULATOR ...	271	24	SCREW-WASHER, 5X16	265	33
PIN, SPLIT, 2.0X18	311	30		282	28			34
PIN, SPRING, 2X12	159	27		284	5	SCREW-WASHER, 5X32	248	23
	174	11	RECTIFIER ASSY., SILICON	270	5	SCREW-WASHER, 6X20	199	25
PIN, SPRING, 2X6	268	10		276	6		208	25
PIPE COMP., EX.	215	4		308	1		213	18
PIPE, BOX WRENCH EXTENSION	305	10	RECTIFIER COMP., REGULATOR ...	308	11	SCREW SET	142	8
			REINFORCEMENT, GRIP	126	12		165	30
							167	7

PART NAME INDEX

Part name	Page	Ref.	Part name	Page	Ref.	Part name	Page	Ref.
SCREW SET	171	48	SCREW, TAPPING, 5X8	200	29	SPRING	247	17
	172	52		201	29	SPRING, BRUSH RETURN	245	12
	173	7		207	19	SPRING, CABLE RETURN	260	19
SCREW SET, DRAIN	141	31			20		267	10
	141	7		209	31			11
	165	31		211	9	SPRING, CHOKE RETURN	173	21
	167	6			14		268	2
	171	47		213	13	SPRING, CLUTCH FREE	286	8
SCREW SET, PILOT	172	6	SCREW, TAPPING, 6X10	208	26	SPRING, COCK LEVER	155	23
	141	6	SCREW, THROTTLE STOP	146	11	SPRING, CONTROL ADJUSTING	136	29
	165	30		168	9		259	17
	167	5		172	9		267	9
	172	5		174	3	SPRING, FRICTION	120	5
SCREW, CENTER	127	13	SCROLL, GENERATOR FAN	129	1		121	5
SCREW, FLAT, 5X10	223	13	SEAL, AIR CLEANER	192	9	SPRING, GOVERNOR	252	3
	228	15		194	10		253	3
	230	15	SEAL, CHOKE LEVER	170	32		267	6
SCREW, PAN, 3X12	307	17	SEAL, ENGINE SWITCH LEVER	310	15		308	15
	271	19	SEAL, FUEL FILLER NECK	229	10	SPRING, LEVER	256	11
	281	21		230	10	SPRING, MANUAL CHOKE	169	22
SCREW, PAN, 3X6	157	26	SEAL, MUFFLER DUCT	215	7	SPRING, RATCHET	122	7
	158	26			8		123	7
SCREW, PAN, 3X8	158	26			9	SPRING, RETURN	261	23
	311	28	SEAL, MUFFLER PROTECTOR	214	4	SPRING, STARTER RETURN	121	6
SCREW, PAN, 4X12	271	20	SEAL, UNDER AIR GUIDE	312	10	SPRING, THROTTLE RETURN	253	4
	281	22	SEAL, VALVE STEM	113	16		267	7
	285	13	SEAT, VALVE SPRING	53	9	SPRING, VALVE	112	9
SCREW, PAN, 4X6	263	30	SEPARATOR, AIR CLEANER	192	3	SPRING, WEIGHT RETURN	112	6
		31		194	4	SPROCKET COMP., DRIVE	287	13
SCREW, PAN, 4X8	173	25	SHAFT	247	18	SPROCKET, DRIVE	289	4
SCREW, PAN, 5X12	170	35	SHAFT COMP., P.T.O.	287	15	STARTER ASSY., RECOIL	114	1
SCREW, PAN, 5X16	265	33	SHAFT, GOVERNOR ARM	66	3		115	1
SCREW, PAN, 5X16.5	189	13	SHAFT, P.T.O.	289	5	STAY ASSY., CHOKE CONTROL	260	18
SCREW, PAN, 5X25	267	16		292	5	STAY ASSY., MANUAL CHOKE	168	16
SCREW, PAN, 5X28	264	32	SHIM A	292	6		169	16
SCREW, PAN, 5X32	136	24	SHIM B	292	7		171	54
SCREW, PAN, 5X35	266	37	SHROUD	133	7	STAY ASSY., REMOTE CHOKE	173	18
	267	17	SHROUD ASSY., UPPER	131	4	STAY COMP., MUFFLER	215	6
SCREW, PAN, 5X8	136	23	SHROUD COMP., LOWER	133	8	STAY COMP., REMOTE CHOKE	173	19
	268	9	SLIDER, GOVERNOR	77	13	STAY COMP., SOLENOID	169	17
SCREW, RECESSED, 5X25	263	26		78	13	STAY, AIR CLEANER	192	5
SCREW, SPECIAL, 6X12	271	15		84	14		194	6
	279	17		86	13	STAY, MUFFLER COVER	198	15
	285	12		89	11		206	15
SCREW, TAPPING, 4X6	199	22		92	14		213	10
	200	29		93	14	STAY, SOLENOID THROTTLE	268	4
	201	29		94	8	STOPPER, CHOKE ROD	169	21
	207	22	SOLENOID ASSY.	268	6	STOPPER, DISCHARGE GUARD	228	18
	209	31	SPACER COMP., CARBURETOR	150	16	STRAINER COMP., FUEL	226	18
	211	10		174	6		229	4
		14	SPACER, CONTROL LEVER	258	15	STRAINER, FUEL	230	5
SCREW, TAPPING, 4X8	213	15	SPACER, MUFFLER COVER	198	17	STRAP, CABLE, 118MM	271	17
	214	11		206	17		280	19
SCREW, TAPPING, 5X14	312	15		213	12	SUB HARNESS	66	4
SCREW, TAPPING, 5X25	199	21	SPANNER, 10X12	305	13		133	10
	207	21		306	8	SUSPENSION, COUPLER	270	6
	213	14	SPANNER, 10X14	305	14		276	7
SCREW, TAPPING, 5X8	199	19	SPANNER, 14X17	305	15		308	2
		20		306	9		309	26



PART NAME INDEX

Part name	Page	Ref.	Part name	Page	Ref.	Part name	Page	Ref.
SUSPENSION, STRAINER	229	5	TUBE, FUEL, 4.5X430	224	15	WASHER, SPRING, 5MM	213	21
SWITCH ASSY., COMBINATION	270	8	TUBE, VINYL, 4.5X8X230	194	16		267	19
	277	10	TUBE, VINYL, 4.5X8X380	194	17	WASHER, SPRING, 8MM	288	27
	284	9				WASHER, TANK CUSHION	228	11
	308	12	[V]			WASHER, THRUST, 25MM	287	18
	309	27				WASHER, THRUST, 2.7X8	170	33
SWITCH ASSY., EMERGENCY STOP ..	308	3	VALVE ASSY., SOLENOID	171	49		310	20
	309	21			55	WASHER, WAVE, 10MM	310	22
SWITCH ASSY., ENGINE STOP	129	2		172	16	WEIGHT, BALANCER	97	15
	133	11	VALVE SET, FLOAT	139	2	WEIGHT, CLUTCH	287	10
	134	11		167	2	WEIGHT, GOVERNOR	76	10
	135	11		172	2		82	24
SWITCH ASSY., KILL	310	12	VALVE, DASHPOT CHECK	169	28		84	11
SWITCH ASSY., OIL LEVEL	65	2		174	10		86	10
	66	2		310	14		89	8
SWITCH, THERMO	309	25	VALVE, EX.	112	8		91	21
			VALVE, IN.	112	7		92	11
[T]							94	5
TANK ASSY., FUEL	217	3	[W]			WHEEL COMP.	312	4
TANK COMP., FUEL	217	5						5
	218	5	WASHER COMP., HEAD COVER	55	14	WIRE, WATER COVER	246	15
	219	5	WASHER, 10.5X40X4	289	7	WRENCH COMP., SPARK PLUG	304	8
	220	5	WASHER, 11.7MM	97	10		306	2
	229	9	WASHER, 6X16	78	14			3
	230	9		84	15	WRENCH, BOX	304	7
	307	8		86	14		305	16
TERMINAL ASSY., EARTH	312	2		91	19		306	10
TERMINAL ASSY., HIGH TENSION ..	236	2			27	WRENCH, PLUG	305	20
TOOL KIT	304	2		93	15			
	306	1		94	18	[Y]		
TUBE ASSY., COCK-CARBURETOR ...	229	2	WASHER, 8MM	289	6	YOKE COMP.	245	10
TUBE, 11X100	52	7		292	8			
	53	7	WASHER, 8.2X17X0.8	66	7			
TUBE, 11X105	52	7	WASHER, CENTER COVER	310	23			
	53	7	WASHER, CHOKE LEVER	170	31			
TUBE, 3.5X130	171	43	WASHER, CONTROL LEVER	257	12			
TUBE, 3.5X175	311	32	WASHER, DRAIN PLUG, 12MM	68	12			
TUBE, 3.5X40	171	42		288	26			
TUBE, 3.5X55	171	42	WASHER, LOCK, 8.5X35X4.5	97	11			
TUBE, 3.5X65	171	42		289	7			
TUBE, 3.5X75	171	43	WASHER, PLAIN, 4MM	282	27			
TUBE, 3.5X85	311	31		285	18			
TUBE, BREATHER	52	7	WASHER, PLAIN, 5MM	170	37			
	53	7		200	27			
	192	1		209	28			
	194	1	WASHER, PLAIN, 6MM	213	20			
TUBE, FASTENER, 30MM	271	18		81	18			
	280	20		85	18			
TUBE, FUEL	230	2		86	16			
TUBE, FUEL SUPPORTER	230	3		91	15			
TUBE, FUEL TANK	229	1		93	18			
TUBE, FUEL, 4.5X120	226	20		94	13			
TUBE, FUEL, 4.5X150	226	21	WASHER, SK	247	20			
	228	16	WASHER, SPRING, 4MM	271	22			
TUBE, FUEL, 4.5X222	224	15		281	24			
	225	15		285	15			
TUBE, FUEL, 4.5X250	230	17	WASHER, SPRING, 5MM	200	28			
	307	18		209	29			
					30			

1

FOREWORD INDEX

2

ENGINE GROUP

3

PART NUMBER INDEX

4

PART NAME INDEX

HONDA